

# Contents

Foreword.....	1
Appearance and Button .....	4
First Use.....	6
Desktop .....	7
Main Menu Operations .....	8
Application Management .....	9
Connection with PC .....	23
Trouble Shooting.....	24

## Foreword

### 1. Announcements

#### Maintenances

- Please keep Device dry. Do not let equipment, battery charger contact water and vapor, or use wet hand to operate equipment or charger, Lest cause short-circuit, corrosion caused by equipment failure, and personnel.
- Don't make equipment, battery and charger strongly impact or vibration. Lest cause equipment, battery and charger fault, fire or explosion.
- Don't put this equipment, battery and charger in the too high or too low temperature region. Otherwise you may cause equipment, battery and charger fault, fire or explosion.
- Don't hit, throw, acupuncture the Device, and avoid drop, extrusion, bending Device.
- Don't unauthorized equipment and accessories, otherwise the equipment and accessories will not in the company's warranty scope.

### 2. Safety Tips

Before using this Tablet, please read this section information, and let your child know this information. For detailed information, please refer to the Safety guidelines and note:

- Do not use Device in driving, in order to prevent the safe driving.
- In medical sites, please comply with relevant provisions or regulations. Please close Device near the medical equipment area.
- Please close Device or open planes mode when you are boarding, to avoid wireless signals jamming aircraft control signal.
- Please close Device near the use of high precision electronic equipment;

otherwise it may lead to electronic equipment disabled.

- Do not unauthorized to remove Device and accessories. Only authorized institutions can repair this Device.
- Please put Device away from magnetic equipment. The radiation of Device will erase information which is on magnetic storage device.
- Please don't use Device in the high temperature and flammable areas (such as near gas station).
- Please don't put Device and accessories in this place which children can touch it, please do not let the child use Device in unsupervised.
- Please abide by the relevant laws and regulations when you use the Device, and respect others lawful rights and privacy.
- Please strictly abide by relevant specification of this manual when you use USB cable. Otherwise it might damage your Device or personal computer.
- Please don't use Device in the damp environment such as bathroom etc. And avoid the Device soaked or flushed by the liquid.



1. **VOL+:** Press to increase the volume of headphones or speakers.
2. **VOL-:** Press to reduce the volume of headphones or speakers
3. **POWER:** if turned off ,press two seconds to start the system.if turn on,short press can lock and unlock the screen, long press two seconds there will be “ power off” selection.  
Note: In the case of software carshes, long press power for 8 seconds ,the device will be forced to shut down, this function is suggested only in system halted. otherwise it is not recommended, or it will easily damage the system.
4. **Camera:** Front camera can be used for video chat and taking pictures.
5. **Headphone jack:** External 3.5mm high fidelity headphones can listen to music.
6. **USB interface:** Micro 5pin USB interface, through the USB cable or OTG cable to connect the computer copy data or install applications through USB disk

7. **TF Card slot:** External Micro SD card, up to 128GB.

## First Use

### **Battery Management and Charging**

- Please make sure that the device battery is fully charged on first usage.
- Just plug the charger into DC interface for charging.
- Keep the first two charging time about 6 hours. And around 4 hours next time.


**【NOTE】** This item was featured with built-in polymer battery, the charger should be comply with the specification of Input: AC100-240V, 50/60Hz, Max: 0.3A. Output: 5V/2A.

- The battery icon will scroll during charging.
- Screen battery icon will turn green and stop scrolling when charging completed.
- To extend the battery life, suggest run out of the power in the first two times.


**【NOTE】** If the device is not used for a long time, make sure the machine will be charged one time within one month, to avoid excessive consumption.

- On lower power shutdown, plug the charger, the machine tips “lower power” and “charging”, the device will enter to the menu if there is enough power.
- It's better to charge in standby, otherwise the changing time will be longer, as the screen consume battery during charging.

## Desktop - First Appearance

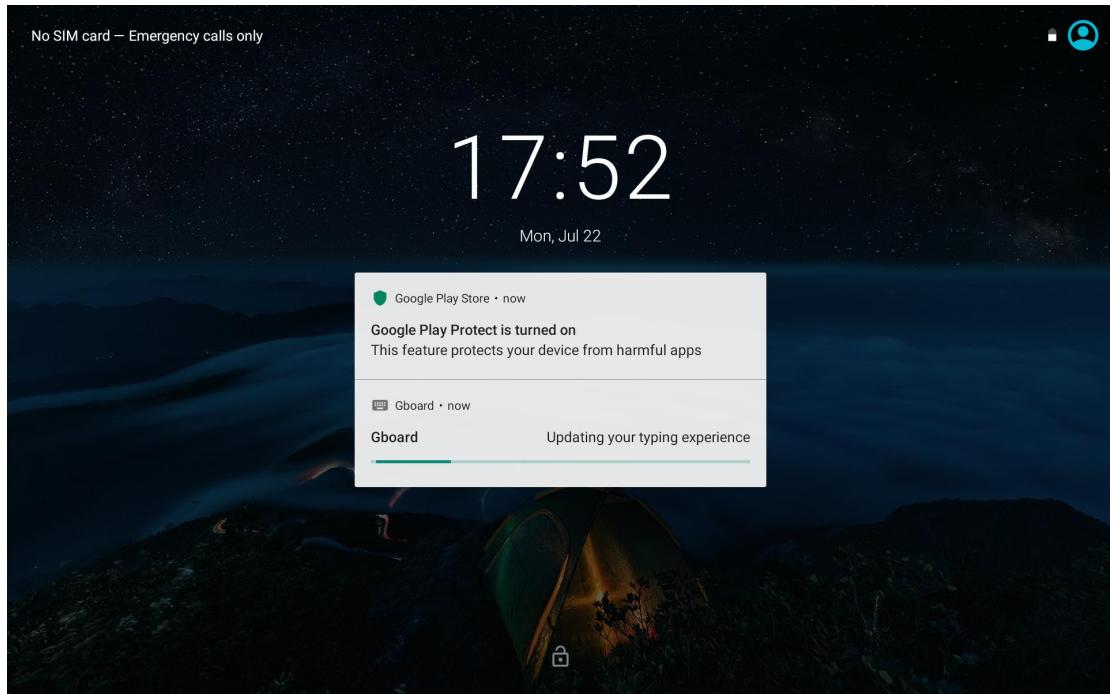

Press the Power button, after one seconds will enter the interface of unlock the screen. Hold  slide to right, the icon will turn to  and the screen will unlocked.  
After the system is started up, you can see Android™ system desktop (refer to the picture below), the default system desktop: status bar, instant search button, main menu icon and shortcut icon.

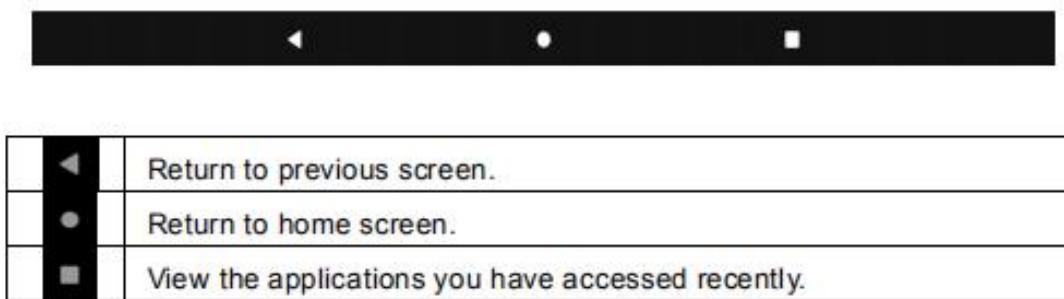


Indicator icons

## Main Menu Operations

In the main menu, you can set up system, run the available application program,

install new application program and start music playing, video playing, website browsing, playing games etc.

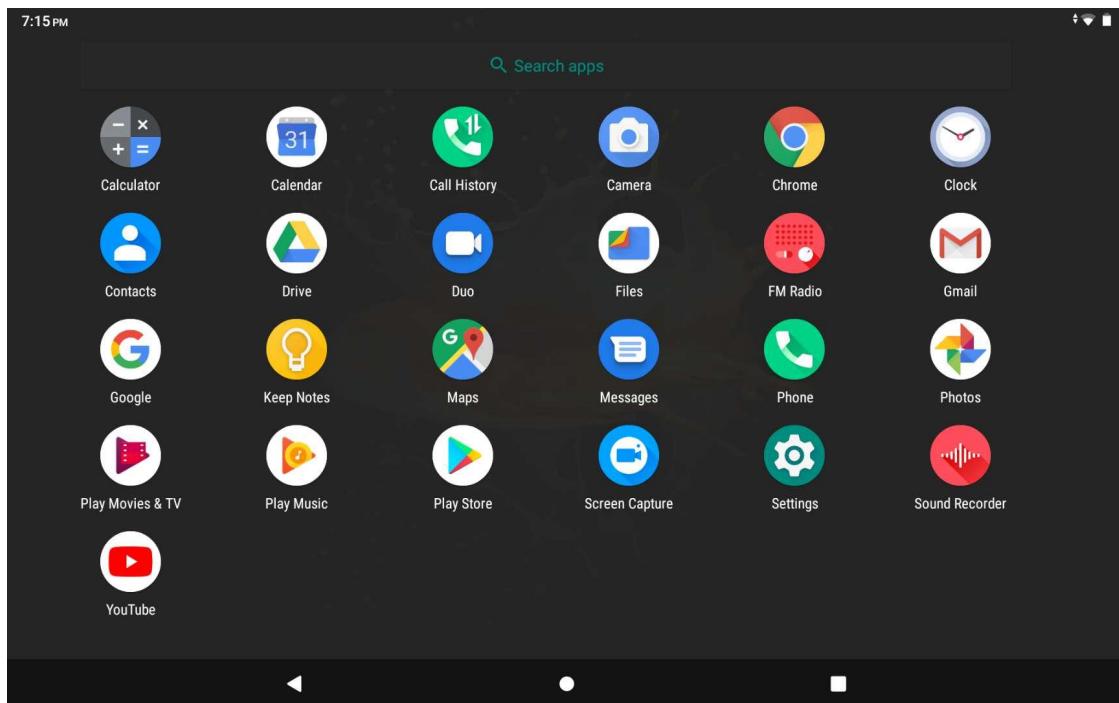

- To move an icon to the Desktop screen, touch & hold on the icon, then release it when it appears on the Desktop screen.
- Touch, hold the icon for 3 seconds, press Remove, then will delete it from the Desktop.

## Application Management

### Install Android Applications

- There are many interesting and free Android applications that can be found on the web. Just launch your web browser and do search for Android apps. Purchased or free Android applications that you have downloaded to your computer can be installed quickly and easily on your Tablet using the **File Manager** application.

1. Copy the *.apk* files that you want to install onto a SD card or USB device, insert or connect to your device.
2. Tap the **File Manager** application icon, and find out the *.apk* file, tap on it and select Install. The application is installed and the application icon is added to the **Applications** screen.

## Uninstall Android Applications

- You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap **Settings** → **Applications** → **Manage applications**.
2. Tap the application you want to uninstall → **Uninstall**.
3. Tap **OK** to confirm the install.



PHONE

- To use calling functions, tap Phone from application list.

### 1. Make calls

To make calls, you can use any of the three ways:

Enter numbers by using the virtual numeric keypad on the screen

Make a call from call log.

Make a call from contacts.

### 2. Answer a call

To answer a call, drag the circled button to the green button.

Decline or end a call

To decline a call, drag the circled button to the red button.

To end a call in progress, tap the red button.

- Call settings

To change call settings, tap the option button at the upper right.


- 1. Fixed Dialing Numbers

If FDN mode is activated, your device will restrict outgoing calls, except for the numbers stored in the FDN list.

- 2. Quick responses

Quick response is a feature to reject the call with the predefined messages.

Tap one of the pre-written messages to be displayed when you want the call to be rejected, then tap OK.

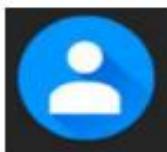

---

Contacts

- Tap Contacts from application list to access contacts.

- 1. Groups: List all your contacts by group.

- 2. All: List all your contacts saved in the device memory.

- Add new contact

- 1. Access contacts.

- 2. Tap  .

- 3. Enter necessary fields.

- 4. Tap DONE.

- Edit a contact

- 1. To edit a contact, scroll to the contact you want to change.

2.Tap the option button at the upper right, then select Edit.

3.Change necessary fields.

●Create new group

1.Tap the first tab at the upper left.

2.Tap  **Create label** at the upper right.

3.Enter a category name.

●Rename group

1.To rename the group, scroll to the group you want to change.

2.Tap  **Rename label** at the upper right or tap the option button and then select Edit.

3.Enter a new category name.

●Import/Export contacts

1.Import from the SIM card

To copy the contacts from the SIM card, tap the option button at the upper right and then select Import/Export Import from the SIM card, select contacts, and then select Import.

2.Import from SD card

To import contact files (in vcf format) from a memory card to your device, tap the option button at the upper right and then select Import/Export Import from SD card, select a memory location and contact files to import and select OK.

3.Export to SD card

To export contacts from your device to a memory card, tap the option button at the upper right and then select Import/Export Export to SD card, select OK to confirm.

4.Share visible contacts


With this feature, you can send the visible contacts via Email or Bluetooth.

●Search for contacts

Tap  at the title bar from contact list screen, enter the desired information, then your device shows the result.

Tap the search icon at the upper left from home screen, enter the contact's

name or number, your device shows the result immediately.

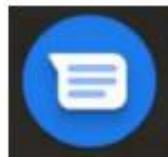

## MESSAGE

Learn to create and send a text or multimedia message, and view or manage messages that you have sent or received.

- View messages

- 1.Tap Messaging from application list.

3. Tap the message to view the detailed information.

- Create and send SMS

- 1.Tap NEW MESSAGE.

- 2.In To field, enter the recipient's mobile phone numbers manually. If you enter more than one number, separate the numbers with a comma.

- 3.In Type message, enter the text of the message.

- 4.Select Send to send the message.

- Create and send MMS

Multimedia message can include pictures, sound and text.

- 1.Tap Start chat.

- 2.Tap  at the title bar.

- 3.Select one of the items below.

Pictures: Insert image.

Capture picture: Capture new picture and insert the picture.

Videos: Insert video clip.

- 4.Capture video: Capture new video clip and insert the video clip.

Audio: Insert sound clip.

Record audio: Record sound clip and insert the sound clip.

Slideshow: Add more than one slide.

5. In To field, enter the recipient's mobile phone numbers or email addresses manually. If you enter more than one number or email, separate them with a comma.

6. In Type message field, enter the text of the message.

Select Send to send the message.



## CLOCK

• Tap the **Clock** application icon. You can use your device as an alarm clock by setting multiple alarms.

1. Tap **Set Alarm** → **Add Alarm**, set up your alarm as desired.

【NOTE】 If you don't select a repeat, the alarm is automatically deleted after it is activated.

2. Tap **Turn On Alarm** → **OK** → **Done**.

• When a scheduled alarm is activated, a pop-up window with the alarm title appears. Tap **Snooze** if you want to be reminded again in 10 minutes. Tap **Dismiss** to cancel the alert.



• The **Play Store** has many applications that you can quickly and easily download to your Tablet.

1. Tap the **Play Store** application icon.

The first time, you are prompted for your **Play Store** login information. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and

enter your login information and then tap **login** again.

2. You can select applications from the default Featured group, by Categories,

Top (latest, hottest, random), or search by name.

3. Tap on an application, → **Download**.

4. After the app is downloaded, tap **Install**.

5. Tap **Open** to launch now, or **Done** to return to the **Play Store** screen.

After downloading apps, tap on **History** to manage the installed applications.


You can add and/or view comments from other users, launch apps, and uninstall them.



## BROWSER

- Users can connect to the Internet through a browser.

- Click the **Browser** icon, and then you can open the Web browser.

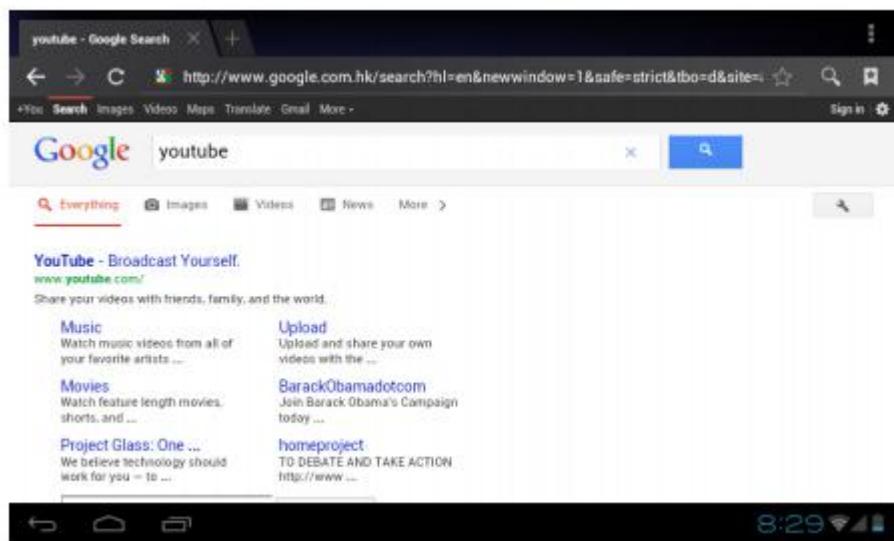


## CALENDAR

- For the first time to using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Click **Next** and follow the prompts to complete the account configuration. Then you can use the Calendar.

### Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.
2. Tap on the event time, tap in each entry field to enter the desired event information.
3. Tap **Done**.

【NOTE】 Dates with green bars indicate scheduled events.

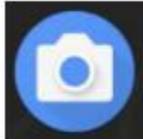

## CAMERA

### 1. Take Pictures


2.

In Camera, is the status of taking pictures, tap to take the picture. The picture will be saved.

### 2. Take Video

Tap switch to video, and you can take videos.

Tap to begin and tap to stop. The video will be saved.

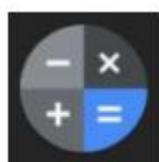

## CALCULATOR

- 1.Tap the **Calculator** application icon.
- 2.Tap the numbers and sign of operation to do the calculation.

- 3.Tap to clear the result.



### Gmail™

POP3 and SMTP accounts are supported.

- You can enter one or more personal email address that you would like to access through your Tablet.

1. Tap the **Email** application icon.

2. Tap in the **Email address** entry field, enter your email address.

3. Tap in the **Password** entry field, enter your email password.

4. Tap **Done**.

5. **Manual Setup** (Optional): The server settings are automatically populated based on your email account provider (i.e., gmail.com, etc.). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.



### PLAY MUSIC

Audio file formats supported: MP2, MP3, WAV, AAC, WMA, etc.

1. Tap the **Music** application icon.

2. Select an audio file from Artists/Albums/Songs/Playlists to play it.



### Play Movies&Tv


Video file formats supported: MPEG1/2/4, MJPG, H264, etc.

1. Tap the **Play Movies & TV** application icon.


2. Select a video file to play.

3. Tap on the screen to display video controls (adjust volume, pause/play),

previous/next, adjust brightness).

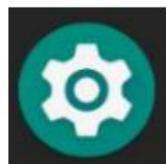

## Settings

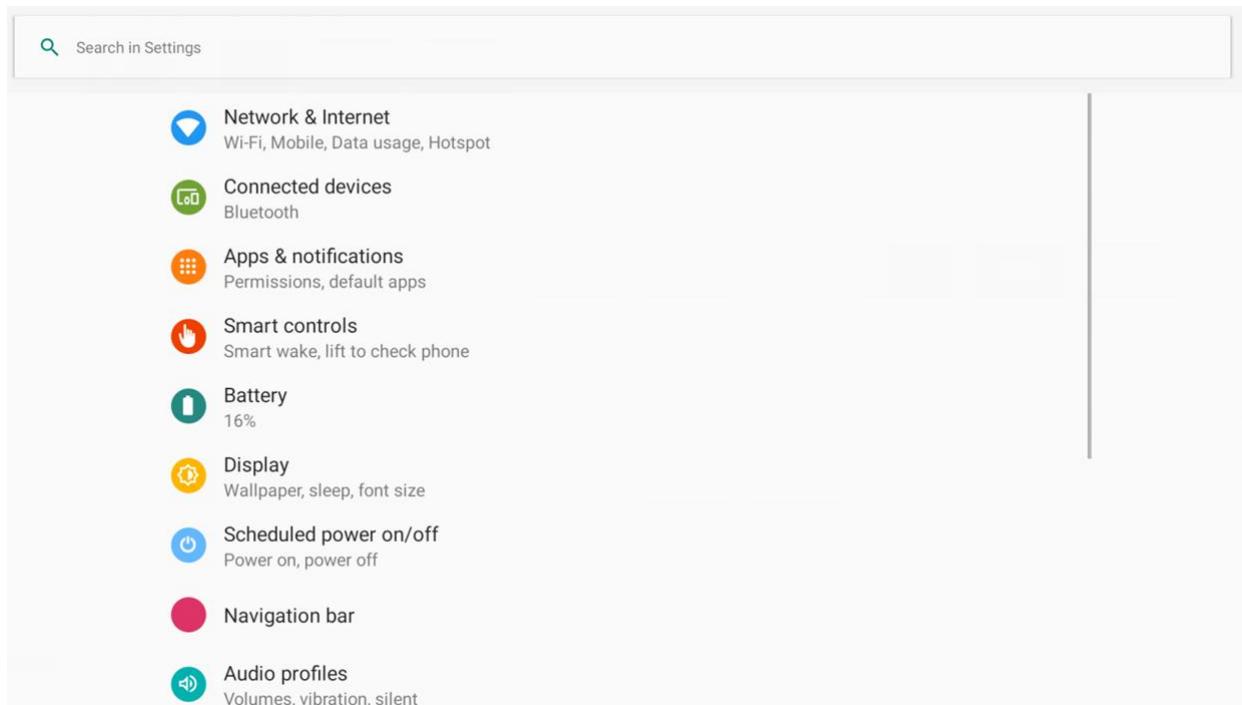

Google, Android, Google Play and other marks are trademarks of Google LLC.


Wi-Fi	Turn on/off Wi-Fi
Data usage	Mobile data/Set mobile data limit/Data usage cycle
More	Airplane mode/Ethernet/VPN/Mobile networks
Connected devices	Pair new device Bluetooth Downloaded/ On SD card/ Running/ All

Samrt controls	Samrt wake/lift to check phone/samrt motion
Battery	Battery usage data
Display	Brightness/Wallpaper
scheduled power on /off	Yes/no
Navigation bar	Select a combination of navigation buttons
Audio profiles	Select predefined / defines audio profiles
storage	Total space/Apps space/Available space
Security &location	Screen lock/Owner info /Encrypt tablet /Make passwords visible
Acconuts	Sync on the account information.
Accessibility	Volume key shortcut/screen readers/display ans so on
Google™	App preview messages /back up and so on
system	About phone/languages&input/gestures/date& time/advanced

## Connection with PC

### USB Connect

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC.

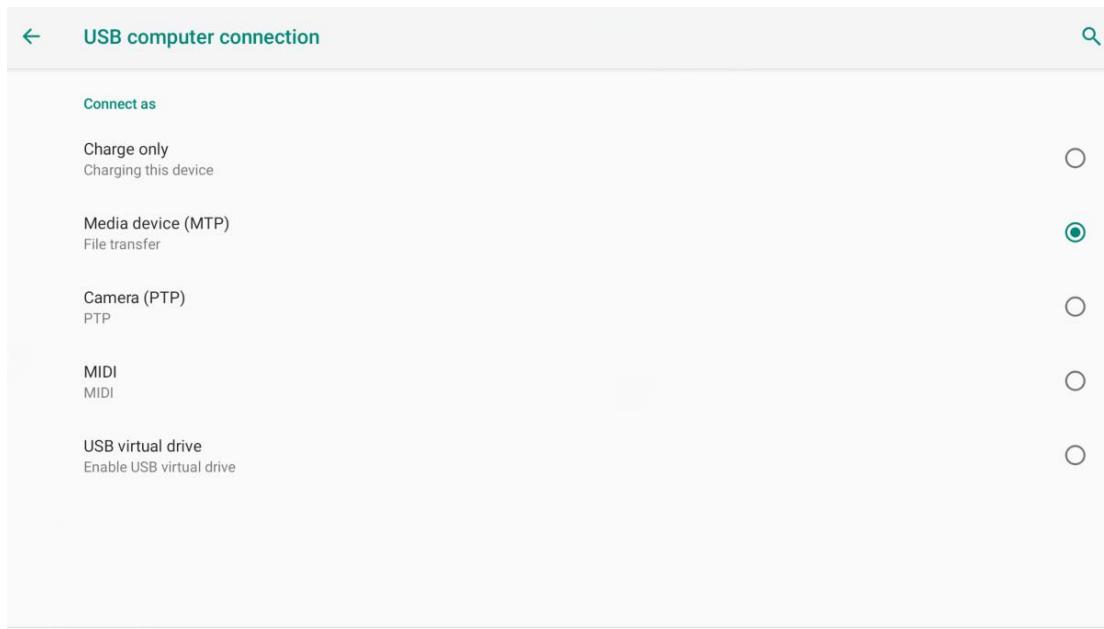

Into the load mode, you can copy, delete the file on the device and the file on the memory card.

### OTG Using

- Support FAT32 format mobile memory devices, such as USB disk.
- The way for Plug and play.
- Use OTG cable to connect MID USB OTG PORT with other devices

### Trouble Shooting

#### ● Device fails to turn on.

- \* Check battery volume.
- \* Connect to adaptor, and double check.
- \* If device fail to start up after charging, please contact distributors.

#### ● Twinkling screen after turn-on or sudden shut off after starting up.

- \* Battery low, please charge the device.

#### ● No sound via earphone.

- \* Check if volume is set at the lowest.
- \* Check if audio file is damaged. Play other audio to reconfirm. Damaged file may result in noise or staccato only.

#### ● Copy function is not working, fail to play music.

- \* Check if PC and device is proper corrected.
- \* Confirm whether storage space is full.
- \* Confirm whether USB cable is damaged.
- \* Confirm whether USB is out of connection

## SPECIFICATIONS

Voltaje: DC 5V

Battery Type: DC 3.7V

Product name:**tablet**

Model:T702,T702 Pro, T901, T901 Pro, TB02, TAB10, TAB7, TAB8, TAB9, P30, P40, P50, P60, T10, Y101, T88, T618, YC01, DM01, N01

## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.