

SMATV

High Definition LED TV

USER'S MANUAL



55LI0521-1

Read this manual carefully and retain for future reference

CONTENTS

1. Safety instructions	3
2. Accessories	5
3. Controls and connections	5
3.1 Front view/side view	5
3.2 Rear View	6
3.3 Remote Control	7
4. System Connections	10
4.1 Connecting to Power Supply	10
4.2 Connection to External AV Signal Source	11
4.3 Connecting to External AV Signal Source(Y/Pb/Pr)	11
4.4 Connecting to External AV Signal Source (HDMI)	12
4.5 Connecting to PC	12
4.6 Connecting to TV-Signal Input	13
5. TV OPERATION AND SYSTEM SETUP	14
5.1 Picture Menu	16
5.2 SOUND Menu	17
5.3 Timer Menu	19
5.4 System lock	19
5.5 Setting menu	20
5.6 CEC	21
5.7 Channer menu	22
5.8 Quick menu	27
6. Home	28
6.1 Apps	28
6.2 TV	30
6.3 MEDIA OPERATION	30
6.3.1 Photo	31
6.3.2 Music	32
6.3.3 Video	34
6.3.4 Applicatopns	35
6.4 Setting	36
7. Troubleshooting	41

1. Safety instructions

Welcome

Congratulations! You now own one of the most state of the art and technologically advanced high definition Television products available. In order to make set-up as easy as possible, we would like to familiarize you with the features and functions of this special product. Please read this user's manual carefully and thoroughly and keep in a safe place for future reference.

We thank you for your business and hope you enjoy this product.

Caution

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This symbol is intended to alert the user to the presence of uninsurable "dangerous Voltage" within the Product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

-TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD
-DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
-SHOCK HAZARD DO NOT OPEN

CAUTION

These servicing instructions are use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instruction unless you are qualified to

CAUTION

The stand intended for use only with this TV. Use with other apparatus is capable of resulting in instability causing possible injury.

WARNING

-Apparatus shall not be exposed to dripping or splashing. Vases, shall be placed on the apparatus.

-This is Class B product. In a domestic environment these in which case the user may be required to take adequate measures.

To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

WARNING

-Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

-This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

FCC NOTICE

This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in home environment as well as in a commercial, industrial or business environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit's different form that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party for compliance could void the user's authority to operate the equipment.

Connecting of peripherals requires the use of grounded shielded signal cables.


Important Safety Precautions

Always be careful when using your television. To reduce the risk of fire, electrical shocks, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your Television.

- Read these instructions and keep them in a safe place.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Do not block any of the ventilation openings.
- Install it in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the Television.
- Only use the attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the Television. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this Television during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the Television has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the Television has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Clean only with a lint free cloth.



2. Accessories

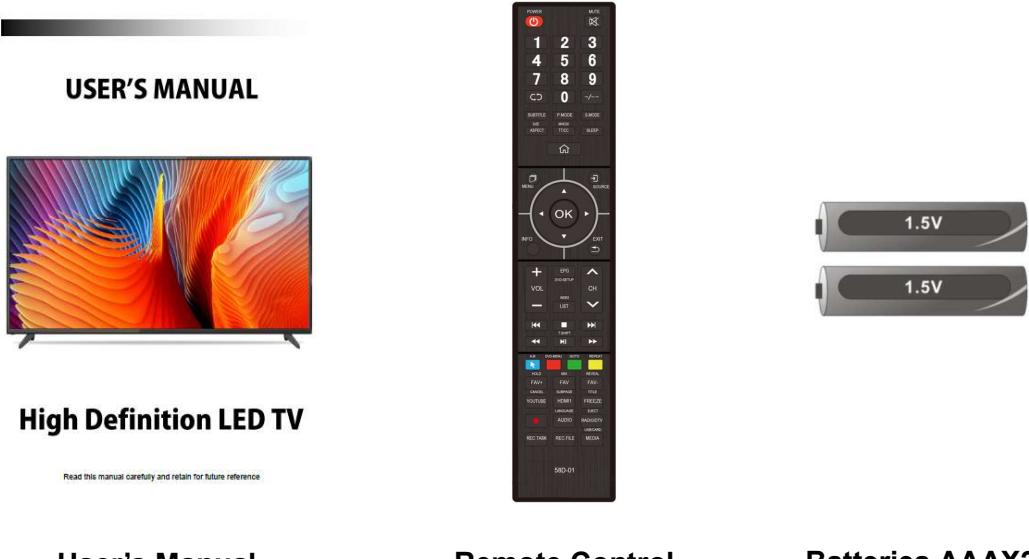

User's Manual

Remote Control


Batteries AAAX2

3. Controls and connections


3.1 Front view



3.2 Rear View

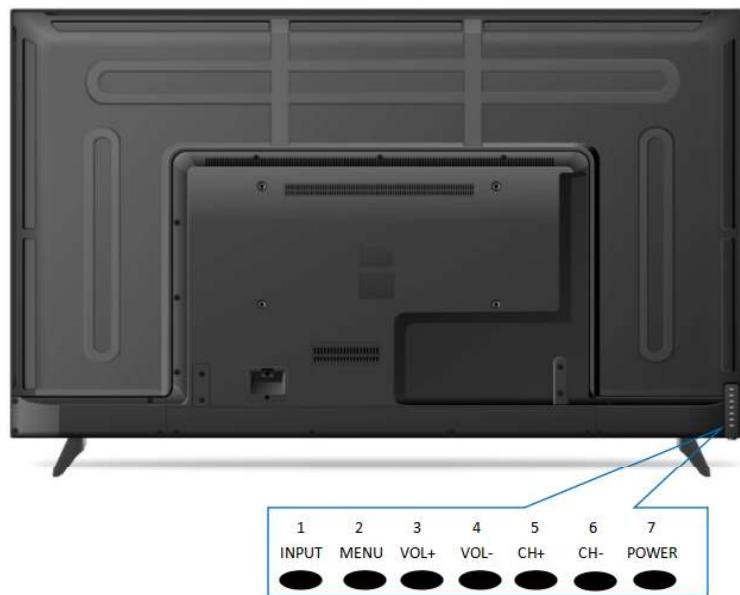

1. INPUT: Display the input source list
2. MENU: Display the main OSD menu
3. CH-: Move to the lower programmer
4. CH+: Move to the upper programmer
5. VOL-: Decrease the volume level
6. VOL+: Increase the volume level
7. POWER: Turn the TV On or OFF

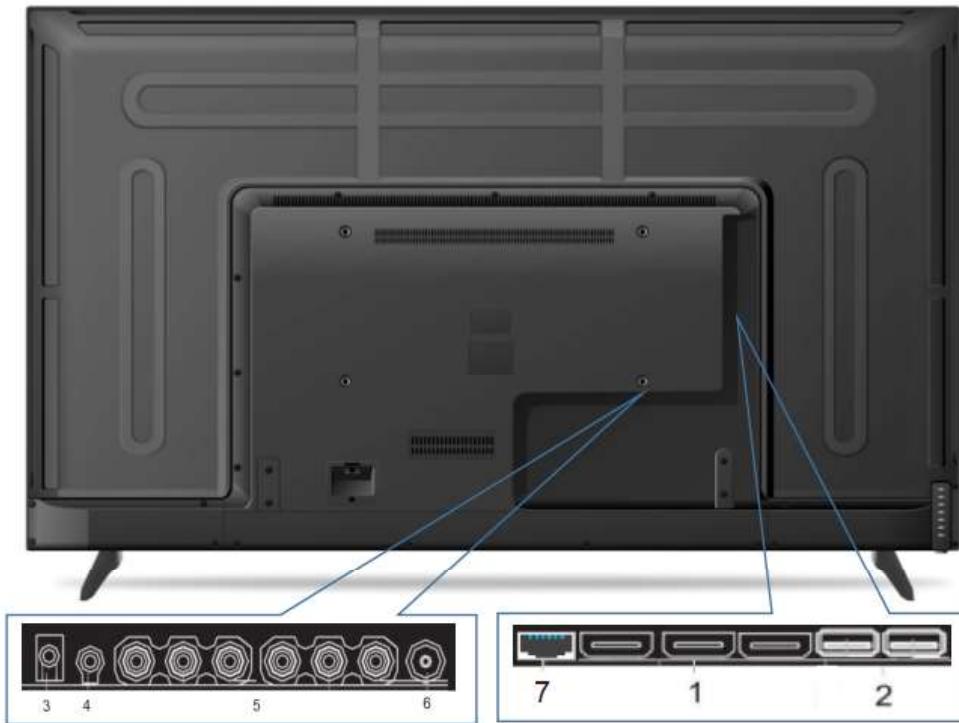

1. **HDMI Input Jack:** Connecting for HDMI signal.
2. **VGA input Jack:** Connecting to the VGA output jack on a personal computer.
3. **Y/Pb/Pr Input Jacks:** Connecting for the Y/Pb/Pr Input in component mode.
4. **PC Audio Input Jack:** Connecting to the audio output jack on a personal computer.
5. **AV Input Jacks:** Connecting for AV signal input in composite mode.
6. **Antenna Input Jack:** Connecting to external antenna to receive the ATV/DTV program in ATV/DTV mode.
7. **RJ45:** Connecting to international networks

3.3 Remote Control

1. POWER button

Press to enter or exit the standby mode.



2. Mute button

Press to select enter the source selecting menu, press the **▲/▼** direction buttons or press the MUTE button repeatedly to select desired mode and press the ENTER button to enter the selected mode.

3. Number buttons (0~9)

Press to select numbers.

4. button

Press this button to enter a program number for multiple program channels such as 2.1, etc.

5. +/- • button

Press this button to enter a program number for multiple program channels such as 2-1, etc.

6. SUBTITLE

Press into the Subtitle language menu.

7.P-MODE

Press to select the picture mode: choose User, Standard, Dynamic or Mild.

8. S-MODE

Press this button to change the audio mode: User, Standard, Movie or Music.

9. MENU

Press to enter or exit the setup menu.

10. EXIT button

Press to exit all the OSD on the screen.

11.VOL +/- button

Press to increase or decrease the volume.

12.SLEEP

Press into the Subtitle language menu.

13.AUDIO

Press this button to switch the tracks carried by the program.

14.SUBPAGE

Press this button to switch the captions carried by the program.

15.CH+/- button

In ATV or DTV mode, press to select analog channel or digital channel.

17.HOLD

Display the selected favorite up
programmers.

HOLD(Teletext Mode)

Hold on or off for current page display.

18.MIX

Display the selected favorite programmers.

Mix(Teletextmode)

TV and TXT pictures are mixed together on
a transparent background.

19.REVEAL

Display the selected favorite down programmers.

20.CANCEL

Press to cancel what you are doing.

21.TITLE

Press this button to freeze the analogue
text image on the screen

TITLE (DVD Mode)

Brings up the DVD title in DVD Mode .

22.MEDIA

Press into the Media.

23.TT/CC

Request the index page (Teletext mode)

LIST (TV and DTV Mode)

Press to show Analog or Digital programme list.

24.LIST

Press into the Chanel List.

25.EPG

Press into the EPG List.

26.SIZE

Press this button to change the proportion mode:Wide,4:3,Auto,Panorama.

27.EJECT

Select the DTV.RADIO mode.

EJECT Button (DVD)

28. 

Skip backward button.

29. **30. **

Stop the playback and Exit to the up-menu.

31. 

Skip forward Button.

32. 

Playing backward fast.

33. REC

Hot key to retained.

34. USB

Hot key to retained.

35. ►►

Playing forward fast.

36. ●

Record Button.



Preparation of Remote Control

Place the remote control on an even surface and insert the supplied batteries into the remote control as follows.

1. Softly push the back cover to open the battery compartment.



2. Insert two batteries(1.5V size AAA), please make sure the polarity matches the marks inside the compartment.



3. Softly press the back cover to close it.



Under normal use the battery will last for six months.

Take out battery when the remote is not in use for a long time.

Using of Remote control

Point the remote control unit from on more than about 7m from the remote control sensor and within about 60 degrees of the front of the unit.



30° 30°

7M

The operating distance may vary depending to the brightness around.



- Do not point bright lights directly at the remote control sensor.
- Do not place objects between the remote control unit and the remote control sensor.
- Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.

4. System Connections

Do not connect the power cord until all other connections have been made. Ensure that you observe the color cord when connecting audio and video cables.

4.1 Connecting to Power Supply

1. Connect the power cord correctly as shown.
2. Press the POWER switch of your LCD TV to switch on the LCD TV. The power indicator on the front panel lights up in Green.




To Wall AC Outlet

4.2 Connection to External AV Signal Source

Use the audio and video cable to connect the input jacks on the rear panel of the unit to the external AV signal source.

Connect the unit and the external AV signal source to the respective jacks with the S-Video cable.

Ensure that you observe the color cord when connecting audio and video cables.

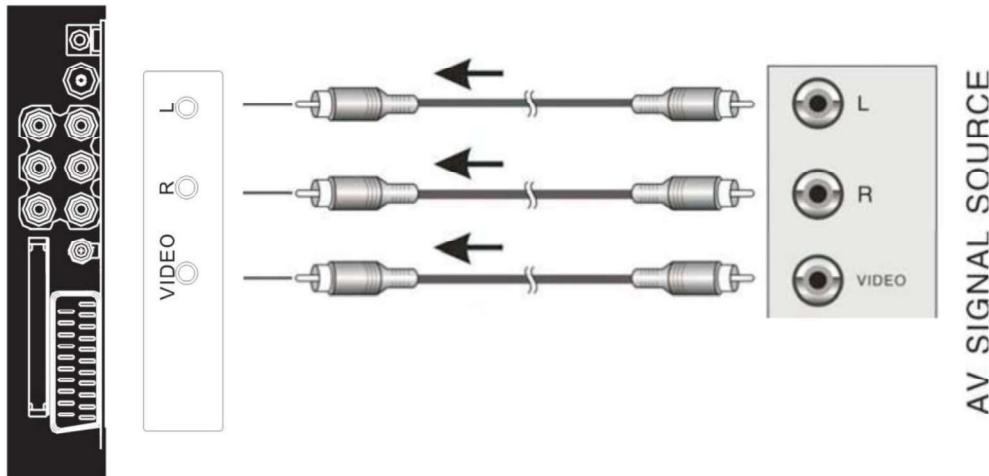


After connection, turn on the power of the unit and the external AV signal source. Press **SOURCE** then direction buttons to select AV mode, and then press the **ENTER** button to confirm.

The L/R audio input jacks can be used in the both Composite modes.

4.3 Connecting to External AV Signal Source(Y/Pb/Pr)

Use the audio and video cables to connect the Y/Pb/Pr Input jacks on the rear panel of the unit to the external AV signal source.

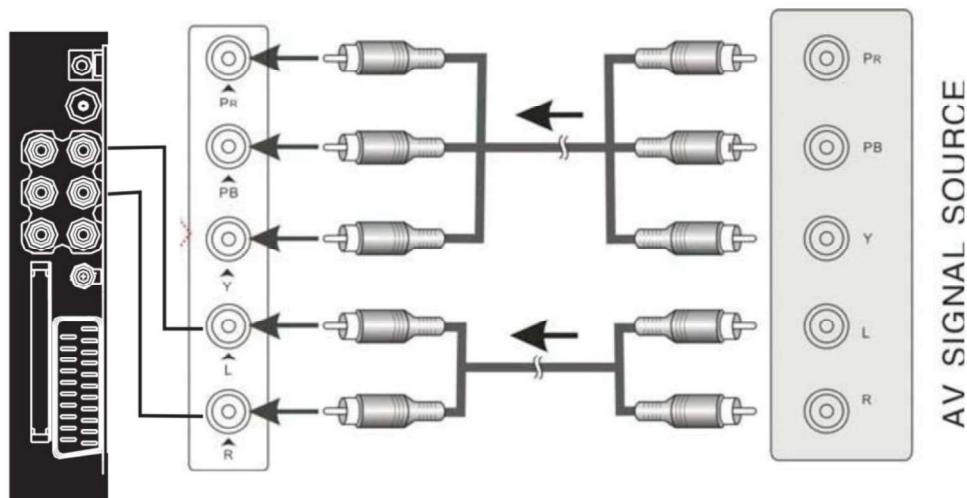


After connection, turn on the power of unit and the external AV signal source. Press

SOURCE then direction buttons to select YPbPr mode, and then press the ENTER button to confirm.

4.4 Connecting to External AV Signal Source (HDMI)

Follow the figure below to connect an HDMI signal source to the HDMI jack on the rear panel of the unit.

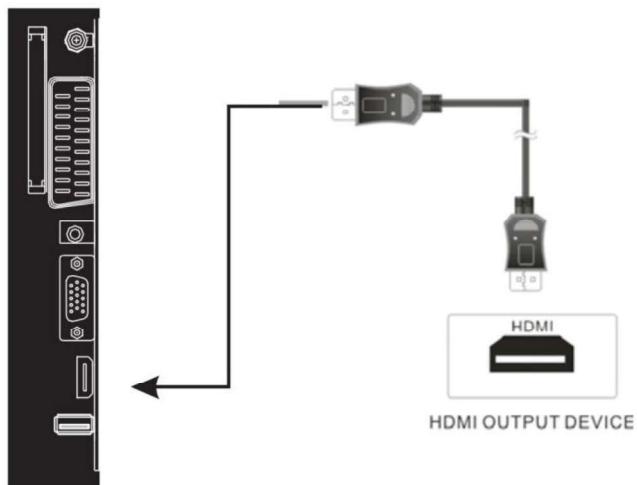

After connection, turn on the power of the unit and the external AV signal source and use the SOURCE and the direction buttons to select HDMI mode, and then press the ENTER button to confirm.




HDMI provides both audio and video signals and typically provides superior image quality to component or composite.

4.5 Connecting to PC

The unit can be connected to PC (personal computer) via the VGA cable. Follow the figure below to connect:


1. Connect one end of the VGA cable to the VGA input jack on the rear panel of the unit and connect the other end to the PC.
2. Connect one end of the audio cable to the PC audio input jack on the rear panel of the unit and connect the other end to the PC audio output jack.

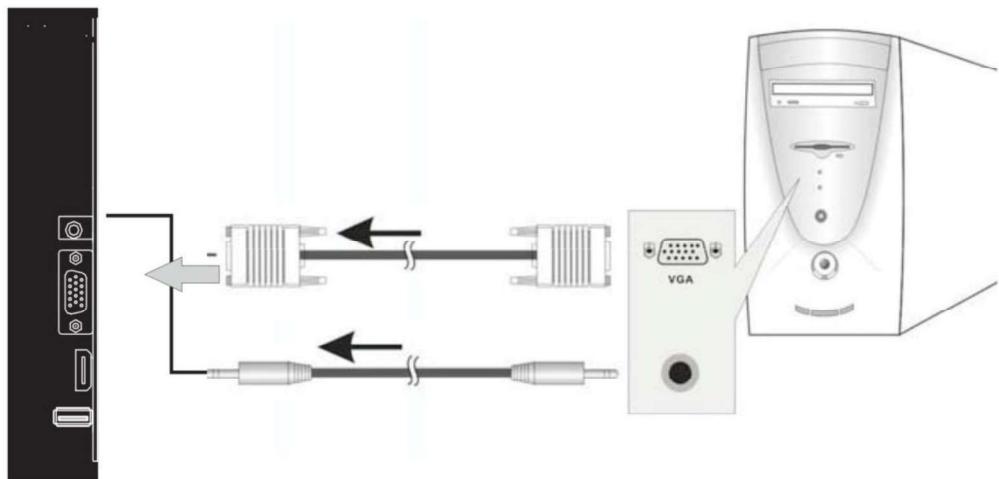

After connection, turn on the power of the unit and the external AV signal source and use the SOURCE and the direction buttons to select VGA mode, and then press the ENTER button to confirm.

4.6 Connecting to TV-Signal Input

Connect the TV signal cable (the antenna cable, for example) to the antenna input jack on the back of the unit so that you can receive television programmers.

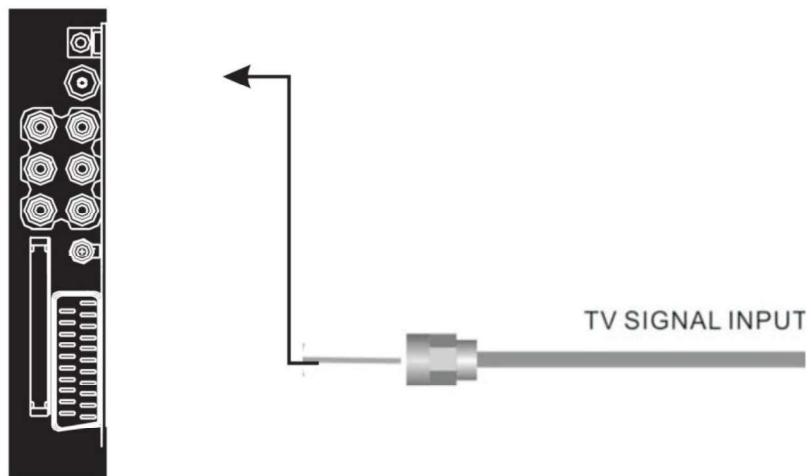

After connection, turn on the power of unit. Then press the SOURCE button to select ATV or DTV mode and conduct program selection.


5. TV OPERATION AND SYSTEM SETUP

SELECT INPUT SOURCE


Press **SOURCE** button to display the input source list;

Press **▲/▼** button to select the input source you want to watch;

Press **ENTER** button to enter the input source;

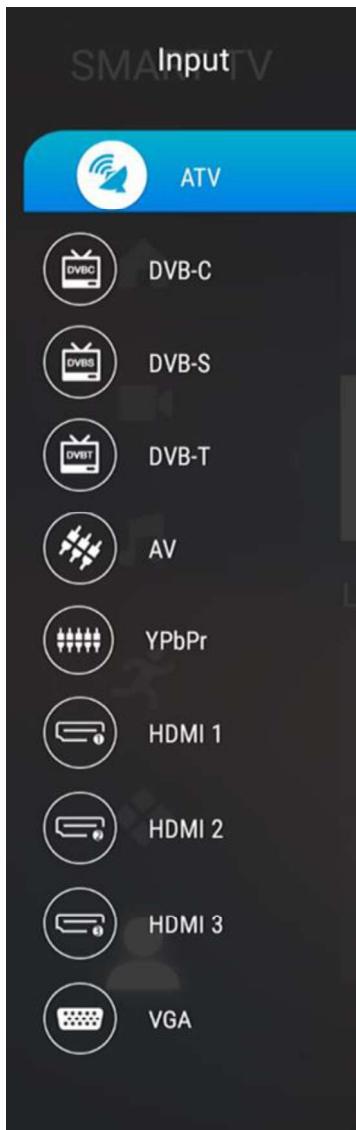


- Press **MENU** button to display the MAIN OSD MENU;
- Press **▲/▼** button to select the MENU you want;
- Press **ENTER** button or **▶** button to enter the sub menu, and press **◀** button to return back to the previous menu.
- Press **▲/▼** button to select the option and then press **ENTER** button or **▶** button to enter the submenu, press **◀/▶** button to adjust the value or press **◀/▶** button to select in the sub menu;
- You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

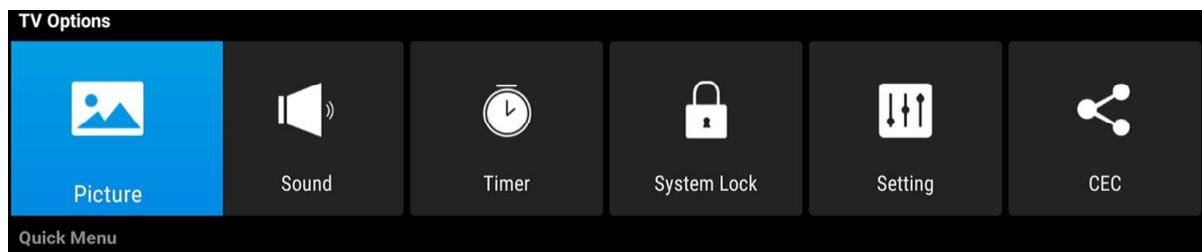

Press **INFO** button on the remote control to display program information.

1. Current program Number.
2. The NICAM mode of current program.
3. The sound system of current channel could be changed on **Analog Manual Search** Menu.

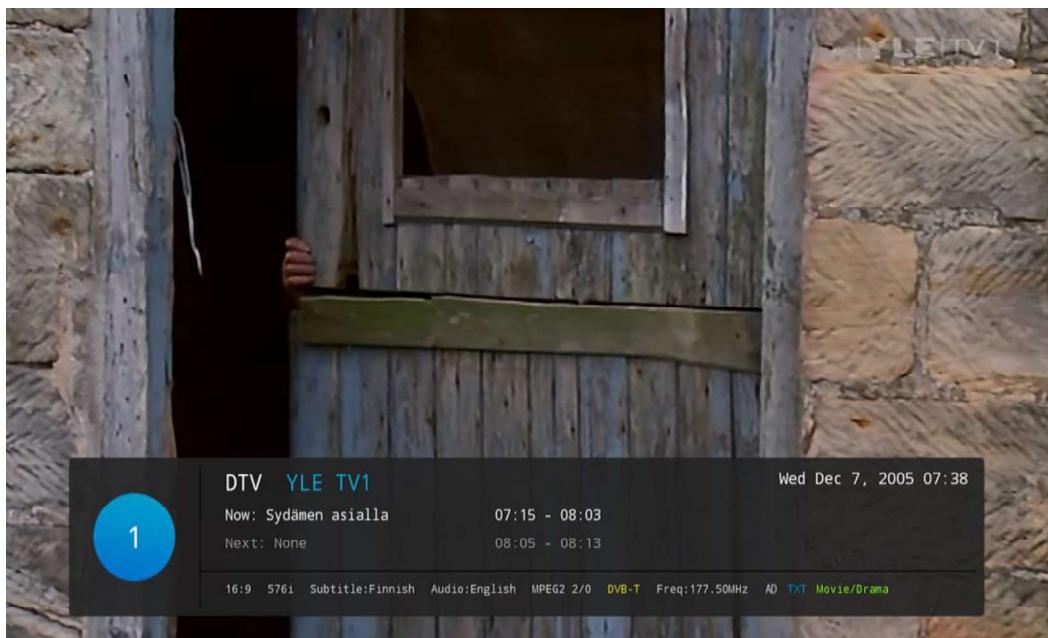


5.1 Picture Menu

The picture is for a reference only; the actual item is the standard.

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **Picture** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the Picture menu, and then press **ENTER** button or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

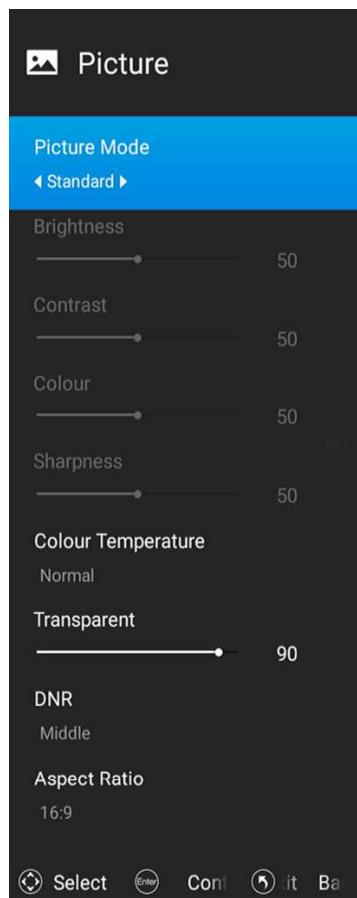


5.1.1 Picture Mode

Press **▲/▼** button to select Picture Mode, then press **ENTER** button to enter and press **◀/▶** button to select. (Available Picture Mode: User , Standard, Dynamic, Mild)

You only can change the value of brightness, contrast, sharpness, color, when the picture is in User mode.

TIPS: You can press **P-MODE** button on the remoter control again and again to change the picture mode directly.

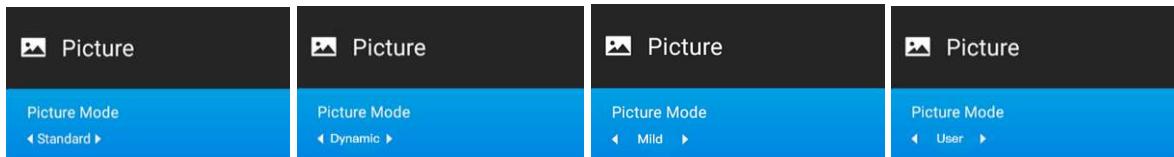

5.1.2 Aspect Ratio

Press **▲/▼** button to select Aspect Ratio, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.3 Colour Temperature

Press **▲/▼** button to select Colour Temperature, then press **ENTER** button to enter and **◀/▶** button to select Standard, Cool, Warm.

5.1.4 DNR

Press **▲/▼** button to select **DNR**, and then press **ENTER** button to enter and **◀/▶** button to select Off, Low, Middle, High.


5.2 SOUND Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **Sound** in the main menu, and then press **ENTER** button or **▶** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the Sound menu, then press **ENTER** button to enter.
2. press **◀/▶** button to adjust or press **▲/▼** to select, and press **ENTER** button to select submenu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

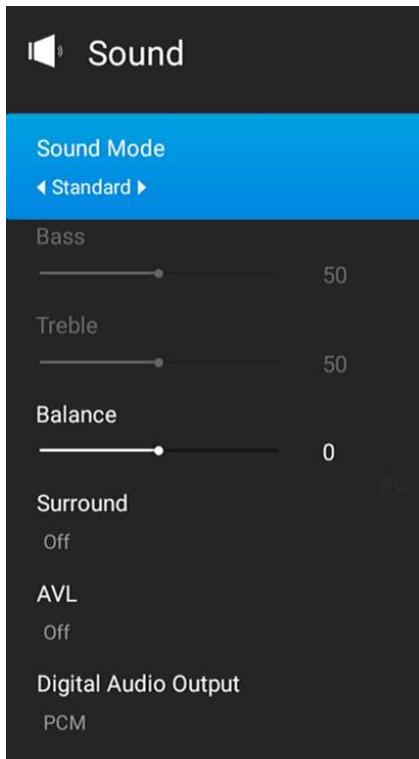


5.2.1 Sound mode

Press **▲/▼** button to select **Sound mode**, and then press **ENTER** button to enter. And then press **◀/▶** button to select. (Available Sound mode: User, Standard, Music, cinema).

You can change the value of bass and treble, Balance and EQ, when the sound is in User mode.

TIPS: You can press **S-MODE** button on the remote control to change the Sound Mode directly.

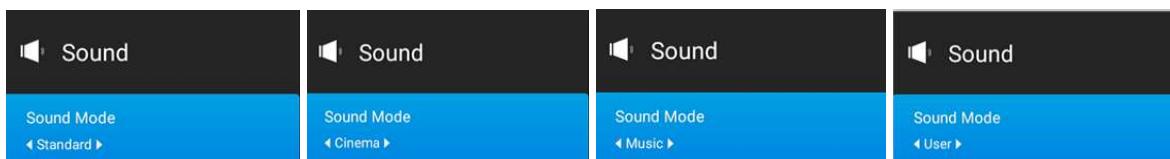

5.2.2 Balance

Press **▲/▼** button to select Balance, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.3 Surround

Press **▲/▼** button to select surround, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.4 AVL

Press **▲/▼** button to select **AVL**, then press **ENTER** button to enter and press **◀/▶** button to adjust. It can only be adjusted under user mode Then press **MENU** button to return back the previous menu directly.

5.2.5 Digital Audio output

Press **▲/▼** button to select **SPDIF Output**, then press **ENTER** button to enter and press

◀/▶ button to select.

(Available SPDIF mode: RAW, PCM, OFF)


Then press **ENTER** button or ▶ button to enter and press ▲/▼ button to adjust, then press **MENU** button to return back the previous menu directly.

5.3 Timer Menu

5.3.1 OSD Timer

5.3.2 Sleep Timer

5.3.3 Auto Power Down

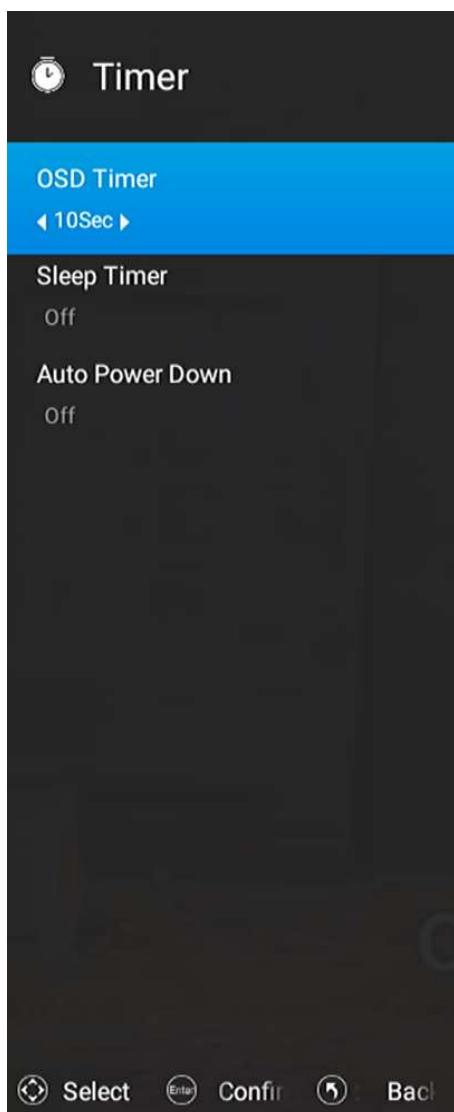

5.4 System lock


5.4.1 System Lock

5.4.2 Source lock

5.4.3 Channel lock

5.4.4 Program Restrictions

5.4.5 Change PIN

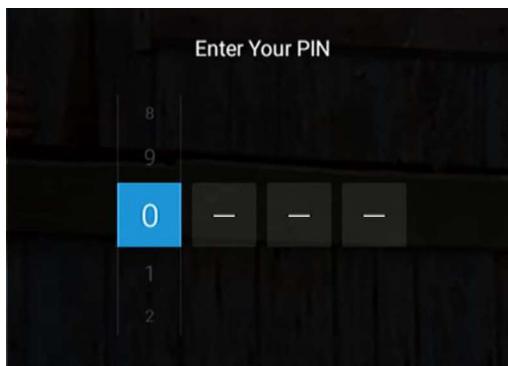



5.5 Setting Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **SETTING** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the **SETTING** menu, and then press **ENTER** button to enter.
2. Press **◀/▶** button to select and press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

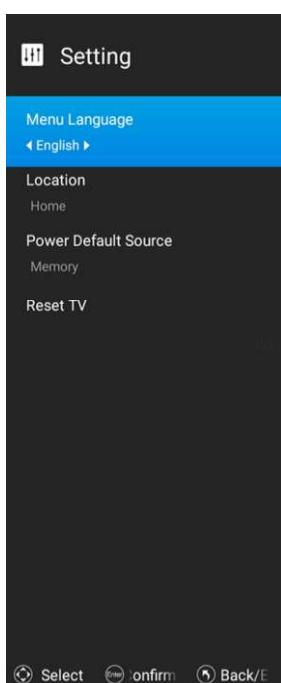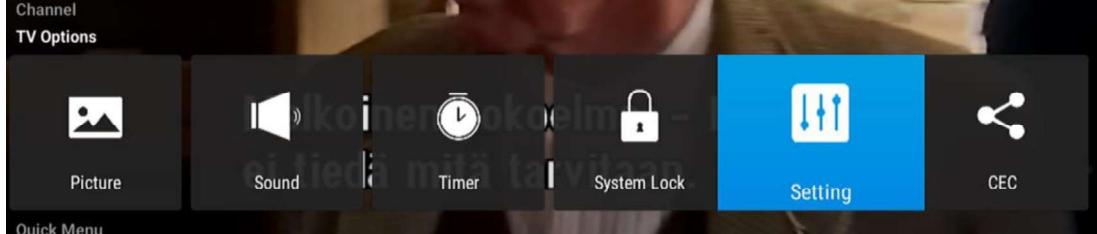

5.5.1 Menu Language

Press **▲/▼** button to select **Menu Language**, and then press **◀/▶** to select On or Off.

5.5.2 Location

Press **▲/▼** button to select **Location**, and then press **◀/▶** to select.

5.5.3 Power Default Source

Press **▲/▼** button to select **Power Default Source**, and then press **◀/▶** to select On or Off.

5.5.4 Reset TV

Press **▲/▼** button to select **Reset TV**, and then press **ENTER** button to enter

5.6 CEC

5.6.1 HDMI CEC Setup


5.6.2 Device Auto Power Off

5.6.3 TV Auto power on

5.6.4 CEC device list

5.6.5 Amplifier Support ARC

5.6.6 Speaker Preference

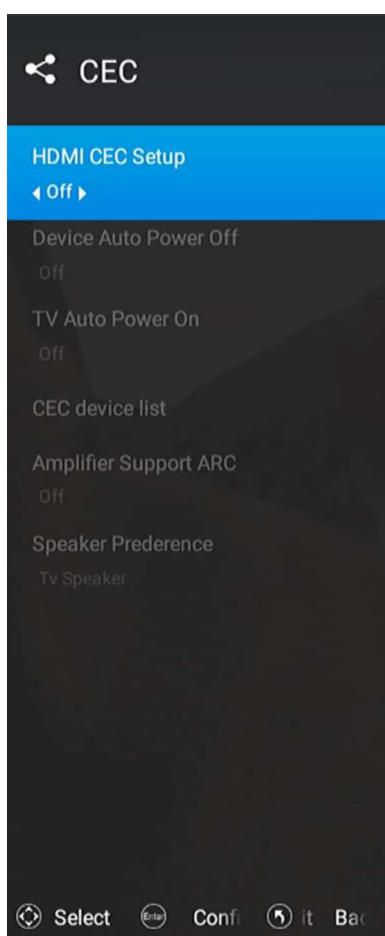


5.7 Channel Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.


Press **▲/▼** button to select **Setup** in the main menu, then press **ENTER** to enter.

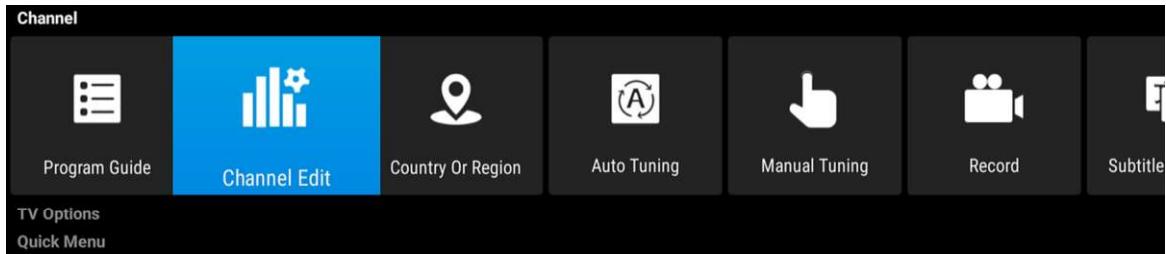

1. Press **▲/▼** button to select the option that you want to adjust in the **Setup** menu, then press **ENTER** or **►** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu.

5.7.1 Program Guide


1. In the DTV source, you can start channel information function by pressing **Program Guide** button on the remote control.. The prompt window will appear as follows:

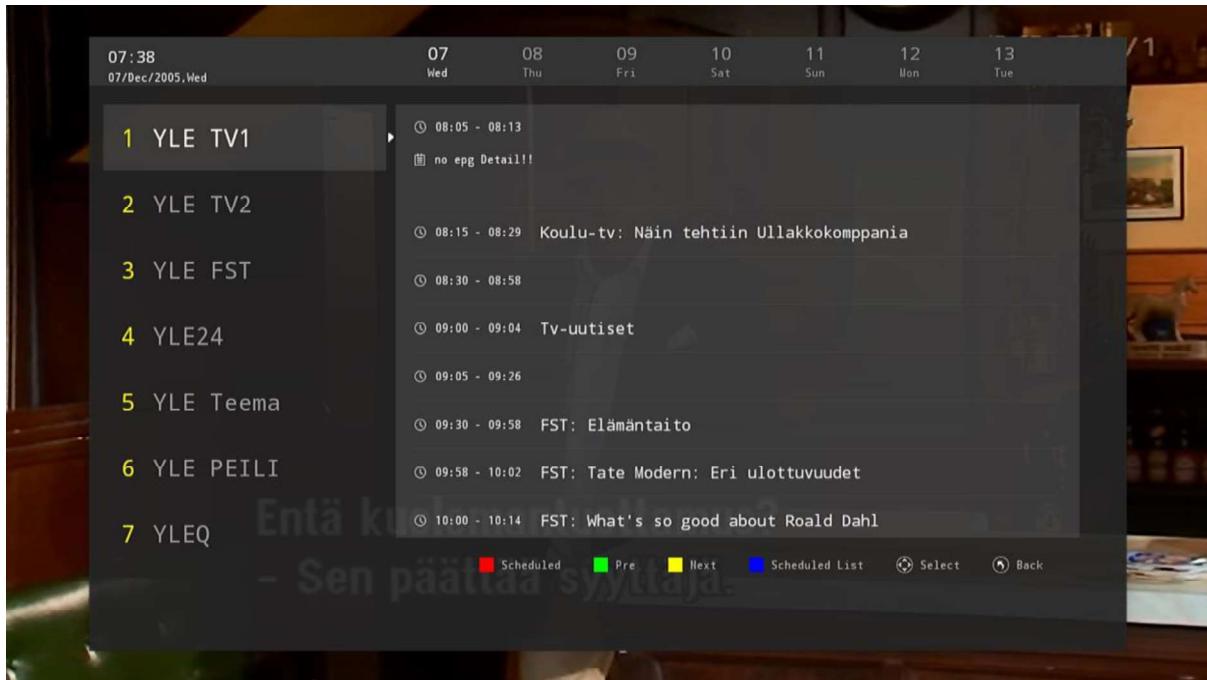

5.7.2 channel Edit


Press **▲/▼** button to select **channel Edit**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

Select to open the auto searching page, and press Enter button to start the scan.

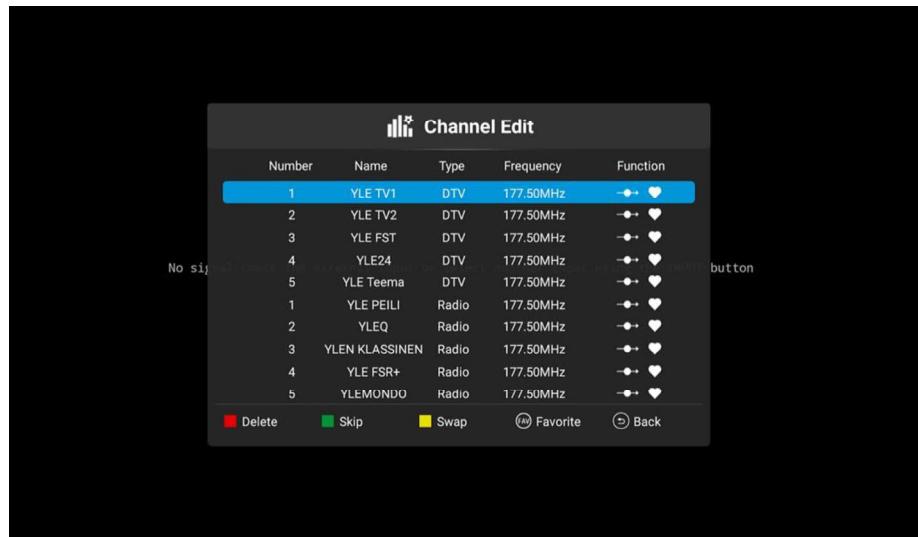


5.7.3 Country or Region(Germany)

Press **▲/▼** button to select **Country and Region**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

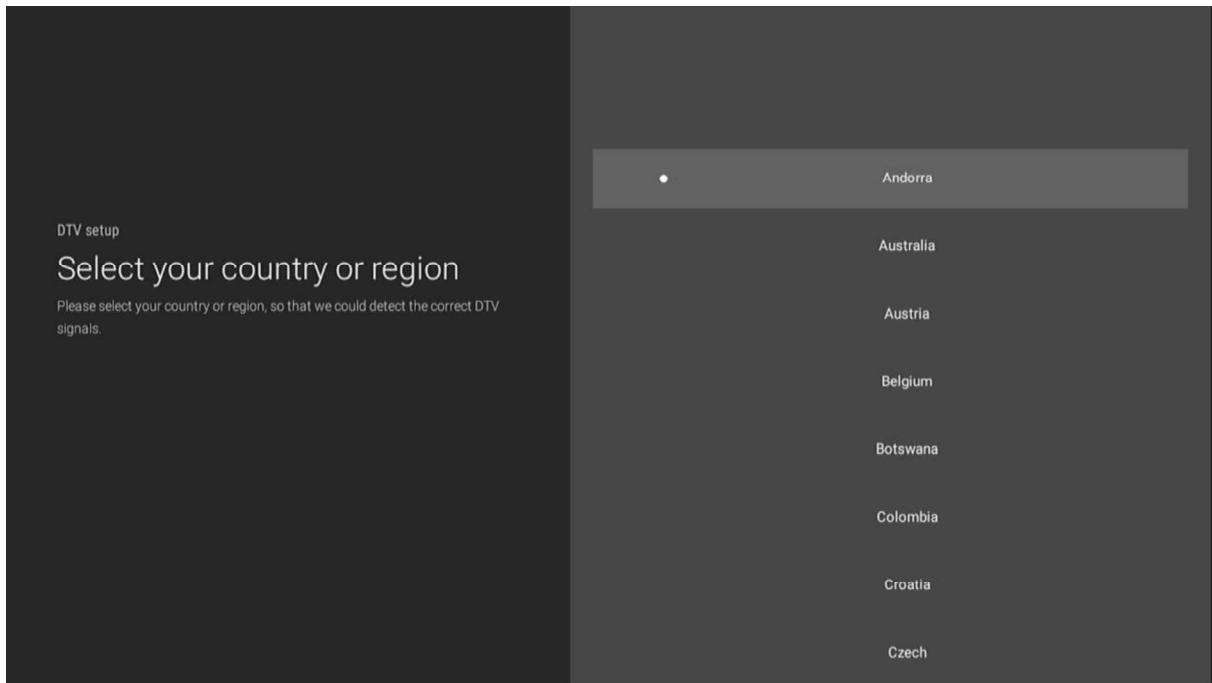


5.7.4 Auto Tuning

Press **▲/▼** button to select **Auto Search**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

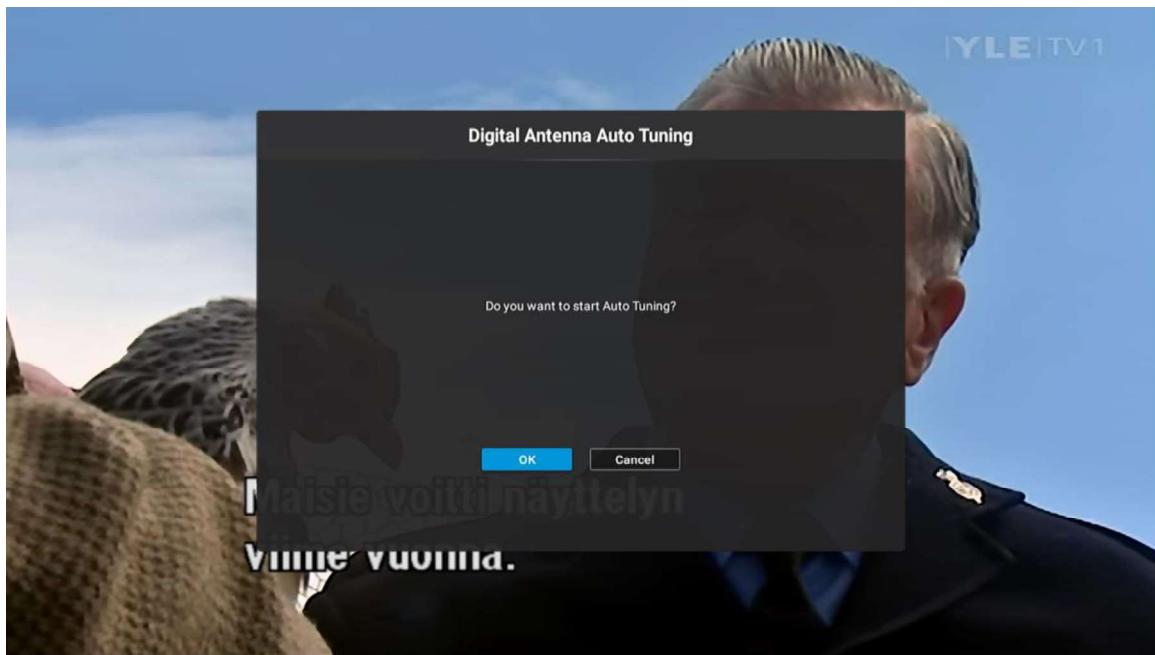


5.7.5 Manual Tuning

Press **▲/▼** button to select **Manual Tuning**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

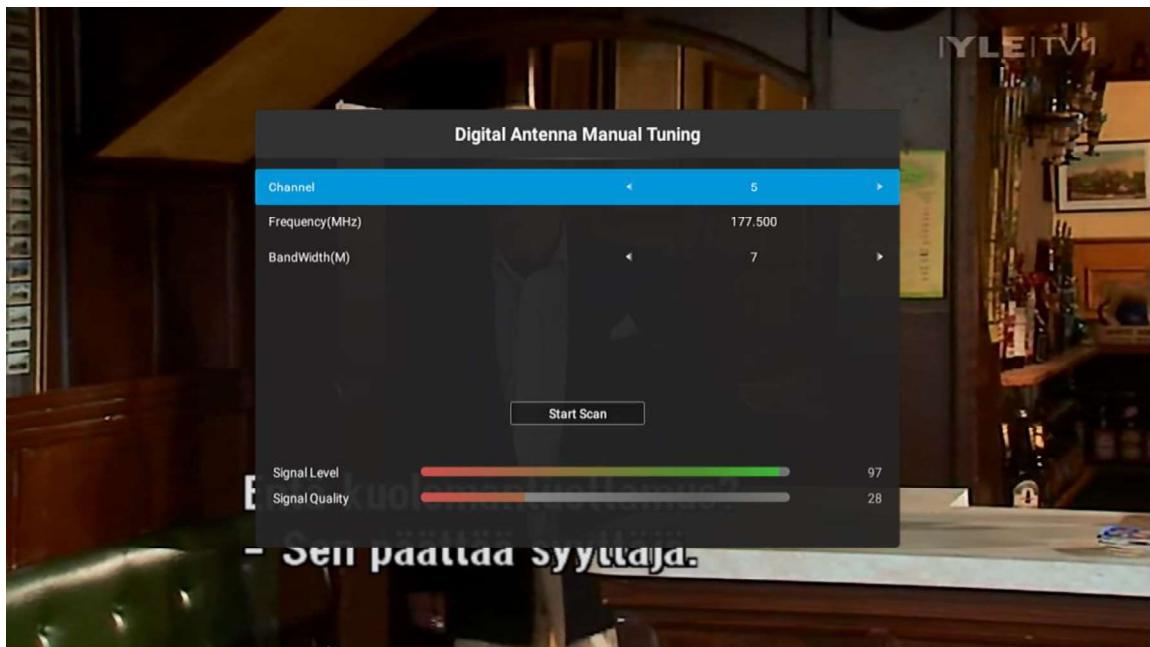


5.7.6 Record menu

Press **▲/▼** button to select **Record menu**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

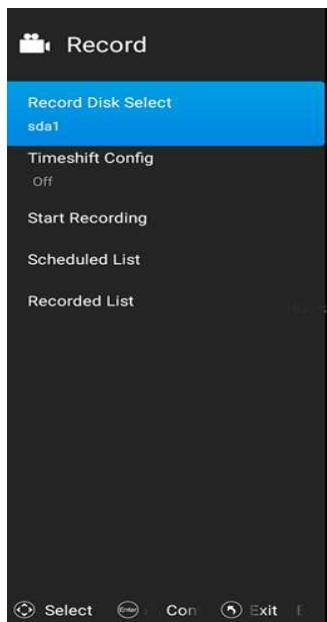


5.7.7 Subtitle Language

Press **▲/▼** button to select **Subtitle Language**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

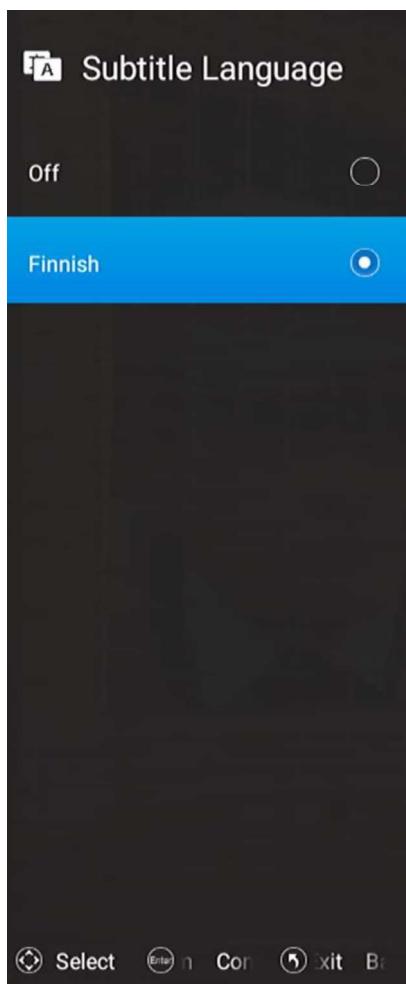


5.7.8 Multi Audio

Press **▲/▼** button to select **Multi Audio**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

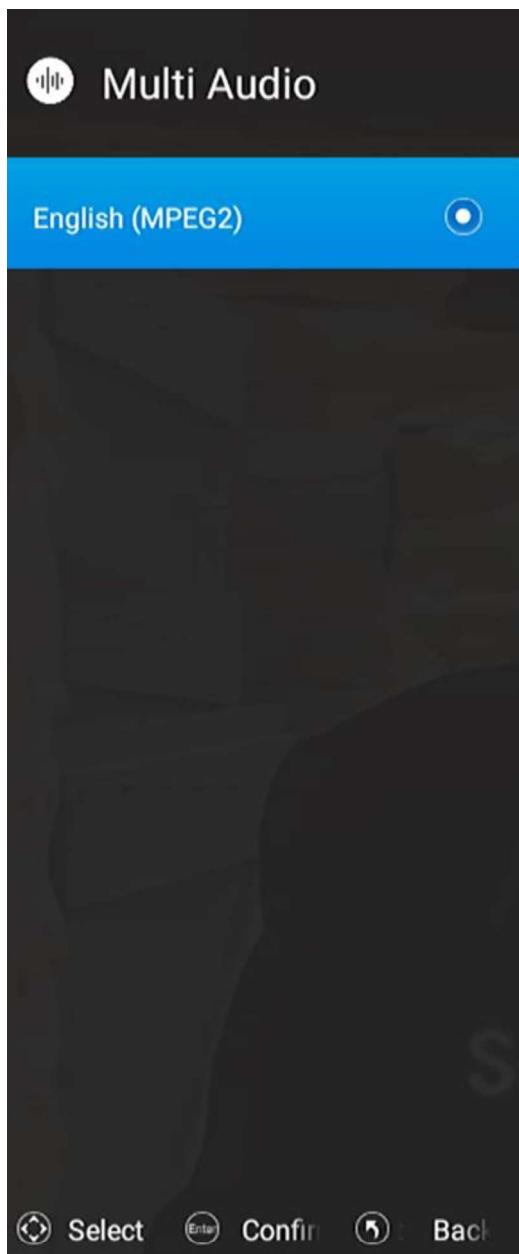


5.7.9 DTV Setting

Press **▲/▼** button to select **DTV Setting**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

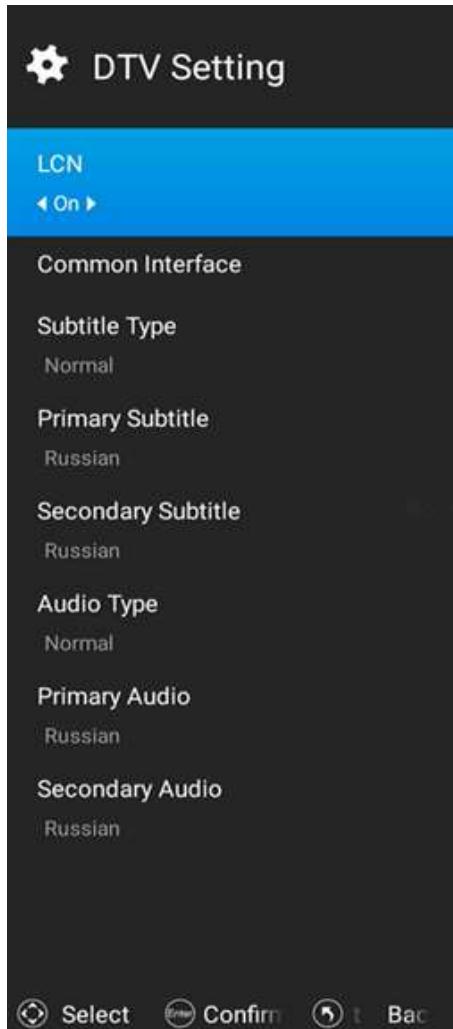

5.8 Quick Menu

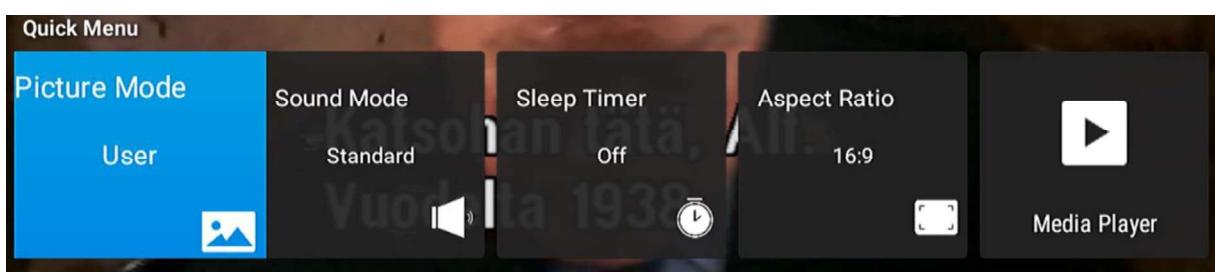


6. Home


6.1 Apps


The picture is for a reference only; the actual item is the standard.

Press **▲/▼** button to select **APPS** in the **Source Menu**, and then press **ENTER** or **►** to enter.


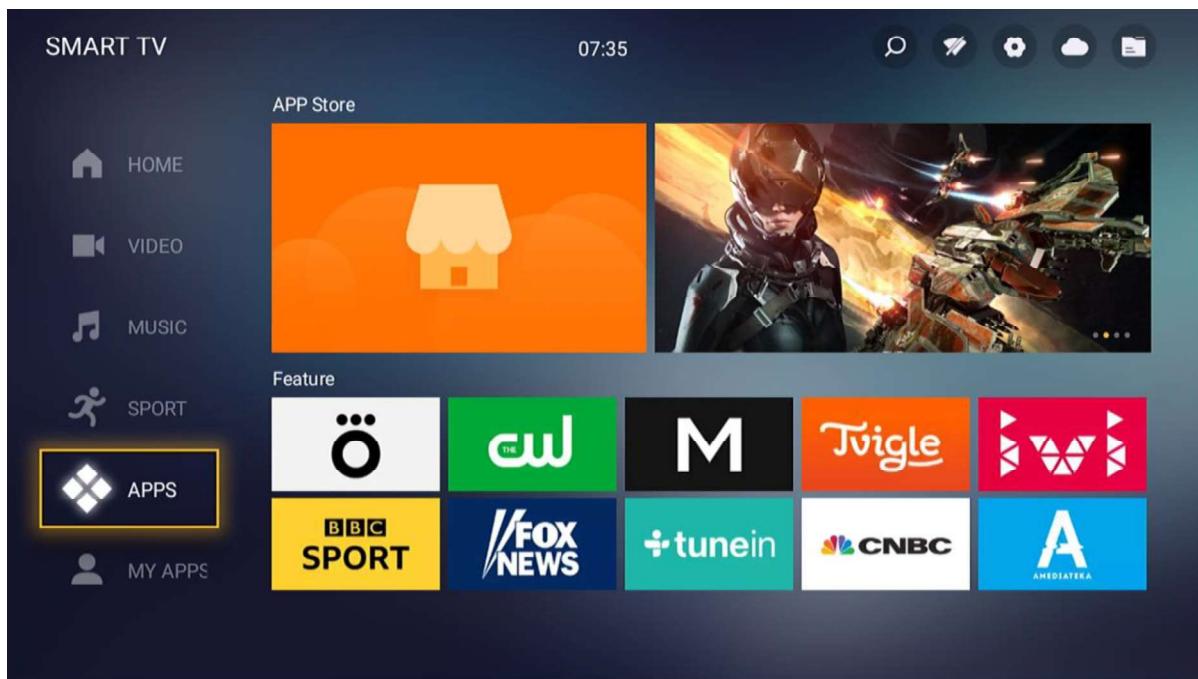


you can button to select Tv Store to download apps what you want, As the figure shows.

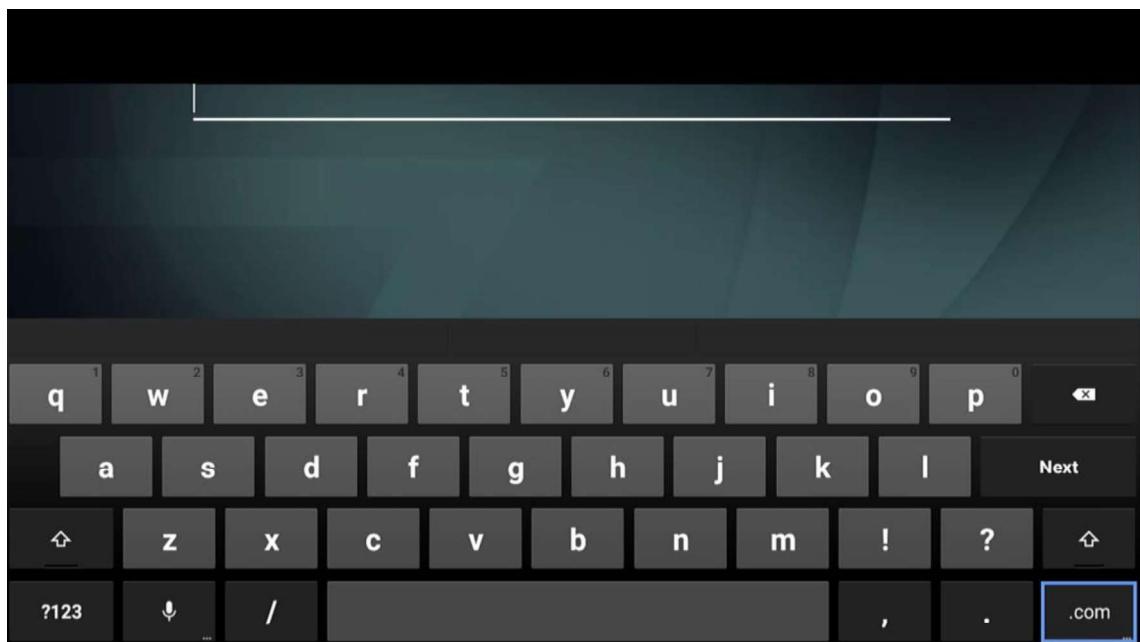

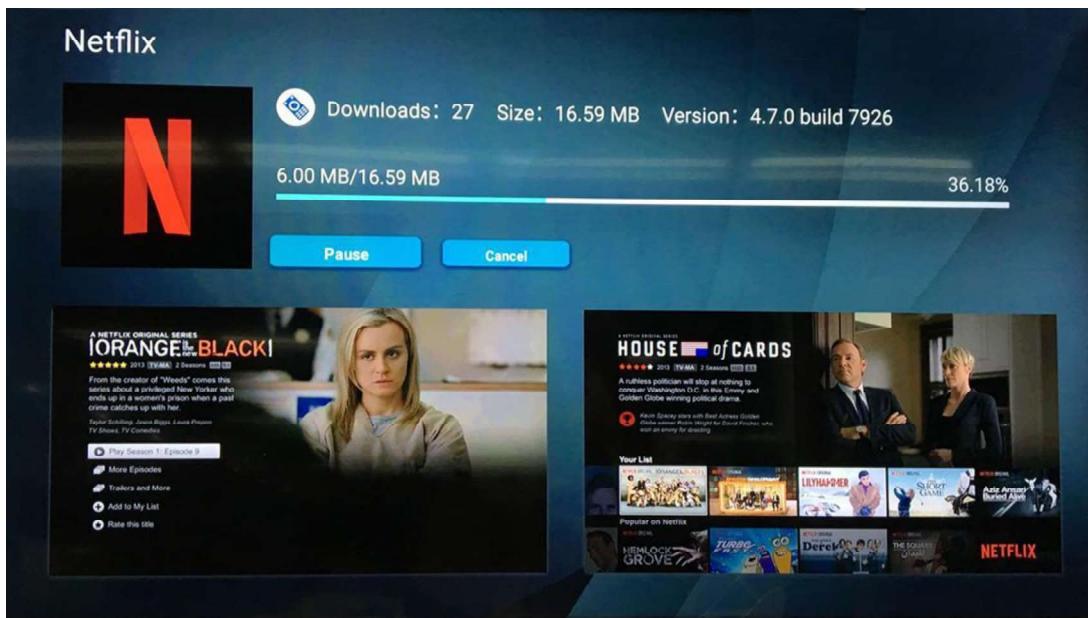


you can also select Browser to search the internet, As the figure shows.

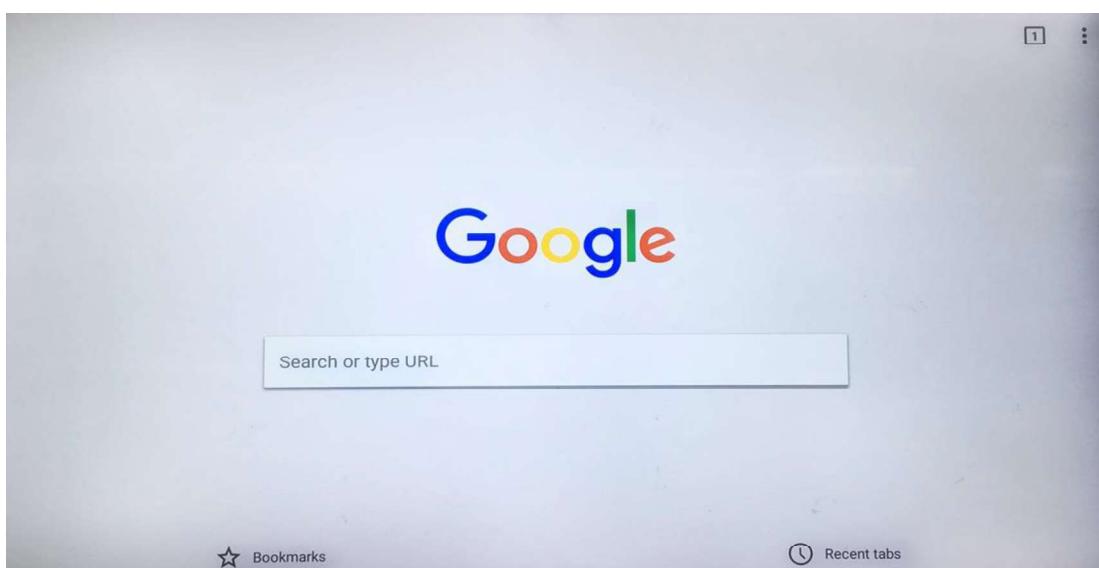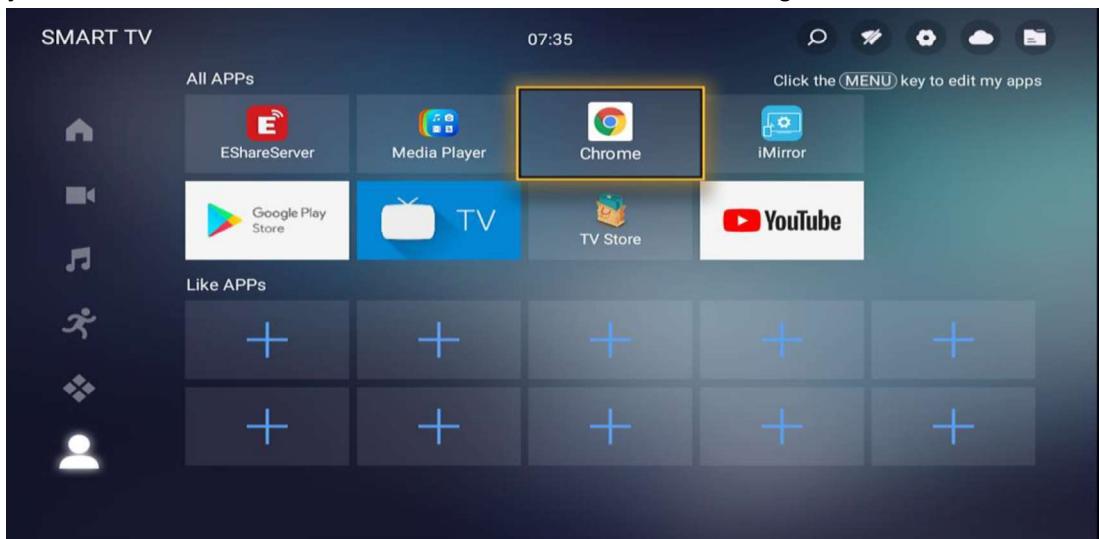

6.2 TV

The picture is for a reference only; the actual item is the standard.

Press **▲/▼** button to select **TV** in the **Source Menu**, and then press **ENTER** or **►** to enter.

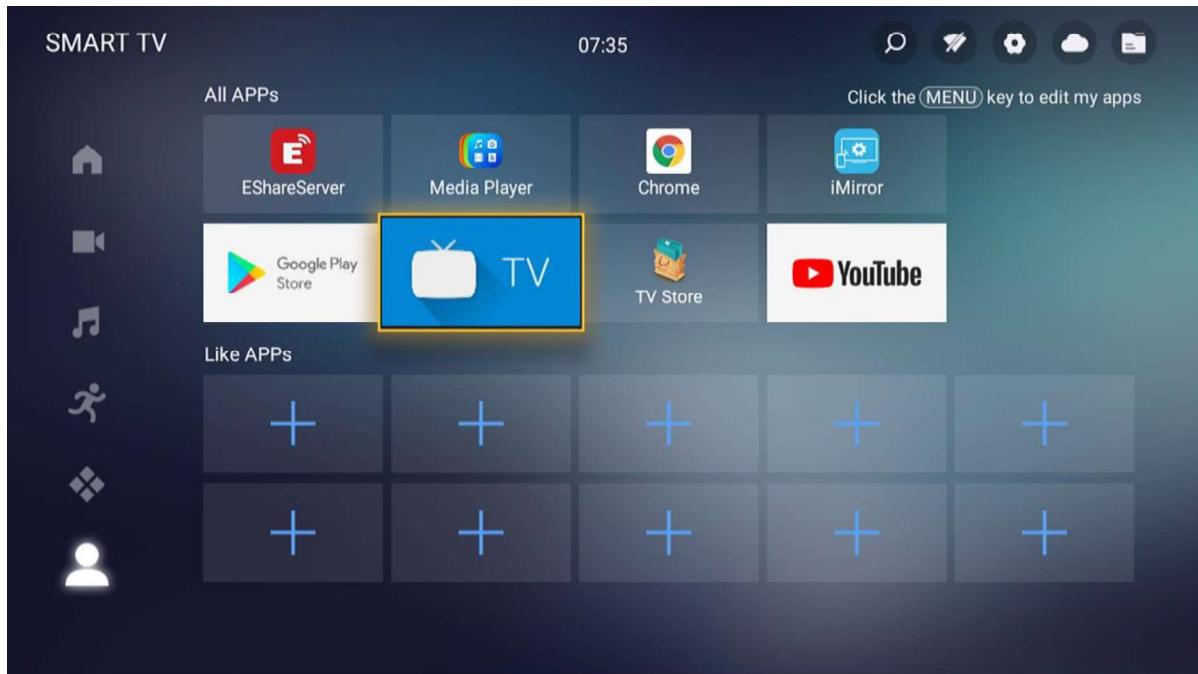


6.3 MEDIA OPERATION

The picture is for a reference only; the actual item is the standard.

Note: Before operation **MEDIA** menu, Plug in USB device or memory card, then press **SOURCE** button to set the Source to Media.

Press **▲/▼** button to select **MEDIA** in the **Source Menu**, and then press **ENTER** or **►** to enter. You can also enter the Media by pressing **MEDIA** button on the remote control.

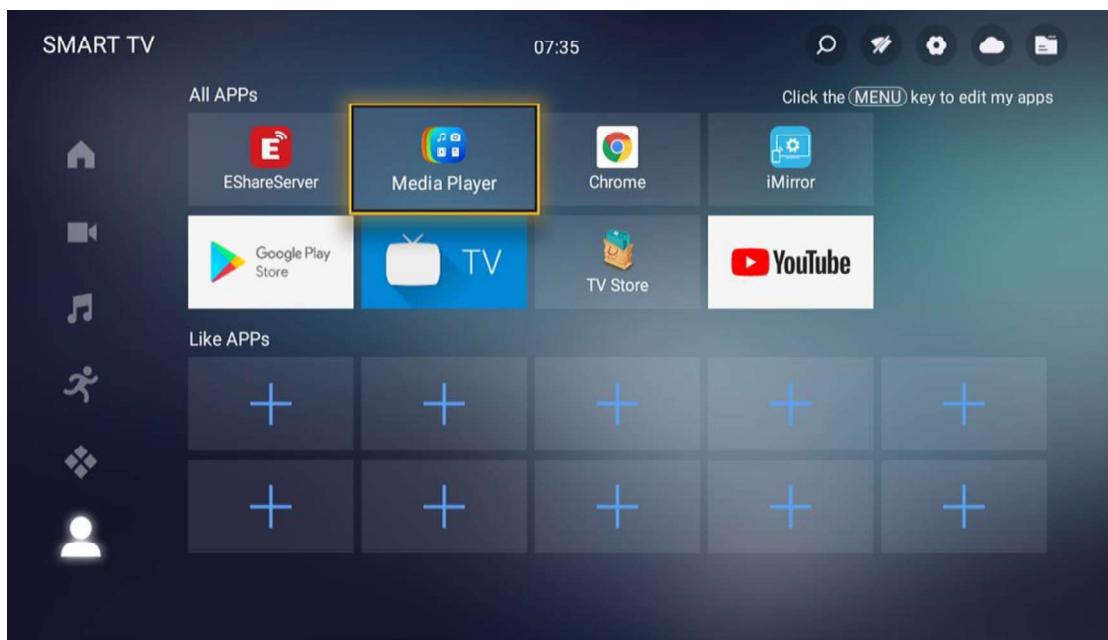


6.3.1 Photo

The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Music** in the main menu, and then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.



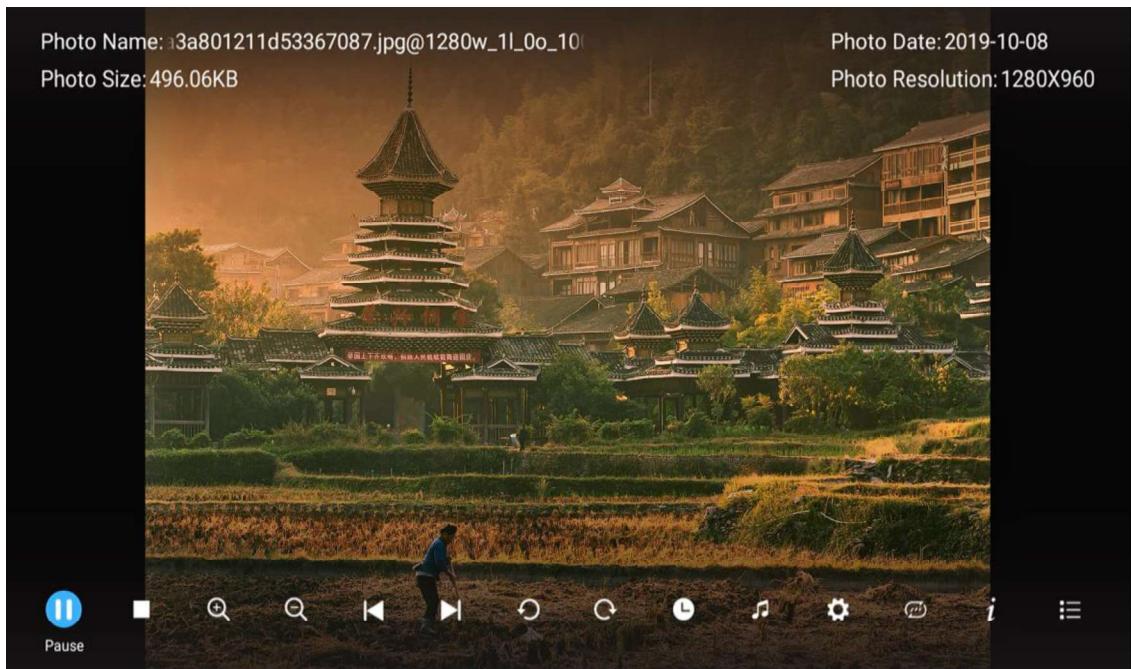

You can see the information of the current playing photo after press **INFO** button, then press **▶||** button to play or pause, you can see the playing state in the right. Then press **▲/▼** or **◀/▶** button to rotate the picture.


Notes: Other menu and description are the same as that for Movie menu.


6.3.2 Music

The picture is for a reference only; the actual item is the standard.


Press **◀/▶** button to select **Music** in the main menu, and then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.

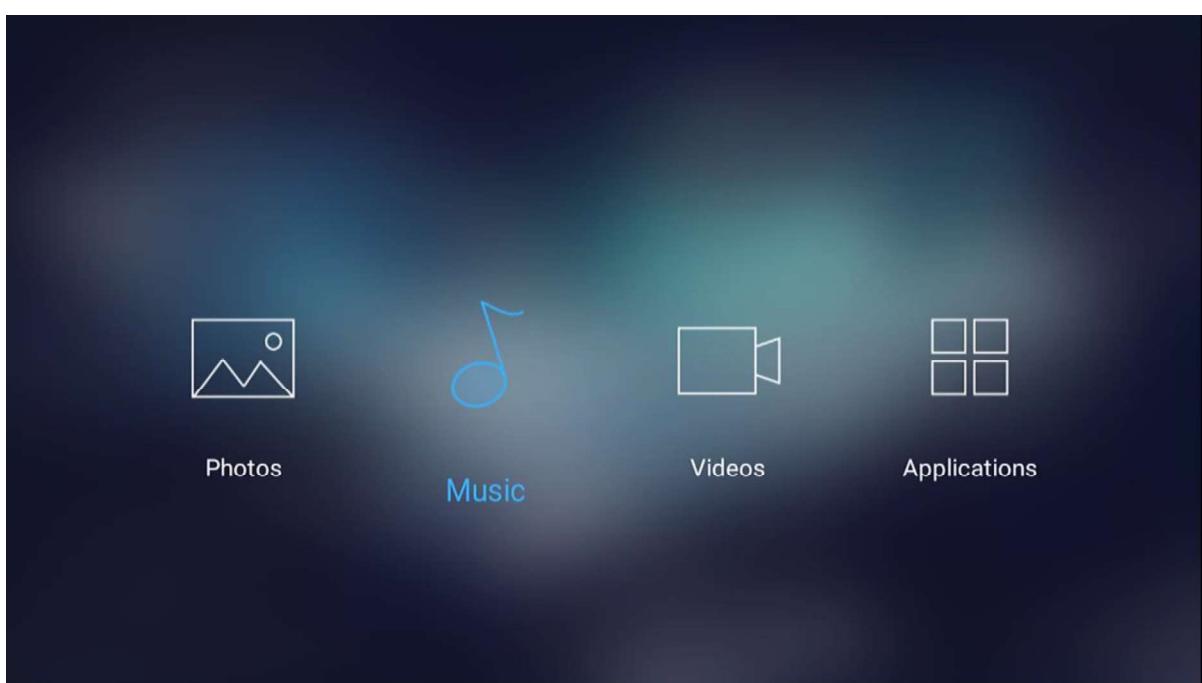

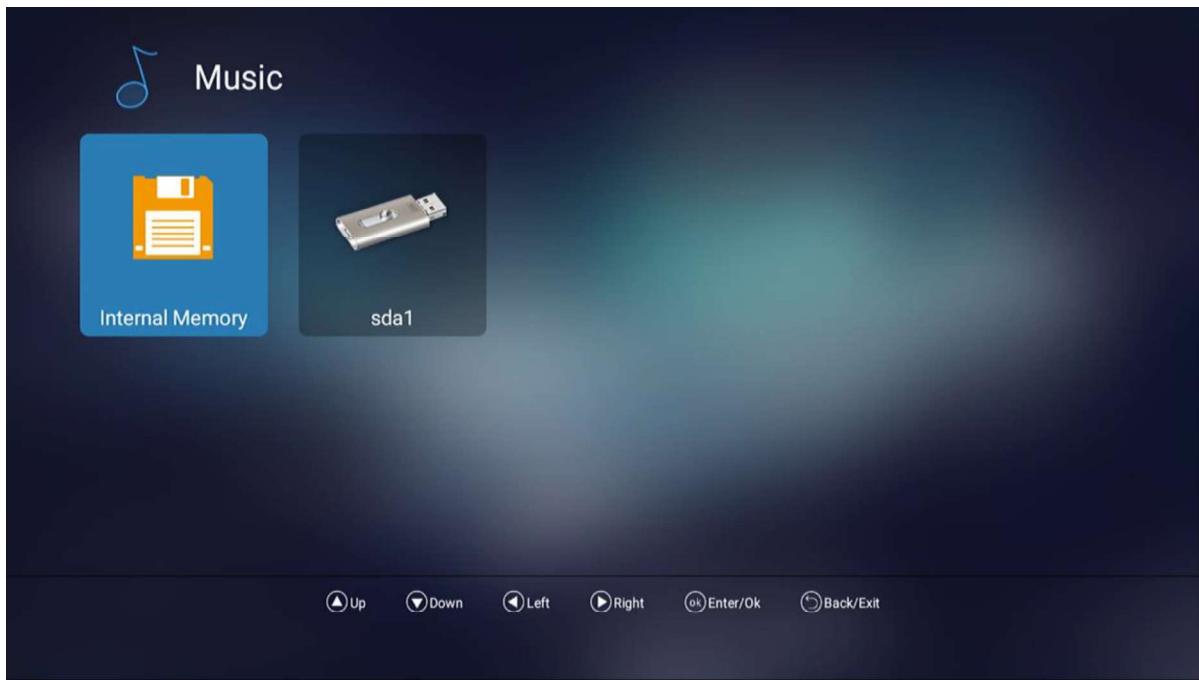

You can see the information of the current playing sonny at the left of the menu.

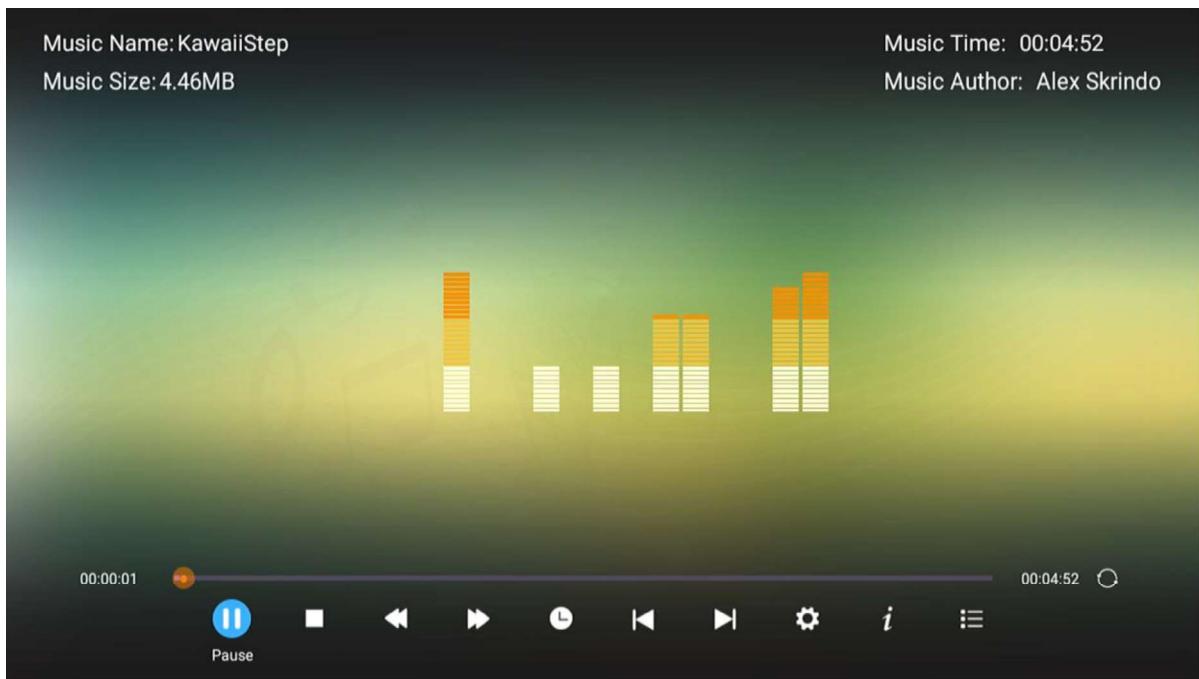


6.3.3 Video

The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Video** in the main menu, then press **ENTER** button to enter.


Press **EXIT** button to return back to the previous menu.

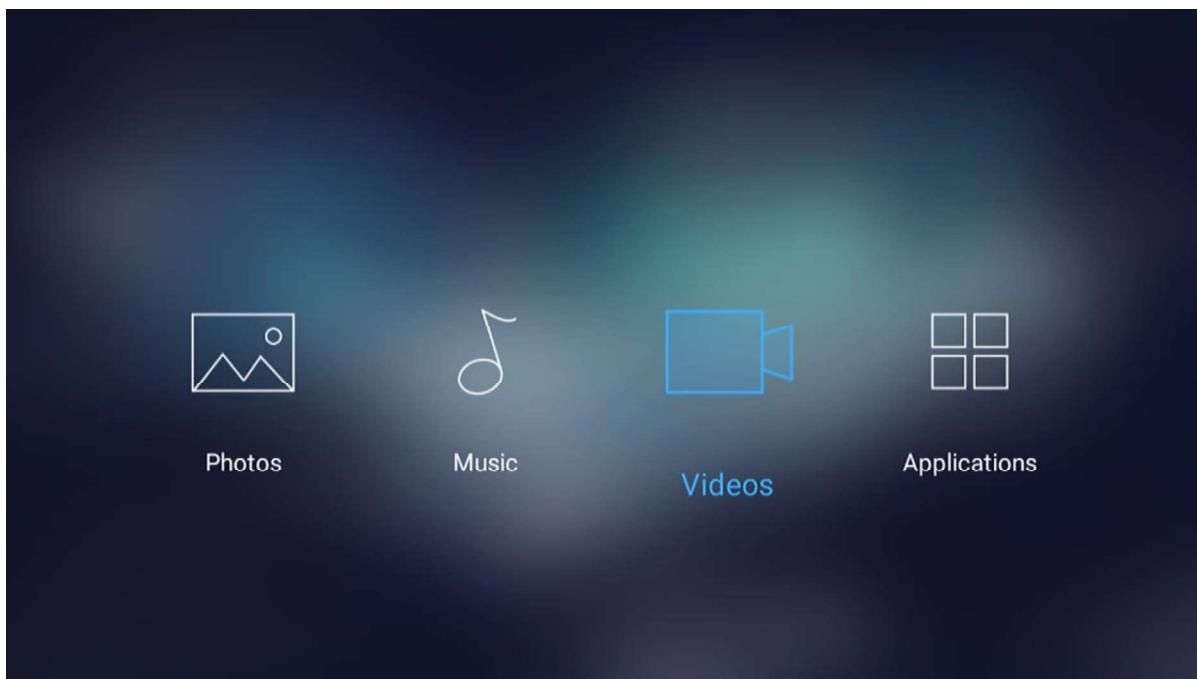

Press **▲/▼** button to select the folder that you want to view.

Press **ENTER** button to select the sub folder.



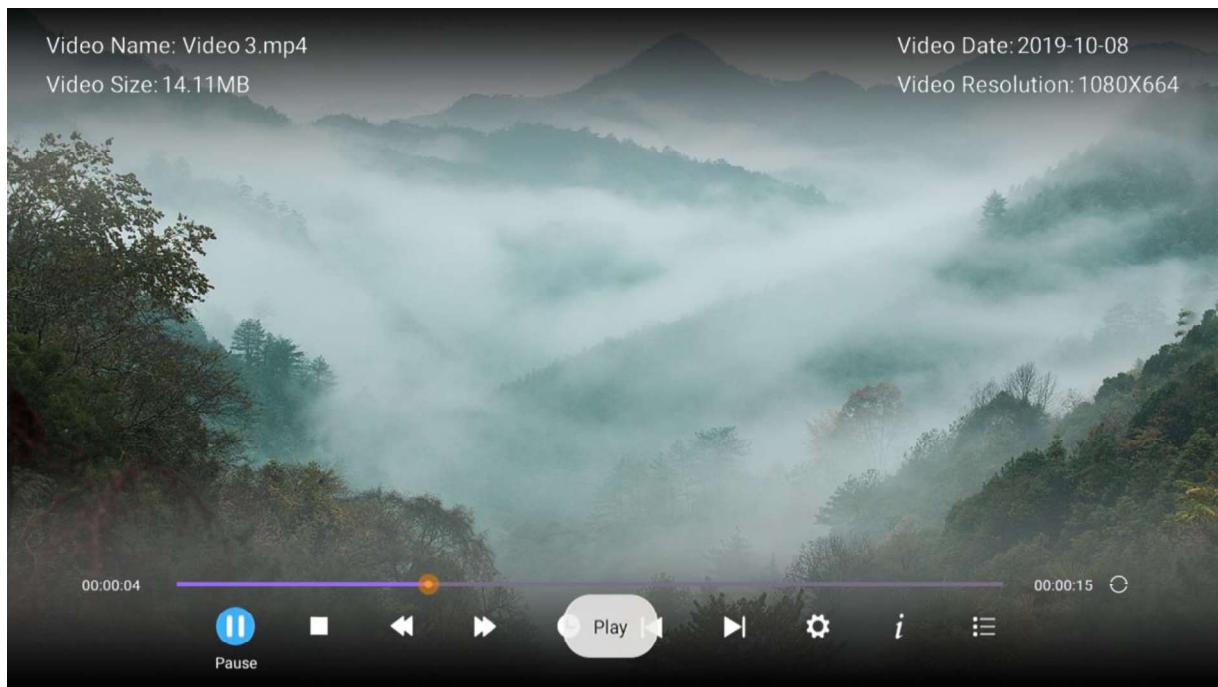

Press **ENTER** button or **▶||** button to play,

Press **■** button or **EXIT** button to stop playing.

Press the **◀** button to return back to previous page.


You can see the information of the current playing media at the first few second or after press **INFO** button.

6.3.4 Applications

The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Video** in the main menu, then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.

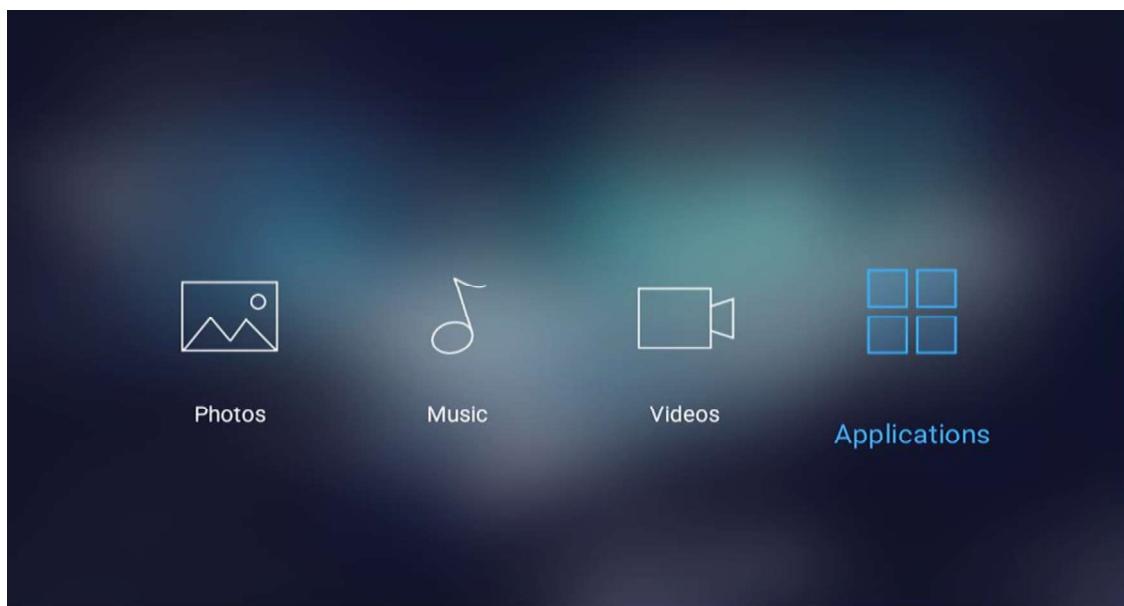


6.4 Setting

The picture is for a reference only; the actual item is the standard.


Press **▲/▼** button to select **Setting** in the **Source Menu**, and then press **ENTER** or **▶** to enter.




6.4.1 Network Setting

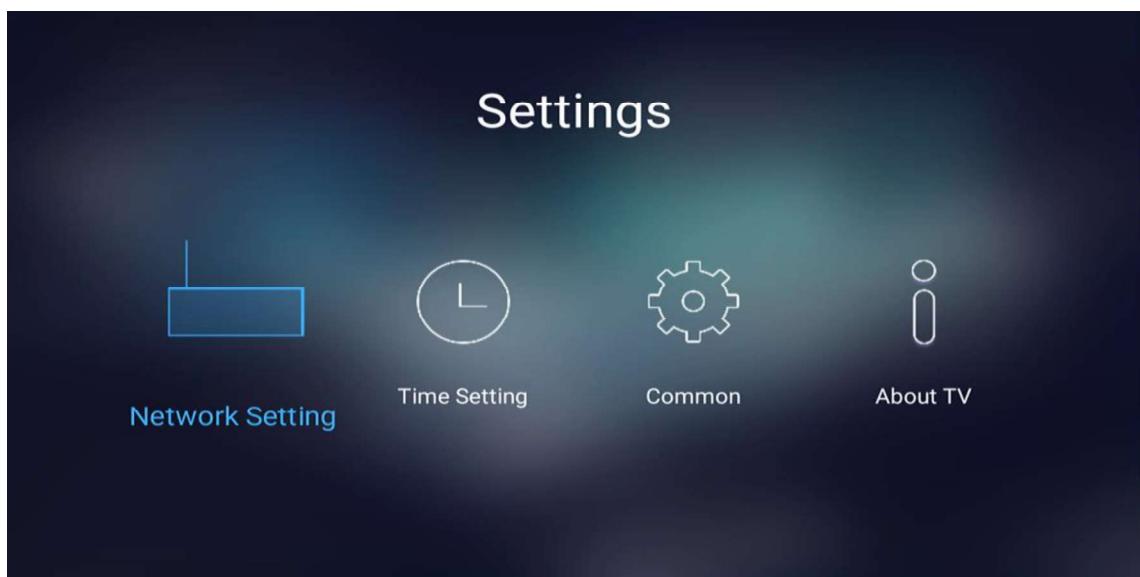


Press **▲/▼** button to select the Network that you can open the Wi-Fi. As the figure shows.

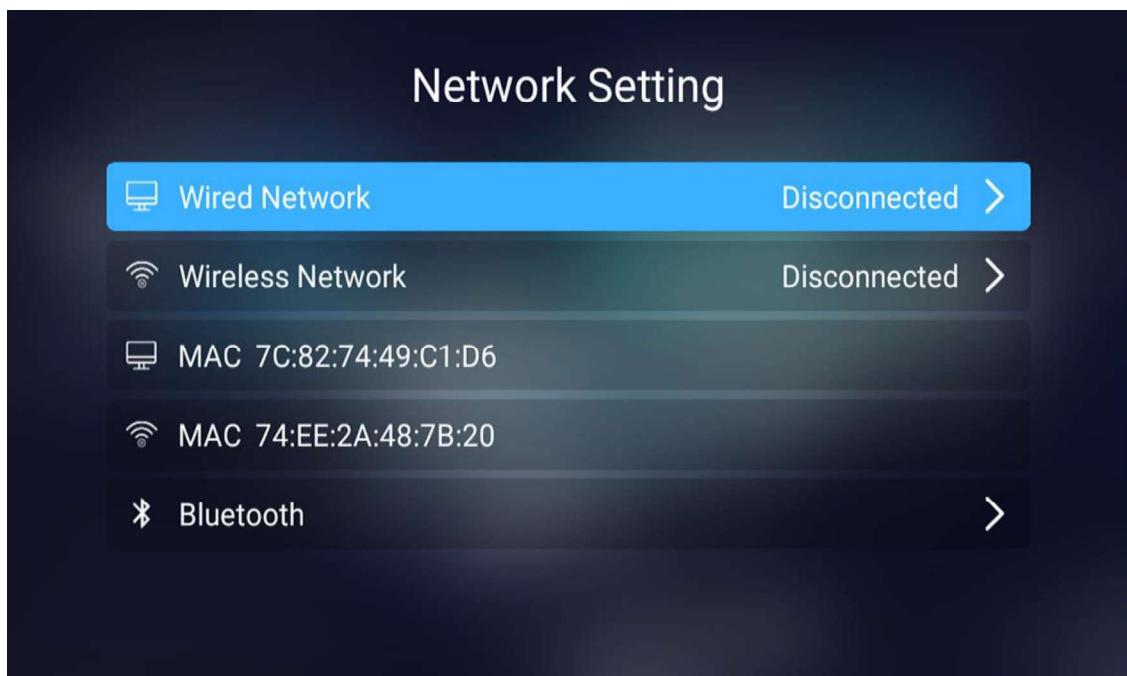


6.4.2 Time Setting

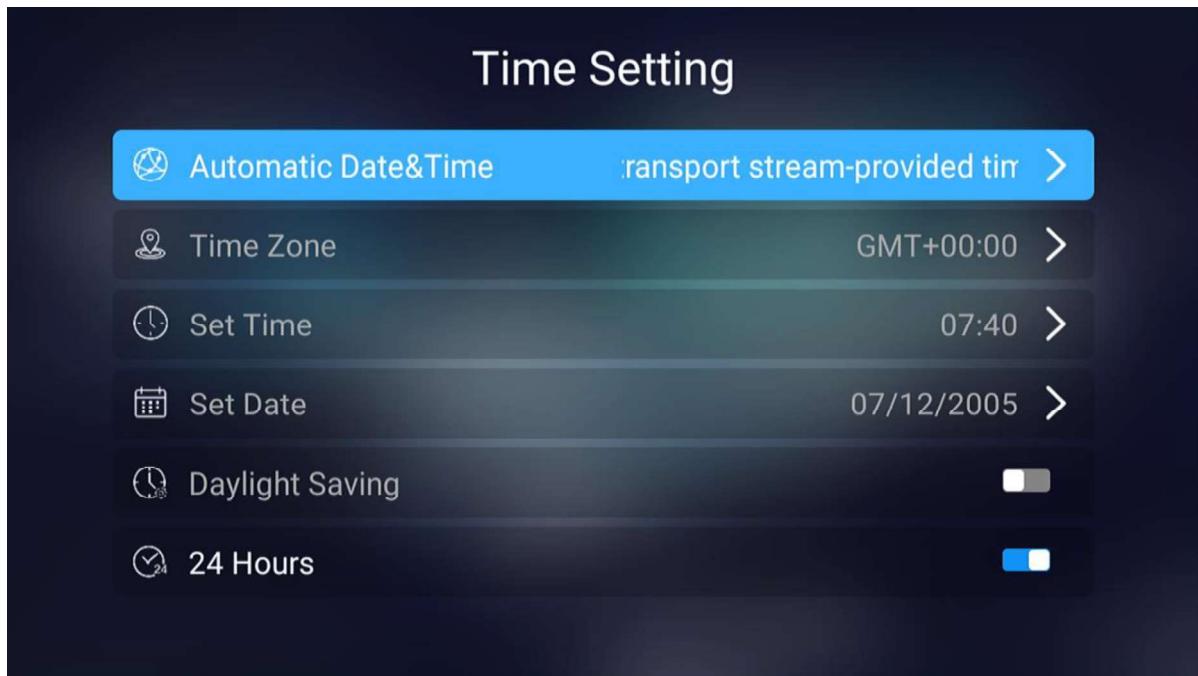


6.4.3 Common

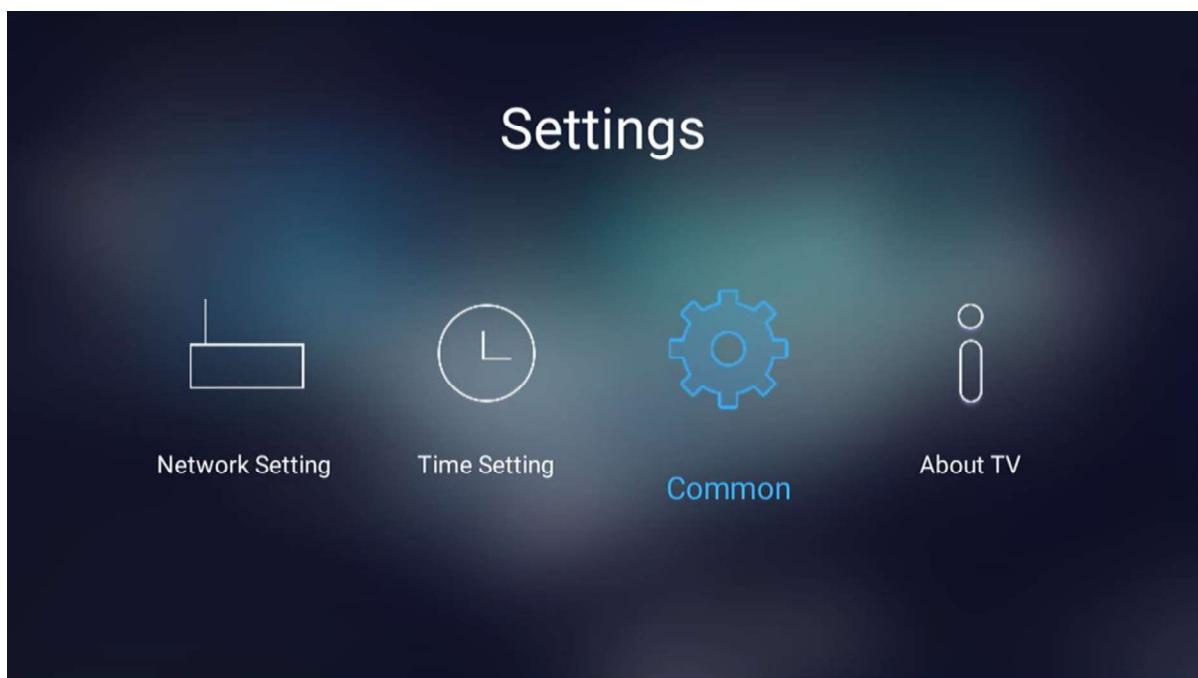


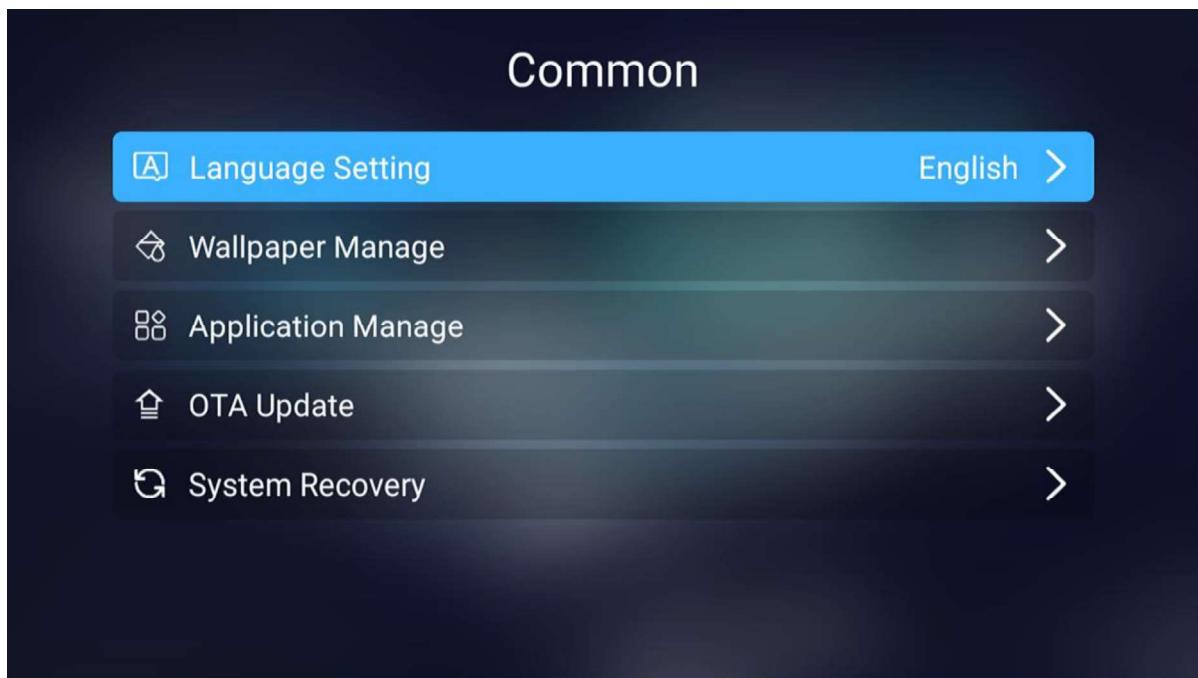


Press **◀/▶** button to select the Language that you want.
As the figure shows.

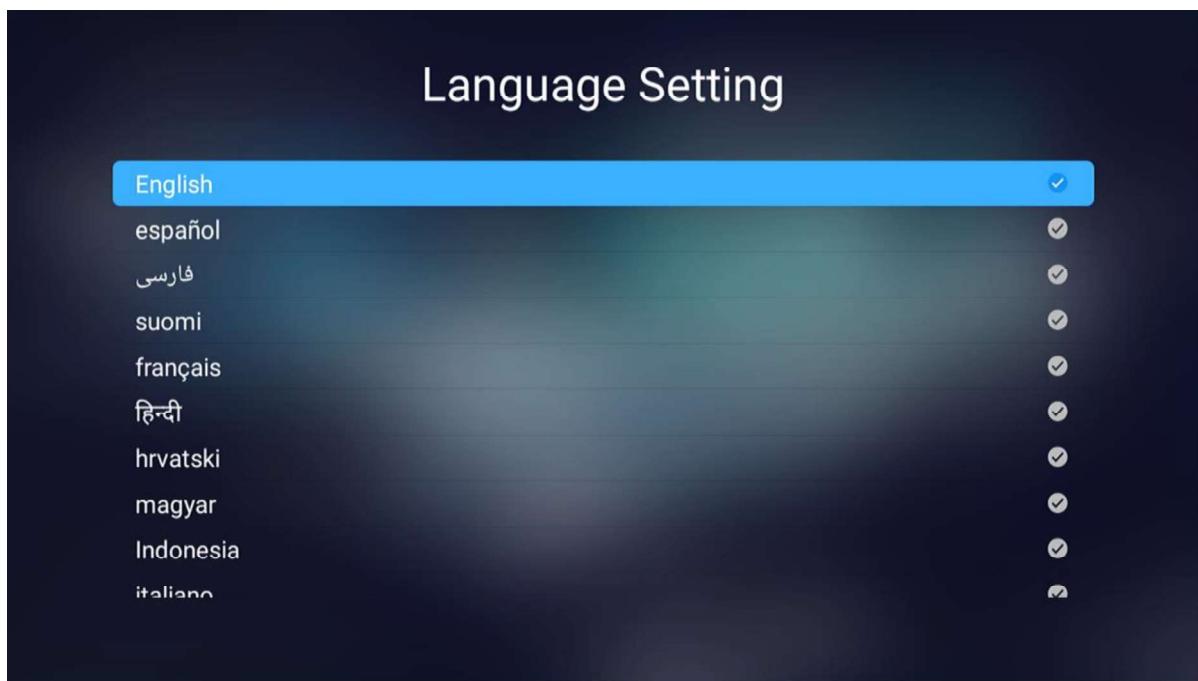


Press **◀/▶** button to select the time that you can change. As the figure shows.

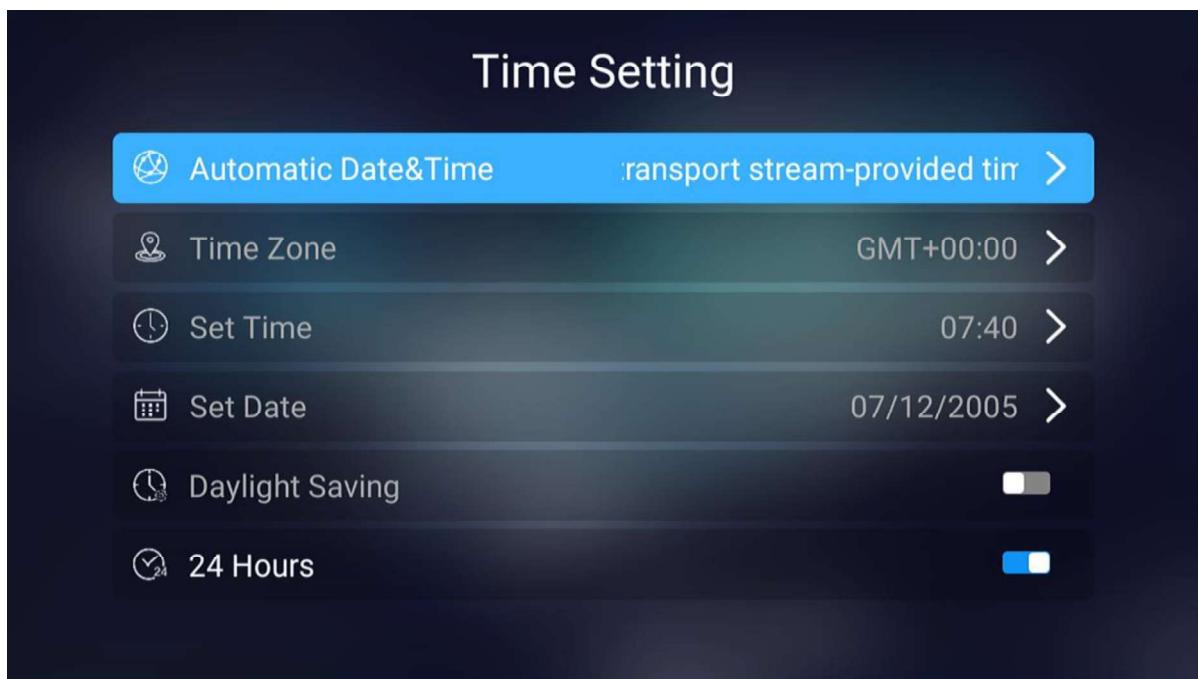


Press **◀/▶** button to select wallpapers that you can know these pictures.
As the figure shows.

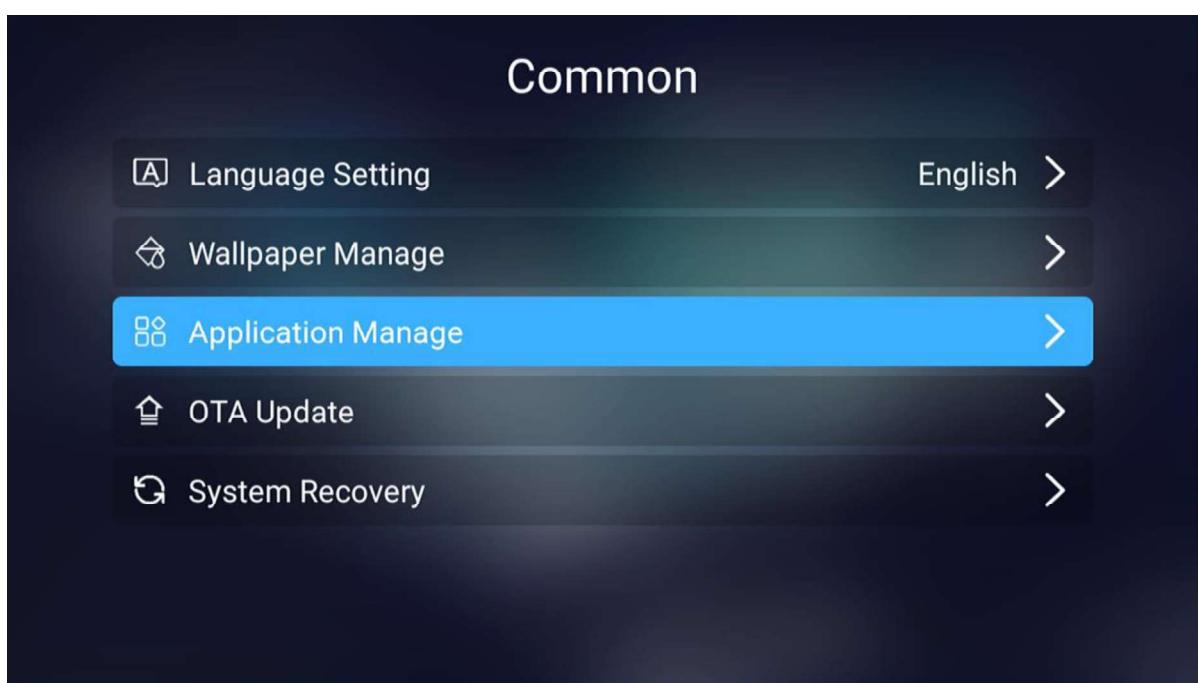


Press **◀/▶** button to select application that you can know how many apps you have downloaded and this feature you also can unload the app. As the figure shows.

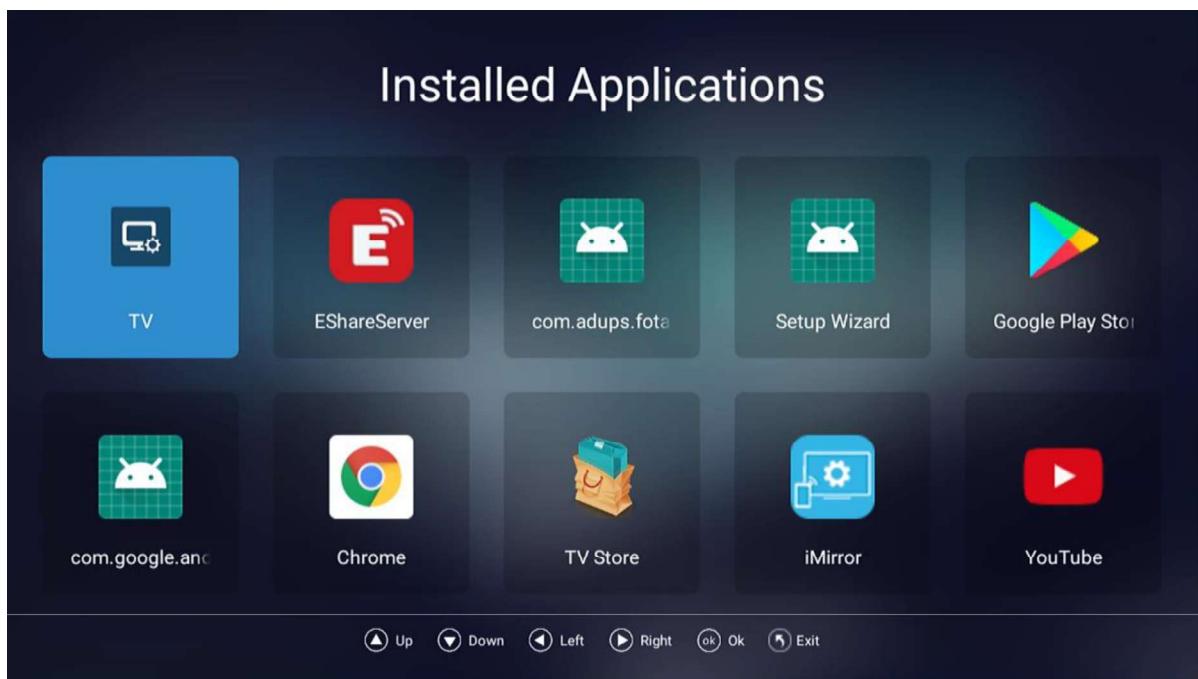


Press **◀/▶** button to select reset that you can reset the system.
As the figure shows.

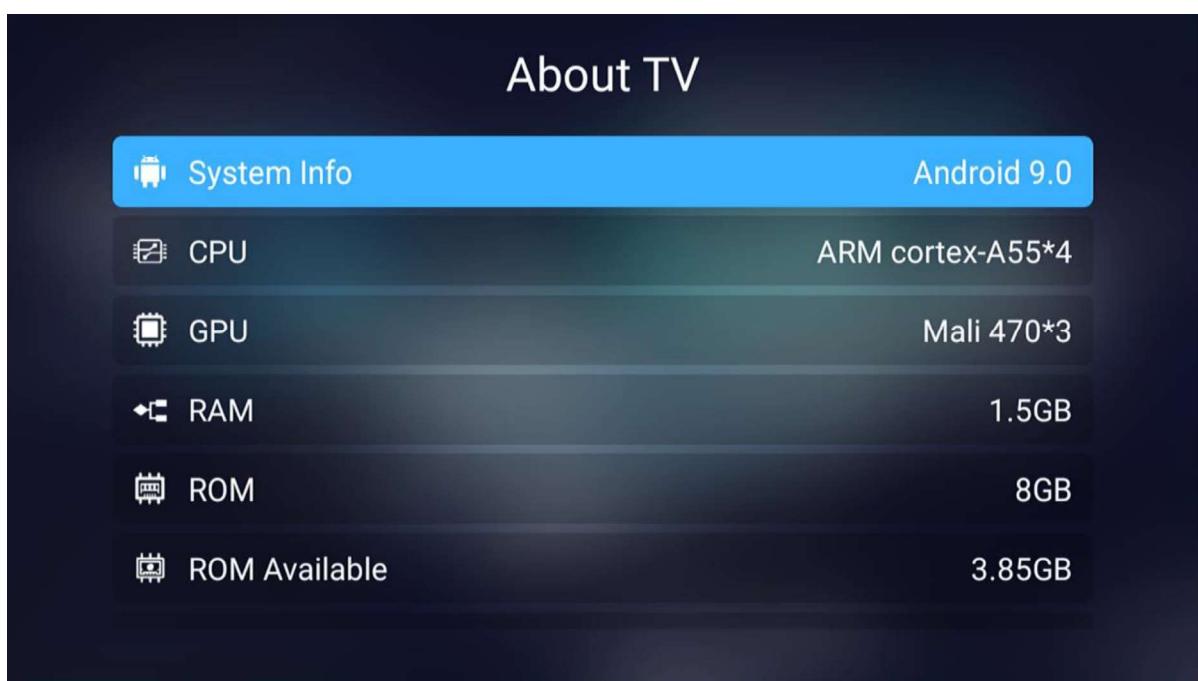

Press **◀/▶** button to select system update that you can update the system.
As the figure shows.

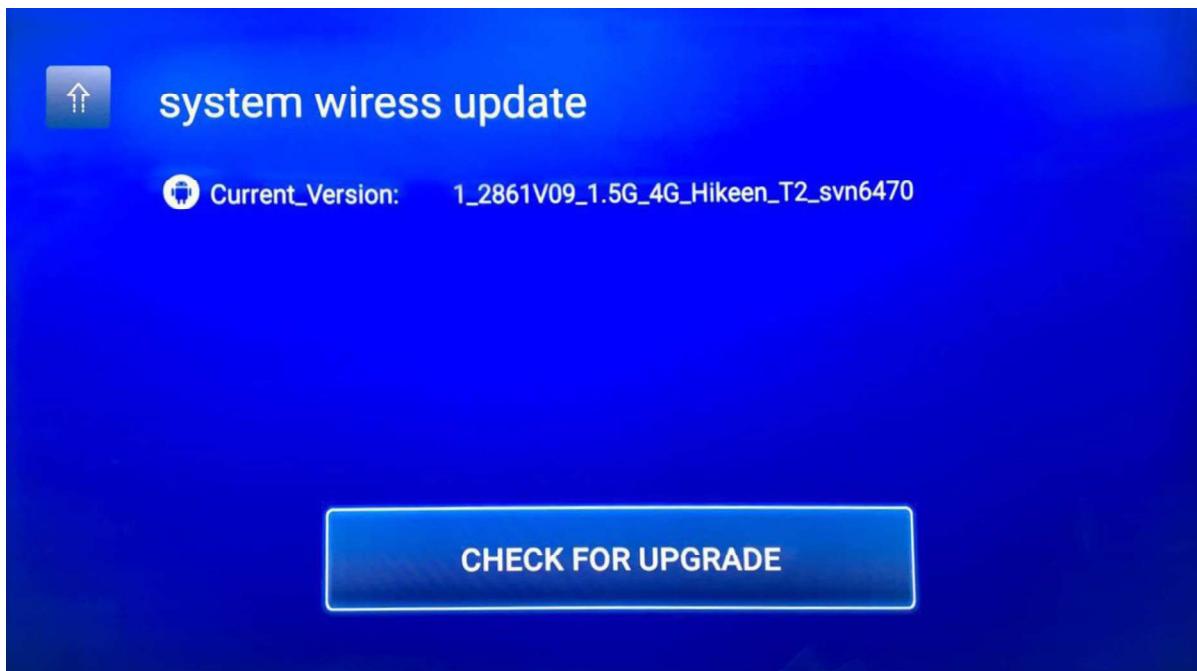

Press **◀/▶** button to select the About TV that you can find the information about TV. As the figure shows.

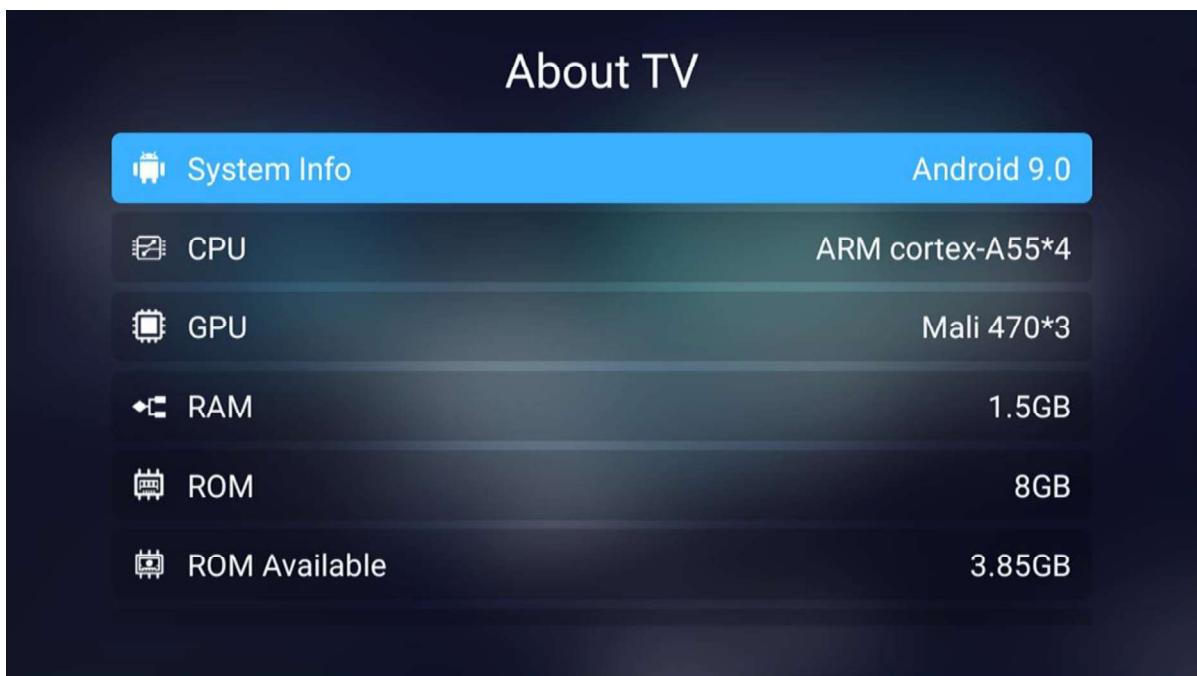

7. Troubleshooting

Carry out the problem-solving measures described in the following section before contacting customer support. Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug. Do not attempt to repair the device yourself.

SYMPTOM	CHECK ITEM
LCD screen stays Dark.	Make sure the unit is turned on and the connections are correct. Make sure the power adapter is correctly connected.
There is no sound	Make sure the system connection is correct. Make sure the power of speaker is turned on.
There is no picture or picture move up and down unsteady.	Check if the connections with the external AV signal source are correct. Correctly set the items in the picture menu. Check if the video type input signal is not corresponding to the unit. Make sure the unit is turned on and in correct video type.
The remote control does not work.	Make sure there are no obstructions between the remote control and the unit. Make sure the remote control is pointing at the unit. Make sure the batteries are inserted or the polarity is correct. Make sure the batteries are not weak. Replace the weak battery.

Other Notes:

Static or other external interfere may cause the player to behave abnormally. In this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.