


# ***USER MANUAL***

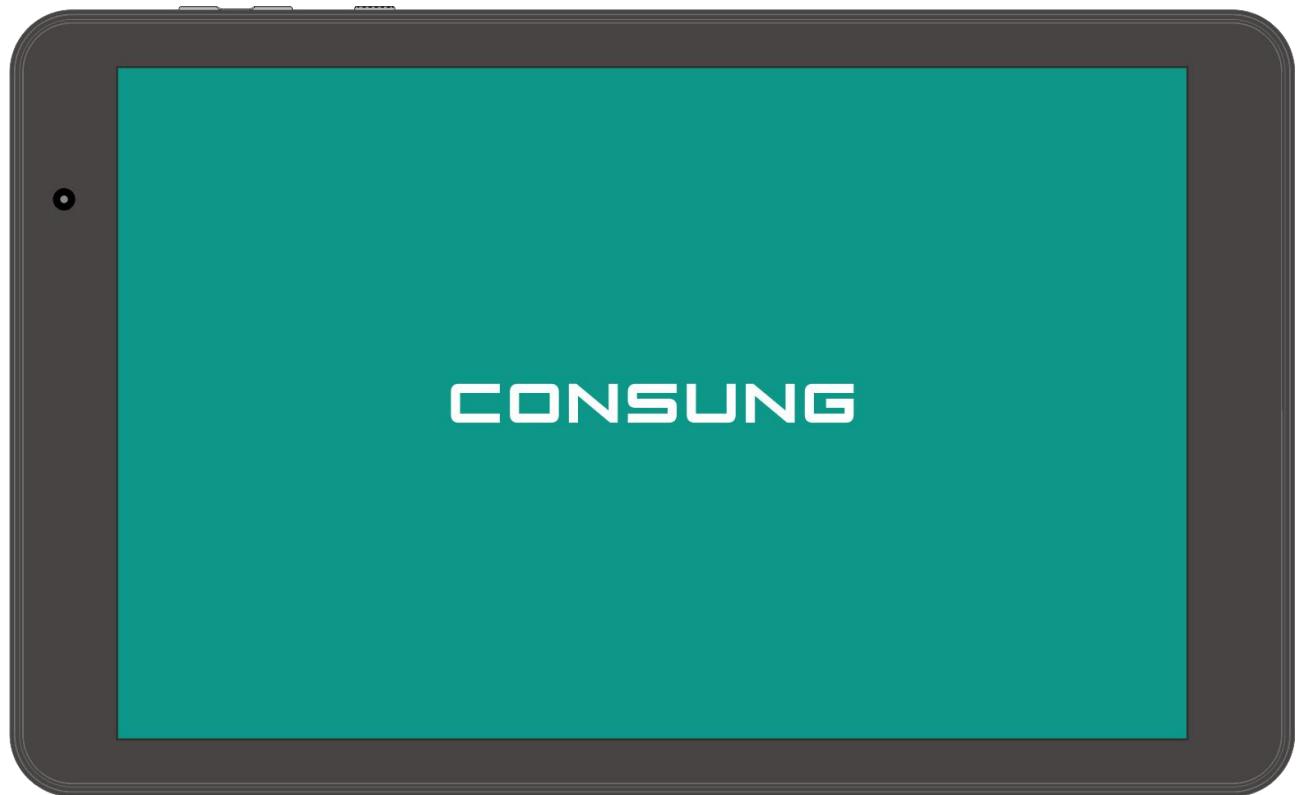


N08

*Smart life*  
Consung Smart Product

## FUNCTION OVERVIEW

Picture 1

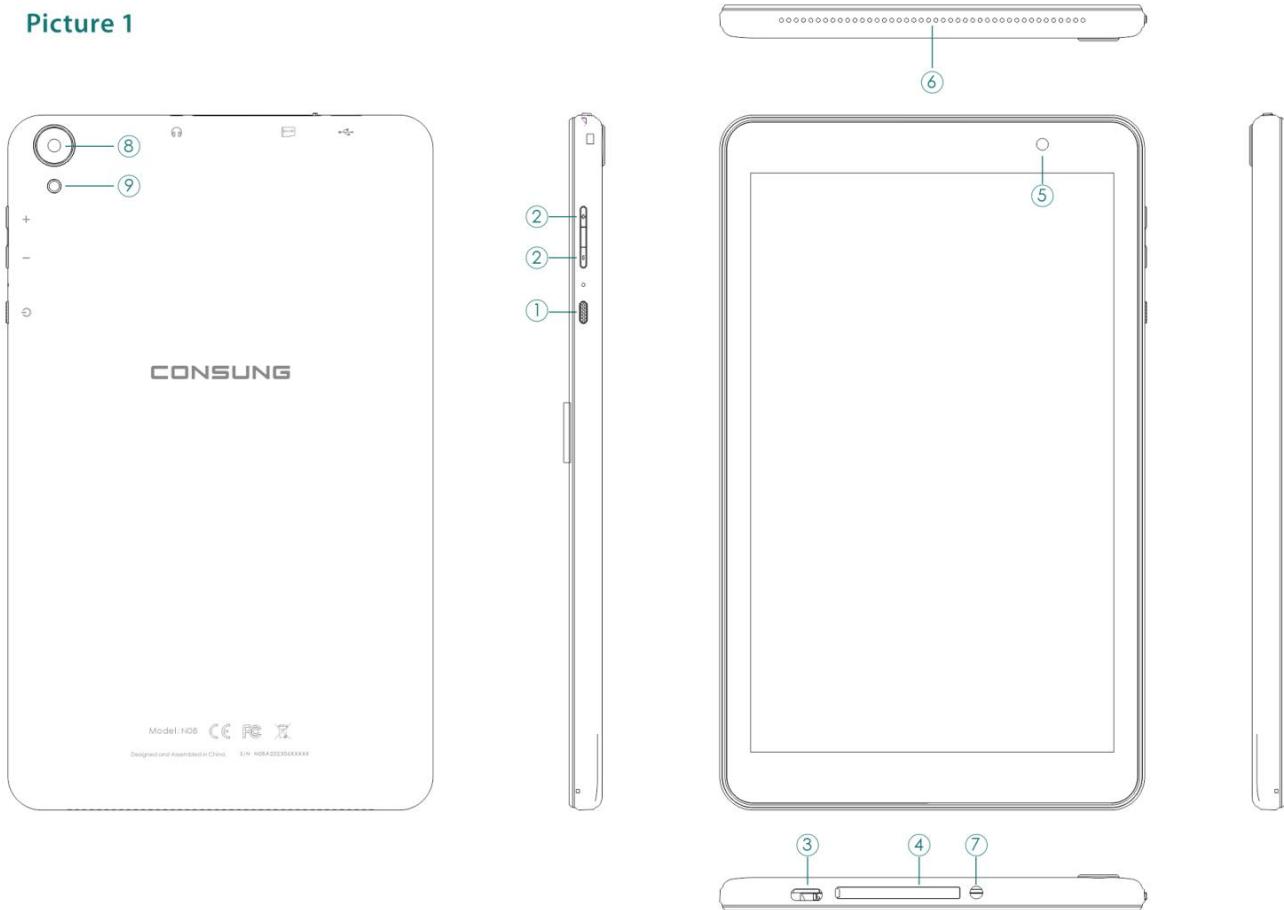

1. Power On/Off	2. Volume Buttons
3. USB port	4. Micro SD card slot
5. Front camera	6. Speakers
7. Earphone Jack	8. Rear camera
9. Flashlight	

## GETTING STARTED

### 1. Power On/Off

- ❖ Press and hold the power button for 2-3s to turn on your tablet.
- ❖ Select your language and set up your tablet following the start guide.
- ❖ Press and hold the power button for 2s, then release it. It will show “Power off / restart and screenshot on the screen.
- ❖ Click Power off to turn off the tablet.
- ❖ Press and hold the power button for 10s to force reboot when it frozen.

### 2. Battery

- ❖ A rechargeable Li-ion battery was installed in the tablet.
- ❖ DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- ❖ DO NOT dispose of tablet in a fire.
- ❖ DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- ❖ Please use a 5V 2A power adapter to charge your tablet, good charging habit could prolong battery life.
- ❖ We suggest you charge the battery completely once a month if only use your tablet occasionally.
- ❖ The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed separately from household waste.
- ❖ Dispose the battery according to your local environment laws and regulations.

### 3. Sleep Mode


Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

 Tips: Go to Settings --- Display --- Sleep to set the time of entering the Sleep Mode.

### 4. Screenshot

Press the Volume - button and the Power On/Off button for 2 seconds to capture a picture. Press and hold the power button for 2s, then release it. It will show Power off, Restart and Screenshot on the screen. Tap Screenshot to capture.

## HOME SETTINGS, WIDGETS AND WALLPAPERS

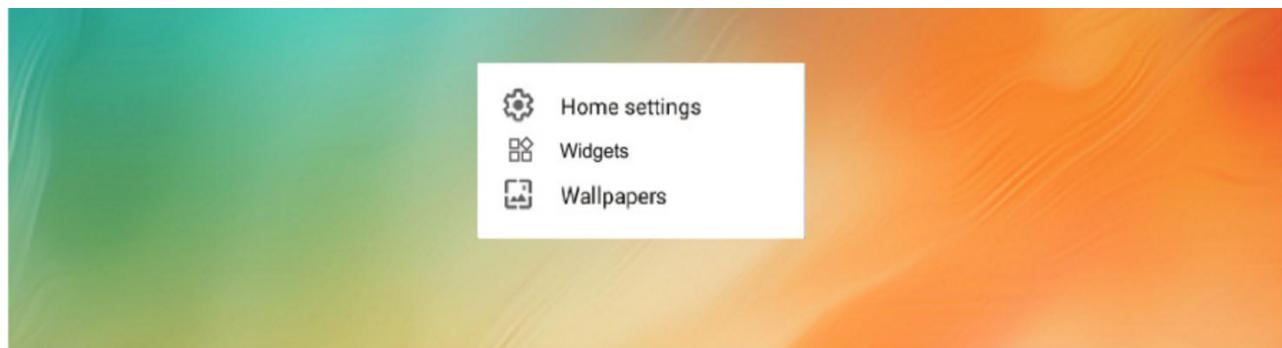



Tap and hold a blank part of the home screen to display the home screen settings and wallpaper.

1. Click on the homepage setting to start customizing your home screen
  - Add icons to the home screen: Allow new applications installed from the Google Play to be displayed on the home screen
  - Main screen loop: to allow continuous main screen sliding
  - Pull - down action: Select an action when swiping down on the main screen.
2. Click on the wallpaper to change the current wallpaper from the default wallpapers

## SETTING BASICS

### 1. Quick Settings

Swipe down from the top of the screen to access **Quick Settings**.

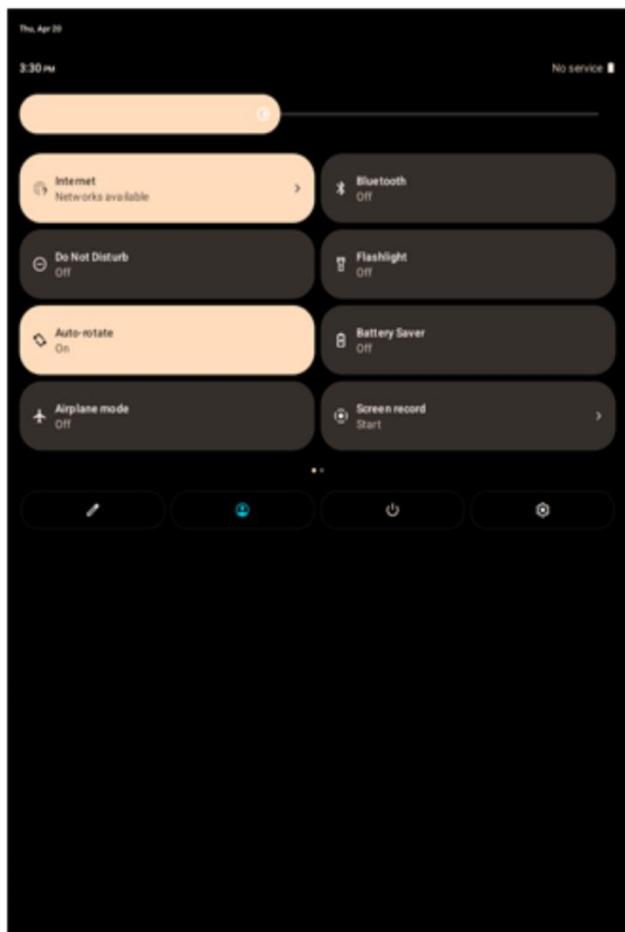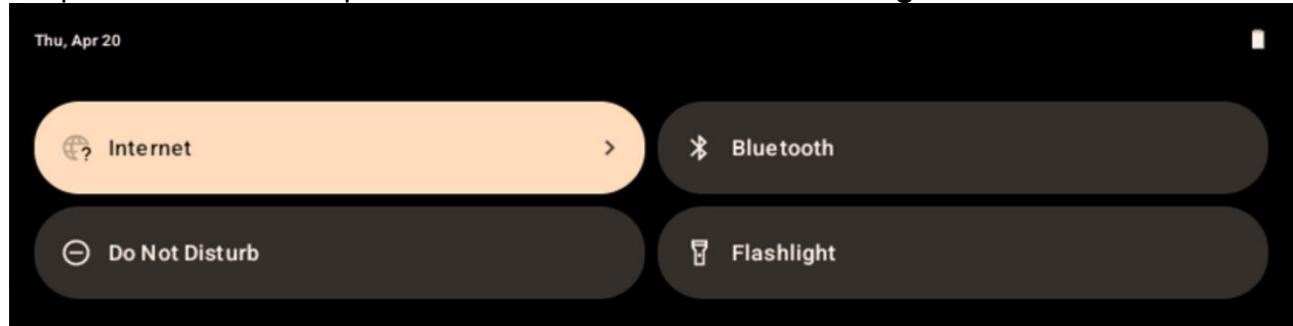

- **WIFI:** Tap to connect/disconnect to a wireless network.
- **Bluetooth:** Enable/disable the Bluetooth of the tablet.
- **Do not disturb:** Mute sound and stop vibration after enabling this function.
- **Turn on/off the Auto-rotate of the screen.**
- **Tap to choose the power setting you prefer to save the battery time.**
- **Airplane mode:** Turn on/off all the network connectivity.
- **Screen Recor.** When this option is enabled, the screen will start recording video of interface operation
- **Location:** Enable/disable location access.
- **Flashlight:** It can be used for lighting
- Tap the icon to change the options in the Quick Settings. Long press each icon to enter the interface of its detailed settings.

## 2. More Settings

Go to **Quick Settings**, then tap the  icon to enter the detailed setting interface, or tap **Settings App** on the home screen to enter.



## 3. Network & internet

- ❖ Connect to any working 2.4G WIFI
- ❖ Monitor the data usage
- ❖ Enable / disable the Airplane Mode
- ❖ Add VPN connections

## 4. Connected devices

- ❖ Pair with Bluetooth devices and check the paired devices
- ❖ Turn on/off Bluetooth
- ❖ Add and check printers
- ❖ Check the received files from other devices via bluetooth connection
- ❖ And more

## 5. Apps & notifications

- ❖ Check the Apps recently opened
- ❖ Check all the Apps on the tablet
- ❖ Check the screen time for Apps
- ❖ Adjust App notification settings
- ❖ Set the App permissions
- ❖ Uninstall the third - party Apps
- ❖ Clear the cache of the Apps andd more

## **6. Battery**

- ❖ Display the remaining battery power as a percentage
- ❖ Enable/ disable Battery percentage and Battery Manager
- ❖ Set Power saving optimization
- ❖ Manage the battery optimization for Apps
- ❖ Check the detailed battery settings for Apps

## **7. Display**

- ❖ Adjust the screen brightness
- ❖ Adjust the font size and display size
- ❖ Set a screen saver
- ❖ Change the wallpaper
- ❖ Adjust the time of entering the Sleep Mode and more

## **8. Scheduled power on/off**

- ❖ Set the time and days of the week for the tablet to automatically turn on/off

## **9. Audio profiles**

- ❖ Select audio profiles from General, Silent and Outdoor
- ❖ Set the volumes for ring, notification, media and alarm

## **10. Storage**

- ❖ View and manage your storage space

## **11. Security & location**

- ❖ Set screen lock pattern, e.g. Password, PIN, Swipe etc.
- ❖ Set the Lock screen preferences
- ❖ Turn on/off the location services for specific Apps
- ❖ Set to show / hide the password when input a password
- ❖ And more

## **12. Accounts**

- ❖ Add and manage the user accounts on your tablet

## **13. Accessibility**

- ❖ For vision and hearing impaired users, manage settings for Screen readers, Display, and more

## **14. Digital Wellbeing & parental controls**

- ❖ Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**
- ❖ Set a schedule for **Wind Down** and switch on the setting you prefer
- ❖ Manage the related notification settings to reduce interruptions
- ❖ Set up **Parental controls** to help your kids balance their screen time

## **15. Google**

- ❖ Set the preferences for Google related services

## **16. System**


- ❖ Check the detailed information about the tablet
- ❖ Set language
- ❖ Tap **Languages & input --- Languages --- +Add a language** to add your language. After adding, hold and slide the **≡** to the top to change the language
- ❖ Turn on/off the quick access to the camera
- ❖ Set the date and time
- ❖ Turn on/off the **Back up to Google Drive**
- ❖ Restore factory setting
- ❖ Tap **Advanced --- Reset options --- Erase all data (factory reset)** to restore the factory setting

## NET WORK CONNECTION

Launch the **App Settings** or long press the **WIFI/Bluetooth** icon in **Quick Settings**.

### WIFI Connection

- ❖ Please turn on the WIFI on the tablet first, then long press WIFI symbol. It will get into WIFI catalog
- ❖ Or you can click Settings APP, then tap Network & internet to turn on the WIFI

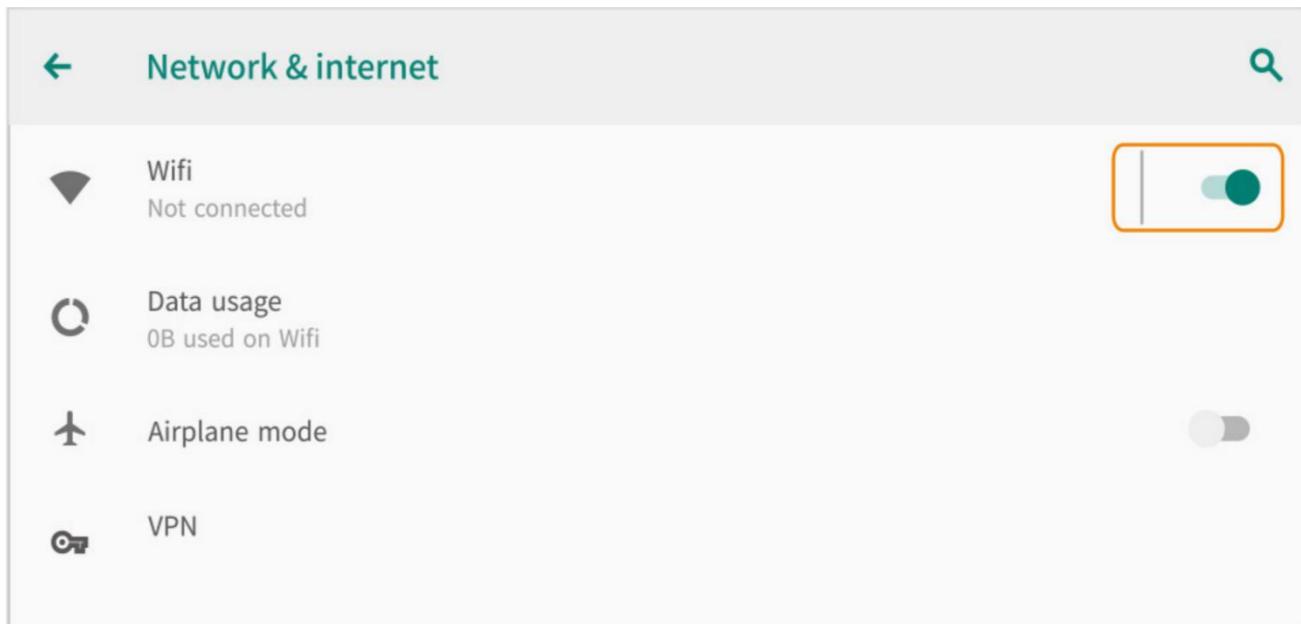

### Bluetooth Pairing

**Please turn on the Bluetooth on your Bluetooth device firstly.**

- Go to **Connected devices --- Connection preference --- Bluetooth** to turn on the bluetooth on your tablet.
- Tap **“+Pair new device”** to enter the scanning interface. Devices available will be displayed after a few seconds.
- Tap the desired device to get a pairing code and click **PAIR** on both devices. The automatic connection is applied to some devices.

## APP MANAGEMENT

### APP Download and Installation

- Tap and open **Play Store** on the Home Screen
- Log into your google account, then search and download the App you need

### APP Management

#### ➤ Move the APP

Tap and hold the App, then slide it to a desired screen

#### ➤ Remove the App from the Home Screen

Touch and hold the App, then slide to **X Remove** to remove it from your Home Screen

#### ➤ Uninstall the App

Touch and hold the App, then slide it to the  **Uninstall** the App

#### ➤ Clear the Cache of the App

- 1) Go to Settings --- Apps & notifications
- 2) Select an App --- Storage --- Clear Cache to clear the cache

## INTERNET NAVIGATION

Please make sure the tablet was connected to a working WIFI before navigating the Internet

You may use the pre-installed Chrome browser or other browser downloaded on the **Google Play**


## MULTIMEDIA


### Connecting to a Computer

- ① Connect your tablet to the computer with a USB cable
- ② Media device (MTP) is the default setting. Go to your computer and find your tablet N08 to transfer files between your tablet and computer


 Tips: Go to **Quick Settings**, tap **Android System--- USB file transfer turned on --- Tap for more options --- USB computer connection** to select the option preferred.

- ③ Select **Charge Only** to charge your tablet
- ④ Select **Camera (PTP)** to transfer photos between the devices
- ⑤ Select **MIDI** to play MIDI instruments on the tablet

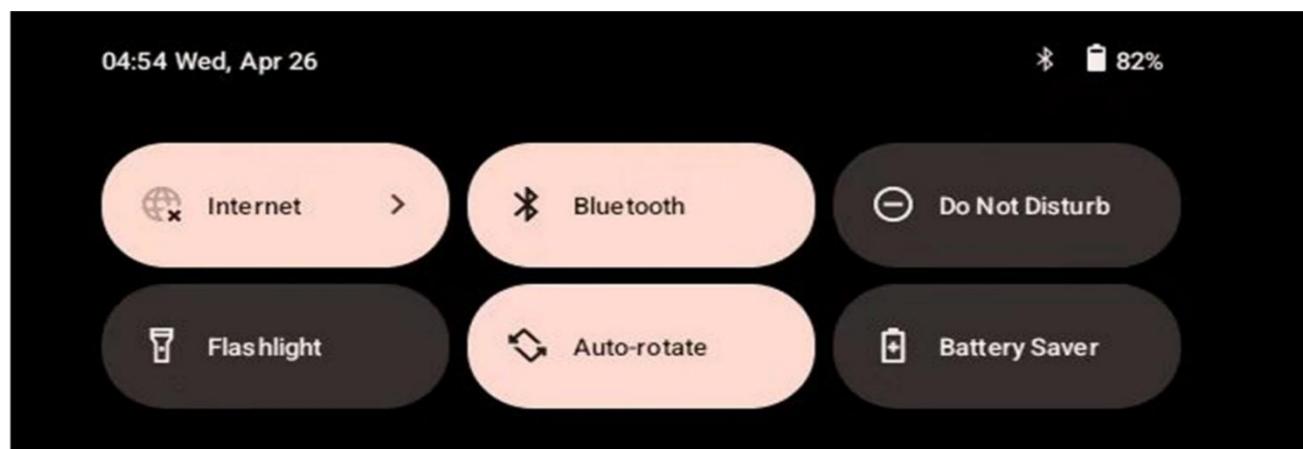


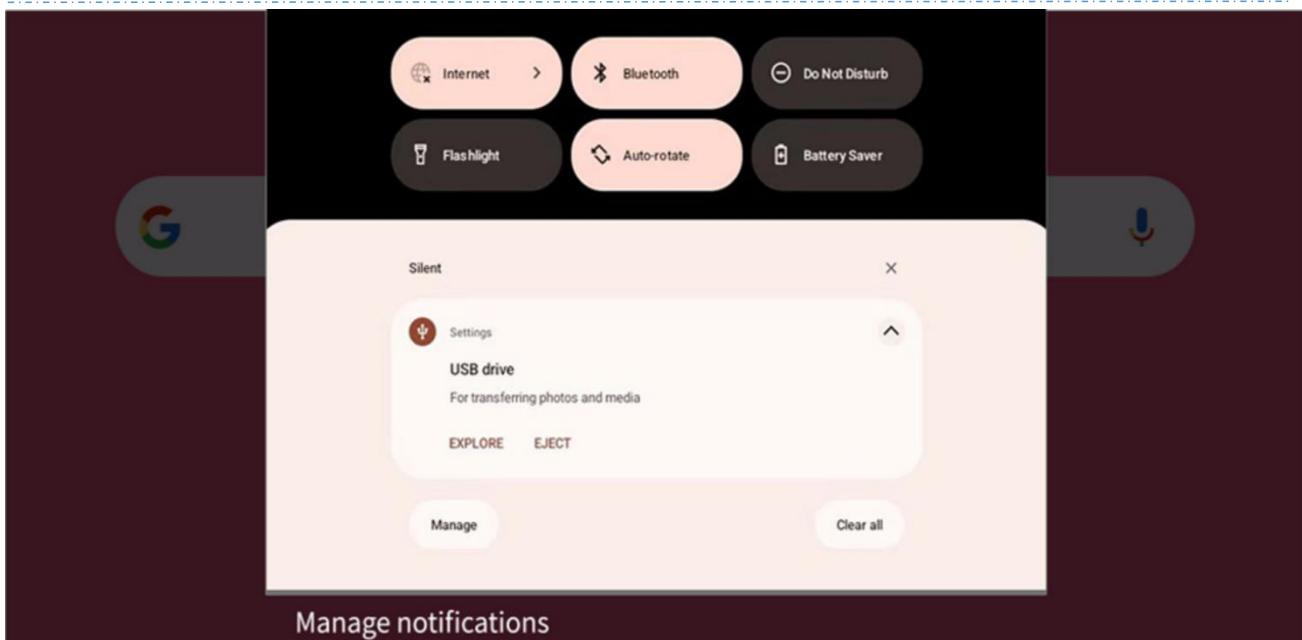


Manage notifications

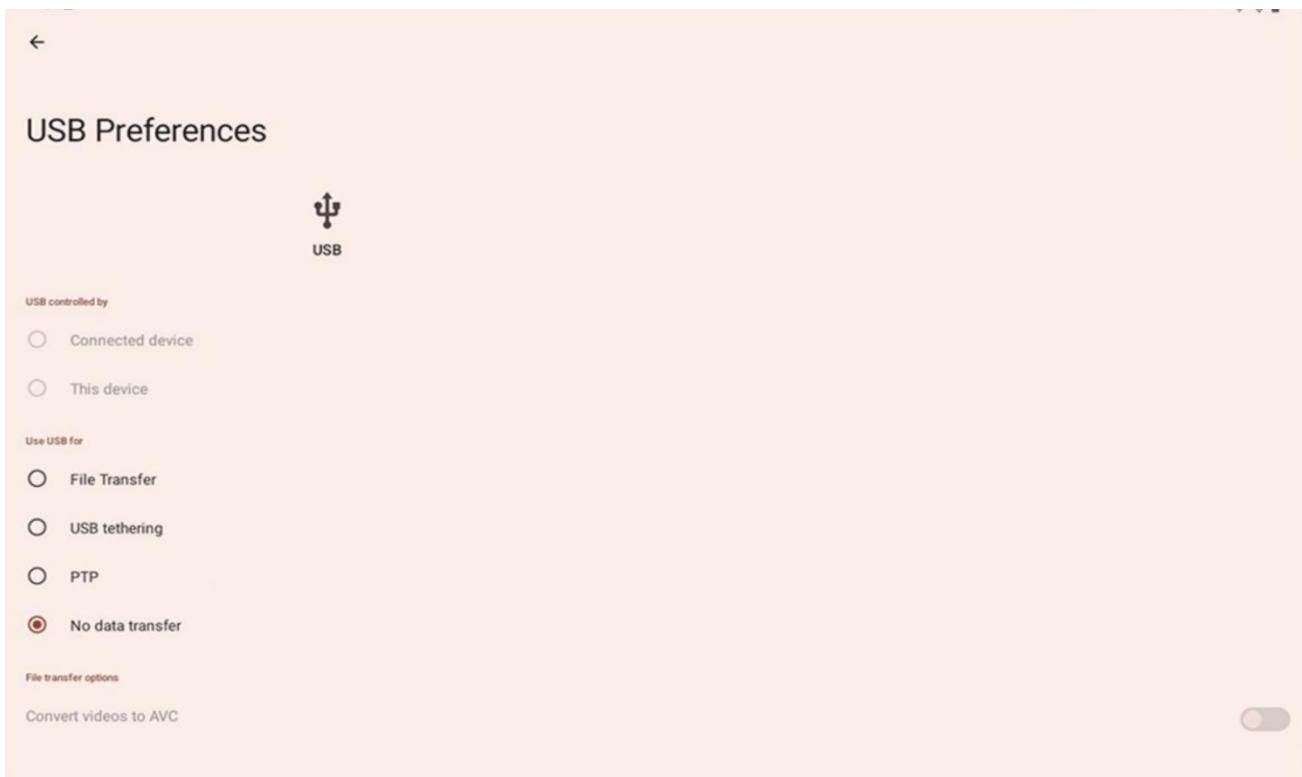

## CONNECTING TO AN EXTERNAL DEVICE

- ❖ Install a memory card with the capacity up to 512GB and go to Quick Settings
- ❖ Tap **SET UP**

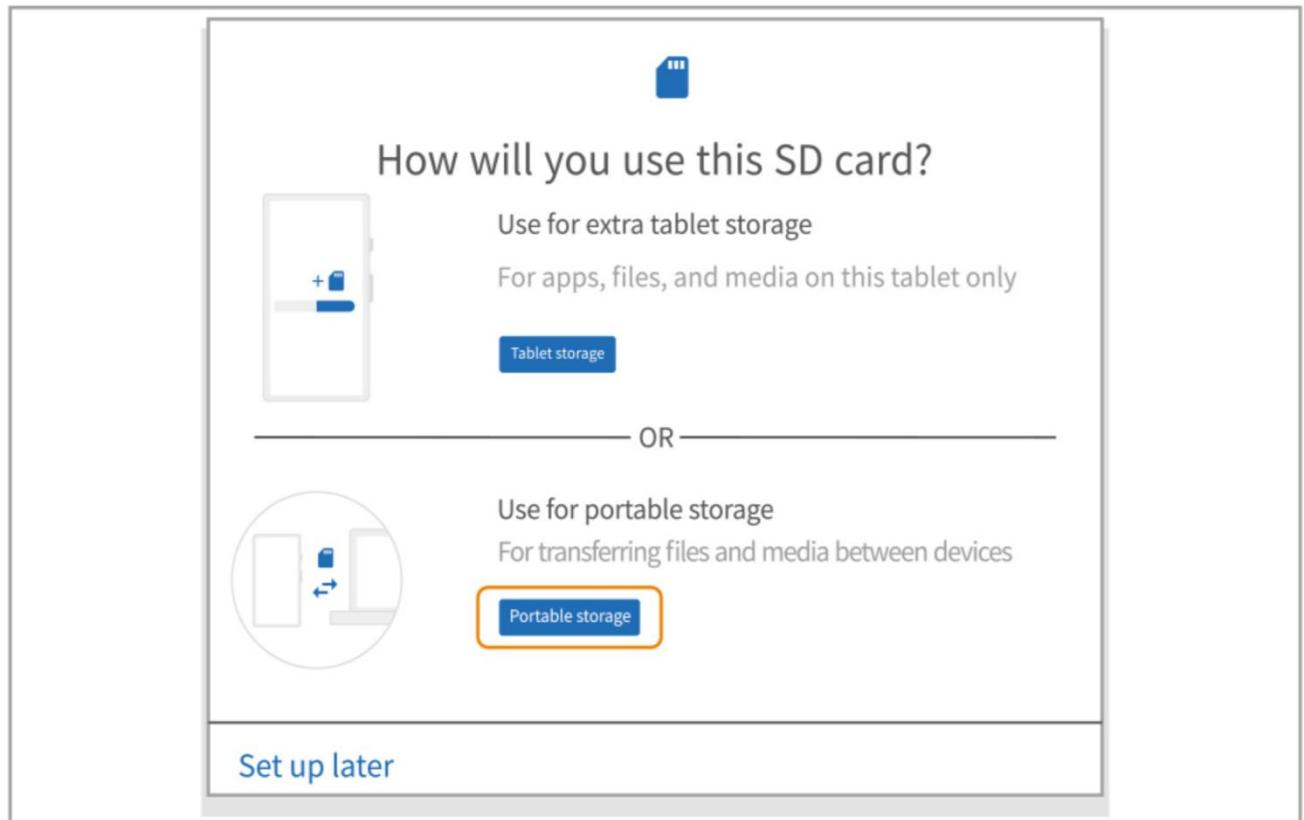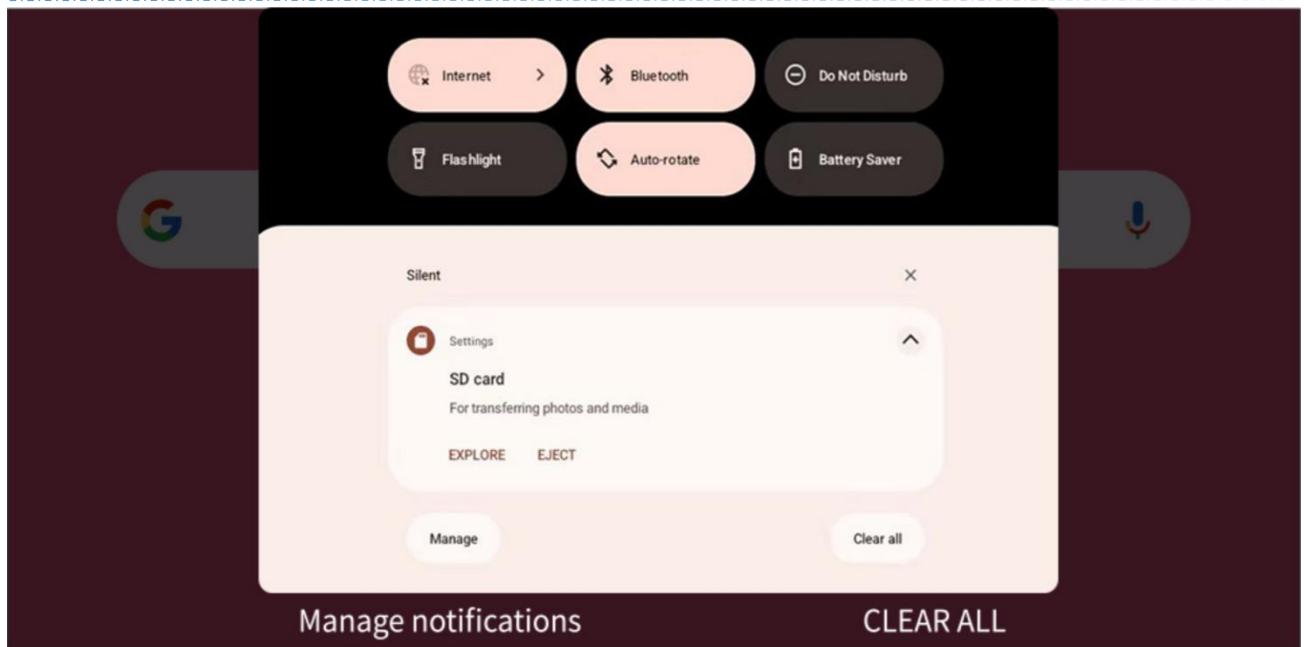

## SPECIFICATION

<b>Size</b>	8 inch	<b>Connection</b>	WIFI, 802.11 b/g/n
<b>Chipset</b>	SC7731E	<b>CPU</b>	Quad core 1.3GHz
<b>Display / Resolution</b>	IPS 800*1280	<b>RAM / Storage</b>	3GB / 32GB
<b>Front Camera</b>	0.3MP	<b>Network</b>	WIFI2.4G, Bluetooth 4.2
<b>Rear Camera</b>	2MP	<b>Power Supply</b>	DC 5V/2A
<b>Battery</b>	4000mAh	<b>Touch</b>	Multi-touch
<b>Operating System</b>	Android 12	<b>Ports</b>	DC 5V 2A, Type-C

## TROUBLE SHOOTING

### **Q1. The tablet doesn't power on.**

- ❖ Reboot your tablet after charging for more than 30 minutes.
- ❖ Press the power button to check if the tablet is in the **Sleep Mode**.
- ❖ Press and hold the power button for 10s to reboot it.
- ❖ Press the Reset button with a pin to reboot the tablet.

### **Q2. The tablet doesn't charge.**

- ❖ Make sure the USB cable is properly plugged into the charging port.
- ❖ Try another compatible USB cable and adapter.

### **Q3. Error message occurs during the operation.**

- ❖ Uninstall the App with the error message, then download and install it again.
- ❖ Press the Reset button with a pin to power off the tablet.

### **Q4. The tablet cannot be detected by the computer.**

- ❖ Make sure the tablet is powered on.
- ❖ Try another USB cable.
- ❖ Try another USB port on the computer.
- ❖ Instead of **Charge only**, choose **Media device (MTP)** or **Camera (PTP)** when connecting the tablet to the computer.

### **Q5. The tablet cannot connect to the WIFI.**

- ❖ Make sure the **WIFI** in your tablet is **ON**.
- ❖ Make sure you input the correct password when connecting the WIFI.
- ❖ Restart the router.
- ❖ Make sure there is no filter setting or device connection limitation in the setting of the router.
- ❖ Forget the current WIFI, reset the router and connect the WIFI again.

**Q6. The storage space of the tablet is not enough.**

- ❖ Delete the Apps you don't use
- ❖ Clear the cache of the Apps regularly
- ❖ Install a memory card to expand the storage

**Q7. The screen is unresponsive**

- ❖ Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

**Q8. The font size is too small to read**

- ❖ Please go to **Settings --- Display --- Advanced --- Font Size** to adjust the text size

**Q9. Can the tablet support OTG function?**

- ❖ Yes, but an extra OTG cable is required. You can connect the mouse or a USB driver through the cable then.

**CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

 The symbol indicates DC VOLTAGE



RECYCLE

This product bears the selective sorting symbol for Waste electrical and electronic equipment(WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

This product can be used across EU member states.

**Thanks for choosing our tablet, we appreciate your TRUST**

**Please read this User Manual carefully before using this tablet and keep it for future reference**

**Google,Android,Google Play,YouTube and other marks are trademarks of Google LLC**

---

If you have any more question, please contact us on time:

**DongGuan HuiMingXin Electronic Technology Co.,Ltd**

Web: [www.consung.cn](http://www.consung.cn)

Email: [info@consung.cn](mailto:info@consung.cn)

## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.