

User Manual

OPERATING INSTRUCTIONS:

IMPORTANT SAFETY INSTRUCTIONS:

- a) Do not use the headphone near water.
- b) Do not use near any heat source.
- c) Only use the accessories made by manufacturer.
- d) All repairs should be performed by qualified service personnel.
- e) Do not expose to water. Do not place any sources of danger on the device.
- f) Do not remove the shell of the headphone.
- g) Do not place the headphone on other electronic equipment.
- h) Please fully charge the battery when used for the first time, you will obtain a longer battery life.

1. Call and POWER BUTTON:

Long press for 3 seconds to power on or off.

When receiving a call: Shortly press to answer.

Long Press to refuse the call.

Continuous push 2 times is for redial.

2. NEXT / V+ (UP VOLUME KEY):

Short press for next song.

Long press for volume up.

3. PREV / V- (PAUSE KEY):

Short press to play / pause music.

4. PREV / V- (DOWN VOLUME KEY):

Short press for previous song.

Long press for volume down.

5. LED INDICATOR:

In wireless mode the red/blue light will flash. When the smart phone or Bluetooth enabled device pairs successfully

with the headphones, the blue light will slow flashing.

In charging mode the red light will be on steadily while charging. When its successfully charged, the red light will turn off.

6. PAIRING INSTRUCTIONS:

- a) Press the power button for 3 seconds to power on your device.
- b) The red / blue light will start twinkling fast, this means the headphones are ready to pair.
- c) Enable the bluetooth function on your mobile and search for **device name**, select to connect to this device.
- d) If your mobile requires to enter a password to finish the paring use 0000.
- e) After the wireless is connected successfully, the blue light will continuously flash 2 times every 5 seconds.
- f) Now you can enjoy all your music wirelessly. With this product you can play, pause, go to next or previous song, answer, decline or redial phone calls.

7. CHARGING:

When the headphone is with low battery during use you will start hearing a repeated "beep" sound for 10 to 15 minutes before it powers off.

Connect to the Micro USB connector on the headphone to a Micro USB to USB Cable and connect to USB power source.

8. FUNCTIONAL PARAMETERS:

USB Charge: DC 5V in

Wireless Frequency: 2.402 - 2.480 GHz

Frequency: 20Hz - 20KHz

SNR: 88 dB

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.