

WENKEY		Model E2	This device contains licence-exempt transmitter(s) (receiver(s)) that comply with Innovation, Science and Economic Development Canada's a licence-exempt RSS(s). Operation is subject to the following two conditions:
	Contents		
English	31 - 10	(1) This device may not cause interference.	(1) L'appareil ne doit pas produire d'interférence.
Deutsch	11 - 21	(2) This device must accept any interference, including interference that may cause undesired operation of the device.	(2) L'appareil doit accepter toute interférence radio, y compris celle qui peut causer un fonctionnement indésirable de l'appareil.
Français	22 - 32		
Español	33 - 43		
Italiano	44 - 54		
User Manual		Ultimate Technology (Shenzhen) Co., Ltd Room 402, No.40CC Creative Culture Center, No.98 Pingxin North Road,Shangmiao,Section, Pinghu Street, Longgang District, Shenzhen, China PCC: 10, 24280-E2 IC: 27443-E2	L' appareil ne doit pas produire de brouillage. L' appareil doit accepter tout brouillage radio et électrique subissant de la part de la brouillage ou susceptible d'en compromettre le fonctionnement.
wireless earbuds			

Thank you for purchasing the E2 wireless Earbuds. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

Three Pairs of Ear-Tips (S/M/L)
USB-A to C Cable
Quick Start Guide
User Manual

Specifications

Technology	E2B: AAC/ aptX/ LDAC/ AAC
Driver (each channel)	10mm / 0.23" speaker driver
Sensitivity	105dB ± 3dB (1kHz/100mW)
Frequency Range	20Hz~20kHz
Impedance	16Ω
Microphone Type	MEMS (phone/voice chip)
Charging Time	1.5 hours
Battery Life	Up to 6 hours (2x 3xmm)
Charging Range	10m / 330ft

Charging Case

Charging Input	DC 5V
Charging Time	1.5 hours
Charging Output	5V/100mA (200mAh)
Number of Earbuds Recharges	5 times (full)
Weight	31g / 1.1oz

Getting Started

Charging

Full-charge the charging case before the first use. To charge, connect the case to a USB charger or charging port with the included USB-A to C cable. When the LED Charging Indicator on the outside of the case turns off, the case is fully charged. Charging may take around 1.5 hours. Then case can be fully charged to the case 5 times. The earbuds should be stored in the case when not in use.

Pairing

Note: Remove the protective film from the earbuds when using for the first time.

1. Turn on the earbuds. The earbuds will turn on and enter pairing mode.

2. Open the lid of charging case. Both earbuds will turn on and enter pairing mode.

3. Press the pairing function button on the left earbud to turn it on, clear that pairing light, and turn off again.

4. Pull both earbuds back in the charging case and the case lid to reset.

5. Open the lid of case, and both earbuds will turn on and enter pairing mode.

Regular Use After Pairing

The earbuds are successfully paired with your device. They can be switched on and off as follows:

- Once the lid of the charging case, then both earbuds will turn on and connect with each other automatically.
- To turn off, pull both earbuds back in the charging case and close the lid. They will begin charging.

Turning On / Off

Turn On

Open the lid of the charging case to touch and hold the touch-sensitive point on both earbuds for 2 seconds when they are turned off.

Turn Off

Return both earbuds to the charging case and touch the touch-sensitive point on both earbuds to turn them off. The earbuds will turn on for 2 seconds when they are turned on.

Reset the Earbuds

Starting with the earbuds in the charging case, do the following:

1. Open the lid of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds.
2. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds. The earbuds will turn on, clear that pairing light, and turn off again.
3. Pull both earbuds back in the charging case and the case lid to reset.
4. Open the lid of case, and both earbuds will turn on and enter pairing mode.

Using the Left-Right Earbud Only

When the earbuds are used with only one of the earbuds, the connection will be re-established if you re-enter the wireless range within 3 minutes. The earbuds will be switched off automatically after 5 minutes.

From the list of available devices, find and select the device you want to connect.

Reset the Earbuds

Starting with the earbuds in the charging case, do the following:

1. Open the lid of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds.
2. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds. The earbuds will turn on, clear that pairing light, and turn off again.
3. Pull both earbuds back in the charging case and the case lid to reset.
4. Open the lid of case, and both earbuds will turn on and enter pairing mode.

Controls & LED Indicators

Streaming Audio

Once selected, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you are not using it. Incoming pair call will be resumed once you are on the call.

Play or pause music: Tap the touch-sensitive point on the left earbud.

Stop to previous track: Double tap the touch-sensitive point on the left earbud.

Stop to next track: Double tap the touch-sensitive point on the right earbud.

Answer or end a call: Double tap the touch-sensitive point on the left earbud to answer or end the call or the incoming call.

Reject an incoming call: Long press the touch-sensitive point on either earbuds 2 seconds.

Activate Siri or Google Assistant: Single tap the touch-sensitive point on either earbud.

Notes

- When you turn on the earbuds, they will be automatically switched to the previous pairing device or enter pairing mode if no paired device is found.
- Either left or right earbud can be used individually once connected to your device when you keep the other one inside the charging case.

Wireless operating range is 10m (33ft). If you exceed this range, the earbuds will exit the pairing mode. The connection will be re-established if you re-enter the wireless range within 3 minutes. The earbuds will be switched off automatically after 5 minutes.

From the list of available devices, find and select the device you want to connect.

Reset the Earbuds

Starting with the earbuds in the charging case, do the following:

1. Open the lid of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds.
2. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds. The earbuds will turn on, clear that pairing light, and turn off again.
3. Pull both earbuds back in the charging case and the case lid to reset.
4. Open the lid of case, and both earbuds will turn on and enter pairing mode.

LED Status Indicator

Flashing status	Meaning
Red (all other charging)	Earbuds fully charged

LED Battery Level Indicator

LED indicator light status	Meaning
Four LED indicator lights	80%~100% battery remaining
Three LED indicator lights	60%~80% battery remaining
Two LED indicator lights	40%~60% battery remaining
One LED indicator light	20%~40% battery remaining (for 2 seconds)
One LED indicator light for 2 seconds	<20% battery remaining

FAQ

The earbuds are not fully connecting to my device.

For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the pairing section of this manual.

We've connected the earbuds with my smart phone but can't hear any sound.

Double check the volume level on your smart phone and the earbuds. Some smart phones require you to set up the earbuds as a separate device with your own Bluetooth address. If you're using a music player or other device, you may need to set up the earbuds as a separate device with your own Bluetooth address.

Controls & LED Indicators

Streaming Audio

Once selected, you can wirelessly stream audio on your device via earbuds. Music will automatically get paused when you are not using it. Incoming pair call will be resumed once you are on the call.

Play or pause music: Tap the touch-sensitive point on the left earbud.

Stop to previous track: Double tap the touch-sensitive point on the left earbud.

Stop to next track: Double tap the touch-sensitive point on the right earbud.

Answer or end a call: Double tap the touch-sensitive point on the left earbud to answer or end the call or the incoming call.

Reject an incoming call: Long press the touch-sensitive point on either earbuds 2 seconds.

Activate Siri or Google Assistant: Single tap the touch-sensitive point on either earbud.

Notes

- When you turn on the earbuds, they will be automatically switched to the previous pairing device or enter pairing mode if no paired device is found.
- Either left or right earbud can be used individually once connected to your device when you keep the other one inside the charging case.

Wireless operating range is 10m (33ft). If you exceed this range, the earbuds will exit the pairing mode. The connection will be re-established if you re-enter the wireless range within 3 minutes. The earbuds will be switched off automatically after 5 minutes.

From the list of available devices, find and select the device you want to connect.

Reset the Earbuds

Starting with the earbuds in the charging case, do the following:

1. Open the lid of the charging case, and the earbuds will turn on. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds.
2. Touch and hold on the touch-sensitive point on both earbuds for 2 seconds. The earbuds will turn on, clear that pairing light, and turn off again.
3. Pull both earbuds back in the charging case and the case lid to reset.
4. Open the lid of case, and both earbuds will turn on and enter pairing mode.

LED Status Indicator

Flashing status	Meaning
Red (all other charging)	Earbuds fully charged

LED Battery Level Indicator

LED indicator light status	Meaning
Four LED indicator lights	80%~100% battery remaining
Three LED indicator lights	60%~80% battery remaining
Two LED indicator lights	40%~60% battery remaining
One LED indicator light	20%~40% battery remaining (for 2 seconds)
One LED indicator light for 2 seconds	<20% battery remaining

FAQ

The earbuds are not fully connecting to my device.

For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the pairing section of this manual.

We've connected the earbuds with my smart phone but can't hear any sound.

Double check the volume level on your smart phone and the earbuds. Some smart phones require you to set up the earbuds as a separate device with your own Bluetooth address. If you're using a music player or other device, you may need to set up the earbuds as a separate device with your own Bluetooth address.

please make sure it supports the A2DP profile.

The sound isn't very clear or the call can't hear my voice clearly.</

[illegible][illegible][illegible][illegible]

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.