
This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Region Selection

Limited by local law regulations, version for North America does not have region selection option.

Installation and pairing of remote control

1. Remote control installation

Installation location: The figure shows the recommended installation location for the remote control. The installation location can be selected according to the actual use at home.

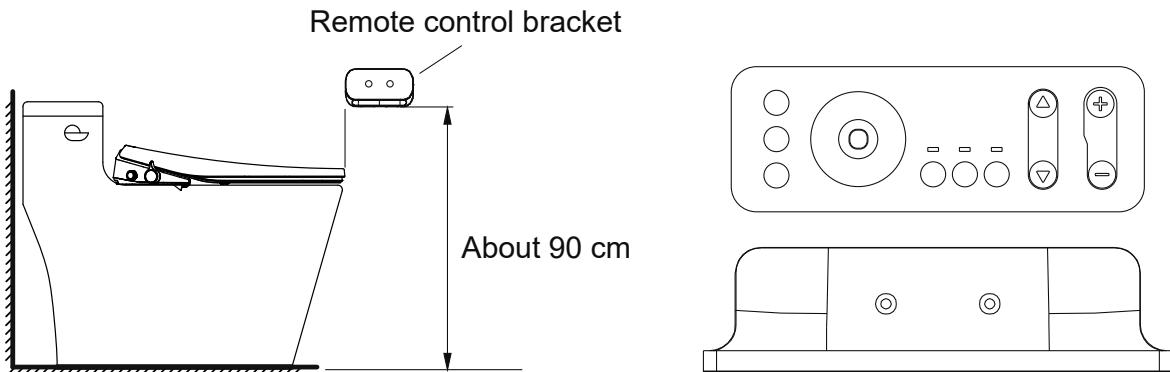

Installation steps:

- ① Drill two holes with a diameter of 6mm on the wall with a depth of more than 45mm, the distance between two holes is the same as the distance between the installation holes of the remote control
- ② Insert the two expansion pipes in the accessory package into the two holes on the wall respectively
- ③ Tear the double-sided adhesive tape in the accessory bag on one side, and then paste it on the back of the remote control bracket corresponding position
- ④ Tear open the other side of double-sided adhesive tape, paste the remote control bracket on the wall, pay attention to align the opening hole of the remote control with the hole on the wall
- ⑤ Fix the remote control bracket with two screws in the accessories package
- ⑥ Open remote control battery cover, put the batteries in and put back battery cover
- ⑦ Place the remote control on the bracket

2. Match remote control

After the battery is loaded into the remote control, it can be used normally.


If the product has no action, the remote control can be repaired in the following ways:

Disconnect the power supply


Press the stop button of the remote control until the gear light flashes

Put the remote control close to the flush button, and then turn on the power

The gear light stops flashing when the match is successful

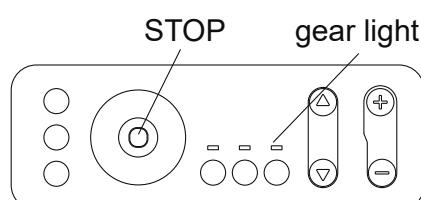

Function description - Instructions for remote control

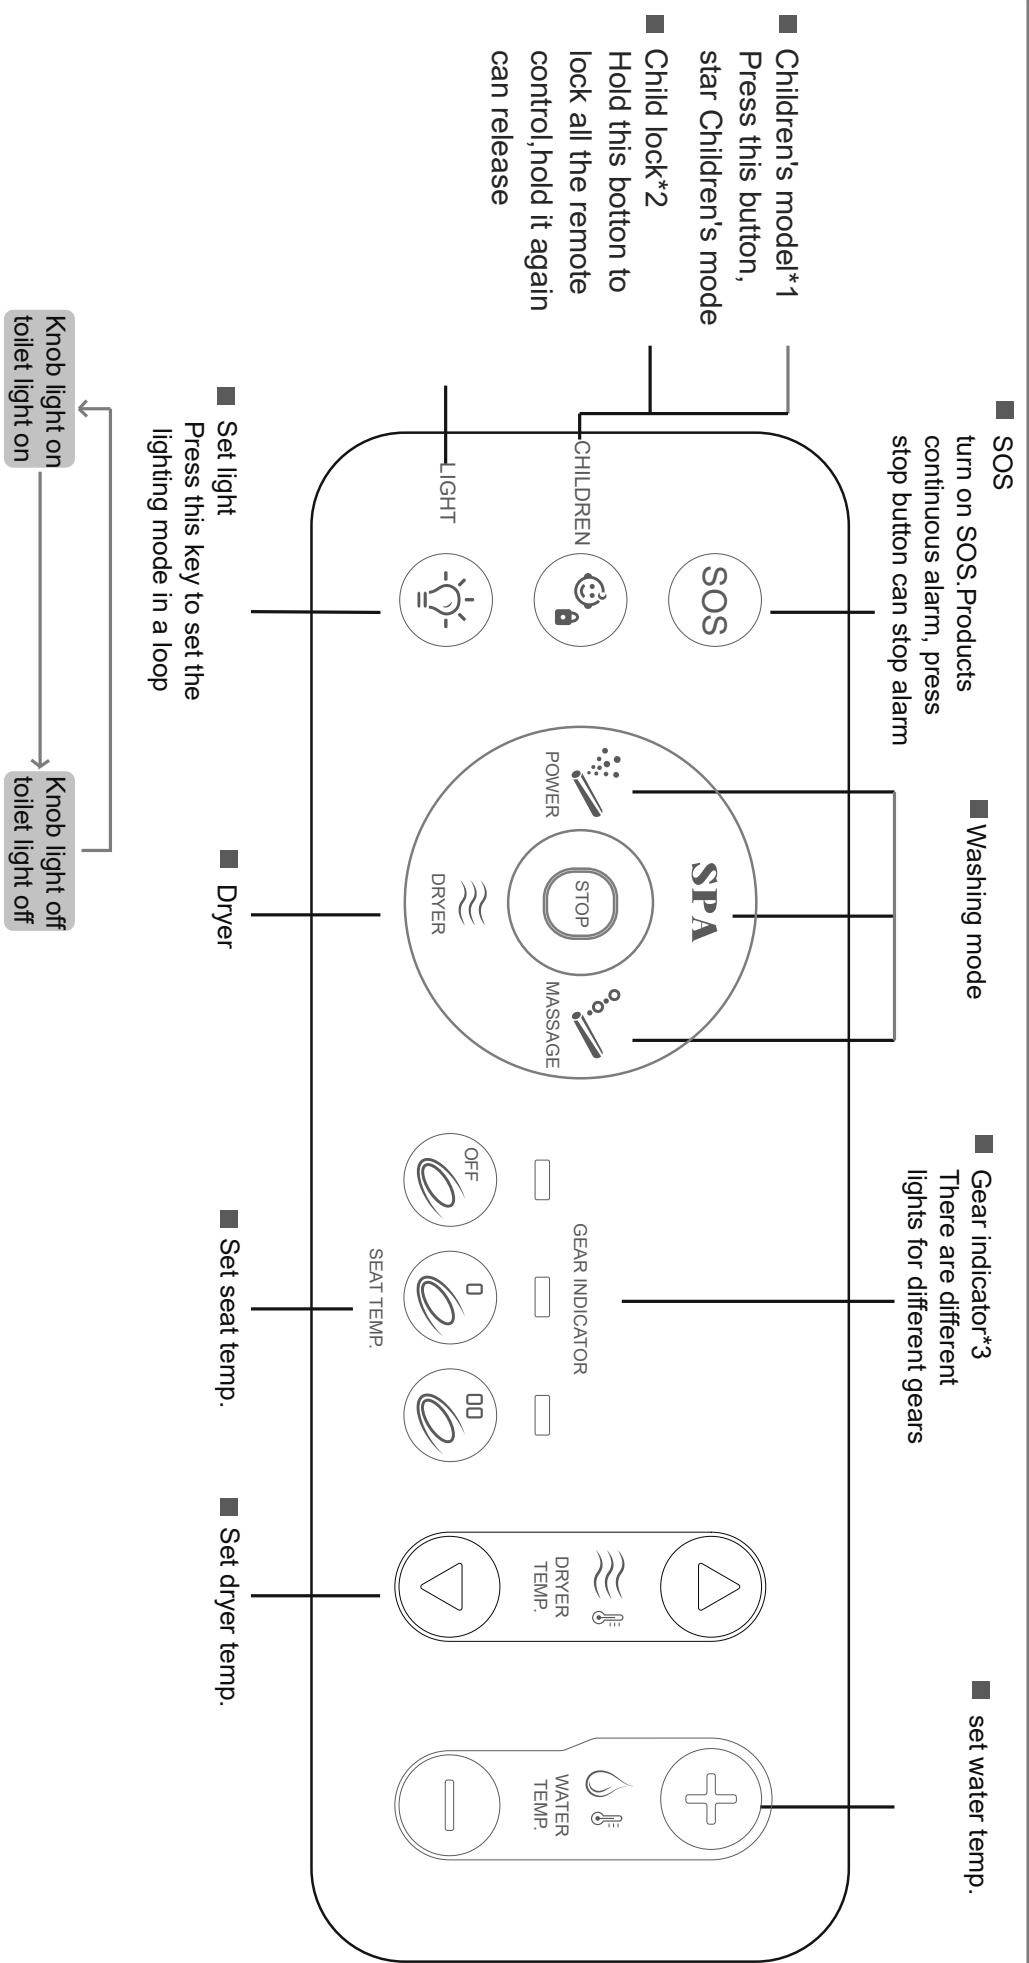

- * 1 When the child mode is turned on, the water temp. is setting at the low level, the dryer temp. is setting at the middle level, and the seat temp. is setting at the low level. The cleaning force is weaker. When the child button is pressed again or the stop button is pressed, the function is stopped and the normal mode is restored.
- * 2 Under the condition of child lock, the indicator lights of three gears will be on at the same time, and show in turn as red, pink and blue.
- * 3 The seat temp. indicator light is red. The water temp. indicator light is blue, the dryer temp. indicator light is pink, and in the child mode, the indicator is blue cyclic flashing light.