

Kid Headset_USER_MANUAL

Size: 70(w) x 90 (L) mm 128克铜板纸 彩色双面印 四折五页

FOSPOWER

Kids Wireless Headphones
with Light-Up Cat Ears

STOP

DO NOT RETURN THE PRODUCT

There are good days and there are bad days. It is our BAD if the product is not working, or if you are not happy with it. PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT.

1-833-888-FOSP (1-833-888-3677)
(651) 389-4432
support@fospower.com

Thank you for purchasing this FosPower product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

FosPower's kids wireless headphones allow your children to listen to whatever they want wirelessly through Bluetooth. Have your child looking stylish while they listen to their favorite music or watching videos with our light up cat ears. With a simple press of a button, you can light the cat ears up and have the lights blink or have them always on. Make your child's listening experience fun!

Package Includes

1x Kids Wireless Headphones

1x 3.5mm Audio Cable

1x USB-C Charging Cable

1x User Manual

Specifications

| | |
|-----------------------|--|
| Bluetooth Version | 5.3 |
| Transmission Distance | 40m/100 ft |
| Speaker Impedance | 32Ω |
| Speaker | Φ 30mm dynamic, neodymium magnet |
| Battery | 400mAh lithium polymer |
| Input Power | DC 5V, USB-C |
| Charge Time | 2 hours |
| Battery Life | 18 hours (with light), 50 hours (without light) |
| Volume | 85dB (max) |

Buttons and Functions

Cat Ear LED's

Press the LED button to cycle the LED's between on, blinking and off

Press once to play or pause

Double-Press to increase volume

Triple-Press to decrease volume

Press and hold to power ON or OFF

Press once to answer or end calls

Press and hold 2s to reject incoming calls

The wireless headphones will also have voice prompts for specific situations such as powering on the headphones and what your current battery life is when you power it on or during use.

Voice Prompts

| | |
|----------------|--|
| Power ON | When you power on your wireless headphones |
| Pairing | When you enter pairing mode |
| Connected | When you successfully pair the headphones to your device |
| Battery Full | When your battery reaches 100%-71% percentage |
| Battery Medium | When your battery reaches 70%-21% percentage |
| Low Battery | When your battery reaches 20%-10% percentage |

Bluetooth Pairing Instructions

NOTE: Please charge the wireless headphones for at least 30 minutes before pairing to ensure that there is some battery life.

Pairing with Bluetooth

Press and hold the Power Button for 3 seconds to power on and enter pairing mode.

Choose "BTH10K" to Pair

1. Press the power button and hold it down for 3 seconds to power it on. When it powers on, it will automatically go into pairing mode. You will see the small LED indicator above the power button blink between blue and red. This indicates that the wireless headphones are in pairing mode.

2. Now go to your device that has Bluetooth (phone, tablet, PC, etc...) and make sure to enable Bluetooth, and then click on "search for devices". The wording for this may vary depending on your Bluetooth device. Some devices also automatically search for pairing devices when you go to the Bluetooth page or when you enable Bluetooth.

3. Make sure your device's Bluetooth is on while the kid's wireless headphones are still in the pairing mode (pairing mode/blinking red and blue). The kid's wireless headphones should appear as "BTH10K" in your Bluetooth devices. Click on "BTH10K" and your device will pair with the kid's headphones. The LED indicator will flash blue when it successfully pairs and your device should also say "connected".

Wired Listening

1. If you do not want to use the kid's wireless headphones wirelessly through Bluetooth, you can also use and listen to your devices with the provided 3.5mm audio cable. Connect the 3.5mm audio cable into the 3.5mm jack located on the right side of the headphones as shown in the image. Connect the other end of the 3.5mm audio cable to your device.

Charging

Low battery

Charging

Fully Charged turn off

Connect to computer or USB 5V 1A (or less) output device.

Charge

1. Use the provided USB-C charging cable to charge your wireless headphones. Plug the type-C connector (smaller connector) into the headphone's type-C port, and then the USB-A (larger connector) into a USB port. This could be your computer's USB port, a power/phone brick and so on.

2. The LED indicator above the power button will blink red when it is lower battery. The LED indicator will stay on red while it is charging. When your headphones are fully charged, the LED indicator will turn off.

Factory Reset

NOTE: Before factor resetting your headphones, please make sure that you forget and remove the headphones "BTH10K" from your Bluetooth device list.

1. While the power is off, press and hold the power button down for 5 seconds until the LED flashes blue and red.

2. Press the power button 5 times until you see the LED indicator flash red 3 times, followed by turning to a solid red LED for 2 seconds. The headphones will power off automatically after.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
FCC ID :2AZ8TBTH10K

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Limited Lifetime Warranty

Visit fospower.com/warranty for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

Follow Us On Social Media

www.fospower.com
support@fospower.com
© 2022 FosPower Inc. All rights reserved.
All trade names are registered trademarks of respective manufacturers listed.

f i g y t