

ionix*

CB-TE124 , 651369, 4TWS-52/24

TRUE WIRELESS STEREO EARBUDS WITH CHARGING CASE



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting Started

- Remove the product from the packaging.
- Please retain all packaging after you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- True Wireless Stereo Earbuds
- Charging Case
- Type-C Charging Cable
- Instruction Manual


Features

- ANC + ENC optimized for Siri & Google Assistant
- Enjoy 20dB active noise cancellation (ANC) and built-in 4 microphones for clear with ENC
- Switch between normal, transparency, and ANC modes
- Compatible with Android, iOS and assistants
- LED shows battery life
- Enjoy 5 hours of play time
- Recharge in 2 hours with the Type-C cable

Safety Instructions

- Do not immerse in water or any other liquids.
- Do not operate the unit if it has been wet or moist to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

Description of Parts:

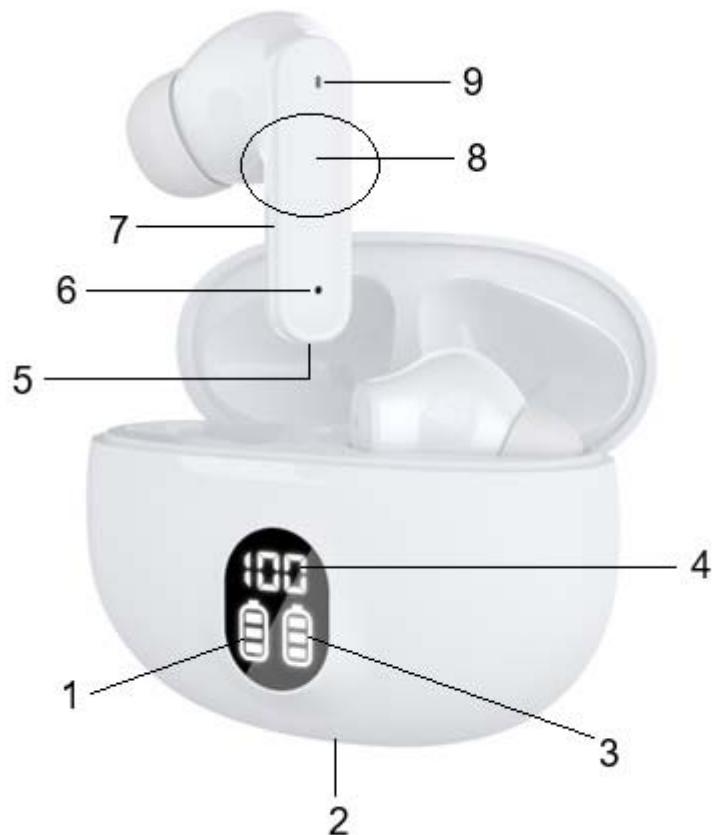

1	Charging Indication for Left Earbud
2	Charging Port
3	Charging Indication for Right Earbud
4	Digital Display
5	Earbud Charging Connectors
6	Built-in Microphone
7	Left Earbud
8	Left Earbud Touch Pad (Multi-function)
9	LED Light Indicator

INSTRUCTIONS FOR USE

Charging Instructions

The Charging Case and Bluetooth Earbuds come with built in rechargeable battery. Before using it for the first time you're recommended to charge the battery fully. Please recharge the battery by following either one of the methods below, every time they need to be recharged.

To charge the Charging Case (without Bluetooth Earbuds)

Plug the Type-C end of the included USB charging cable into the charging port of the Charging Case. Plug the other end into a suitable USB port such as the one on your computer or other devices made for USB charging. Digital display will flash to show the battery capacity of charging case.

It takes less about 2 hours for the case to fully charge the case. When the battery is fully charged, 100 will show on the digital display.

To charge the Bluetooth Earbuds

1. After fully recharging the Charging Case, disconnect it from charging.
2. Place the Bluetooth Earbuds into respective charging slots correctly.
3. The LED light indicator on the Earbuds turns on red and the digital display on the Charging Case will show its remained battery capacity. It takes about 2 hours for the Earbuds to fully charge. When the battery is fully charged, the red LED light will turn off, and the digital display on the Charging Case will also turn off soon.

Turning on/off the Bluetooth Earbuds

Remove the Earbuds from the Charging Case, it will turn on automatically (Or, if the Earbud is not stored inside the Charging Case, long press the touch pad of the Earbud to turn ON.)

Long press the touch pad of the Earbud to turn OFF the device. Or, place the Earbuds back into the Charging Case, it will turn off for recharging automatically.

Pairing both Bluetooth Earbuds with Bluetooth devices (phone or tablet that support call-answering)

- Remove both Earbuds from the Charging Case, it will turn on automatically and the LED flashes red and blue alternatively (*Or, if both Earbuds are not stored inside the Charging Case, long press the touch pad of the Earbuds to turn ON. An indication tone will be heard and the LED flashes red and blue alternatively.)
- After few seconds, you would hear another indication tone when both Earbuds are connected together. The LED light indicator on one Earbud will flash red and blue, and the LED light indicator on the other Earbud will turn off.
- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the “**ionix ANC Earbuds**” from the list of available Bluetooth devices.
- You might be prompted with “Pair with **ionix ANC Earbuds?**” message on your source device, with “Cancel” and “OK” options. Please select “OK”.
- Once paired successfully, an indication tone will be heard and the LED on both units will turn off.

Making a call with the Bluetooth Earbuds in Stereo pairing mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Touch Pad of one Earbud to answer an incoming call.
Reject Incoming Call	Incoming Call	Press and hold the Touch Pad of one Earbud for 2 second
End call	Incoming Call	After your phone conversation, short press the Touch Pad of one Earbud

Note: both Earbuds support phone conversation.

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Volume increase	Playing music	Short press the Touch Pad of right Earbud four times
Volume decrease	Playing music	Short press the Touch Pad of left Earbud four times
Pause	Playing music	Short press the Touch Pad of one Earbud will pause the music
Play	Pausing	Short press the Touch Pad of one Earbud will resume the music
Next track	Playing music	Short press the Touch Pad of right Earbud twice
Previous track	Playing music	Short press the Touch Pad of left Earbud twice

Note: An indication tone will alert you when the volume is set to maximum level.

Pairing either one Bluetooth Earbud with Bluetooth devices (phone or tablet that support call-answering)

- Remove one of the Earbud from the Charging Case, it will turn on automatically and the LED flashes red and blue alternatively (Or, if the Earbud is not stored inside the Charging Case, long press the touch pad of the Earbud to turn ON. An indication tone will be heard and the LED flashes red and blue alternatively.)
- Place the Bluetooth Earbud and Bluetooth device (phone or tablet that support call answering) no further than 3 feet apart from each other;
- Activate the Bluetooth function on your mobile device. Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your mobile device, select the "**ionix ANC Earbuds**" from the list of available Bluetooth devices.
- You might be prompted with "Pair with **ionix ANC Earbuds?**" message on your source device, with "Cancel" and "OK" options. Please select "OK".
- If required, enter the password '0000' to confirm & finalize pairing.

- Once paired successfully, another indication tone will be heard and the LED will turn off.
- You can now start to use the Earbud.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Bluetooth Earbud with a mobile device, the Earbud will remember this mobile device and will pair automatically when its Bluetooth is activated within the range, during subsequently pairing. You do not need to re-pair any previously connected devices.
- The Bluetooth Earbud will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Making a call with the Bluetooth Earbud in Bluetooth mode

Basic operation

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Touch Pad to answer an incoming call.
Reject Incoming Call	Incoming Call	Press and hold the Touch Pad for 2 second
End call	Incoming Call	After your phone conversation, short press the Touch Pad

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Volume increase	Playing music	Short press the Touch Pad four times
Pause	Playing music	Short press the Touch Pad will pause the music
Play	Pausing	Short press the Touch Pad will resume the music
Next track	Playing music	Short press the Touch Pad of Earbud twice (for right Earbud only)
Previous track	Playing music	Short press the Touch Pad of Earbud twice (for left Earbud only)

Note: An indication tone will alert you when the volume is set to maximum level. Other functions including volume decrease will need to adjust on your device.

Voice Assistant Operation

Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant. Short press the touch pad of the Earbud three times to activate this feature.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

Note: Google Assistant is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device.

While the Earbud is paired using Bluetooth, long press the Touch Pad for 2 seconds to start conversation with your Siri or Google Assistant. An indication tone may be heard before you speak into the Earbud.

- Example 1: Short press the Touch Pad three times and then speak into the Earbud, how's the weather today?
Voice Assistant will reply with something like: mainly cloudy with a few showers.
- Example 2: Short press the Touch Pad three times, and then speak into the Earbud, what's the time now?
Voice Assistant will reply with something like: it is 8pm now.
- More examples:
Set an alarm for 7am tomorrow.
Play some music.
What's in the news?

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Don't expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Don't expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Operating Range	Up to 30 feet
Working time	Up to 5 hours (moderate volume)
Charging input voltage	DC 5V
Charging time	About 2 hours
Built-In Battery	Charging Case: 250mAh Bluetooth Earbud: 35mAh (each)
Size	Charging Case: 2.42" (L) x 1.15" (D) x 1.90" (H) Bluetooth Earbud: 0.73" (L) x 0.81" (D) x 1.23" (H) (each)
Weight	Charging Case: 1 oz Bluetooth Earbud: 0.1 oz (each)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90-day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90-day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Inspired Brands Customer Service at Support@inspired-brands.com or by calling 1 (800) 246-0972, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Distributed by (Responsible party): Inspired Brands, LLC

Address: 2311 W Howard Street, Chicago, IL 60645

Telephone No.: 1 (800) 246-0972