 


WR01-01CH

Emitter specification

T Type specification

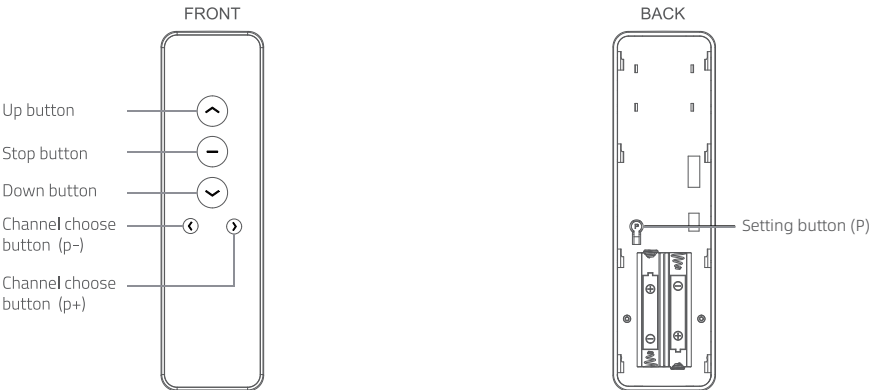

T Technical support


Technical specification	Function instruction
<ul style="list-style-type: none">■Input voltage: 3V (2x AAA)■Transmitting frequency: 433.925MHz■Transmitting power: 10 Milliwatt■Operating temperature: -5 C ~50 C■Transmssion distance: outside: 200 meters, inside (between two walls): 35 meters	<p>WR01-15CH is 15-channel emitter or WR01-01CH is 1-channel emitter. One number of screen means one control channel. Press "channel choose" button P1- (number descending) or P1+ (number increasing) to change the channel. On the analogy of this, loose finger when the screen shows the suitable channel that you select effective channel. If screen number show "o" that means all channels if effective (group control state).</p> <p>Notice: Emitter couldn't be exposed to moisture and striked, so as not to affect life. When you use emitter, if found emission distance obviously short or less sensitive, please change another same new battery. Please have batteries for recycling.</p> <p>Caution: Risk of explosion If battery is replaced by an Incorrect type. Dispose of used batteries according to the instructions.</p>

T Type specification

Press the "P-" or "P+" button, select the channel to be paired in 1~8 (0 channel controls all channels at the same time, cannot be paired individually).

Press & HOLD Programming button on motor head, the motor jog once.

 
Within 10 sec of activating pairing mode, **Press & Hold STOP** (2 sec), motor jog twice, pairing is successful!

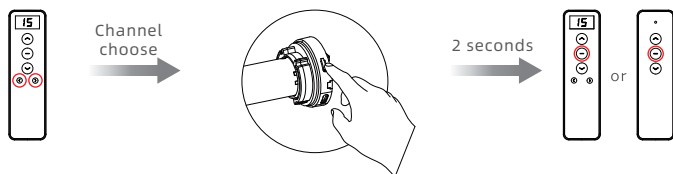

T The valid channels selection

* Available for 15-channel remotes only. *

 
! In the setting state, press the up or down button you can quit quickly, if you want to change the valid channels, reset it.

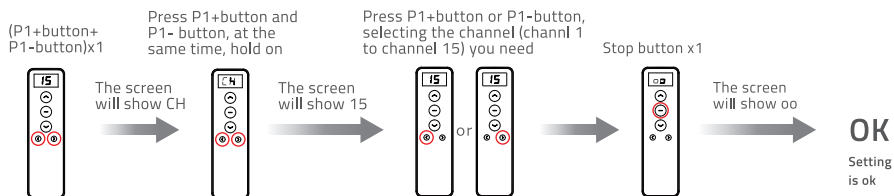

T Combination button lock/unlock status

* Available for 15-channel remotes only. *

 - !** ① Factory default is the combination button unlock status, repeated operation can be cycle switching.
 ② The combination button is locked, the combination button is invalid, and the combination button is pressed without sending code, and there is no icon display; in the unlock state, the combination button is pressed with an icon flashing indication.
 ③ The button is locked and only affects the emitter code.

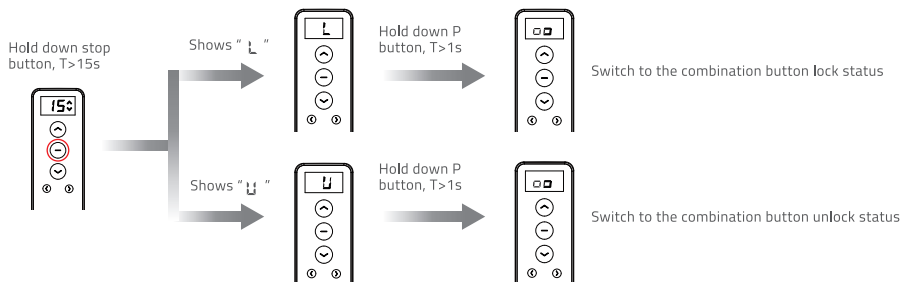



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction