

hello!






MUSIC



SPORTS

Button Diagram

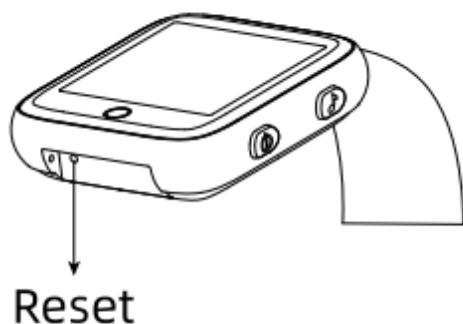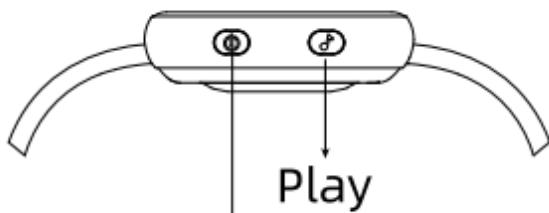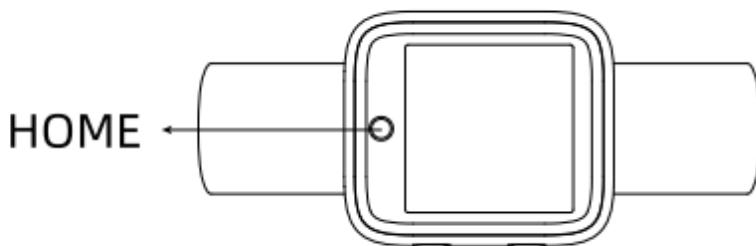

Button Introduction

HOME:

Short press the HOME button to return to the previous menu, and there will be a vibration prompt.

Long press the HOME button to go directly to the main interface, and there will be a vibration prompt.

Play:

In the process of playing music, short press the play button to quickly switch to the next song.

Long press the play button for 2 seconds to pause playback, long press again for 2 seconds to resume playback.

Reset:

Long press it for 3 seconds, the device will be restored to factory settings.


Button Introduction

Power:

Long press the power button for 3 seconds, the player will turn on or turn off. Short press the power button to turn on or turn off the screen.

Charge:

Place the player on the charging stand in the right direction as the picture below, then connect the USB-A of the charging stand to computer or power adapter. The player can be charged normally.

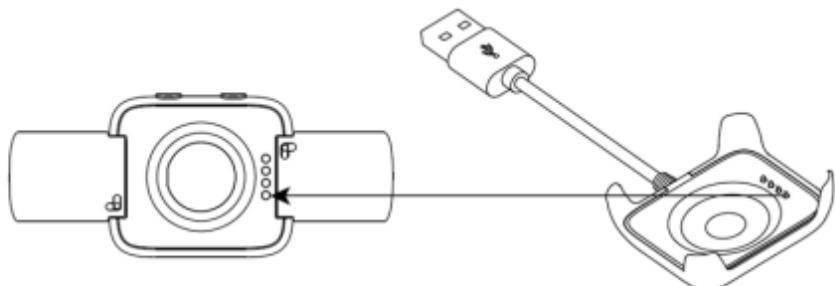


How to Upload Music

Firstly, place the player on the charging stand in the right direction as the picture below, then connect the USB-A of the charging stand to computer, the computer will show up an additional U disk in your drive list, which is the internal storage of the player.

Secondly, just like using a universal U disk, copy music files from your computer and paste them into the U disk of the player, or drag music files to the U disk from your computer.

You can create folders in the U disk of the player when connected to computer, name them according to different albums or artist, help to organize the files.

Note: The player can only connect to computer or tablet to transfer files, but not phones.

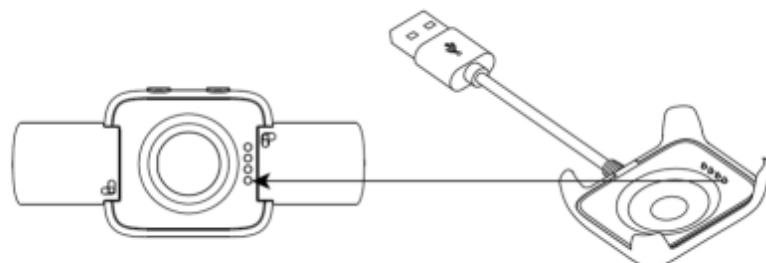

Music

Note: If you want to play music, please connect your Bluetooth Headphones or Speaker firstly. If not, the player can't play music.

Playlist: Click “” in the music play interface, there are “Local List” and “Playlists”

Local list: List of all the songs in the player.

Playlists: All the songs played before

How to choose shuffle play mode

In the playing window, select the  icon to achieve shuffle. You can also choose other play mode, such as  Single-loop,  All-loop (can also use as play in order).

Can the player play music when in charging?

The player can play music when it's charged by connecting to power adapter, but can't play when connected to computer.

Bluetooth

Operation path: Setting>Bluetooth

Power Bluetooth: On/Off

My Device: List of all the Bluetooth devices paired before.

Search Device: Searching the Bluetooth devices, and show a list of Bluetooth devices around.

How to pair Bluetooth Speaker or Headphones

Firstly, turn on the Bluetooth of the player, turn on your Bluetooth Headphones or speakers to be in pairing status.

Secondly, come into "search device" to search the Bluetooth devices around, click your Bluetooth device to pair. (Bluetooth devices that have been paired can be viewed in "My Devices")

If your Bluetooth headphones or speaker are not found in search device list

- Make sure your earphones or speakers are turned on and are waiting for Bluetooth pairing;
- Make sure that your headphones or speakers can be recognized by other Bluetooth devices (such as your mobile phone);

- Make sure your headphones or speakers are not connected with other Bluetooth devices;
- Refresh the searching device: Click Home button to stop searching Bluetooth device, then come into “search device” again to search again.

Note: for some brands of headphones / speakers with pairing buttons, such as airpods, Bose, etc., please try the following operations (take Apple airpods as an example): Open the lid of the airpods charging box, then press and hold the pairing button on the back of the charging box. When the indicator light in the airpods charging box is displayed in white flashing state, please refresh the Bluetooth list of the mp3 player and you will find that a device named “AirPods” has appeared.
***This method also works with other brands of Bluetooth headphones with pairing buttons, such as Beat, Jabra...

If the player can recognize your Bluetooth Headphones or speaker but failed to connect.

- Turn off and re-enable “Start Bluetooth”, and then try to pair again.
- Shuts down and restarts the player, and then try to pair again.

- Reset the player via the factory setting, and then try to pair again.

If the fault persists, please contact us to get further assistance or replacement/refund. If it is convenient, please tell us the brand and model of the Bluetooth / speaker so that we can make an investigation.

How to disconnect the Bluetooth Headphones or Speaker

Come to “my device” in Bluetooth setting, click the Bluetooth headphones or speaker paired, then you can disconnect or delete the Bluetooth Headphones or speaker.

Setting

Time & Date:

Set Time: Click the "12" 24" to switch the 12 hourly or 24hourly time format, click "▼, ▲" to adjust the hour or the second, then confirm.

Set Day: Click "▼, ▲" to adjust the Year, Month or Day, then confirm.

Language:

The player currently only supports English and Chinese, other languages will be available in the future.

Display

Brightness: Drag the bar to adjust the brightness.

Screen Time: Click "▼, ▲" to adjust the bright screen time. You can choose from 5 seconds, 10 seconds, 15 seconds...maximum 60 seconds. After setting the time, if there is no operation during the time period, the screen will be turned off.

Lift wrist bright: On/Off

If you turn on it, the screen will be bright when you lift wrist.

Device Info:

You can view the product name and software version of the player, and the storage space.

Restore Factory Setting: This operation can restore the factory default settings, but will not delete the inside of the product Songs, or other files, etc.

Factory: This operation will clear all data in this machine, including songs, or other files, operate carefully before formatting.

► **Steps**

You can see the step count, Pedometer km and the Record of recent 7 days.

► **Alarm**

How to set the alarm

Firstly, adjust the time.

Secondly, select the day from Monday to Sunday.
Then turn on the alarm.

Note: You can press  to delete the alarm, press + to add new alarm.

► **Folder**

In file manager, it shows lists of all the folders on the player. You can select one folder and click it into the folder, there is list of all files in the folder. In the Folder APP, you can manager file, view the folders and files, or click  to delete the folders or files.

Specification

Product Size: 1.8X1.56X0.53 inch (Not included the watchband)

Weight: 38.5g

Screen Size: 1.54 inch (240X240)

Battery Capacity: 5V/230mAh

Charging Time: 70 minutes

Music Playtime: 5.5 Hours

Compatible Music Format: MP3 / WMA / OGG / APE/FLAC / WAV / AAC-LC

Contact US

Email: jiuyun_css@hotmail.com

Online support: www.facebook.com/JiuYunCSS/

We promise to reply you as soon as possible within 48 hours.

Warranty:

Full refund for damage caused by quality issues within 1 year

Note: Damage caused by improper use, accidental or improper repair is not covered by the warranty.

Warning

- Do not place the equipment in an environment where the temperature is too low or too high (-10 °C or above 50 °C) for a long time, and the extreme temperature environment will lead to deformation on of the equipment, shorten the service life of the equipment.
- Do not use the equipment in thunderstorms.
- Please keep the equipment and all accessories away from children and pets. The possible swallowing will cause suffocation on and other serious consequences. Do not put the equipment into the water for a long time."

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.