


hello!

2019 NEW STYLE
FULL SCREEN MP4 PLAYER



KEY DIAGRAM

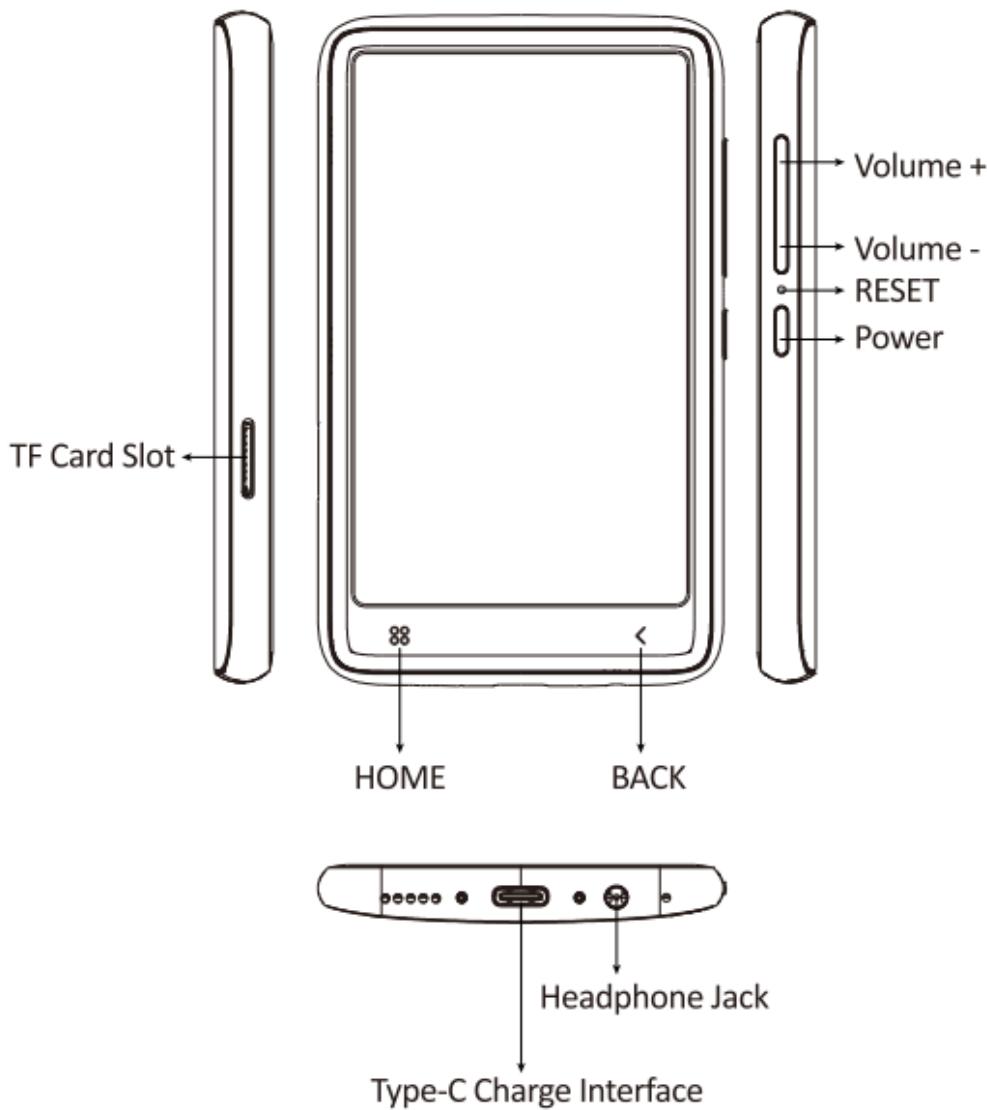

Basic Settings

- **Power on & Power off**

Long press the power button for 3 seconds to turn on or off; Short press the power button to turn the screen on or off. When the machine system halts, poke RESET to turn it off and then press the power button for 3 seconds to start the machine.

- **Adjust screen brightness**

Steps: Settings> Display Settings> Backlight Brightness

There are totally 5 kinds of brightness. 1 represents the lowest brightness, suitable for night opening. 5 represents the highest brightness, suitable for daytime opening.

- **Set backlight time**

Operation Steps: Settings> Display Settings> Backlight Time

Choose OFF to always light up, you can also choose 5 seconds, 10 seconds, 20 seconds, 30 seconds, 1 minute, 5 minutes according to your own needs.

After setting the time, the screen will automatically turn off if there is no operation during this period.

For example, if you listen to songs frequently, you can set the backlight time to 1 minute, and the screen will automatically turn off after 1 minute, but you can still listen to songs, which can save the player's power.

Basic Settings

- **Set power-saving time**

Operation Steps: Settings> Power Saving> Power-saving Time
Choose OFF to indicate that the power saving function is off, and you can also choose 3 minutes, 5 minutes, 10 minutes, and 30 minutes.

After setting the time, the player will automatically turn off if there is no operation during this period. If it is in the state of listening to songs, it will not turn off.

- **Set timed shutdown**

Operation Steps: Settings> Power Saving> Timed Shutdown
Choose OFF to indicate that the timed shutdown function is off, and you can also choose 10 minutes, 30 minutes, 1 hour, 2 hours, 3 hours, 4 hours, 5 hours.

For example, if you want to sleep listening to the song at night, you can set the timed shutdown to 30 minutes. After 30 minutes, the player will automatically turn off.

Basic Settings

- **View remaining disk space**

Operation Steps: Settings> Advanced> Details

Since the operating system occupies part of the storage space, the total amount of space will be lower than the actual total amount. In addition, the video and audio files with the same playing time are different because of the different compression ratio (bit rate), so the storage space occupied will vary greatly.

- **Formatted memory**

Operation Steps: Settings> Advanced> Format Internal Memory

This operation will clear all data in this machine, including songs, e-books, videos, etc., and be cautious before formatting.

- **Factory reset**

Operation Steps: Settings> Advanced> Restore Factory Settings

This operation can restore the factory default settings, but will not delete songs, e-books, videos, etc. in the player

How to transfer files to MP3 player

Method 1: Transfer via computer (windows or mac)

Method 2: Transfer via mobile phone (for Android phones that support OTG. Not support IOS phone).

How to Connect A Computer

- **The player is connected to a computer**

Choose a TYPE-C USB cable, the USB port is connected to a computer, and the TPYE-C terminal is connected to the player.

The computer will automatically identify the device and install the driver. After the installation is successful, the computer will pop up a window, prompt:

- Scan and repair (recommended) ①
- Continue, but don't scan ②

It is recommended to select ① to scan and fix, and this operation does not delete any files in the storage space.

After selecting this operation, when the player connects to the mobile phone again, it will not be prompted, "U disk is not supported and needs to be formatted before it can be used" (mobile phone format memory will delete all files on the memory).

After the repair is completed, click on "My Computer" and you will see a new, "removable disk". After clicking on "removable disk", you can copy any video, audio and e-book files to the player, and you can also delete any files you don't want.

Attention:

When some players connect to the computer, the computer can use it directly without the above prompt.

How to Connect A Phone

- **Connect your phone via the OTG cable**

Connect your phone and player via the OTG cable

If the phone pops up a window, the message "**U disk is not supported and needs to be formatted before it can be used**".

It is recommended to back up the files on the player through the computer before formatting. Because the player is formatted through the phone, it will be deleted, video, audio and E-book files on all players.

If it is the first time to use the player and there is no file on the player, you can use the phone directly to format the player.

- **How do I copy the files on my phone to the player?**

After the above operation is completed, find the **file management** on the phone, and find the file you want to copy on the phone. On the **file list** page, press the file name long to select the file. Then click **Copy** (generally at the bottom of the file list page), then open the player U disk on the phone, click "**paste**" to complete the operation.

Common Problems (FAQ)

- **The player cannot be charged**

Normally, the player screen will be on when charging, and the battery icon will be displayed on the screen.

Troubleshooting:

First rule out whether it is a player issue.

A. Use the charger to charge the mobile phone first. If the mobile phone can charge normally while the player cannot charge, there is a problem with the player charging. On the contrary, please check your charger.

B. most of the time, the charging problem is caused by poor contact. It can be plugged and unplugged repeatedly to test whether it can be charged normally. If the charging is intermittent, it is recommended to change another charging wire for charging.

Common Problems (FAQ)

- **The player does not respond to the computer**

First of all, please exclude whether the USB interface of the computer is good. If a good quality U disk can be used normally, it means that there is a problem with the player. Instead, please change another computer or USB interface.

Most of the time, it is because of the problem caused by poor contact of the USB cable. When you encounter such problems, you can repeatedly plug and unplug, or consider changing another USB cable to test.

- **The player connected to a phone does not respond**

First of all, only Android phones with OTG function can connect the player to copy and paste files. (Apple phone does not have OTG function)

A. Please read user-manual or query your cellphone's supplier/manufacturer to confirm whether your cellphone supports OTG function.

B. Judge whether OTG switch of the mobile phone is turned on: OPPO and VIVO mobile phones need to turn on OTG switch in the settings first.

C. Judge whether it is a USB cable problem: on the basis of the original USB cable of Android phones, connect the player to test. If there is a computer, you can connect the player with the computer to check whether it can be connected successfully.

Common Problems (FAQ)

- D. Judge whether there is poor contact: repeatedly plug and unplug to check whether the connection is successful.
- E. Adapter problem: if there is no problem with the above, you can judge that there is a problem with the adapter. Please contact our customer service for free replacement.

- **The player cannot be turned on**

In most cases, it is the player that has been out of power. Please charge it for half an hour, then press and hold the power button for booting test. If it still doesn't work, please contact our customer service, we will handle it for you in the first time.

- **The radio function is not available**

- a. No wired headphones are connected with the player, because the player must be plugged into a wired headphone to use the radio function;
- b. The headphone is not in good contact with the jack. It is recommended to try another headphone.

Basic Parameters

Size : 106 x 64 x 6.5mm (about)

Weight : 80g

Screen : 4.0 inches (480 x 800 fully fitted capacitive screen)

Battery Specification : 5V/ 1000mAh

Audio Format : MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP

Video Format : 1920 x 1080 AVI/ MP4/ FLV/ RMVB

E-book Format : TXT

Recording Format : WAV/ MP3

FM Radio : Common frequency band 87.5MHz-108MHz

Play Time : Music playback for about 30 hours (lab data);

Video playback for about 6 hours (lab data)

Charging Time : 40 minutes (5V/ 1000mA)

Warning

>>Do not place the equipment in an environment where the temperature is too low or too high (-10 °C or above 50 °C) for a long time, and the extreme temperature environment will lead to deformation of the equipment, shorten the service life of the equipment.

>>Do not use the equipment in thunderstorms.

>>Please keep the equipment and all accessories away from children and pets. The possible swallowing will cause suffocation and other serious consequences. Do not put the equipment into the water for a long time.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Thanks