


尺寸: 90mm X 60mm (折好后尺寸) - 360mm X 60mm (展开尺寸)

工艺说明: 单色正反面印刷 , 105g 铜板纸 .

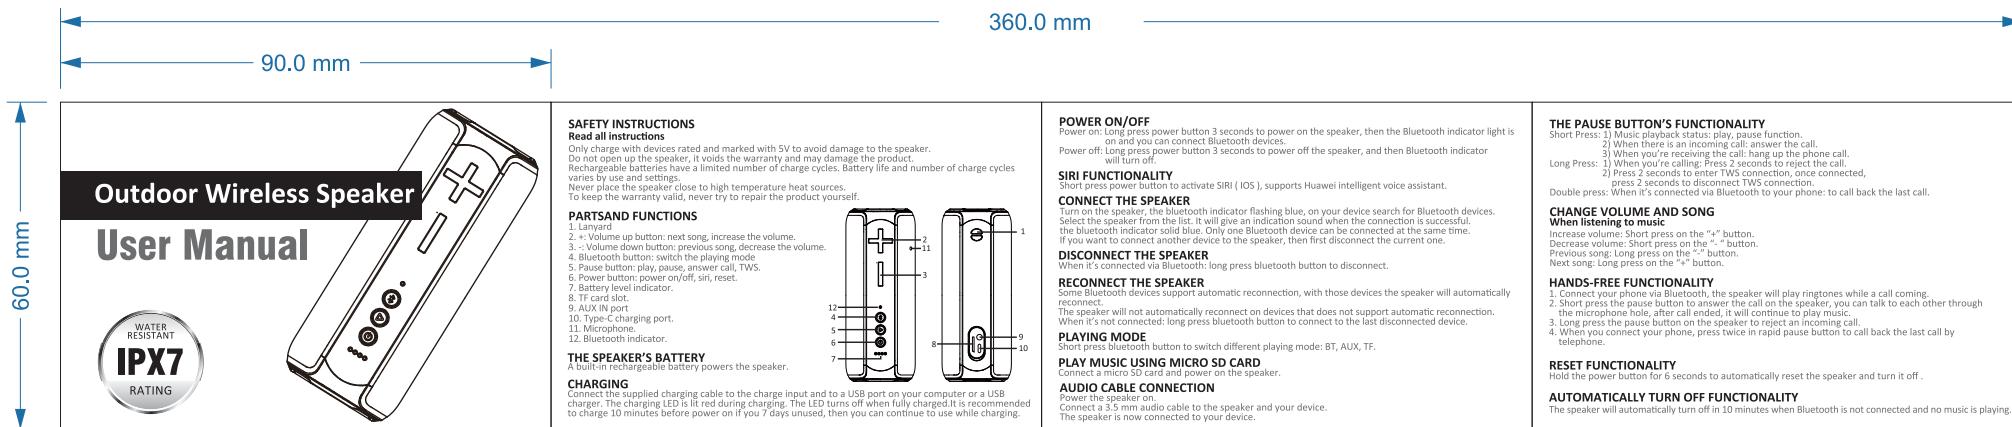

正面

TECHNICAL PARAMETERS <ul style="list-style-type: none"> Model: DSB-BTS370B Speaker: Ø45mm 4Ω 10W*2 Charging time: 3 hours Input: 5.0V-1.0A Product Weight: 553g 	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p>	FAULT AND MAINTENANCE <p>1: Please check whether the multifunction indicator light flashes blue. Please power on your speakers if the light isn't on. Please charge the speaker if the light is still not on.</p> <p>2: Please turn off the other Bluetooth devices, if there are many Bluetooth devices surrounding. This may result in search difficulties.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	FCC STATEMENT: <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 	NOTE <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p>
PACKAGE INCLUDING <ul style="list-style-type: none"> 1pcs* E200 wireless speaker 1pcs* Product manual 1pcs* Type-C USB cable 	EXPLANATION <p>1: Turn on both speakers</p> <p>2: Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. The default is the primary speaker that you operated the Play/Pause-button of this speaker. (Please play/Pause button. It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish L/R channel: The blue light on one speaker is flashing blue for every 3 seconds that should be the left channel(the primary speaker); the blue light on the other speaker is solid blue that should be the right channel.)</p> <p>4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number. (It will only display 1 number which is both combined in to one)</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>
TWS CONNECTION <ul style="list-style-type: none"> 1: Turn on both speakers 2: Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. The default is the primary speaker that you operated the Play/Pause-button of this speaker. (Please play/Pause button. It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish L/R channel: The blue light on one speaker is flashing blue for every 3 seconds that should be the left channel(the primary speaker); the blue light on the other speaker is solid blue that should be the right channel.) 4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number. (It will only display 1 number which is both combined in to one) 	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>
TWS DISCONNECTION <ul style="list-style-type: none"> 1: Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound 	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>	EXPLANATION <p>1: Please note: The product is only suitable for the safe non-tropical climates. 2: Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.</p> <p>3: Smart wireless speaker on devices for Bluetooth search function.</p>

反面