


Kids wireless keyboard with touchpad

User Manual

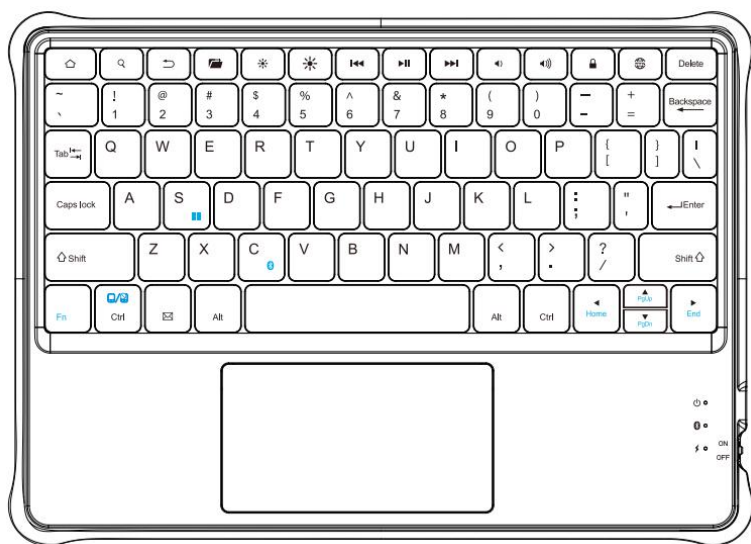

Pairing Steps

Note: See Product overview section below for more details.

Step 1. Switch Power switch On to turn your keyboard on.

Step 2. Press the “Fn + C” keys together to enter pairing mode.

Step 3. Verify your device’s Bluetooth® settings are on.

 Select Settings > Bluetooth > On.

Step 4. Select “Pair new device”.

Step 5. Select “Fintie Keyboard” from your device’s list of available devices to complete pairing.

Step 6. The Bluetooth pairing indicator will turn off after your device has paired successfully.

Sleep Mode

The keyboard will enter sleep mode after being idle for 30 minutes. Press any key to wake the keyboard. Wait up to 2 seconds for the keyboard to reconnect with the tablet before starting to type.

Charging Your Keyboard

1. Plug the USB-C end of the charging cable into the keyboard and the other USB end into your preferred USB charger. (USB charger is not included.)
2. When charging, the power indicator will turn red. Generally, it takes approximately 2 hours for a full charge. (Output: DC 5 V/500 mA.)


Package Contents

- 1 x Keyboard
- 1 x Protective Case
- 1 x USB-C Charging Cable
- 1 x User Manual

Specifications

Bluetooth Version	BLE 5.0
Operating Range	Up to 10 metres
Working Voltage	3.0-4.2 V
Working Current	1 mA
Charging Current	200 mA
Sleeping Current	0.01 mA
Re-connect Time	Apx. 2 seconds
Stand-by Time	365 days
Charge Time	≤ 2 hours
Uninterrupted Work Time	Up to 500 hours
Lithium Battery Capacity	300 mAh
Frequency Band	2400 to 2483.5 MHz
Maximum Radio-frequency power	0 dBm

Product Overview

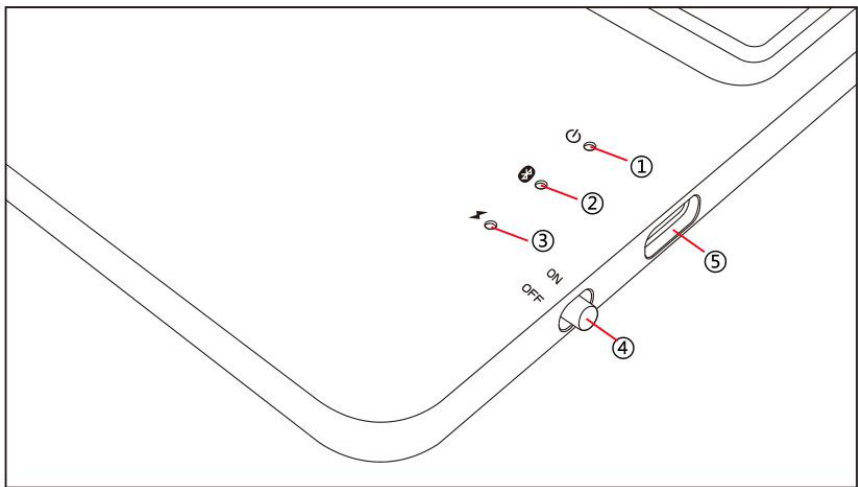

- ① **Power indicator:** Turns green for 3 seconds.
Caps Lock indicator: Green light is on.
- ② **Bluetooth indicator:** Flashes blue when pressing “Fn + C”.
- ③ **Charging indicator:** Red while charging. Green when fully charged.
Low battery indicator: Flashes red when charging is required.
- ④ **Power Switch:** Slide “on” to power on and “OFF” to power off the keyboard.
- ⑤ **Charging port:** Only used for charging.

Keys and Function

	Home (Press and Hold for Alexa)		Search for		Back
	Open file folder		Brightness -		Brightness +
	Previous track		Play/Pause		Next track
	Volume -		Volume +		Lock screen
	Open Silk		E-mail		Touchpad on/off

Touchpad Function

Gesture	Finger picture	action	Function
1-finger tap			Left-Click
1-finger slide			Move cursor
1-finger double-click and hold			Drag and Drop
2-fingers tap			Right-Click
2-fingers vertical/horizontal movement			Scroll / Pan
3-fingers slide up			See all open windows
3-fingers slide down			Show the desktop
3-fingers slide to the left			Switch between open windows
3-fingers slide to the right			Switch between open windows

Troubleshooting

If your device does not respond to the keyboard, try the following.

1. On your Fire HD tablet, navigate to “Settings > Connected Devices > Previously connected devices” and delete any entries for unused Bluetooth devices including “Fintie Keyboard”.
2. Restart your device.
3. Turn your keyboard off and back on.
4. Forget and re-pair your keyboard.
5. If your keyboard does not establish or maintain a Bluetooth connection, reset the Bluetooth module by charging your keyboard.
6. If your keyboard does not operate correctly after charging it, please contact your authorized retailer.

Safety Tips

- Do not place heavy objects on the keyboard.
- Do not disassemble the product.

- Keep the product away from oils, chemicals and organic liquids.
- Use only a damp, soft cloth, like microfibre, to wipe the keyboard.
- Dispose of the battery according to local laws.
- Keep the product away from sharp objects.

******* For UK customers only *******

Recycling Your Old Electricals Is Easy!

Recycle your electrical and electronic devices for free at your local recycling centre. To find your nearest centre, visit www.recycle-more.co.uk and type in your postcode.

Why Recycle?

Unwanted electrical equipment is the UK's fastest growing type of waste. Many electrical items can be repaired or recycled, saving natural resources and the environment. If you do not recycle, electrical equipment will end up in landfill where hazardous substances will leak out and cause soil and water contamination—harming wildlife and also human health.

We're proud to support your local authority in providing local recycling facilities for electrical equipment.

To remind you that old electrical equipment can be recycled, it is now marked with the crossed-out wheeled bin symbol. Please do not throw any electrical equipment (including those marked with this symbol) in your bin.



What is WEEE?

The Waste Electrical or Electronic Equipment (WEEE) Directive requires countries to maximise separate collection and environmentally friendly processing of these items.

How Are We Helping?

In the UK, distributors including retailers must provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge. As a responsible retailer, we have met the requirements placed on us by financially supporting the national network of WEEE recycling centres established by local authorities. This is achieved through membership of the national Distributor Take-back Scheme (DTS).

To find more information on WEEE recycling and to locate your nearest recycling centre, please visit www.recycle-more.co.uk.

IC Caution

This device complies with Industry Canada license-exempt RSS standard(s).
Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Contact Us

Website: www.fintie.com

E-mail: support@fintie.com

North America

Tel: 1-888-249-8201

(Monday-Friday: 9:00 AM – 5:00 PM EST)

Europe

Tel: +49 69 95094777

(Monday-Friday: 9:00 AM – 5:00 PM CET)

Manufacturer

Shenzhen The South Magic Co., Ltd

No.27 Da Fa Road, Ban Tian Street, Long Gang District

Shen Zhen, China 518100

Amazon, Fire and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

IC Caution

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.