

Digital player

user manual

Ver1.1

Thank you for choosing the digital player produced by our company! In order to make your player easy to operate as soon as possible, we are equipped with a detailed user manual, you can get the product introduction, usage and other aspects of knowledge. Before using your player, please read all the information we provide at random so that you can better use the product.

When compiling this manual, we are very serious and rigorous, and hope to provide you with complete and reliable information. However, there are inevitably mistakes and omissions, please understand and sincerely welcome your criticism and correction. If you find any problem in the process of using this product, please call our service hotline in time, thank you for your support and cooperation!

Please backup your data to your computer at any time. The Company shall not be responsible for the loss or damage of personal data caused by the wrong operation of software and hardware, product maintenance, battery replacement or other unexpected circumstances, nor shall it be

responsible for any other indirect losses caused thereby. At the same time, we cannot control the possible misunderstanding caused by users of this manual. Therefore, the Company shall not be responsible for the possible accidental losses during the use of this manual and shall not be responsible for third-party claims caused by the use of this product.

Information in this manual is subject to change without prior notice.

The information in this manual is copyrighted and any part thereof may not be photocopied or reproduced in any way without the prior written permission of the Company. The company reserves the right of final interpretation of this manual, three packets of certificates and relevant materials.

Enterprise Implementation standard: Q/BATB004-2013

Record of enterprise standards: 20190320


Attentions

- ★ Children are not allowed to play the machine alone. Do not fall or rub against hard objects, which may cause surface abrasion, hard disk damage, data loss or other hardware damage.
- ★ It is recommended not to use the earphone at high volume continuously. Please adjust the volume to the appropriate volume and control the use time to avoid your hearing loss. That's because using headphones at too much volume can cause permanent hearing damage. Do not attempt to disassemble or modify the unit, which may cause electric shock or interfere with product warranty.
- ★ Do not use chemical agents or cleaning agents to clean the machine, which will damage the surface of the machine and corrosion spray paint.
- ★ It is recommended not to use earphones when driving a motor vehicle or riding a bicycle. Please ensure driving safety.
- ★ When the machine is used as a mobile hard disk, please store the exported file according to the correct file management operation method,

the company is not responsible for any file loss caused by any operation. It is recommended to backup the personal data stored in this machine in time.

- ★ It is forbidden to use overload power supply, bend the power line forcefully or squeeze the power line with heavy objects to avoid causing heat and fire.
- ★ Do not expose the equipment to damp environment or rain. If the equipment is flooded or dampened, it may cause equipment failure or even failure to repair.
- ★ Wet hands are not allowed to unplug power supply, in case of electric shock.
- ★ Due to the performance and function of the product changes may occur without further notice, please understand.
- ★ If the actual setup and usage of this product are inconsistent with this manual due to firmware update, please call the service hotline for the latest product information. Thank you for your cooperation

Introduction

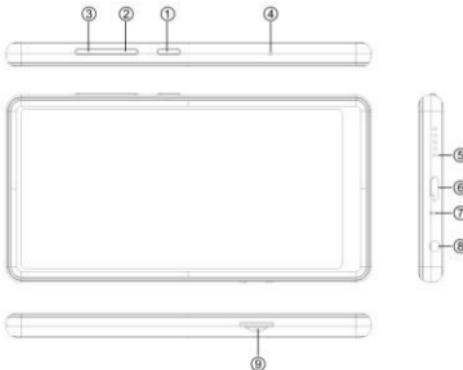

1. Power key 2. Sound- 3. Sound+ 4. Reset 5. Speaker
6. TYPE-C input 7. Microphone 8. earphone hole 9. TF card
slot

Quick start

1. Power on: Long press the power button in the shutdown state to enter the boot screen.
2. Power off: Long press the power button to start the power off in the power-on state.
3. Main interface introduction:

- A. Status bar: enter the menu of specific functions. The top bar of the interface is the status bar, displaying information: time, battery level, Bluetooth and wife.
- B. Function ICONS: On the main interface, the system has 20 ICONS. Click the ICONS to enter various functions or make relevant Settings on the machine.
- 4. Volume adjustment: Press the upper button to increase the volume, and long press the button to increase the volume to the maximum.
- 5. Virtual function key operation

➤ screen on the bottom of the finger sliding operation, shows the interface of virtual buttons.



- hidden virtual operation panel button icon.
- hidden files according to the background interface.
- return to the main menu interface, back at the next higher level.

Charging operation and battery management

1. The machine supports USB charging, please connect the USB port with the COMPUTER USB port.

new battery should be after a few charge and discharge process, in order to achieve the best performance

if does not use this machine for long time, please charge and discharge at least once a month, in order to prevent the damage caused by excessive consumption of battery.

if you need the machine dedicated charger, please go to the shop to buy.

Tf card use way

This machine is equipped with TF card expansion card, which can put videos, pictures and e-books into memory card. When using, the card shall be inserted correctly according to the setting of the card slot and pushed into the card until a click is heard. To remove the memory card,

push the memory card into the slot and then release it. The memory card will pop up automatically and then take out the memory card. When inserting the TF card, it needs to be done in the state of shutdown to avoid damage to files.

Function

Long press: Touch the target for more than 2 seconds. Long press the blank area of the main screen to enter the main screen editing state.

Slide: Slide your finger across the screen.

Drag: Long press the target and move it to another location on the screen.

Connect to the WLAN network

1. Slide down from the status bar to open the notification pane, or find "WLAN" in Settings.
2. Turn on the WLAN switch. The WLAN network detected will be listed in a list.

3. Click the WLAN network to connect. If you choose an encrypted network, you need to enter an access password connection.

Connect the bluetooth

1. Slide down from the status bar to open the notification panel, or find Bluetooth in Settings.
2. Turn on the Bluetooth switch. Enter the Bluetooth setting interface and search for the Bluetooth address
3. Click the bluetooth address name to connect to make a paired connection.

System function

Wireless and networking

Flight mode: The network will be shut down automatically when the flight mode is turned on;

Equipment

1. Display: Brightness, wallpaper, sleep time, font size and rotation can be set;

2. Navigation bar: The display mode of navigation bar can be selected;
3. Prompt sound and notification: The mode and sound effect of prompt sound can be selected according to needs;
- 4 application: You can see all the software added to the machine, click the corresponding software to see relevant information, you can also choose to uninstall the software, the native software cannot be uninstalled
5. Storage device and USB: You can view the memory of the body and the memory space occupied by the application
6. Battery: The intelligent power-saving mode can be set to check the usage of power;
7. Memory: You can check the running memory of the machine and the average memory usage of each application;

Personal

1. Language and input method: The language and input method can be set;
2. Location information: The location can be opened according to the requirements of the software;
3. Security: Lock screen mode and device manager can be set, and application permissions can be set.

4. Account: Can manage the account information of relevant software;
5. Backup and reset: Data in the backup device can be selected, network Settings can be reset, DRM can be reset and factory Settings can be restored;

1、music

In the main interface, click the "Music" icon to enter, a list of music files will appear, and click the target file to enter the play interface.

The definition of each function icon is as follows:

| | | |
|--|-----------|---|
| | Stop | No play mode |
| | start | Playing mode |
| | Former | Former music, long press retreat quickly |
| | next | Next music, long press fast forward |
| | set | Click the pop-up toolbar to set up various settings |
| | back | Click to return to the previous interface |
| | Play mode | There are single play, single cycle, all cycle, sequential play, random play to choose. |

Playback progress: Display the playback progress. Drag the node in the playback status to realize the functions of fast forward and fast backward. Click to position the node to play at the corresponding position

Play mode: sequential play (stop after playing the list file), single loop, full loop, random, random repeat, browsing (switch to the next song for 10 seconds)

2. Video:

1. Find the icon of the video on the main interface and click to select the video to be played;
2. Fast forward and fast backward can be achieved by pulling the progress bar when playing;
3. Click on the upper right corner to select "Stop" and "Loop".
4. Click the screen to pause and play.

3. FM radio:

1. Plug in the wired headphones, find the icon of FM radio on the

interface, and click to enter the radio function

2. Click “” “

3. Click the "Menu" in the upper right corner of the interface to select FM recording and FM recording library, etc.

4. Recording:

1. Find the recording icon on the interface and click to enter the recording function;

2. Start recorder: click“

1. ON/OFF recorder : click“

2. Save recorder: click“

3. Click the "Menu" in the lower right corner of the interface, and the recording library option will appear.

5. Gallery:

1. Find the icon of the gallery on the main interface and click to view the

imported or downloaded pictures

2. When displaying the current picture, click the "menu" in the upper right corner to select delete, play the slide, edit, rotate, crop, set the photo as, detailed information, and print (the computer must be connected with the data cable when printing).
3. Editing: Select the image to be edited, and there is an icon in the bottom left corner of the screen. You can select filter, image border, cropping, doodle, color blending and so on.

6. Calendar:

1. Find the calendar icon on the main page and click to view the current date;
2. Click the "menu" at the top right of the screen, you can add a new activity in the selected date, find the date to create the activity, clear all events, jump to the specified date, and set;
3. Settings: Click to enter the general Settings options, which can be set

according to the needs of the relevant content;

7. Clock:

1. Alarm clock: To set the alarm clock time as required, click "+" to increase the alarm clock, and click the menu icon in the lower right corner to set the alarm clock duration, alarm clock volume, etc
2. Time: Choose the time zone you want to increase. You can set the style of the clock and automatically make it look like home time.
3. Countdown: You can set the countdown time according to your needs. After setting the time, click "Play" to start the countdown.

Technical rules

| | |
|-----------------------|--|
| size | 152.5mmx78.8mmx9.3mm |
| | 128.3mmx66.6mmx8.5mm |
| | 108.2mmx60mmx8.7mm |
| screen | 6inches/5 inches screen, resolution: 960×480 |
| | 4 inches screen, resolution: 540×960 |
| memory | 8G/16G |
| Music format | MP3、OGG、FLAC、AAC、WMA、WAV、APE |
| Video format | RM、AVI、RMVB、3GP、FLV、MP4、DAT、MKV、MPG、MOV、TS |
| Picture format | JPG、BMP、GIF、PNG |
| E-book | PDF、TXT、EPUB、FB2 |
| Recorder format | 3gp |
| Signal to noise ratio | ≥75dB |
| Input type | TYPE-C |
| Memory card | TF card |
| language | Multi-language |
| system | Android 6.0 |
| Use temperature | 0 -45°C |
| Battery | Built-in polymer battery |
| Charger | 5.0VDC---1000mA |

The company reserves the right of final interpretation of this manual.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.