

SyncroB.it

# Gateway Setup **MANUAL**

# 01 What's in the box?

The product package should contain the following items:

- Syncrob.it HNT Gateway
- An AC power adapter (varies by region)
- 3dbi Lora antenna (varies by region)
- Ethernet cable

Optional Accessories:

- 6 dbi Antenna
- Antenna Cable
- Mounting Bracket

If any of the parts are incorrect, missing, or damaged, contact SyncroB.it via email at [support@syncrob.it](mailto:support@syncrob.it). Keep the carton, including the original packing materials, in case you need to return the product for repair.



Optional Accessories



## 02 *The Front of the Gateway*



You can use the status lights on the front of the gateway to verify various conditions.

<span style="border: 1px solid #ccc; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>White (Blinking)</b> - Powered up	<span style="background-color: yellow; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>Yellow (Blinking)</b> - Connected to Wi-Fi/Ethernet
<span style="background-color: green; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>Green (Steady)</b> - Ready	<span style="background-color: orange; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>Amber (Progress)</b> - Syncing blockchain
<span style="background-color: cyan; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>Cyan (Blinking)</b> - Firmware update	<span style="background-color: red; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>Red (blinking)</b> - Error
<span style="background-color: magenta; border-radius: 50%; width: 20px; height: 20px; display: block; margin-right: 10px;"></span>	<b>Magenta (Blinking)</b> - Rebooting		

**NOTE:** The 6th LED will turn steady blue while pairing mode is active.

## 03 The Back of the Gateway



1. USB OTG Port (Mirco USB)
2. Power adapter port
3. Soft reboot button
4. Antenna port
5. Ethernet port

## 04 Preparing your Gateway for Setup

1. Carefully screw in the provided 3dbi antenna ([See Figure 3](#)).
2. Find a suitable location for your Gateway (for optimal coverage we recommend placing the unit near a window and close to a power source).
3. If you are using ethernet connection, locate the ethernet port on the back of your gateway and securely insert ethernet cable. ([See Figure 4](#))
4. Power the gateway with the included power adapter.
5. Allow the unit a few seconds to power on. LED strip should begin blinking white.



figure 3



figure 4



## Warning

Please remember to follow the following steps when using your SyncroB.it Gateway.

1. Never power on the Gateway without it's antenna connected as this may damage the unit.
2. Do not install this device on top of any other electrical equipment or install any other equipment on top of this device. Keep this device away from any heat sources such as direct sunlight, heaters, radiators, or other A/V receivers or devices that emit heat.

## 05 Setting up your Gateway

Download and install the Helium application from App store or Play store and follow the on-screen instructions. Once you have set-up your Helium wallet, go to hotspots and tap setup hotspots (**See Figure 5**), from the list select SyncroB.it Hotspot (**See Figure 6**) and follow the onscreen instructions.



figure 5

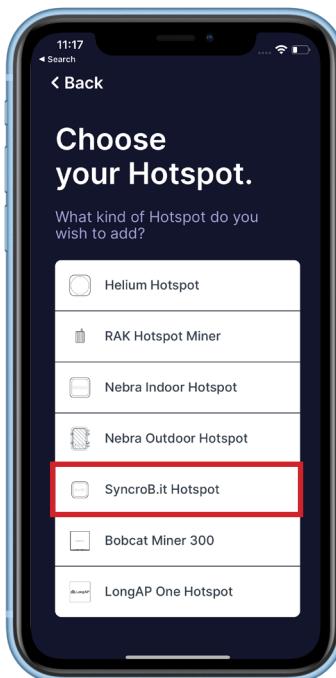


figure 6

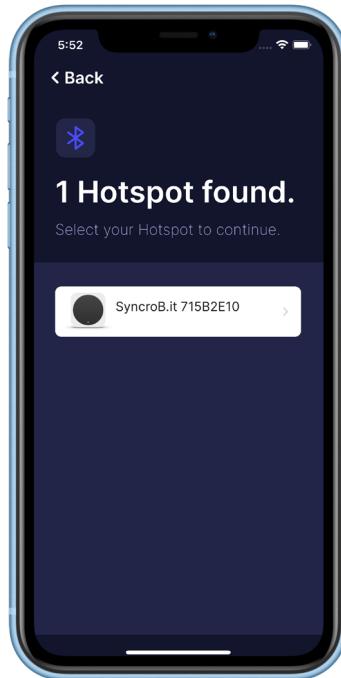


figure 7

Download Helium App



# FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body

This device contains BT and WIFI transmitter module FCC ID: 2ABCB-RPIRM0



SyncroB.it

---

P.O. Box 635  
Shepherdsville,  
Ky 40165 USA

[support@syncrob.it](mailto:support@syncrob.it)  
<https://syncrob.it/contact/>