


MX-SERIES R/C BOAT

INSTRUCTION MANUAL

Battery Installation



1. Screw open the battery compartment cover from the boat, insert 3 pieces of 1.5V "AA" batteries (Not included), following the correct polarity. Screw close the battery cover.
2. Screw open the battery compartment cover from the remote control, insert 2 pieces of 1.5V "AAA" batteries (Not included), following the correct polarity. Screw close the battery cover.

A

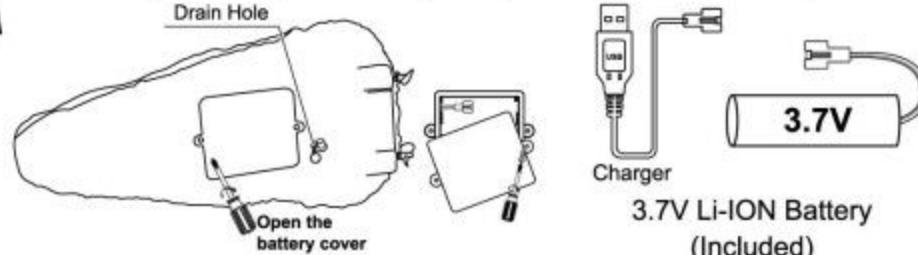

Notice: Open the battery cover and remove the Li-ION Battery (Included), connect to the USB cable (Included) and plug into computer for charging. Red charge indicator light will be on during charge. Please use only the original USB cord for charging.


B

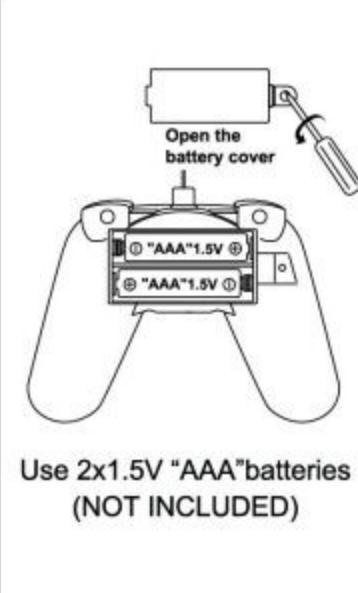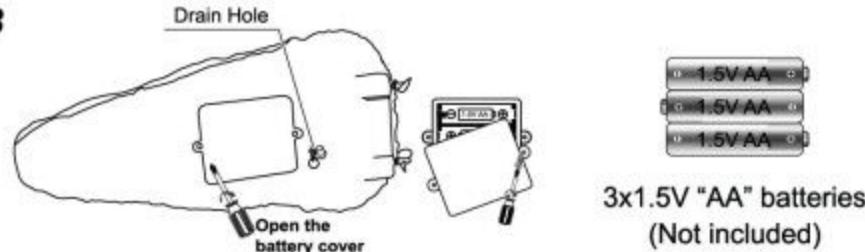


- ① Do not mix new and used batteries or batteries of different types.
- ② Only batteries of the same or equivalent types as recommended are to be used.
- ③ Do not mix alkaline batteries with rechargeable batteries.
- ④ Gently pull out the battery lid when the screw is loosened, battery lid is more difficult to be removed due to water-proof ring inside.

Operation Instructions: After use, pull out the plastic plug in the drain hole to drain the water.

Operation Manual of Remote Control

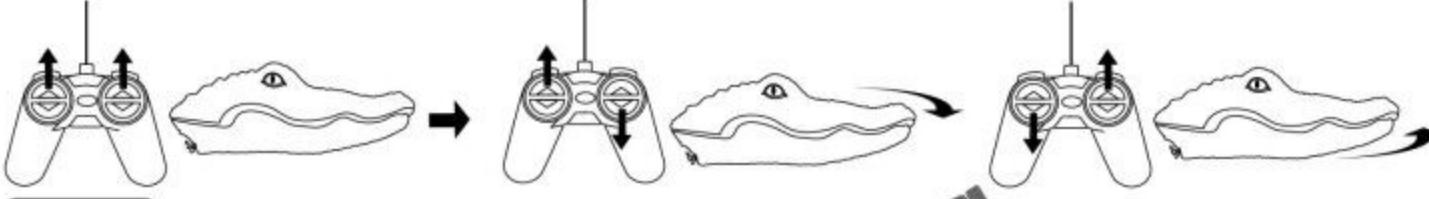

Caution

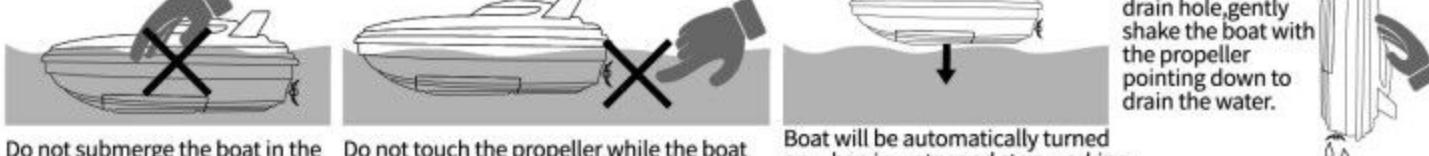

☒ Don't operate your boat where there are water plants, rubbish, or other obstacles in the pond. This could impair propeller and cause damage.

☒ Don't play when there is a strong water current or when the wind is blowing strongly on the pond.

☒ Never play in ocean(salt)water. This will cause rusting of parts.

☒ Don't play outdoors during thunderstorms.



CAUTION: Please take out the batteries when not in use.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.