


## Instruction manual

### Educational robot

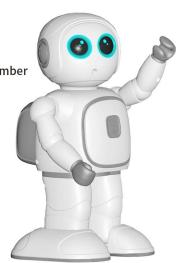

Hello everyone. I'm climber, an educational robot. Call my name "Alex" to wake me up.




This manual introduces the basic use methods and common problems of educational robots, helps you quickly understand and familiarize yourself with robots, and guides you to use robots.

01

R8-Climber

### Buttons and instructions

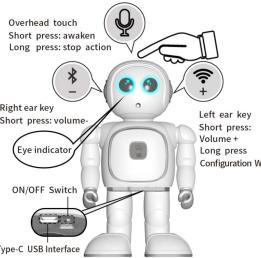

02

### • Button definition Voice interaction

Wake word: "Alex" The system prompts "When" and then vice commands, like "sing a song" or "tell a story."

### Overhead touch key

In the conversation, short press : Stop the conversation. In the states, short press : Wake up Robot, you can have a conversation. Long press : Close "Open dance moves". When the robot is dancing, long press the top of the robot to stop dancing, long press again, the robot will continue to dance.

### Directory key

If the track is playing , short press : switch directory (Tagging: when the robot is in standby mode, short press the directory key to continue to play the last played directory)

03

### Configure network/Volume+Key

Long press (Left ear key) : Enter configuration network mode (Configure network through app) Short press : Adjust the volume to increase

### Volume-Key

Short press : (Right ear key) : Adjust the volume to decrease. Hold down the right ear button for two seconds and release it to turn off the robot's eye light. Hold down the right ear button for another two seconds and release it to turn on the light

#### • Eye light function definition (Eye indicator)

Red light : Charging

Blue light : Fully charged

Pink light : Slow flashing means you are connected to the Internet and can dance

Cyan light : already connected to the network can not dance

Yellow light : no network connection

Green light : voice monitoring can not dance


Pink light : Long light represents group dance state

Peach, pink and yellow flickered alternately: Amazon Platform is not authorized (The eye light will be pink after the authorization is completed)

04

### Network connections


1.Click on Sound Wave to configure the network  
2.Enter the WiFi name and password , click play (Mobile phones and robots need to use the same wireless network)  
3.Long press the robot's left ear button to connect to the network (Note: The robot voice prompts "I'm connected to Internet, it is great!" Network connection successful)

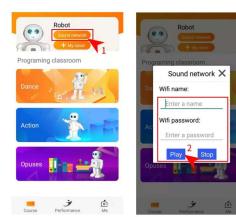

05


### Equipment binding

1.Open the app that controls the robot, Click on my robot  
2.Click add robot

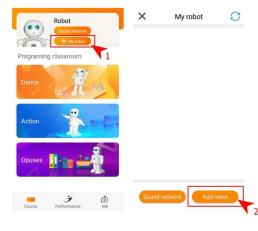

06

3.Select the robot to be connected and click Add, Connect robot successfully.

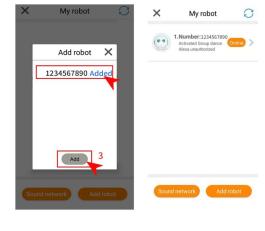

07

### Educational robot · The climber

#### Product warranty card

### Educational robot · The climber


#### Product warranty card

Product name:  
Model:  
Purchase time: Purchase time:  
Contact number:  
Detailed address:  
Place of purchase:  
Dealer name and address:

Please save this voucher, if your device needs warranty service, please contact your dealer's distributor.


### Authorization by Amazon

1.Click on an unauthorized robot  
2.Choose your region, click set server endpoint  
3.Click authorize Alexa

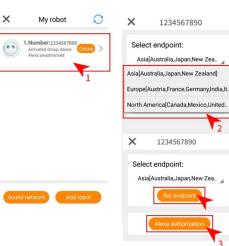

08

4.Log in to your Amazon account  
5.Long press the paste code,click to continue  
6.Click Alexa authorize

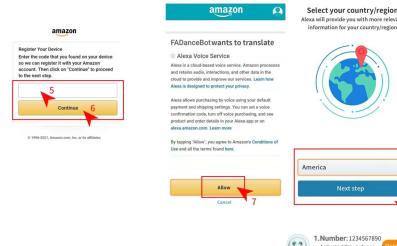

09

### Common problem

| Abnormal phenomenon   | Analyze the reasons   | Solution  |
|---|---|---|
| Robot does not respond to commands<br>(No singing/no dancing no response to conversation) | Check if the network is connected<br>(No connection is shown as a yellow light)<br>Whether the network signal is good | Connect Network<br>switch to another network with a stronger signal |
| No response after the robot is turned on  | Check if the robot has power  | Please charge   |

Note: if the above problems cannot be solved, please contact the manufacturer. Non-professionals are forbidden to disassemble by themselves

### Matters needing attention

1.Do not allow children or pets to swallow or bite robots or other small objects.  
2.If there is electromagnetic interference during operation, please change the site for operation.  
3.Keep away from fire, Do not store in hot and humid places;

10

### Instructions for safe use of batteries

1.This product uses USB to charge.Built-in non-removable rechargeable polymer battery, Rated working conditions: DC5V, 1A adult charging required  
2.This product uses non-replaceable batteries, Do not remove the battery forcibly.  
3.This product charging should be operated by adults, Charging cords are not toys and should be kept away from children  
4.Do not open the product forcibly to avoid potential harm  
5.When the robot is fully charged, it can continue charging for about 30 minutes, and the robot will trickle charging to extend the battery life

### Basic parameters

| Product name       | Educational robot - The climber |
|--------------------|---------------------------------|
| Rated input        | 5.0V-1.0A                       |
| Battery capacity   | 1600mAh                         |
| Storage capacity   | 8M Byte                         |
| Product material   | ABS                             |
| Product Size       | 111X188X94mm                    |
| Product net weight | 0.35kg                          |

11

12

13

14

15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.