


Set Up Guide

► wireless charger

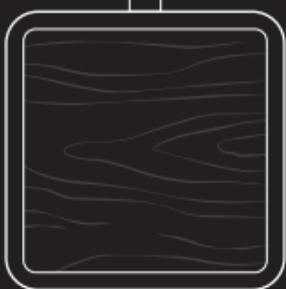


HOW TO CONNECT

Centre your device with the wireless charger to align the induction coils and start charging.

Thank you for your order and
welcome to the Joy Resolve
community



www.joyresolve.com
@joyresolve

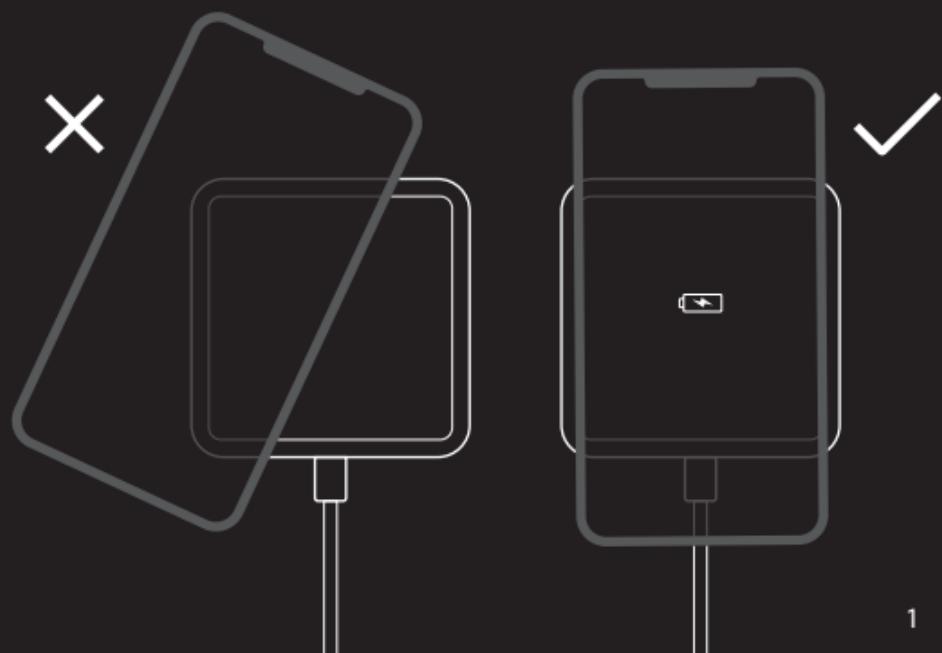

LED COMMS

The wireless charger uses the front LED to communicate when it connects, disconnects or has problems connecting to your devices.

LIGHT	ACTION
3 White Flashes, 10 sec.	Charger plugged into power
White, 10 sec.	Device connection successful
White, 10 sec.	Device disconnected
Flashing Red	Error, remove foreign object detected

For any issues, please check frequently asked questions on www.joyresolve.com/FAQ

PRODUCT CARE



For a long product lifespan, please keep the charger out of wet, humid and hot environments and avoid disassembly and taking it outside



Wood grain may vary. We use 100% real timber for all our chargers, so each charger has a wood grain as unique as your finger print.

SPECIFICATIONS

Wireless Charger

FCC ID: 2AZG4-JRWIRELESSCH

Input: DC 5V/2A,9V/2A,12V/1.5A

Output: DC 5V/1A,DC 9V/1.1A

Power: 5W/7.5W/10W(Max)

Compatible with all Qi enabled devices

USB-A to USBC cable included

Wall charger/plug not included

Model: JR-CHARG-BLKVAL or JR-CHARG-WHTRUB

INSTRUCTION

When charging your device make sure your device is compatible. If the case is metal, remove prior to charging. If you are having issues charging, remove your phone case.

Plug the USB-C into the Charging Pad and the USB-A into a plug with a USB port.

Place it on a sturdy and flat surface, such as a desk or table

Place the device directly onto the middle of the Charger Pad.

Charging time will depend on the type of device. Your device will display the charging progress. You may remove your device from the Charger Pad at any time during the charging process. For the benefit of your phone battery health, try not to charge to 100% or over night, we recommend charging to around 80% to maintain good battery health.

IMPORTANT SAFETY

Failure to follow the safety instructions can lead to fire, electrical shock, personal injury or property damage or damage to this product.

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source and direct sunlight.
- Do not expose the unit to extremely high or low temperatures.
- Use the product in a location with a temperature of 32°F

- Do not handle the unit or USB cord with wet hands.
- Do not let the dust or other things accumulate on the product and USB cord
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- If you have an electrical device, such as a pacemaker, consult a physician before using this product.
- Do not place magnetic cards or similar items near this product.
- Use the specified power source and voltage.
- Do not use a voltage converter
- Make sure the wall charger is inserted all the way into the electrical outlet. When not in use, unplug the wall charger
- Place the unit on a sturdy and flat surface during charging.
- Keep the unit out of reach of children.

CUSTOMER SERVICE

If you have any questions about using the Wireless Charger 10, please contact us on info@joyresolve.com

2-year limited warranty. Joy Resolve warrants the included hardware product and accessories against defects in materials and workmanship for two years from the date of original retail purchase. Joy Resolve does not warrant against normal wear and tear, or damage caused by accident or abuse.

All products and software mentioned in this document are registered brands belonging to the relevant brand owner. Subject to errors. ©2020 Joy Resolve Ltd. All rights reserved.

Joy Resolve ® is a registered trademark of Joy resolve Ltd. All trademarks and registered trademarks are the property of their respective owners. Subject to changes in technical specifications.

EXCLUSIVE LIABILITY

This product has been designed and manufactured to meet International safety standards but, like any electrical equipment, care must be taken for safety to be assured.

Joy Resolve Ltd shall under no circumstances be liable for any loss and/or damage caused by: fire; earthquake; accidental damage; intentional misuse of the product; use of the product in improper conditions; loss and/or damage caused to the product whilst in the possession of a third party; any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual; any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment. Furthermore, under no circumstances shall Joy Resolve Ltd be liable for any consequential loss and/or damage including but not limited to the following: loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product. The information in the operation manual can be changed without prior notice.

The manufacturer offers no promise or guarantee, either implicit or explicit, as to the accuracy

COMPLIANCE

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for WPT device:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15cm surrounding the device and 20 cm above the top surface of the device must be respected.

When the product reached its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your production and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Get in touch with Joy Resolve for help or further information.

Wireless Charger

FCC ID: 2AZG4- JRWIRELESSCH

Model Number: JR-CHARG-BLKVAL / JR-CHARG-WHTRUB



JK