

Effects channel



EFFECTS SENDS SIGNAL MAIN CONTROL (FX)

Adjusts the total volume of the effect sends bus signals sent to the console's internal effects processor and output.

DELAY TIME SPAN OF THE EFFECTS PROCESSOR (DELAY)

Adjusts the length of the time span between each echo in the effector to simulate the reverb effects of spaces of different sizes.

REPEATS

Adjusts the times and depth of the echoes of the effector.

PAN

This has a function which distributes the signal level between left and right channels to make a stereo sound effect.


PFL

When you want to monitor echo sound & external effector sound, you can adjust this control through the headphone.

EFFECTS FADE

These are used for adjusting the volume of signal sources, which are connected to the relevant channels.

AUX / TAPE / PHONES

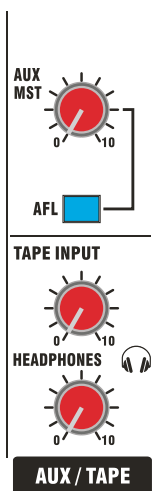

AUX SEND

Adjusts the volume from the output jack of the AUX SEND channel in order to match the external devices. .

AFL

When you want to monitor echo sound & external effector sound, you can adjust this control through the headphone.


TAPE input Level

Adjusts the volume of a 2-track device or CD replay to the main channel L/R .

PHONES LEVEL

Adjusts the volume of the monitor headphone. Use a proper volume to avoid the damage to your hearing.

Main mix & Meter

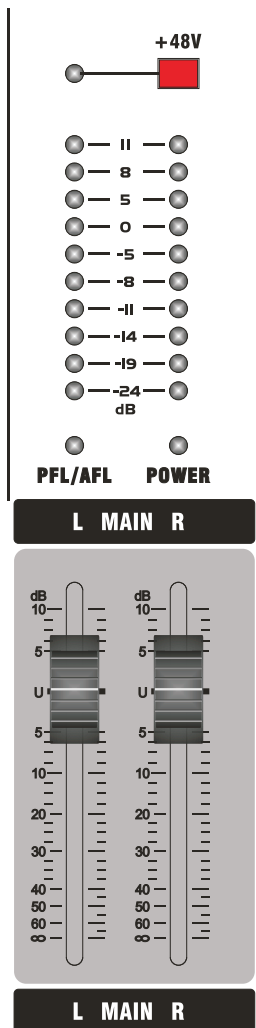

+48V Phantom Power Switch

+48VDC switch supplies power to the channel's XLR input, providing power for the microphone requiring phantom power or DI-BOX. The power currents are restrictive, providing power to the XLR socket's pin 2 and pin 3 of the mono input channel via 6k8 ohm resistors.

Warning: When selecting phantom power, do not connect unbalanced sources or cables to the input. To avoid big clicking sound, mute the channel when turning on or off the +48V power.

Main Level Meters

In normal condition, it shows the output level of the main mix signals. When any channel's PFL/AFL button is pressed down, it switches to show the signal level of that channel.


Working Condition Indicator

POWER: Power indicator. It lights to show working starts

PFL/AFL: Monitoring condition indicator. When the light turns on, the console is under the monitoring condition, with the main level meters showing the signal level of the monitor channel, and the channel signal is monitored from the headphone monitor output.

FADER: Adjusts the output level of the main mix, providing a normal boost from 0dB to +10dB.

BLUETOOTH & MP3 PLAYER

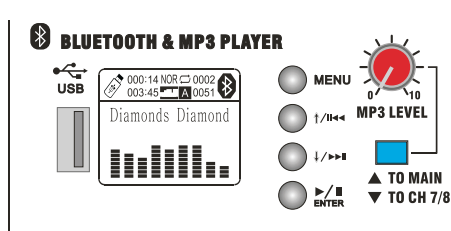

MENU

The main menu key, press lightly to enter the multi-level settings.

MP3 LEVEL

Backward/Last One selection key;

TO MAIN

Fast forward/Next One selection key;

ENTER

PLAY, PAUSE, and ENTER keys.


MP3 LEVEL

Adjusts the main volume of the playing MP3 player.

PLAYER ROUTE

When the key is up, the MP3 playing signal will go directly to the main channel L/R outputs. When it's down, the signal is sent to the CH 7/8 channel processing. At this time, the CH 7/8 channel input jack cannot be occupied. Thus, the output signal from the MP3 player can go into the CH 7/8 channel for processing and be redirected to various output ends.

Main output sections

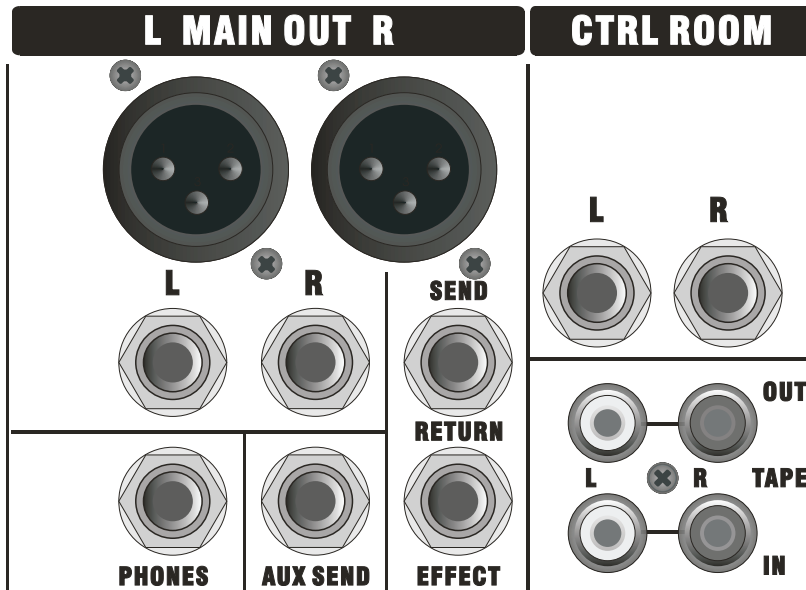

L OUT/R OUT

The console's main mix output is XLR & JACK. L and R output usually sends signals to the indoor PA (public address) system for live sound mixing, or to a 2-track recorder for studio mixing.

CTRL ROOM OUT

Unbalanced TRS output is post-level and post monitor-signal. These jacks are used for sending signals to the local speakers or other monitor systems.

PHONES

Unbalanced TRS jack. You can insert a headset, listening on a local monitor output. We recommend that you use closed headphones of 30 to 600 ohm impedance. Please note: Adjust the volume to avoid hearing damage

AUX SENDS OUT

Unbalanced TRS jack outputs AUX SEND AUX signals, which is for sending to monitor, effects devices such as echo and delay, and special mixing requirements.

EFFECT SEND

These are to be connected with external digital reverb & effect equipment.


EFFECT RETURN

These are to be connected with external digital reverb & effect equipment.

TAPE IN and OUT

RCA input and output connects popular recording and playing equipment, such as CD, MiniDisc, computer and cassette player. The rated line level is -2dBu. 2-track sends are normally post-fader and after LR mix, regardless of how the setting of mode switching is. 2-track returns can be used for monitoring mono or stereo recording, or serve as a simple input of replay content and background music.

Rear panel function

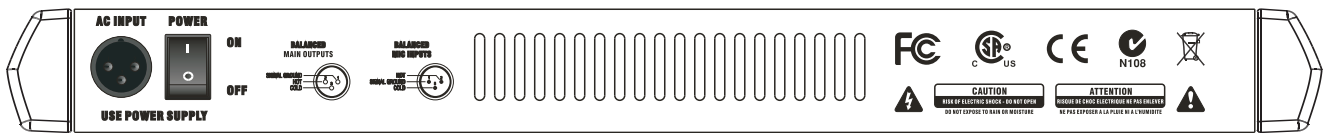

Power Connection and Power Switch

The pure mixer varieties use external power adaptor for power supply. Before connecting the power, make sure the power voltage of the power adaptor equipped with this console is in conformity with the local electrical voltage. When the power switch of this console is at "off " position, all devices after this console should be at "off " position.

After you plug the power adaptor properly to the power input socket of this console, you should screw the nut going with the plug tightly and firmly. Only use the power adaptors equipped or approved by our company.

Specifications

Maximum input level	MIC +24dBu Line +24dBu
Maximum output level	XLR +26dBu TRS +20dBu
Master meters	10 segment -24dB to CLIP
Channel meters	1 LED signal indication
Frequency response	20Hz to 30KHz 0.5dB
CMRR (MIC 1kHz)	>75dB
THD+N	<0.01% (Channel to mix out)
Crosstalk at 1kHz	Fader shutoff >85dB Mute shutoff >85dB
Noise, rms 22Hz to 22KHz	EIN -122dBu Residual output noise <-90dBu
MONO EQ	LF, shelving, +/-15dB, 12KHz HM, peak/dip, +/-15dB, 2.5KHz LF, shelving, +/-15dB, 80Hz
Mono channel	XLR balanced, pin 2 hot, 2K ohm, Sensitivity -60 to +10 dBu TRS balanced, tip hot, 10K ohm, Sensitivity -40 to +10 dBu XLR, phantom +48V
2-track return	RCA, unbalanced, 4K ohm, -2 dBu
2-track send	RCA, unbalanced, <75 ohm, -2 dBu
L/R output	XLR balanced, pin 2 hot, <75 ohm, +4 dBu, Max. +22 dBu
FX/AUX output	TRS unbalanced, tip hot, <75 ohm, -2 dBu, Max. +18 dBu
Headphones	TRS, tip L, ring R, 30 to 600 ohm headphones recommended
Max. Power input power	15watts

We are committed to continuously improving the quality of our products. Specifications are subject to change without prior notice.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.