

**FAMILY POCKET**  
ファミリーレトロクラシック

**Wireless TV Stick**

**MANUAL** ENG

Includes 8 SIMULATOR GAMES 5000+  
4K ULTRA HD

32BIT SIMULATOR FULL SPEED 70 FRAMES

ITEM NO.: HDV-100HD

FC-2R-(P1) FC-2R-(P2)

2.4G HOPPING 4K HD DOWNLOAD OPEN SOURCE SAVE...

**FUNCTION DIAGRAM**

The image below shows the location of the output jacks and keys, as well as the function of each jack and key. (The illustration is for reference only)

**HOW TO CONNECT HDV-100HD TO TV OR PROJECTOR?**

1.1 HD:HDMI edition type:  
Plug the HDV-100's HDMI male into the HDMI Female on TV or Projector. (PIC1 shows an example)  
Then the honeycomb window will turn in solid green. (PIC2 shows an example)

PIC1

PIC2

1.2 HD:AV edition type:  
Connect the AV2.5mm cable between HDV-100's and TV or Projector. (PIC3 and PIC4 shows an example)

PIC3

PIC4

**INCLUDED IN THIS PACKAGE**

Wireless TV Stick 1pcs  MANUAL 1pcs  
 DOUBLE WIRELESS PAD 2pcs  USB CABLE 1pcs

Note: HDMI version does not have USB cable and AV cable

1.3 Connect the Micro USB cable from HDV-100 USB POWER INPUT port into TV/Projector's USB port. (PIC5 shows an example.)

PIC5

If your TV/Projector is without USB port, please use your mobile phone AC adaptor to supply the power.

1.4 Press the Input or Source button on your Remote to switch the input source to the HDMI port, if you have more than one HDMI port, ensure to select the right HDMI port. (PIC6 shows an example.)

PIC6

**NOTE:**  
Depending on the TV remote control being used, press the TV FUNCTION button or move the TV/VIDEO switch to the TV position. The location of the Input button on your remote and the Input or TV/VIDEO button, you can switch video inputs using the same procedure above.  
For model-specific information, refer to your TV supplied operations manual.

**Please charge in the following situations:**

**LED INDICATOR:**

**How to start the game?**  
After setting up, please use P1 controller to start the game

**How to reset/exit the game?**  
Press P1 controller "menu" buttons for 2-3 seconds

**Game progress save and load setting**  
This function is only valid in the game running state. In the game state, triggered "MENU" key. Enter the game setting interface.  
game setting function: "BACK GAME" "SAVE (I)" "LOAD (I)" "QUIT"  
When setting the function, "D-PAD" key menu selects, "A" key confirms, "B" key returns and exits  
**NOTE:**  
Game progress save and load function, max save up to 5 starting points.

HDV-100说明书210\*150MM 80g简板双面彩印过亚胶，机折四页



150.00 mm

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment