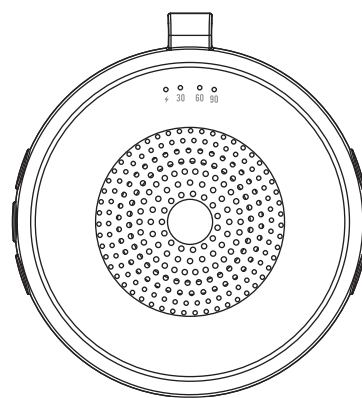 
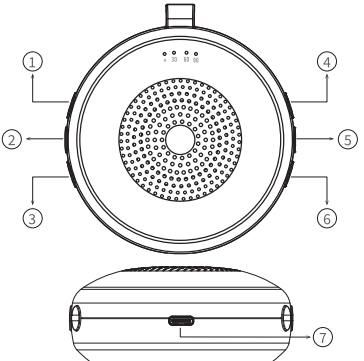 
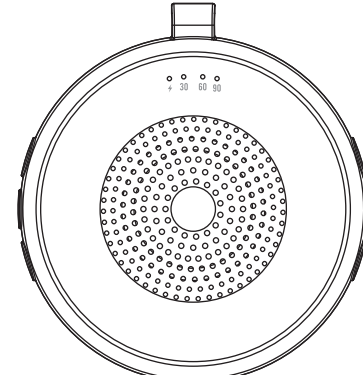 
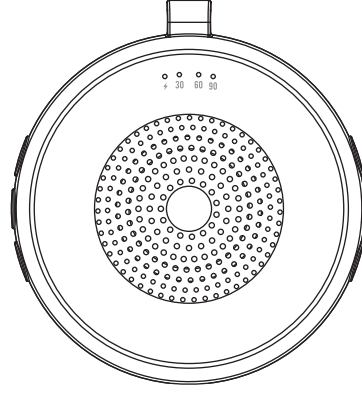 
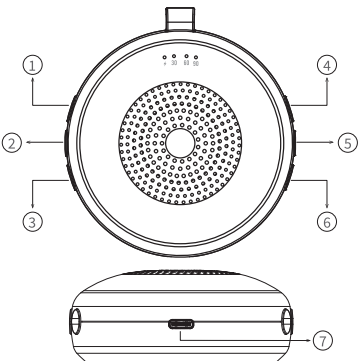 
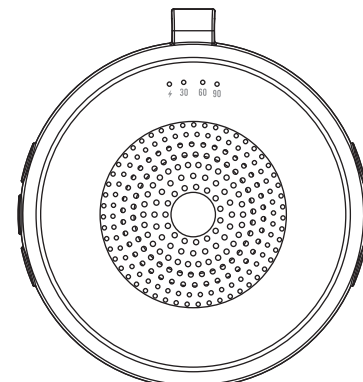 


420X170MM-风琴折-5折6页再对折70X85MM

SOUND MACHINE White Sleep Sound Machine  USER GUIDE MODEL NO.: SA36	Product Function 🔊 White Noise: Including 12 sounds. Short press to switch sound sources in turn. * The sound sources in order are: Brown noise, pink noise, White noise, Rain, Ocean waves, Brook, Field crickets, Fire,Thunder, Baby heart monitor, Shusha, and Brahms' Lullaby. ⌚ Timer: Choose uninterrupted work allnight or use 30,60 & 90 minutes sleeping setting. ☼ Warm White Light: Six Adjustable Brightness Level. EN	Operation 1 2 3 4 5 6 7  In nature sound music mode,short press On/OFF key enter the wireless speaker mode. EN <td> Preparatory steps 1. Unpack the product. 2. This machine is powered by the DC 5V USB port. 3. Connect the USB cable to the backside of the unit and connect into a 5V adapter. (Please don't use 9V/12V/24V charger for this unit) Listening to Nature Sounds 1. Press and hold "⏏" for a few seconds. 2. Press the relevant icon to select the sound you want to hear. You can turn the sounds off by long-press the icon. 3. To adjust the volume, press the ⏮ or ⏭ to the desired level. 4. When finished listening to the sounds, you may turn them off by long-pressing the ⏏. EN </td> <td> Wireless Speaker 1. Press the ON/OFF key to turn on the speaker, if in wireless speaker mode, it will give a notification : Wireless Speaker. 2. Go to your mobile's settings page and pair the Sleep Sound Machine. After connecting, you will see a notification confirming the connection. 3. Enjoy the music from your mobile phone. Timer Function The default mode is uninterrupted playback, after activate the timer button, it will be: 1. On 30 minutes mode, countdown for 30 minutes playing. 2. On 60 minutes mode, countdown for 60 minutes playing. 3. On 90 minutes mode, countdown for 90 minutes playing. Using the Light 1. White light: Six Gear Positions Brightness Press the ☼ to turn the white light on. If you need adjust the brightness, in the white light mode, press ☼ again to choose the desired brightness level. The White light can be turned off by long press. EN </td> <td> Recharging the battery 1. Plug the Type-C USB cable to the USB port. 2. The power indicator will light up when charging. 3. When the charging is finished, the charging light will disappear. Package Contents 1 × Sound Machine (Built-in rechargeable battery) 1 × Type -C Charging Cable 1 × Owner's Manual Note: Use 5V charging head available to connect the provided cable for charging the battery. EN </td>	Preparatory steps 1. Unpack the product. 2. This machine is powered by the DC 5V USB port. 3. Connect the USB cable to the backside of the unit and connect into a 5V adapter. (Please don't use 9V/12V/24V charger for this unit) Listening to Nature Sounds 1. Press and hold "⏏" for a few seconds. 2. Press the relevant icon to select the sound you want to hear. You can turn the sounds off by long-press the icon. 3. To adjust the volume, press the ⏮ or ⏭ to the desired level. 4. When finished listening to the sounds, you may turn them off by long-pressing the ⏏. EN	Wireless Speaker 1. Press the ON/OFF key to turn on the speaker, if in wireless speaker mode, it will give a notification : Wireless Speaker. 2. Go to your mobile's settings page and pair the Sleep Sound Machine. After connecting, you will see a notification confirming the connection. 3. Enjoy the music from your mobile phone. Timer Function The default mode is uninterrupted playback, after activate the timer button, it will be: 1. On 30 minutes mode, countdown for 30 minutes playing. 2. On 60 minutes mode, countdown for 60 minutes playing. 3. On 90 minutes mode, countdown for 90 minutes playing. Using the Light 1. White light: Six Gear Positions Brightness Press the ☼ to turn the white light on. If you need adjust the brightness, in the white light mode, press ☼ again to choose the desired brightness level. The White light can be turned off by long press. EN	Recharging the battery 1. Plug the Type-C USB cable to the USB port. 2. The power indicator will light up when charging. 3. When the charging is finished, the charging light will disappear. Package Contents 1 × Sound Machine (Built-in rechargeable battery) 1 × Type -C Charging Cable 1 × Owner's Manual Note: Use 5V charging head available to connect the provided cable for charging the battery. EN
Important Safeguards - To protect from electrical shock, do not immerse cord, plug or unit in water or other liquid. Care should be taken so that objects do not fall on and liquids are not spilled through openings in the unit. - Do not operate with a damaged cord or plug, or the unit will be malfunctioned. - The unit should keep away from heat sources such as direct sunlight, radiators, heat registers, stoves or other heat-producing appliances. - To clean, gently wipe with a soft cloth moistened with warm water or mild detergents only, and then remove all moisture with a soft, dry cloth. Do not use harsh solvents or chemicals for cleaning. EN	Declaration of Conformity This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations. Disposal  Meaning of the “Dustbin” Symbol - Protect our environment: do not dispose of electrical equipment in the domestic waste. - Please return any electrical equipment that you will no longer use to the collection points provided for their disposal. - This helps avoid the potential effects of incorrect disposal on the environment and human health. - This will contribute to the recycling and other forms of reutilisatio of electrical and electronic equipment. EN	CAUTION: Batteries/rechargeable batteries must not be disposed of with household waste! - The batteries must be removed from the appliance. - Take spent batteries to the appropriate collection point or to a dealer. - Your town or local authority can provide information about public collection points. This symbol can be found on batteries/rechargeable batteries which contain hazardous:  - Pb = contains lead - Cd = contains cadmium - Hg = contains mercury - Li = contains lithium EN	This device complies with part 15 of the FCC Rules. Operation is subject to thefollowing two conditions: (1) This device may not cause harmful interference, (2) this device must accept any interference received, including interference that may causeundesired operation. Any Changes or modifications not expressly approved by the party responsible forcompliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class Bdigital device, pursuant to part 15 of the FCC Rules. These limits are designed toprovide reasonable protection against harmful interference in a residential installation.This equipment generates uses and can radiate radio frequency energy and, if notinstalled and used in accordance with the instructions, may cause harmful interferenceto radio communications.However, there is no guarantee that interference will notoccur in a particular installation. EN	If this equipment does cause harmful interference toradio or television reception, which can be determined by turning the equipment off andon, the user is encouraged to try to correct the interference by one or more of thefollowing measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which thereceiver is connected. -Consult the dealer or an experienced radio/TV technician for help. RF waming for Potable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conition without restriction.  CE FC RoHS MODEL: SA36 MADE IN CHINA EN	

正面

SOUND MACHINE White Sleep Sound Machine  USER GUIDE MODEL NO.: SA36	Funciones del producto ⏮ Ruido Blanco: Incluye 12 sonidos. Con una pulsación breve se cambia de fuente de sonido en orden. * Las fuentes de sonido en orden son: Ruido pardo, ruido rosa, ruido blanco, Lluvia, Olas del océano, Arroyo, Grillos del campo, Fuego, Trueno, Monitor cardíaco para bebé, Chistido y Canción de cuna de Brahms. ⌚ Función de temporizador para dormir: Elige la reproducción ininterrumpida durante toda la noche o utiliza el temporizador de 30, 60 y 90 minutos. ☼ Luz blanca cálida: Seis niveles de brillo ajustables. ES	Operation 1 2 3 4 5 6 7  In nature sound music mode,short press On/Off key enter the wireless speaker mode. ES	Pasos previos 1. Desempaqueta el producto. 2. Este dispositivo se alimenta a través del puerto USB DC 5V. 3. Conecta el cable USB al lado posterior de la unidad y conéctalo a un adaptador de 5V. (Por favor, no utilices cargadores de 9V/12V/24V para este dispositivo). Escuchar sonidos de la naturaleza 1. Presiona y sostén "⏏" durante 2 segundos. 2. Presiona el icono correspondiente para seleccionar el sonido que deseas escuchar. Puedes apagar los sonidos presionando el icono durante mucho tiempo. 3. Para ajustar el volumen, presiona ⏮ o ⏭ hasta el nivel deseado. 4. Cuando hayas terminado de escuchar los sonidos, puedes apagarlos presionando ⏏ durante mucho tiempo. ES	Altavoz inalámbrico 1. Presiona la tecla ON/OFF para encender el altavoz. Si estás en modo de altavoz inalámbrico: se mostrará una notificación "Wireless Speaker". 2. Ve a la página de configuración de tu móvil y empareja el Sleep Sound Machine. Después de la conexión, se mostrará una notificación "conectado". 3. Disfruta de la música desde tu teléfono móvil. Función del temporizador El modo predeterminado es la reproducción ininterrumpida. Después de activar el botón del temporizador, será: 1. En el modo de 30 minutos, cuenta atrás para 30 minutos de reproducción. 2. En el modo de 60 minutos, cuenta atrás para 60 minutos de reproducción. 3. En el modo de 90 minutos, cuenta atrás para 90 minutos de reproducción. Uso de la luz 1. Luz blanca: Seis posiciones de brillo ajustable. Presiona ☼ para encender la luz blanca. Si necesitas ajustar el brillo, presiona ☼ de nuevo para elegir el nivel deseado. La luz blanca se puede apagar presionando durante mucho tiempo. ES	Recarga de la batería 1. Conecta el cable USB Type-C al puerto USB. 2. El indicador de energía se encenderá durante la carga. 3. Cuando la carga esté completa, la luz de carga desaparecerá. Contenido del paquete 1 × Máquina de sonidos (con batería recargable incorporada) 1 × Cable de carga USB 1 × Manual del usuario Nota: Utiliza un cargador de 5V disponible para conectar el cable proporcionado y cargar la batería. ES
Precauciones importantes - Para proteger contra las descargas eléctricas, no sumerjas el cable, el enchufe o la unidad en agua u otros líquidos. Toma precauciones para que los objetos no caigan sobre ella y los líquidos no se derramen a través de las aberturas de la unidad. - No operes con un cable o enchufe dañado, de lo contrario, la unidad se malfunctionará. - Mantén la unidad alejada de fuentes de calor como la luz directa del sol, radiadores, registros de calor, estufas u otros electro domésticos que produzcan calor. - Para limpiar, frotar suavemente con un paño suave humedecido con agua tibia o detergente suave, y luego eliminar toda la humedad con un paño suave y seco. No utilice solventes agresivos o productos químicos para la limpieza. ES	Declaration of Conformity This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations. Disposal  Meaning of the “Dustbin” Symbol - Protect our environment: do not dispose of electrical equipment in the domestic waste. - Please return any electrical equipment that you will no longer use to the collection points provided for their disposal. - This helps avoid the potential effects of incorrect disposal on the environment and human health. - This will contribute to the recycling and other forms of reutilisatio of electrical and electronic equipment. ES	CAUTION: Batteries/rechargeable batteries must not be disposed of with household waste! - The batteries must be removed from the appliance. - Take spent batteries to the appropriate collection point or to a dealer. - Your town or local authority can provide information about public collection points. This symbol can be found on batteries/rechargeable batteries which contain hazardous:  - Pb = contains lead - Cd = contains cadmium - Hg = contains mercury - Li = contains lithium ES	This device complies with part 15 of the FCC Rules. Operation is subject to thefollowing two conditions: (1) This device may not cause harmful interference, (2) this device must accept any interference received, including interference that may causeundesired operation. Any Changes or modifications not expressly approved by the party responsible forcompliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class Bdigital device, pursuant to part 15 of the FCC Rules. These limits are designed toprovide reasonable protection against harmful interference in a residential installation.This equipment generates uses and can radiate radio frequency energy and, if notinstalled and used in accordance with the instructions, may cause harmful interferenceto radio communications.However, there is no guarantee that interference will notoccur in a particular installation. ES	If this equipment does cause harmful interference toradio or television reception, which can be determined by turning the equipment off andon, the user is encouraged to try to correct the interference by one or more of thefollowing measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which thereceiver is connected. -Consult the dealer or an experienced radio/TV technician for help. RF waming for Potable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure conition without restriction.  CE FC RoHS MODEL: SA36 MADE IN CHINA ES	

背面