

Quikcell

Factory Instructions | Wireless Party Speaker mini Quick Start Guide



CHARGING YOUR SPEAKER


Plug micro-USB into Party Speaker and USB into a compatible port (such as a wall charger, car charger, or computer). LED indicator light will be RED while charging and goes off when fully charged.

Conecta el micro-USB en Party Speaker y el USB en un puerto compatible (como un cargador de pared, un cargador de automóvil o una computadora). La luz indicadora LED será ROJA durante la carga y se apagará cuando esté completamente cargada.

**USB charging port not included*

**Puerto de carga USB no incluido*

STEP 1

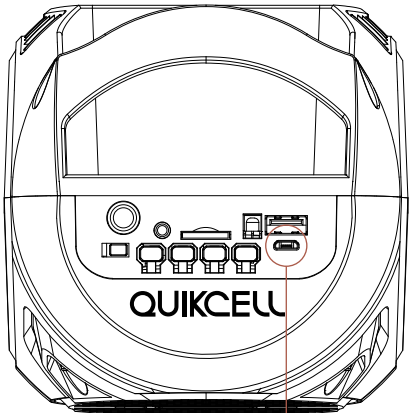

Micro-USB Charging Port

PAIRING YOUR DEVICE

On the top of your Party Speaker mini slide the ON/OFF switch to ON. Your LED lights will begin flashing and you will hear "The Bluetooth device is ready to pair." In your devices Bluetooth settings look for "PARTY MINI" to appear as an option and select. You will then hear "Bluetooth device paired successfully" to know your device has successfully paired.

En la parte superior de tu Party Speaker mini, desliza el interruptor de ENCENDIDO/APAGADO a la posición de ENCENDIDO. Las luces LED comenzarán a parpadear y escucharás "El dispositivo Bluetooth está listo para emparejarse". En la configuración de Bluetooth de tus dispositivos, busca "PARTY MINI" para que aparezca como una opción y selección. A continuación, escucharás "dispositivo Bluetooth

STEP 2

emparejado correctamente" para saber que tu dispositivo se ha emparejado correctamente!

FCC Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RFI exposure requirement. The device can be used in portable exposure condition without restriction.

BLAST THE SOUND!

Flip the switch on the Party Speaker mini to turn ON/OFF.

Mueve el interruptor del Party Speaker mini para encenderlo o apagarlo.

Use the ◀◀ and ▶▶ buttons to adjust volume, skip songs, or switch stations.

Usa los botones ◀◀ y ▶▶ para ajustar el volumen, saltar canciones o cambiar de estación.

Use the PLAY/PAUSE button to control music, answer, end or decline phone calls, scan FM stations, and enter/exit TWS pairing.

Usa el botón REPRODUCIR/PAUSA para controlar la música, contestar, finalizar o


STEP 3

rechazar llamadas telefónicas, escanear estaciones de FM e ingresar/salir del emparejamiento TWS.

LIGHT UP!


Easily turn your light show ON/OFF by long pressing your Mode button.

Enciende/apaga fácilmente tu espectáculo de luces presionando prolongadamente el botón Modo.

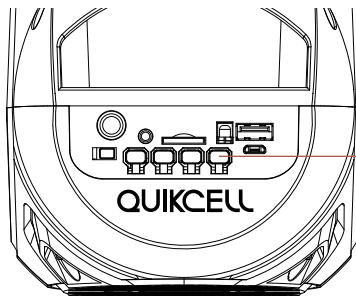

Mode Button

STEP 4

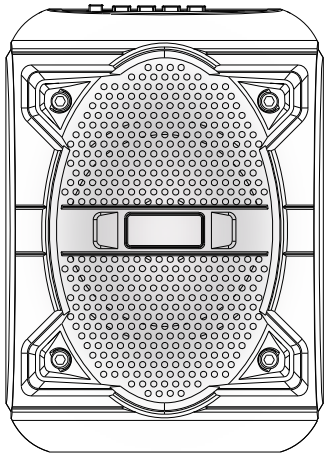

SPECIFICATIONS

Dimensions (w x h x d): 5 x 7 x 5 in

Dimensiones (ancho x alto x profundidad): 5 x 7 x 5 pulgadas

Music Operating Time: 16 H (at 50% volume)

Tiempo de funcionamiento de la música: 16 h (al 50% del volumen)

Phone Operating Time: 16 H (at 50% volume)

Tiempo de funcionamiento del teléfono: 16 h (al 50% del volumen)

Charging Time: 3-4 H

Tiempo de carga: 3 a 4 horas

Bluetooth Standard: JL V5.0

Estándar de Bluetooth: JL V5.0

Operation Range: 32 ft

Rango de operación: 32 pies

Voltage: DV 5V

Voltaje: DV 5V

Output Power: 5W

Potencia de salida: 5W

Battery Type: Lithium Ion 1200mAh

Tipo de batería: Ion de litio 1200mAh


WHAT'S INSIDE

1 Portable Wireless Speaker


Altavoz Inalámbrico Portátil

2 Micro-USB Charging Cable

Cable de Carga Micro-USB

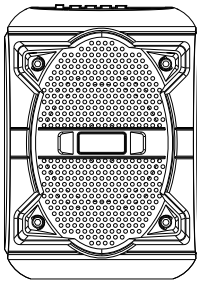


1

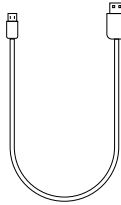

2

HEADPHONE CONTROLS

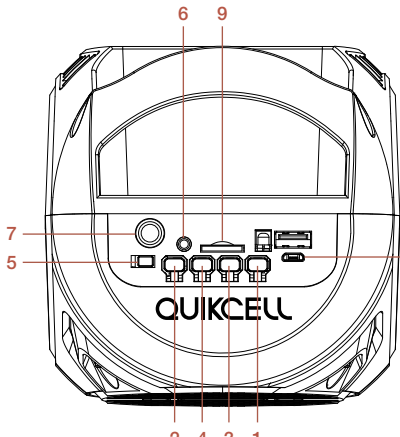


2

4

3

 1

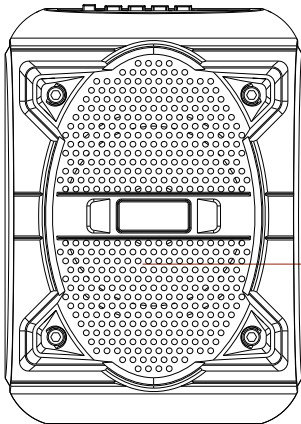

10

1. Mode [M] Button

- Short Press = switching between BT, line-in, and FM connections
- Long Press = LED lights on/off

1. Botón de modo [M]

- Pulsación corta = cambiar entre conexiones BT, line-in y FM
- Pulsación larga = luces LED encendidas/apagadas

2. ◀◀ Button

- Long Press = decrease volume
- Short Press = skip to previous song, or play radio station when in FM mode

2. Botón ◀◀

- Pulsación larga = bajar el volumen
- Pulsación corta = saltar a la canción anterior o reproducir la estación de radio cuando está en modo FM

3. ▶▶ Button

- Long Press = increase volume
- Short Press = skip to previous song or play previous radio station when in FM mode

3. Botón ▶▶

- Pulsación larga = subir el volumen
- Pulsación corta = saltar a la canción anterior o reproducir la estación de radio anterior cuando está en modo FM

4. [Play, Pause, Answer] Button

- Short Press = play/pause music & answer phone calls, scan FM stations
- Double Press = enter/exit TWS pairing

4. Botón [Reproducir, Pausar, Responder]

- Pulsación corta = reproducir/pausar la música y contestar llamadas telefónicas, buscar estaciones de FM
- Doble pulsación = entrar/salir del emparejamiento TWS

5. [ON/OFF] Switch

5. Interruptor [ENCENDIDO/APAGADO]

6. AUX-In Jack

6. Conector de entrada auxiliar

7. Microphone Input

7. Entrada del micrófono

8. Micro-USB Charging Port

8. Puerto de carga Micro-USB

9. TF Card Port

9. Puerto de tarjeta TF

11. LED Light Show Light

11. Luz LED para espectáculo de luces

FLIP OVER →

Notes

- L x W x H = 3in x 3in
- Paper Color: matte Off White (Same as package color)
- Paper Weight: Card Stock 100lb
- Z-fold Brochure



© 2021 – Designed and Submitted by Alpha Comm
April 5, 2021 – V1