

# Instruction Manual



Wireless Charger  
E30

## Product Introduction

E30 can be used in homes, offices, hotels and more places. It can wirelessly charge mobile phones or other electronic devices that support the Qi standard, and the charging is stable. Different charging methods allow you to enjoy the wonderful life brought by infinite technology.

## Installation Steps

### 1

#### Connect adapter

 
Plug in the power adapter and power on the wireless charger



### 2

#### Put the phone on the E30

The phone starts charging



## Specifications

Input: 12V1.5A  
Output: 10W (MAX)

Size:  $\phi 110 \times 10\text{mm}$

## Safety Tips

1. Do not pull the power cord forcibly to avoid breaking or falling off the power cord.
2. Do not disassemble the E30 by yourself or throw it into fire or water to avoid short-circuit leakage.
3. Do not use E30 in severe high temperature, humid or corrosive environment to avoid leakage of electricity due to damage to the circuit.

## Precautions

1. Please use a power adapter that supports QC2.0 and above protocols, otherwise it may cause unstable charging.
2. Do not place metal debris or magnetic cards on the product, which may cause damage or the charger will not work.
3. During use, if the receiving coil or the transmitting board is overheated to stop charging, please remove the charging device and try again after cooling down.

## FAQ

1. The wireless charging speed is relatively slow.

The mobile phone itself or the external receiving coil allows the wireless charging current to be different, or the application running consumes a lot of power when the mobile phone is charging. It is recommended to reduce or close the application.

2. Charging will heat up.

It is normal that the receiving coil or the transmitting board generates heat during the wireless charging process. It is recommended to adjust the charging position.

3. The wireless charging of the mobile phone does not work, and the host buzzer does not sound.

The installation method of the host is wrong or the wireless charging position of the mobile phone is wrong, please check the installation or place the mobile phone in the center of the product.

4. The host is installed correctly, the phone is placed in the correct position, the buzzer of the host does not ring when the power is on, and the phone does not charge.

5. If the host is faulty, contact after-sales maintenance.

## Product After-sales Guide

Thank you for purchasing our E30 wireless charger. In order to ensure you get reliable after-sales service, please read the following warranty instructions carefully.

## Warranty Scope

The product fails to work normally or malfunctions during normal use, and can enjoy our company's after-sales service commitment after being certified by our company.

The following conditions are not covered by the warranty:

1. The accessories are not warranted;
2. Failure due to improper operation by the user;
3. Failures caused by accidental disasters, man-made damage, self-disassembly, unpacking, and repairs by non-authorized maintenance centers of the company;

## Extended Service

If the product exceeds the warranty period, the customer still enjoys maintenance service, but the maintenance cost, material cost, etc. are required.

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC RF exposure statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.