

# Joha®

---

## 2x6.5" WIRELESS SPEAKER

---



Model # Joha-2065

**Instruction Manual**  
Instrucciones en español incluidas



# WARNING!

**Please read this manual carefully before using the product.  
Keep it in a safe place for future reference.**

- a.** There are high voltage zones inside this unit that can cause injuries. Please do not open the unit. In case of technical failure, please contact the authorized service center.
- b.** Never place the unit in the rain or in moist zones so as to avoid a fire or an electric shock.
- c.** This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
- d.** If technical maintenance is required, please contact the authorized service center.
- e.** If the supply cord is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

## CAUTION

- a.** Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets.
- b.** Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays. Use only a soft, damp cloth.
- c.** To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for a long time.
- d.** Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid on the speaker.

The Speaker is not a toy. Please keep it out of the reach of young children.

Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact \*Call2Recycle" at 877-273-2925 or online at [\\*call2Recycle.org\\*](http://call2Recycle.org) for a battery recycling drop off location near you.



**BATTERY CAUTION:** Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



**It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.**



## **WIRELESS**

Press MODE button on the unit or the remote control until Wireless is selected.

1. Have cell phone close by.
2. Activate the Wireless features on your cell phone so that the cell phone starts to search for the Wireless device.
3. Select the correct model No. from the device found by the cell phone.
4. Shortly press PLAY/PAUSE button to play or pause music. Short press “  ” or “  ” key to select the previous or next track.

## **LINE IN MODE:**

Press MODE button on the unit or the remote control until LINE is Selected. Play the music of the device connected to the LINE input.

## **USB/Micro-SD Mode:**

1. After start up, press MODE to select “USB/Micro-SD” and insert the USB/Micro-SD device. The unit will automatically read and play the music in the USB/Micro-SD device.
2. Press “  ” key shortly to play or pause.
3. Shortly press “  ” key to the previous song.
4. Shortly press “  ” key to the next song.

## **FM Mode**

Press MODE button on the unit or the remote control until FM is selected.

Long press “Play/Pause” button to auto-search all stations among frequency 87.5MHz-108MHz. After few minutes, the searching will be finished and you could press “next” or “previous” button to switch stations. Station you choose will be memorized. When enter mode next time, is saved.

Short press

“  ” or “  ” key to select the previous or next station.

## **LINE IN MODE:**

Press MODE button on the unit or the remote control until LINE is Selected. Play the music of the device connected to the LINE input.

## ***Microphone***

Insert a microphone(6.35mm) to the mic jack to enter mic function

## TWS FUNCTION

- (1) TWS connection: TWS Connection is only for two speakers.
- (2) Turn on the Speakers , press the MODE button to switch to Wireless connection mode.
- (3) Double short press one unit's TWS button (pause button), then the two speakers will connected as a pair.
- (4) Connect the phone: Open the phone Wireless connection settings, Search and Connect the main device to Wireless named "Joha-2065"
- (5) Select music from phone and enjoy TWS playing in pairs with two Speakers.
- (6) Exit TWS: Double short press one unit's TWS button (pause button), then TWS be cancelled

## REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Mode Button: Toggle between USB,Micro-SD,FM, AUX, Wireless
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track:Select next channel
7. EQ: Select EQ mode
8. VOL-:Reduce the master volume
9. VOL+: Increase the master volume
10. REPE: Repeat the playing track
11. Press to scan channel in FM mode
- 12-21. KEY Number for selecting the certain track for USB flash drive or Micro-SD card.



Battery:2400 mAh rechargeable battery

Charging: DC 5.0V/1A

2x6.5" Woofer

Charging time:3-4 hours

Included

-Speaker

-Microphone

-Remote Control

-USB Charging Cable

-User Manual

## **LIMITED WARRANTY**

Cowboy World Corp, warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of Cowboy World Corp. The warranties described herein shall be the sole and exclusive

Warranties granted by Cowboy World Corp and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Cowboy World Corp to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of Cowboy World Corp be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Manufactured By:  
Cowboy World Corp  
28 W 27th St, New York, NY 10001  
Tech Support  
[sales@cowboyworldcorp.com](mailto:sales@cowboyworldcorp.com)

## **Return Instructions**

If your speaker malfunctions during the warranty period of one calendar year (90 days for battery), contact our customer service department [sales@cowboyworldcorp.com](mailto:sales@cowboyworldcorp.com) to obtain troubleshooting information. If troubleshooting assistance fails to remedy the problem, you will receive a return authorization # and instructions for sending your unit to our Service Center. Your return authorization number must be clearly visible and placed on the outside of box when the unit is returned.

Enclose a copy of your original proof of purchase showing the original purchase date, along with detailed information describing the exact nature of your problem. Be sure to include your complete name, address, email address, daytime and evening contact numbers. In addition, please send a check or money order made payable to "Cowboy World Corp" for return freight amount (given to you by our service agents). All of the above must be included with your return, or your package will not be eligible for service under our warranty.

The customer is responsible for packing the speaker in it's original carton or equivalent, and for insuring, and shipping the unit to our service center. Please make sure to pack all accessories included with your speaker so that we can properly identify any issues. All freight cost to return the unit to Cowboy World Corp., are the responsibility of the customer. If your speaker is under warranty, then Cowboy World Corp. will at its sole discretion, exchange or repair the speaker without charge for parts and labor. The customer is responsible for return freight and should include a check or money order payable to "Cowboy World Corp" with your return for the return freight amount. Any shipments received without a Return Authorization number will be refused. For more details please contact our customer service department.

Send product:

Cowboy World Corp

28 W 27th St, New York, NY 10001

Tech Support

[sales@cowboyworldcorp.com](mailto:sales@cowboyworldcorp.com)

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV/technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard.FOR HOME OR OFFICE USE.

**Warning:** This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

© 2021 Cowboy World Corp All rights reserved.