

| 平面印刷品基本技术要求      |                       |      |               |
|------------------|-----------------------|------|---------------|
|                  |                       |      |               |
| 设计：傅姜卫           | 日期：2022.01.24         | 物料名称 | 说明书           |
| 尺寸：A5(145*210mm) | 材质：105g 哑粉纸 +105g 哑粉纸 | 产品型号 | ZJ2120        |
| 页数：80p           | 印刷颜色：黑白印刷             | 物料编码 | 451-2120-0700 |
| 比例：1:1           | 装订方式：骑马钉              | 版次   | A00           |
|                  |                       |      |               |



# **INSTRUCTION MANUAL**

**MANUAL DE INSTRUCCIONES**  
**MANUEL D'INSTRUCTIONS**

**yeedi vac 2**

# Contents

|                                    |    |
|------------------------------------|----|
| 1. Package Contents .....          | 8  |
| 2. Operating and Programming ..... | 9  |
| 3. Maintenance .....               | 16 |
| 4. Indicator Light.....            | 21 |
| 5. Troubleshooting.....            | 22 |
| 6. Product Specifications .....    | 26 |

## IMPORTANT SAFETY INSTRUCTIONS

### READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

### SAVE THESE INSTRUCTIONS

For Household use only

When using an electrical appliance, basic precautions should always be followed, including the following:

**WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire or serious injury.

1. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
2. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
3. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
4. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
5. Please make sure your power supply voltage matches the power voltage marked on the Docking Station.
6. Do not handle plug or appliance with wet hands.
7. Non-rechargeable batteries are prohibited.
8. Do not use without dust bin and/or filters in place.
9. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
10. Do not use and store in extremely hot or cold environments (below -5°C /23°F or above 40°C/104°F). Please charge the robot in temperature above 0°C/32°F and below 40°C/104°F.
11. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
12. Do not operate the Appliance in a room where an infant or child is sleeping.
13. For INDOOR use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments. Do not use Appliance on wet surfaces or surfaces with standing water.

14. Do not allow the Appliance to pick up large objects like stones, large pieces of paper or any item that may clog the Appliance.
15. Do not use Appliance to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.
16. Do not use Appliance to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
17. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
18. Take care not to damage the power cord. Do not pull on or carry the Appliance or Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance over the power cord. Keep power cord away from hot surfaces. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
19. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
20. Do not use the Docking Station if it is damaged.
21. Do not use with a damaged power cord or plug. Do not use the Appliance or Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
22. Turn OFF the power switch before cleaning or maintaining the Appliance. Turn off all controls before unplugging.
23. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.
24. Remove the Appliance from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
25. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
26. Please dispose of used batteries according to local laws and regulations.
27. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in a fire.
28. When not using the Docking Station for a long period of time, please unplug it.

29. The Appliance must be used in accordance with the directions in this Instruction Manual. ECOVACS ROBOTICS cannot be held liable or responsible for any damages or injuries caused by improper use.
30. Prevent unintentional starting. Ensure the switch is in the off position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
31. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
32. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
33. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
34. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
35. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
36. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
37. Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
38. Place the cords from other appliances out of the area to be cleaned.
39. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
40. Do not allow children to sit on the vacuum.
41. Use only as described in this manual. Use only manufacturer's recommended attachments.

42. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
43. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
44. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.
45. If the robot will not be used for a long time, fully charge the robot and power OFF for storage and unplug the Docking Station.
46. To Reduce The Risk Of Electric Shock – Do not use on wet surfaces. Do not expose to rain. Store indoors.
47. To Reduce The Risk Of Injury From Moving Parts – Unplug Before Servicing.
48. Risk Of Injury. Brush May Start Unexpectedly. Unplug Before Cleaning or Servicing.
49. To reduce the risk of injury, user must read instruction manual.
50. To Reduce The Risk Of Electric Shock – Do not use outdoors or on wet surfaces.

|                                                                                     |                     |
|-------------------------------------------------------------------------------------|---------------------|
|    | Direct current      |
|  | Alternating current |

This Device Complies with DHHS Radiation Rules, 21CFR Chapter 1, Subchapter J.

## Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a

circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

## RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

MPE caution (for mobile device under Part 15.247 & 15.407 device)

To satisfy FCC&ICRF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation.

 
To ensure compliance, operations at closer than this distance is not recommended.

To disable Wi-Fi module on DEEBOT, power the robot ON. Place the robot on the Docking Station making sure the Charging Contacts on DEEBOT and the Docking Station Pins make a connection. Press and hold the AUTO Mode Button on the robot for 20 seconds until DEEBOT emits 3 beeps. To enable Wi-Fi module on DEEBOT, power the robot OFF and then power ON. The Wi-Fi module is turned on when DEEBOT is restarted.


This Device Complies with DHHS Radiation Rules, 21 CFR Chapter 1, Subchapter J.



# 1. Package Contents/1.1 Package Contents

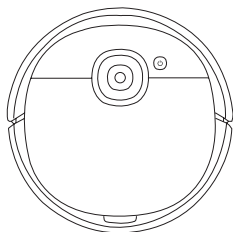


Robot

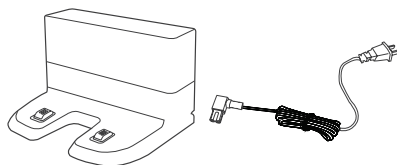 

Docking Station



 
Edge Brush

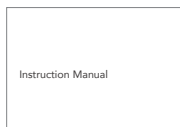

Instruction Manual



 Washable Mopping Pad



Mopping Pad Plate



**Note:** Figures and illustrations are for reference only and may differ from actual product appearance. Product design and specifications are subject to changes without notice.

\* Oscillating Mopping kit is sold separately .



Explore more accessories at <https://www.yeedi.com>.

# 1. Package Contents/1.2 Product Diagram

  
## Robot

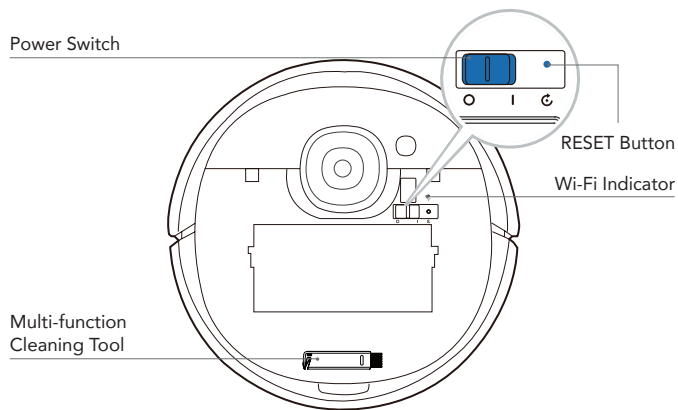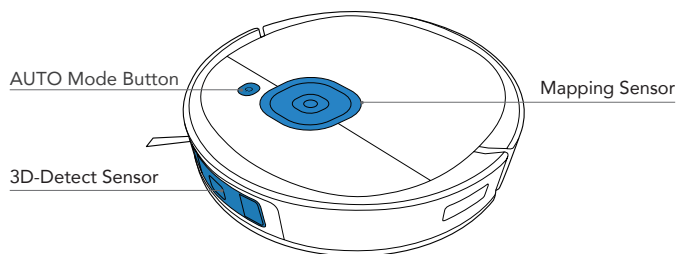


## Bottom View

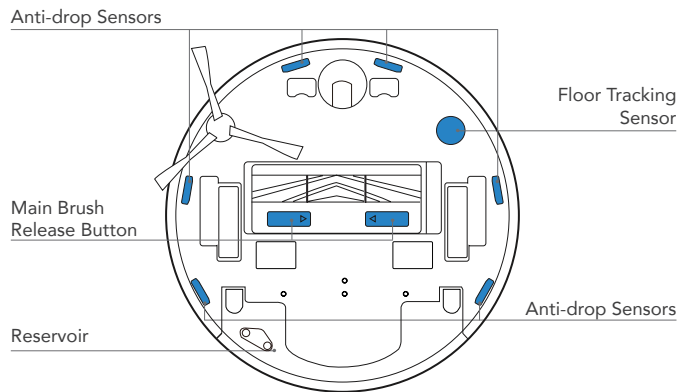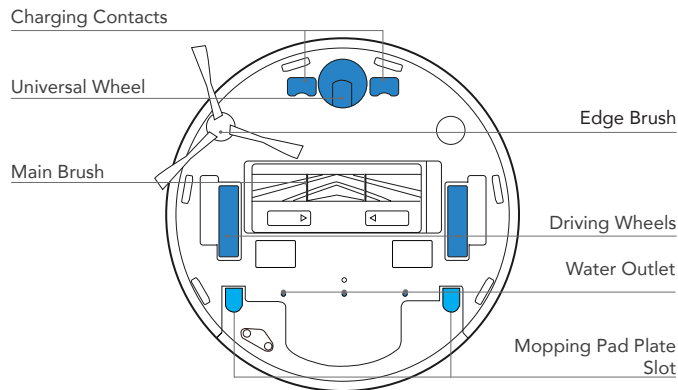  


## Dust Bin

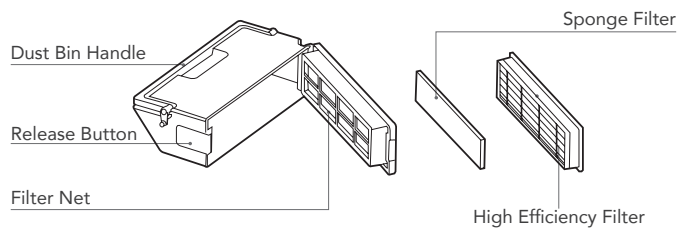 

## Docking Station

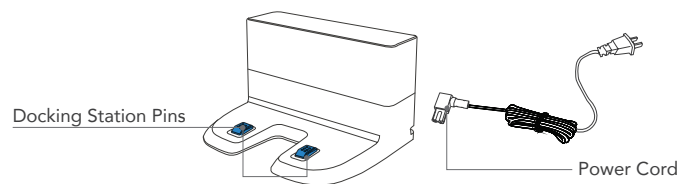 


## Reservoir

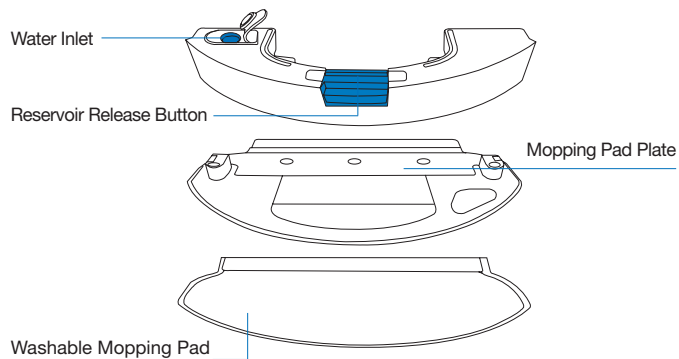 


## 2. Operating and Programming/2.1 Notes Before Cleaning

 
Tidy up the area to be cleaned by putting furniture, such as chairs, in their proper place.

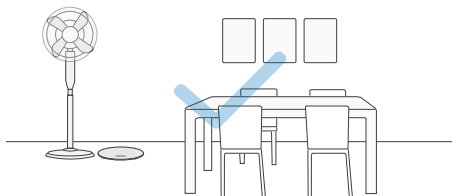

 During the first use, make sure each room door is open to help Robot fully explore your house.

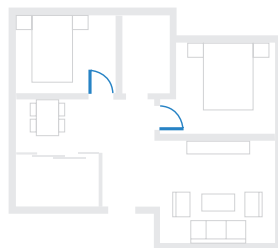

 It may be necessary to place a physical barrier at the edge of a drop to stop the unit from falling over the edge.

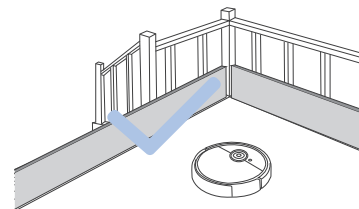

Put away objects including wires, cloths and slippers, etc. on the floor to improve the cleaning efficiency.



Before using the product on a rug with tasseled edges, please fold the rug edges under.




Please do not stand in narrow spaces, such as hallways, and make sure not to block the Detection Sensor.


## 2. Operating and Programming/2.2 Preparation

 Please remove all protection materials on Robot and Docking Station before use.


### 1 Assemble Docking Station

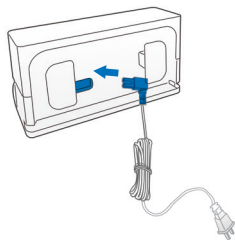


### 2 Docking Station Placement

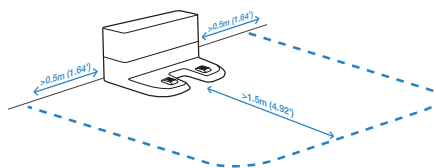 


### 3 Install Edge Brush

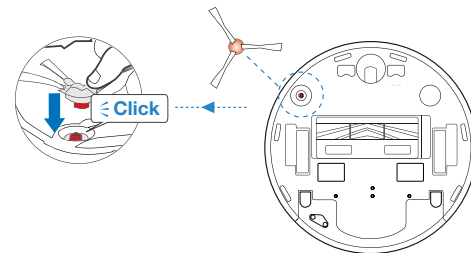 

### 4 Power ON

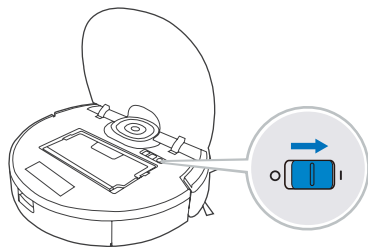 

### 5 Charge Robot

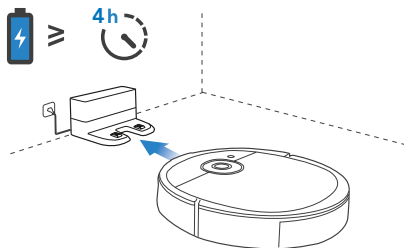 


**Note:** When Robot completes the cleaning cycle or when the battery gets low, Robot automatically returns to the Docking Station to recharge itself. Robot can also be sent back to the Docking Station at any time by using the yeedi App or by pressing the AUTO Button on the robot for 3 seconds.  
Empty remaining water from the Reservoir and remove the Mopping Pad Plate before charging Robot.

## 2. Operating and Programming/2.3 yeedi App

 To enjoy all available features, it is recommended to control your Robot via the yeedi App.

**Before you start, make sure that:**

- Your mobile phone is connected to a Wi-Fi network.
- The 2.4GHz band wireless signal is enabled on your router.
- The Wi-Fi indicator light on Robot is slowly flashing.

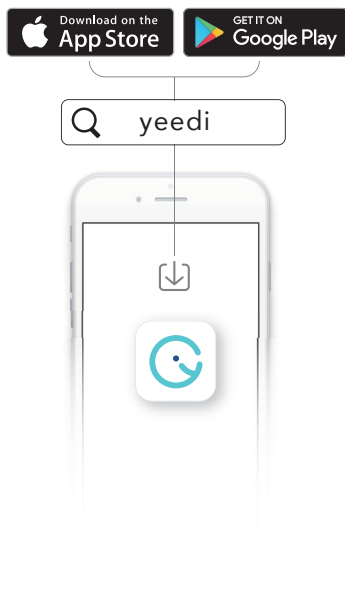

**Wi-Fi Indicator Light**

|                                                                                   |                  |                                                       |
|-----------------------------------------------------------------------------------|------------------|-------------------------------------------------------|
|  | Slowly flashing  | Disconnected to Wi-Fi or waiting for Wi-Fi connection |
|                                                                                   | Rapidly flashing | Connecting to Wi-Fi                                   |
|                                                                                   | Solid            | Connected to Wi-Fi                                    |

### Tips:

 
If you have any problems during the Wi-Fi setup process, refer to the Troubleshooting > Wi-Fi Connection section in this manual.

## 2. Operating and Programming/2.4 Start, Pause, Wake Up, Power Off


During the first cleaning:

Please supervise Robot and assist it should there be a problem.

### 1 Start

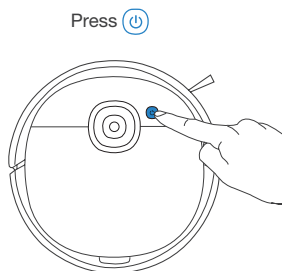


### 3 Wake Up

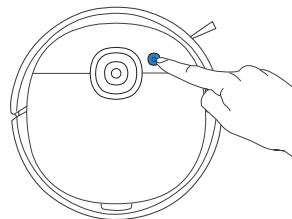 


Press the **AUTO** button on Robot to wake it up

### 2 Pause

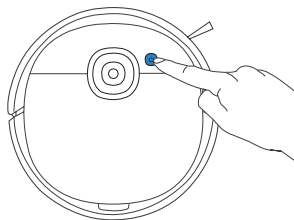 

### 4 Power OFF

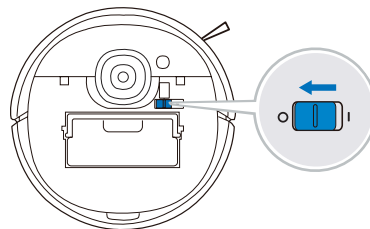 


**Note:** The robot's Control Panel stops glowing after the robot is paused for a few minutes. Press the **AUTO** Mode Button on Robot to wake it up.

**Note:** When Robot is not working, it is recommended to keep it switched ON and charging.

## 2. Operating and Programming/2.5 Mopping System
 
### Note:


1. To prolong the service life of the reservoir, it is recommended to use purified water or softened water for the mopping system.
2. If you need to clean the carpet, please uninstall the Mopping Pad Plate first.
3. Empty the reservoir after Robot finishes mopping.

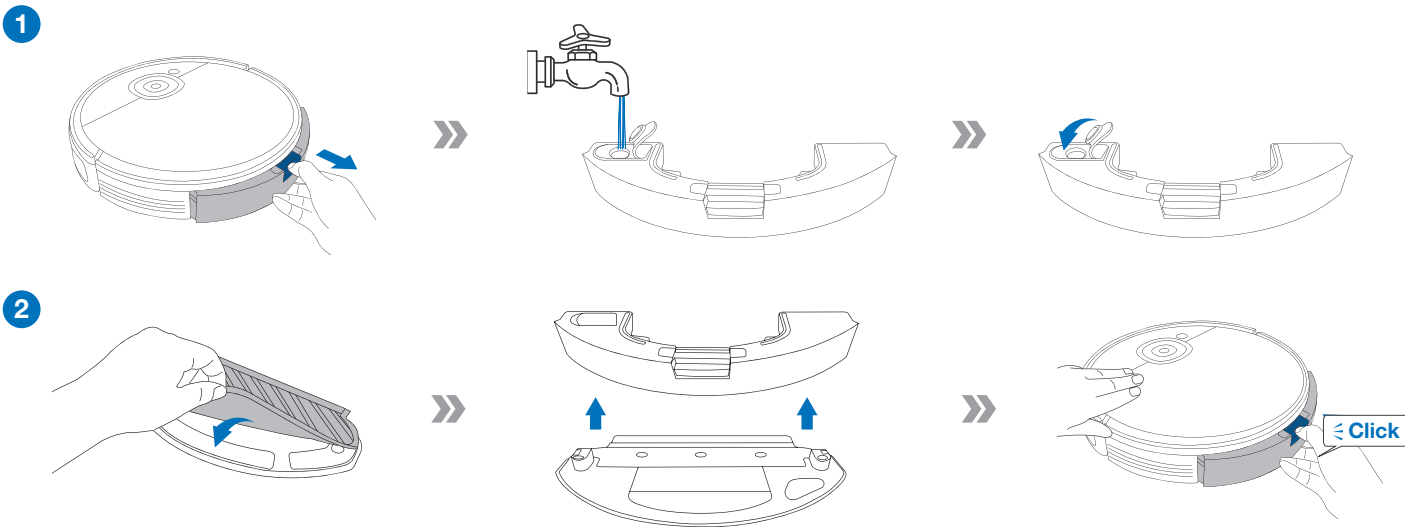




## 3. Maintenance/3.1 Mopping System

 Before performing cleaning and maintenance tasks on Robot, turn the robot OFF and unplug the Docking Station.

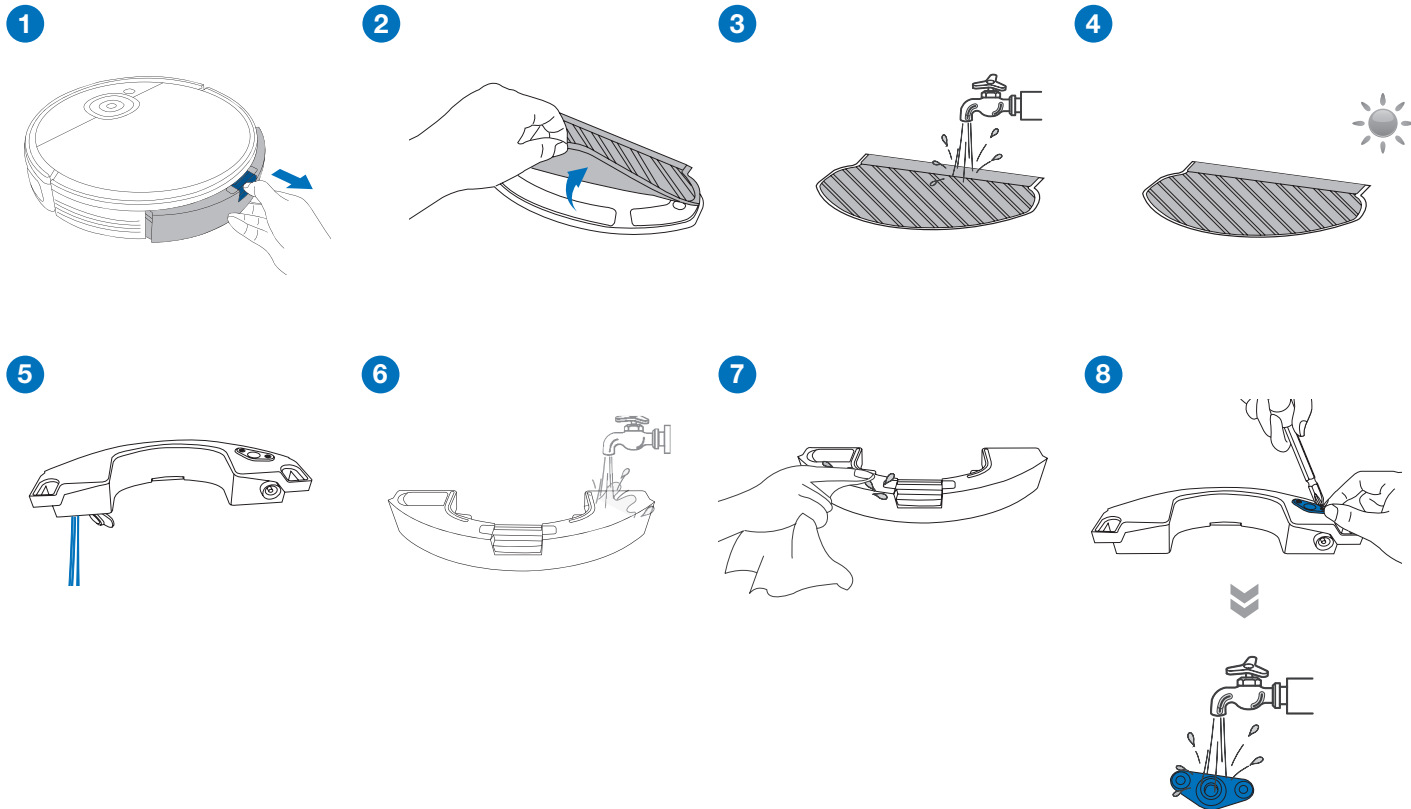


### 3. Maintenance/3.2 Dust Bin and Filters

 
1

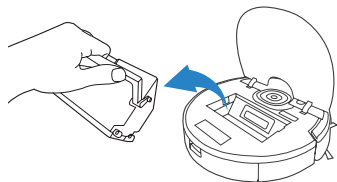


4

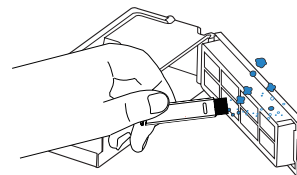 


2

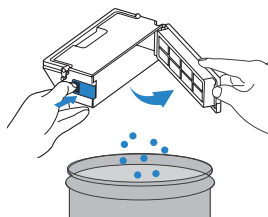 


5

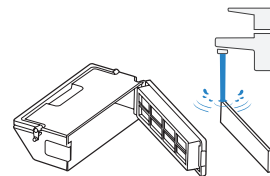 


6

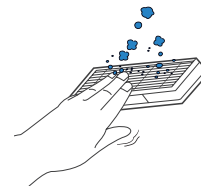 

3

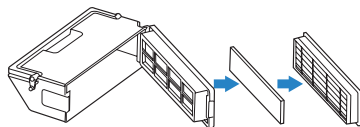 

7

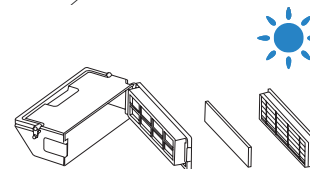 


**Note:** 1. Please rinse the filter with water as shown above. 2. Do not use finger or brush to clean the filter. 3. Be sure to dry out the filter for at least 24 hours after washing.


### 3. Maintenance/3.3 Main Brush, Edge Brush and Mapping Sensor

 **Note:** A Multi-Function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.


#### Main Brush

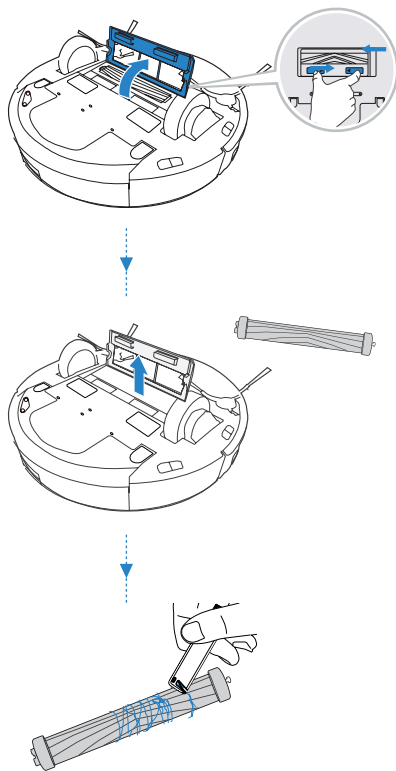





#### Edge Brush

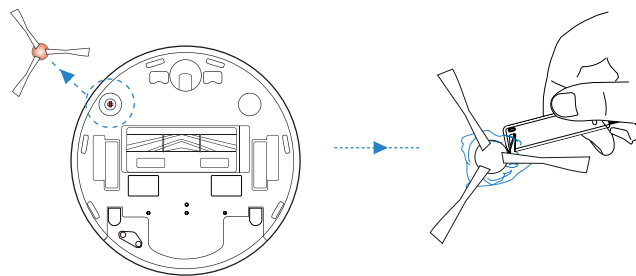 

#### Mapping Sensor

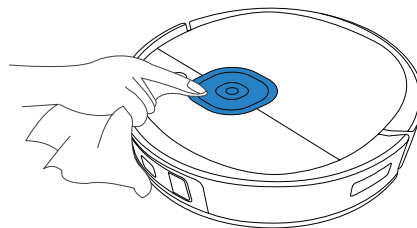 

## 3. Maintenance/3.4 Other Components

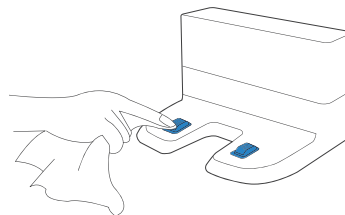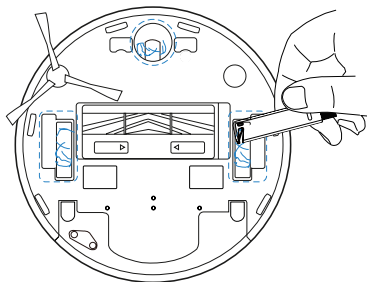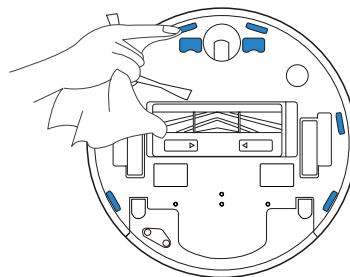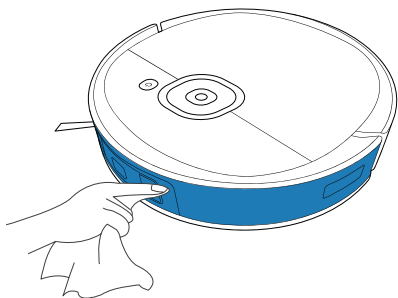    

**Note:** Before cleaning the robot's Charging Contacts and Docking Station Pins, turn the robot OFF and unplug the Docking Station.

### 3. Maintenance/3.5 Regular Maintenance

To keep Robot running at peak performance, perform maintenance tasks and replace parts with the following frequencies:

| Robot Part                                                                                                                     | Maintenance Frequency | Replacement Frequency |
|--------------------------------------------------------------------------------------------------------------------------------|-----------------------|-----------------------|
| Washable Mopping Pad                                                                                                           | After each use        | Every 50 washings     |
| Reservoir/Mopping Pad Plate                                                                                                    | After each use        | /                     |
| Edge Brush                                                                                                                     | Once every 2 weeks    | Every 3-6 months      |
| Main Brush                                                                                                                     | Once per week         | Every 6-12 months     |
| Sponge Filter/High Efficiency Filter                                                                                           | Once per week         | Every 3-6 months      |
| 3D-Detect Sensor<br>Universal Wheel<br>Anti-Drop Sensors Bumper<br>Mapping Sensor<br>Charging Contacts<br>Docking Station Pins | Once per week         | /                     |

**A multi-function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.**

**Note:** yeedi manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.

## 4. Indicator Light

### Robot

Robot will tell you something is wrong with an indicator light and voice report. More detailed support is available through the yeedi app and online website.

| Indicator Light                       | Scenario                            |
|---------------------------------------|-------------------------------------|
| AUTO Mode Button glows a solid WHITE. | The robot is cleaning.              |
|                                       | The robot is paused while cleaning. |
| AUTO Mode Button flashes WHITE.       | The robot is charging.              |
|                                       | The robot is starting.              |
|                                       | The robot is relocating.            |
| AUTO Mode Button glows a solid RED.   | The robot has low battery.          |
| AUTO Mode Button flashes RED.         | The robot has a problem.            |

## 5. Troubleshooting/5.1 Troubleshooting

| No. | Malfunction                                             | Possible Causes                                                 | Solutions                                                                                                                                                               |
|-----|---------------------------------------------------------|-----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | Robot is not able to connect to the home Wi-Fi network. | Incorrect home Wi-Fi username or password entered.              | Enter the correct home Wi-Fi username and password.                                                                                                                     |
|     |                                                         | Robot is not within range of your home Wi-Fi signal.            | Make sure Robot is within range of your home Wi-Fi signal.                                                                                                              |
|     |                                                         | Network setup started before Robot was ready.                   | Turn ON Power Switch. Press the RESET Button for 3 seconds. Robot is ready for network setup when it plays a musical tune and its Wi-Fi Indicator light flashes slowly. |
| 2   | Robot is not charging.                                  | Robot is not switched ON.                                       | Switch ON Robot.                                                                                                                                                        |
|     |                                                         | Robot has not connected to the Docking Station.                 | Be sure that the robot's Charging Contacts have connected to the Docking Station Pins.                                                                                  |
|     |                                                         | The Power Cord is not connected to the Docking Station.         | Make sure the Power Cord is firmly connected to the Docking Station.                                                                                                    |
|     |                                                         | The battery is completely discharged.                           | Re-activate the battery. Switch ON. Place Robot on the Docking Station by hand, remove after charging for 3 minutes, repeat 3 times; then charge normally.              |
|     |                                                         | Make sure the Docking Station is connected to the power supply. | The Docking Station is not connected to the power supply.                                                                                                               |

| No. | Malfunction                                                           | Possible Causes                                                                                                                          | Solutions                                                                                                     |
|-----|-----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| 3   | Robot cannot return to the Docking Station.                           | The Docking Station is not correctly placed.                                                                                             | Refer to section 2.2 to correctly place the Docking Station.                                                  |
|     |                                                                       | The Docking Station is disconnected or moved.                                                                                            | Please check if the Docking Station is connected to power. Do not move the Docking Station manually.          |
|     |                                                                       | Robot is working in a dark environment.                                                                                                  | Make sure to use Robot in a well illuminated environment.                                                     |
|     |                                                                       | Robot is paused for more than 60 minutes.                                                                                                | Avoid pausing Robot for over 60 minutes.                                                                      |
|     |                                                                       | Robot did not start cleaning from the Docking Station.                                                                                   | Make sure Robot starts cleaning from the Docking Station.                                                     |
| 4   | Robot returns to the Docking Station before it has finished cleaning. | Robot is working in a dark environment.                                                                                                  | Make sure to use Robot in a well illuminated environment.                                                     |
|     |                                                                       | When the battery gets low, Robot automatically switches to Return to Charger Mode and returns to the Docking Station to recharge itself. | This is normal. No solution necessary.                                                                        |
|     |                                                                       | Working time varies according to floor surface, room complexity and the Cleaning Mode selected.                                          | This is normal. No solution necessary.                                                                        |
|     |                                                                       | The cleaning area is not tidy.                                                                                                           | Remove small objects from the floor and tidy up the cleaning area before Robot starts cleaning.               |
| 5   | Robot gets stuck while working and stops.                             | Robot is tangled with something on the floor (electrical wires, curtains, Carpet fringing, etc.).                                        | Robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart. |
| 6   | Robot makes much noise when cleaning.                                 | The brushes are tangled, or the dust bin is stuck.                                                                                       | Clear the debris stuck regularly.                                                                             |



| No. | Malfunction                                                         | Possible Causes                                               | Solutions                                                                |
|-----|---------------------------------------------------------------------|---------------------------------------------------------------|--------------------------------------------------------------------------|
| 7   | The water is not coming out of the Reservoir when Robot is mopping. | The water inlet filter on the bottom of Reservoir is clogged. | Unscrew the water inlet on the bottom of Reservoir and clean the filter. |
|     |                                                                     | The Reservoir runs out of water.                              | Add water into the Reservoir.                                            |
|     |                                                                     | The water outlets on the bottom of Robot are clogged.         | Check the water outlets on the bottom and clean.                         |
| 8   | The reservoir drops out of place during cleaning.                   | The reservoir is not properly installed.                      | The reservoir is properly installed when it clicks into place.           |

## 5. Troubleshooting/5.2 Wi-Fi Connection

Before Wi-Fi setup, make sure Robot, mobile phone, and Wi-Fi network meet the following requirements.

### Robot and Mobile Phone Requirements

- Robot is fully charged and the power switch of Robot is turned on.
- Wi-Fi status light slowly flashes.
- Turn off mobile phone's cellular data (you can turn it back on after setup).

### Wi-Fi Network Requirements

- You are using a 2.4GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.

## 6. Product Specifications

|                              |                 |                              |                                  |                        |
|------------------------------|-----------------|------------------------------|----------------------------------|------------------------|
| <b>Model</b>                 | <b>YDVN21</b>   |                              |                                  |                        |
| Rated Input                  | 20V $\equiv$ 1A |                              |                                  |                        |
| <b>Docking Station Model</b> | <b>CH1822</b>   |                              | <b>CH1918 (Sold Separately)*</b> |                        |
|                              | Rated Input     | 100-240V $\sim$ 50-60Hz 0.5A | Rated Input                      | 120V $\sim$ 50-60Hz 8A |
|                              | Rated Output    | 20V $\equiv$ 1A              | Rated Output (Charging)          | 20V $\equiv$ 1A        |

Output power of the Wi-Fi module is less than 100mW.

**Note:** Technical and design specifications may be changed for continuous product improvement.

\* CH1918 is an Self-empty Station sold separately that automatically empties your Robot's dustbin.

Explore more accessories at <https://www.yeedi.com>.

# Contenido

|                                        |    |
|----------------------------------------|----|
| 1. Contenidos del paquete.....         | 34 |
| 2. Funcionamiento y programación ..... | 37 |
| 3. Mantenimiento .....                 | 42 |
| 4. Luz indicadora .....                | 47 |
| 5. Solución de problemas .....         | 48 |
| 6. Especificaciones del producto.....  | 52 |

# INSTRUCCIONES DE SEGURIDAD IMPORTANTES LEA TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE APARATO. GUARDE ESTAS INSTRUCCIONES

Solo para uso doméstico

Al usar un aparato eléctrico, siempre se deben seguir las precauciones básicas, incluidas las siguientes:

**ADVERTENCIA:** Lea todas las advertencias e instrucciones de seguridad. El incumplimiento de las advertencias e instrucciones puede provocar descargas eléctricas, incendios o lesiones graves.

1. No permita que se use como juguete. Es necesario prestar mucha atención cuando lo usan los niños o cuando se usa cerca de ellos.
2. Despeje el área que va a limpiar. Retire los cables de alimentación y los objetos pequeños del piso que podrían enredar el aparato. Coloque los flecos de la alfombra debajo de la base de la alfombra y levante elementos como cortinas y manteles del piso.
3. Si hay una caída en el área de limpieza

debido a un escalón o escaleras, debe operar el aparato para asegurarse de que pueda detectar el escalón sin caerse por el borde. Podría ser necesario colocar una barrera física en el borde para evitar que la unidad se caiga. Asegúrese de que la barrera física no sea un peligro de tropiezo.

4. Use únicamente como se describe en este manual. Utilice únicamente los accesorios recomendados o vendidos por el fabricante.
5. Asegúrese de que el voltaje de la fuente de alimentación coincida con el voltaje de alimentación marcado en la estación de acoplamiento.
6. No manipule el enchufe o el aparato con las manos mojadas.
7. Las baterías no recargables están prohibidas.
8. No lo use sin haber colocado el depósito para el polvo o los filtros.
9. No opere la aspiradora en un área donde haya velas encendidas u objetos frágiles en el piso que va a limpiar.
10. No use ni almacene en ambientes extremadamente calientes o fríos (por debajo de -5 °C/23 °F o por encima de 40 °C/104 °F). Cargue el robot a una temperatura superior a 0 °C/32 °F e inferior a 40 °C/104 °F.

11. Mantenga el cabello, la ropa suelta, los dedos y todas las partes del cuerpo lejos de cualquier abertura y partes móviles.
12. No opere el aparato en una habitación donde un bebé o un niño esté durmiendo.
13. SOLO para uso EN INTERIORES. No use el aparato en entornos exteriores, comerciales o industriales. No use el aparato sobre superficies mojadas o superficies con agua estancada.
14. No permita que el aparato recoja objetos grandes como piedras, trozos grandes de papel o cualquier artículo que pueda obstruir el aparato.
15. No use el aparato para recoger materiales inflamables o combustibles, como gasolina, tóner de impresora o copiadora, ni lo utilice en áreas donde puedan estar presentes estas sustancias.
16. No use el aparato para recoger nada que esté en llamas o encendido, como cigarrillos, fósforos, cenizas calientes o cualquier cosa que pueda causar un incendio.
17. No coloque ningún objeto en las aberturas. No lo use con ninguna abertura bloqueada; manténgalo libre de polvo, pelusas, cabello y cualquier cosa que pueda reducir el flujo de aire.
18. Tenga cuidado de no dañar el cable de alimentación. No tire ni transporte el aparato o la estación de acoplamiento por el cable de alimentación, no use el cable de alimentación como manija, no cierre una puerta del cable de alimentación ni tire del cable de alimentación alrededor de bordes o esquinas filosos. No pase el aparato sobre el cable de alimentación. Mantenga el cable de alimentación alejado de superficies calientes. No tire del cable para desconectar. Para desconectar, sujete la clavija, no el cable.
19. Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante o su agente de servicio para evitar un peligro.
20. No utilice la estación de acoplamiento si está dañada.
21. No lo utilice con un cable de alimentación o clavija dañado. No utilice el aparato o la estación de acoplamiento si no funcionan correctamente, si se han caído, dañado, si se dejaron al aire libre o si entraron en contacto con agua. Debe ser reparado por el fabricante o su agente de servicio para evitar un peligro.
22. Apague el interruptor de alimentación antes de limpiar o dar mantenimiento al aparato.

Apague todos los controles antes de desconectarlo.

23. La clavija debe retirarse del receptáculo antes de limpiar o mantener la estación de acoplamiento.
24. Retire el aparato de la estación de acoplamiento y apague el interruptor de alimentación del aparato antes de retirar la batería para desecharla.
25. La batería debe retirarse y desecharse de acuerdo con las leyes y reglamentaciones locales antes de desechar el aparato.
26. Deseche las baterías usadas de acuerdo con las leyes y reglamentaciones locales.
27. No incinere el aparato aunque esté muy dañado. Las baterías pueden explotar en el fuego.
28. Cuando no utilice la estación de acoplamiento durante un período prolongado, desconéctela.
29. El aparato debe utilizarse de acuerdo con las instrucciones de este manual de instrucciones. ECOVACS ROBOTICS no puede hacerse responsable de los daños y lesiones causados por uso inadecuado.
30. Evite el arranque accidental. Asegúrese de que el interruptor esté en la posición de apagado antes de conectarlo al paquete de

baterías, levantar o transportar el aparato. Cargar el aparato con el dedo en el interruptor o energizar el aparato con el interruptor encendido puede provocar accidentes.

31. Cuando el paquete de baterías no esté en uso, manténgalo alejado de otros objetos metálicos, como sujetapapeles, monedas, llaves, clavos, tornillos u otros objetos metálicos pequeños, que puedan hacer una conexión de un terminal a otro. Un cortocircuito entre los terminales de la batería puede causar quemaduras o un incendio.
32. En condiciones de abuso, líquido podría salir expulsado de la batería; evite el contacto. En caso de contacto accidental, enjuague con agua. Si el líquido entra en contacto con los ojos, busque ayuda médica. El líquido expulsado de la batería puede causar irritación o quemaduras.
33. No use un paquete de baterías o un aparato que esté dañado o modificado. Las baterías dañadas o modificadas pueden presentar un comportamiento impredecible que podrían provocar un incendio, explosión o riesgo de lesiones.
34. No exponga un paquete de baterías o aparato al fuego o a temperaturas excesivas. La

- exposición al fuego o a una temperatura superior a 130 °C puede causar una explosión. La temperatura de 130 °C puede reemplazarse por la temperatura de 265 °F.
35. Siga todas las instrucciones de carga y no cargue el paquete de baterías o el aparato fuera del rango de temperaturas especificado en las instrucciones. La carga incorrecta o a temperaturas fuera del rango especificado puede dañar la batería y aumentar el riesgo de incendio.
  36. Encargue el servicio a un técnico calificado que use únicamente repuestos idénticos. Esto garantizará que se mantenga la seguridad del producto.
  37. No modifique ni intente reparar el aparato o el paquete de baterías (según corresponda), excepto según se indica en las instrucciones de uso y mantenimiento.
  38. Coloque los cables de otros aparatos fuera del área que se va a limpiar.
  39. No opere la aspiradora en una habitación que tenga velas encendidas en muebles con los que la aspiradora pueda golpear o chocar accidentalmente.
  40. No permita que los niños se sienten sobre la aspiradora.
  41. Úsela únicamente como se describe en este manual. Use únicamente los accesorios recomendados por el fabricante.
  42. Recárguela únicamente con el cargador especificado por el fabricante. Un cargador adecuado para un tipo de paquete de baterías puede crear un riesgo de incendio cuando se usa con otro paquete de baterías.
  43. Use los aparatos solo con paquetes de baterías específicamente designados. El uso de cualquier otro paquete de baterías puede crear un riesgo de lesiones e incendios.
  44. El robot contiene baterías que solo pueden ser reemplazadas por personas capacitadas. Para reemplazar la batería del robot, comuníquese con el Servicio de atención al cliente.
  45. Si el robot no se va a utilizar durante mucho tiempo, cárguelo completamente y apáguelo para guardarlo y desconecte la estación de acoplamiento.
  46. Para reducir el riesgo de descarga eléctrica: no usar en superficies mojadas. No lo exponga a la lluvia. Guárdelo en interiores.
  47. Para reducir el riesgo de lesiones causadas por piezas móviles: desconecte antes de realizar el servicio.
  48. Riesgo de lesión. El cepillo puede arrancar



inesperadamente. Desenchufe antes de realizar limpiezas o servicios.

49. Para reducir el riesgo de lesiones, el usuario debe leer el manual de instrucciones.
50. Para reducir el riesgo de descarga eléctrica: no lo use en exteriores o en superficies mojadas.

|                                                                                   |                           |
|-----------------------------------------------------------------------------------|---------------------------|
|  | <b>Corriente continua</b> |
|  | <b>Corriente alterna</b>  |

Este dispositivo cumple con las reglas de radiación del DHHS, 21CFR, Capítulo 1, Subcapítulo J.

### **Declaración de Interferencia de la FCC (Comisión Federal de Comunicaciones)**

Este equipo ha sido probado y se ha determinado que cumple con los límites para un dispositivo digital Clase B, de conformidad con la Parte 15 de las Normas de la FCC.

Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se instala y usa de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio.

Sin embargo, no hay garantía de que no se producirán interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, lo cual puede determinarse apagando y encendiendo el equipo, se recomienda al usuario intentar corregir

la interferencia por medio de una de las siguientes medidas:

- Cambie la orientación o la ubicación de la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado en radio/televisión para obtener ayuda.

Este dispositivo cumple con la Parte 15 de las reglas de la FCC. El funcionamiento está sujeto a las siguientes dos condiciones:

(1) Este dispositivo no puede causar interferencia perjudicial y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluida la interferencia que pueda causar un funcionamiento no deseado.

Precaución de la FCC: Cualquier cambio o modificación no aprobado expresamente por la parte responsable del cumplimiento podría anular la autoridad del usuario para operar este equipo.

Advertencia de exposición a RF.

Este equipo cumple con los límites de exposición

 
a la radiación de la FCC establecidos para un entorno no controlado.

Este equipo debe instalarse y operarse de acuerdo con las instrucciones proporcionadas y las antenas usadas para este transmisor deben instalarse para proporcionar una distancia de separación de al menos 20 cm de todas las personas y no deben ubicarse ni operarse junto con ninguna otra antena o transmisor.


Para desactivar el módulo Wi-Fi en DEEBOT, encienda el robot. Coloque el robot en la estación de acoplamiento asegurándose de que los contactos de carga del DEEBOT y los pines de la estación de acoplamiento hagan una conexión. Mantenga presionado el botón de modo AUTOMÁTICO del robot durante 20 segundos hasta que DEEBOT emita 3 pitidos. Para habilitar el módulo Wi-Fi en DEEBOT, apague el robot y luego enciéndalo. El módulo Wi-Fi se enciende cuando DEEBOT se reinicia.

Este dispositivo cumple con las reglas de radiación del DHHS, 21 CFR, Capítulo 1, Subcapítulo J.

# 1. Contenidos del paquete/1.1 Contenidos del paquete

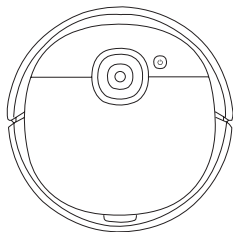


Robot

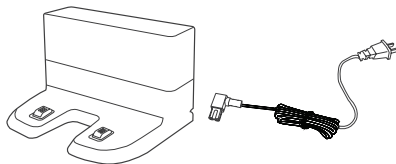 

Estación de acoplamiento



 
Cepillo para bordes

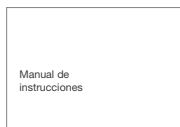

Manual de instrucciones



 Paño de limpieza lavable



Cómo limpiar la placa de tela



**Nota:** Las figuras e ilustraciones son solo de referencia y pueden diferir de la apariencia real del producto. El diseño y las especificaciones del producto están sujetos a cambios sin previo aviso.

\* El kit de trapeado por vibración se vende por separado.



Explore más accesorios en <https://www.yeedi.com>.

# 1. Contenidos del paquete/1.2 Diagrama del producto

  
## Robot

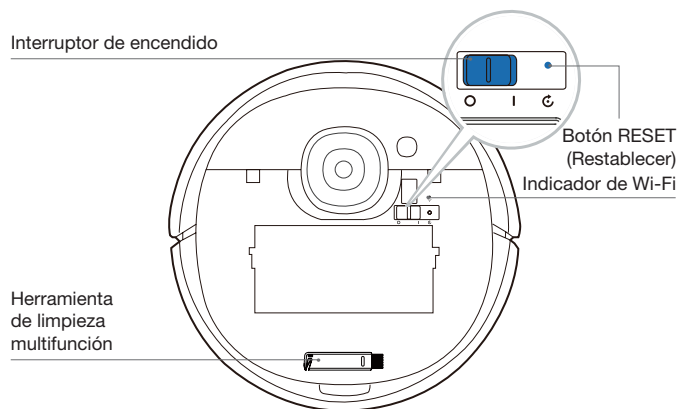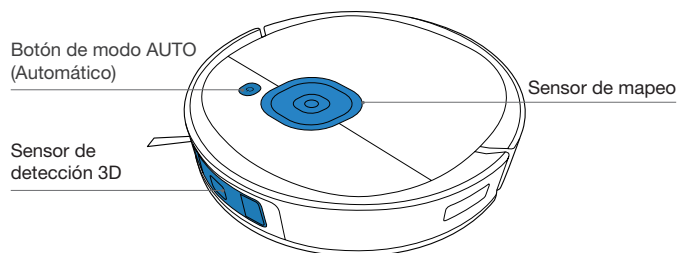


## Vista inferior

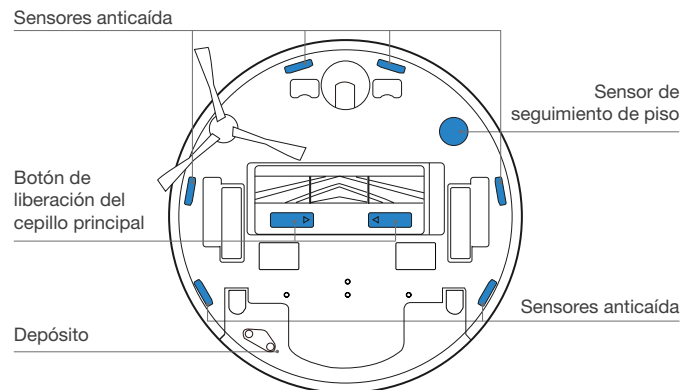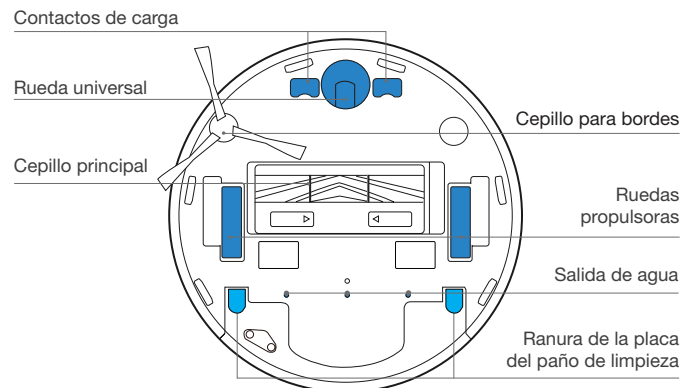  


## Recipiente para el polvo

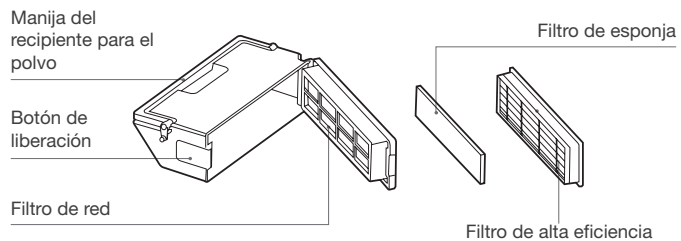 

## Estación de acoplamiento

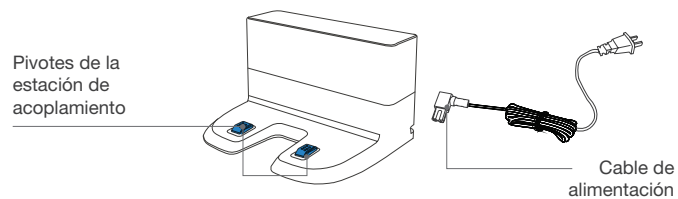 


## Depósito

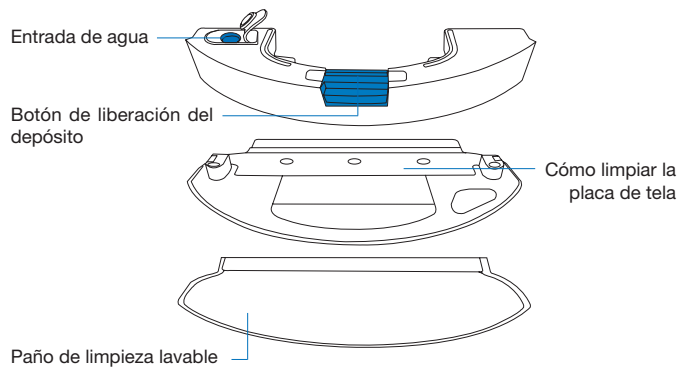 


## 2. Funcionamiento y programación/2.1 Notas antes de la limpieza

 
Coloque los muebles, como sillas, en un lugar adecuado en el área que va a limpiar.

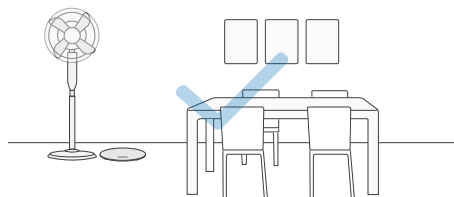

 Durante el primer uso, asegúrese de que la puerta de cada habitación esté abierta para ayudar al robot a explorar por completo su casa.

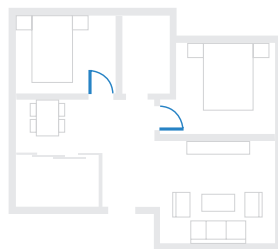

 Puede ser necesario colocar una barrera física en el borde de una caída para evitar que la unidad caiga por el borde.

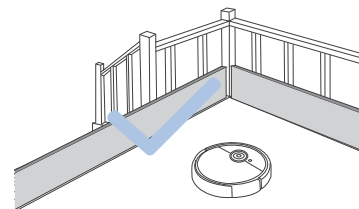

Levante del piso los objetos, incluidos cables, paños y pantuflas, etc., para mejorar la eficiencia de la limpieza.



Antes de usar el producto en una alfombra con bordes con borlas, pliegue los bordes de la alfombra hacia abajo.






No se pare en espacios estrechos, como pasillos, y asegúrese de no bloquear el sensor de detección.


## 2. Operación y programación/2.2 Preparación

   Retire todos los materiales de protección del robot y la estación de acoplamiento antes de usarlos.


- 1 Montaje de la estación de acoplamiento
- 2 Colocación de la estación de acoplamiento
- 3 Instale el cepillo para bordes

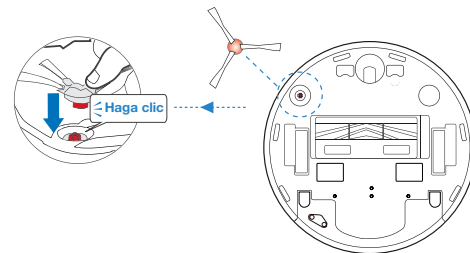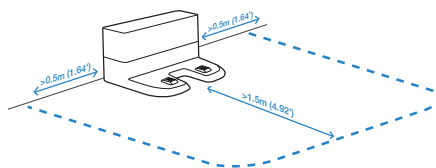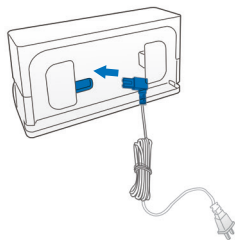

- 4 Encendido

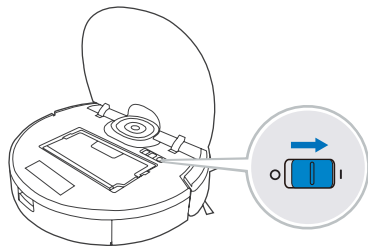 

- 5 Carga del robot

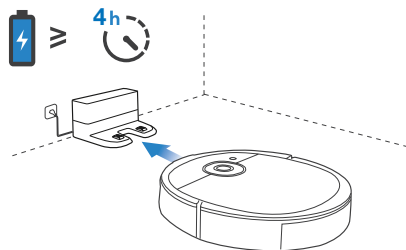 

**Nota:** Cuando el robot completa el ciclo de limpieza o cuando la batería se agota vuelve automáticamente a la estación de acoplamiento para recargarse. También puede enviar al robot de regreso a la estación de acoplamiento en cualquier momento mediante la Aplicación yeedi o si presiona el botón AUTO del robot por 3 segundos.


Vacíe el agua restante del depósito y retire la placa del paño de limpieza antes de cargar el robot.

# 2. Operación y programación/2.3 Aplicación yeedi

 Para disfrutar de todas las funciones disponibles, se recomienda controlar su robot a través de la Aplicación yeedi.

**Antes de comenzar, asegúrese de que:**

- Su teléfono móvil está conectado a una red Wi-Fi.
- La señal inalámbrica de banda de 2.4 GHz está habilitada en su enrutador.
- La luz indicadora de Wi-Fi del robot parpadea lentamente.

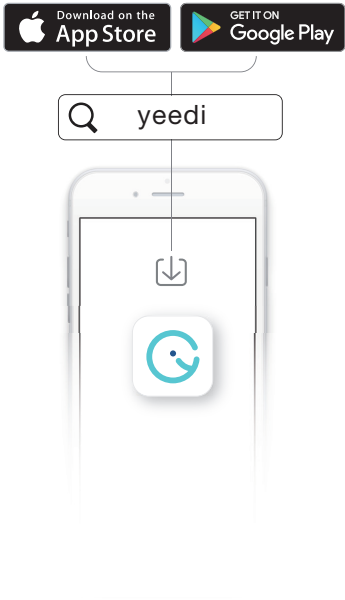

**Luz indicadora de Wi-Fi**

|                                                                                   |                 |                                                  |
|-----------------------------------------------------------------------------------|-----------------|--------------------------------------------------|
|  | Parpadeo lento  | Desconectado de Wi-Fi o esperando conexión Wi-Fi |
|                                                                                   | Parpadeo rápido | Conectándose a Wi-Fi                             |
|                                                                                   | Constante       | Conectado a Wi-Fi                                |

**Consejos:**

Si tiene algún problema durante el proceso de configuración de Wi-Fi, consulte la sección Solución de problemas > Conexión Wi-Fi en este manual.



 
## 2. Funcionamiento y programación/2.4 Inicio, pausa, activación, apagado

**Durante la primera limpieza:**


Supervise el Robot y ayúdelo en caso de que haya un problema.

### 1 Inicio

Presione 

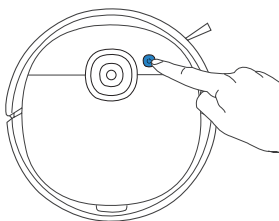


### 3 Activación

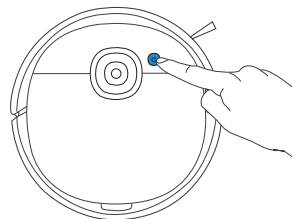 


Presione el botón AUTO en el robot para activarlo

### 2 Pausa

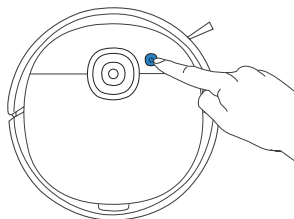 

### 4 Apagado

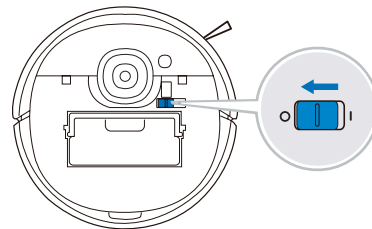 

**Nota:** El panel de control del robot deja de brillar después de hacer una pausa en el robot durante unos minutos. Presione el botón de modo AUTO (Automático) en el robot para activarlo.

**Nota:** Cuando el robot no esté funcionando, se recomienda mantenerlo ENCENDIDO y cargando.