


# WEWATCH

## WP01 SMART PROJECTOR

### Ultra-bright smart home theater projector

#### USER MANUAL

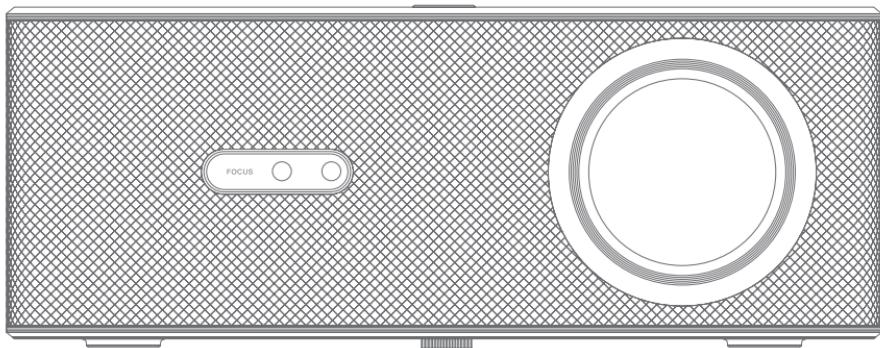



User Manual for WEWATCH VP01 Smart Projector	1
Bedienungsanleitung für den WEWATCH VP01-Smart-Projektor	31
Manuel de l'utilisateur pour le projecteur intelligent WEWATCH VP01	63
Manuale utente per il proiettore intelligente WEWATCH VP01	93
Manual del usuario para el proyector inteligente WEWATCH VP01	125
Instruction manual in other languages	155

English

# TROUBLESHOOTING GUIDE

## CONTENTS

### **Why doesn't the remote control work?**

- Make sure the remote control has been paired with the projector via Bluetooth.
- Make sure you have installed two AAA batteries in the remote control.
- Avoid mixing new batteries with old batteries in the remote control as this will cause insufficient power and operational problems.

### **Can I use Netflix directly on the projector?**

Yes, you can. The projector is pre-installed with official and licensed video apps such as Netflix/YouTube/prime video. You can conveniently watch your favorite videos directly on the projector without any hassle.

### **Why can't I mirror or cast copyrighted content from Hulu, Disney+, and similar services from my phone or tablet?**

Due to copyright restrictions of Hulu, Disney+, and similar services, content cannot be mirrored or cast via a phone or tablet. If you want to play copyrighted content, prepare a laptop, Fire TV Stick, Roku Stick, or Chromecast™ and connect it to the projector.

### **What if the image is blurry?**

Adjust the focus via the F+/F- buttons on the remote control, or move the projector slightly to complete the auto focus. Please make sure the projector and screen/wall must be within the effective distance.

### **Image is inverted**

Go to HomePage  > Settings  > Projection Mode to adjust the projected image.

### **Restore Factory Settings**

Go to Home  > Settings  ; Setup> Reset Defaults to restore the projector to default values.

If you encounter any technical issues or need assistance, please feel free to contact our customer support team. After-sales service email address: support@wewatchtech.com.

## IN THE BOX



Projector




Remote  
(Batteries Not Included)



Power Cable




HD Cable

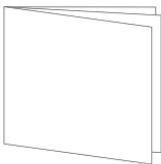


User Manual

## ⚠️ Notice





### ✓ Recommended

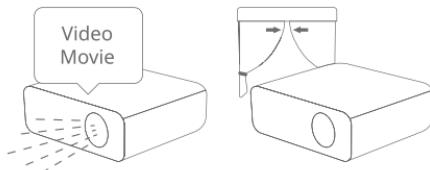


### ✗ Not Recommended

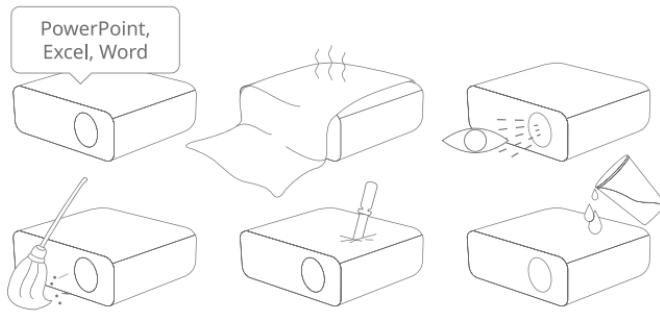


# PRODUCT OVERVIEW

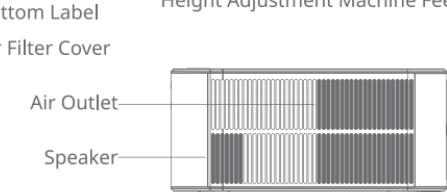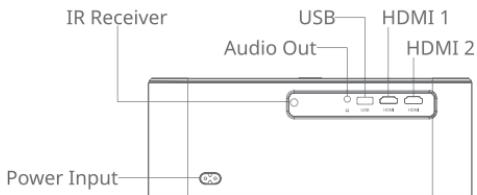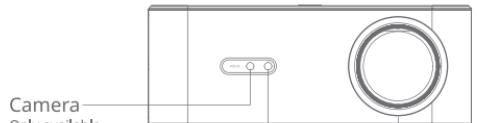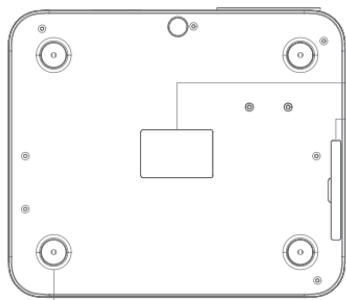


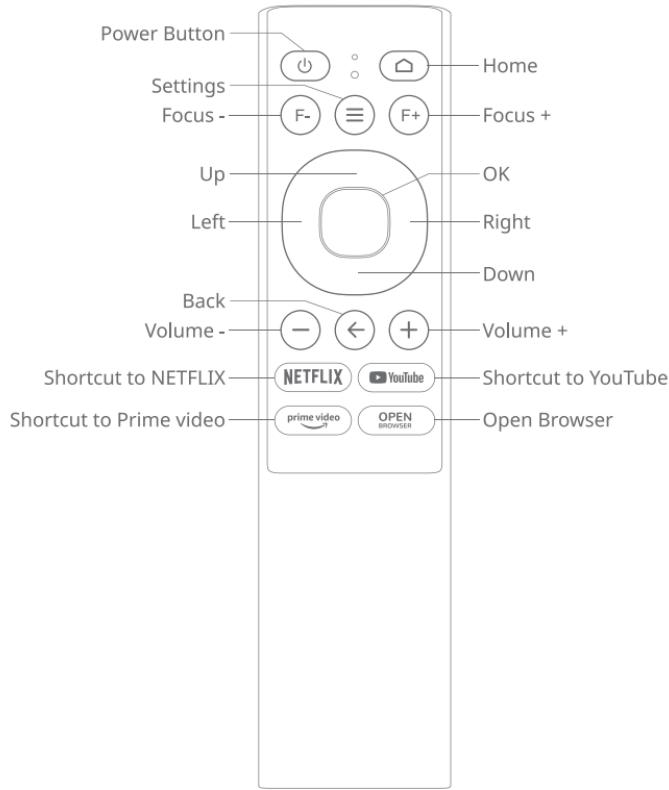


# DUST REMOVAL STEPS

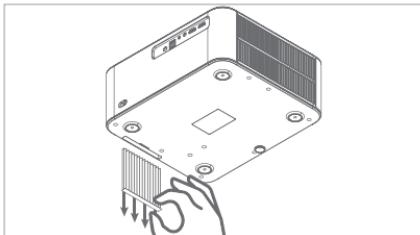

1. Reinstall the Dust Box: Once cleaned, place the dust box back into its original position.

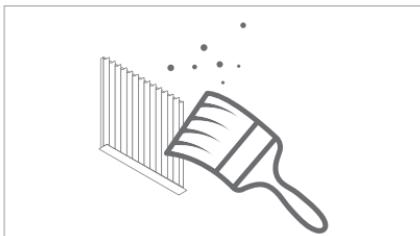

2. Clean the Dust Filter: Gently clean the dust filter inside the dust box.

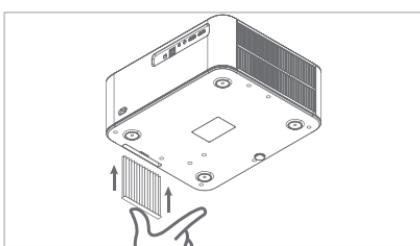


3. Reinstall the Dust Box: Once cleaned, place the dust box back into its original position.


These simple steps will help maintain the projector's performance and longevity.

# QUICK START

## 1. Projector Installation

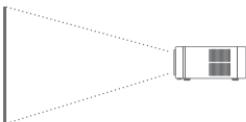

Front Desktop

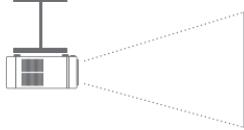

Rear Ceiling



Rear Desktop



Front Ceiling




### Notice

Whichever installation option you select, please make sure:

To go to HomePage  > Settings  > Projection to select the corresponding projection mode, so the images can be projected correctly.

Supports ceiling hanging, please remove the four rubber feet when hanging;  
Mounting screws: M5\*4 (not included)

## 2. Power On/Off

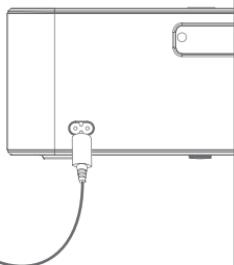

Connect the power cable to an outlet



Press the Power Button to turn on/off the projector.

### 3. Setup Wizard

Through the setup wizard, you can select the language you use;

Time Settings > Region, select your region;

Screen Saver > Timer > Select a time range, if there is no operation within this time range, the projector will enter the screen saver state.

Sleep Timer > Select a time range, after which the projector will enter the sleep state.

Auto Sleep > Select a time range, after which the projector will enter the sleep state.

**Tip**

To ensure successful Wi-Fi search, please select the correct region.

### 4. Image Adjustment

- Focus -

(1) Auto Focus

When the projector detects shaking/rapid movement, it will automatically adjust the image quality

**Tip**

You can go to HomePage  > Settings  > Focus to enable Auto Focus. After Boot, allowing the projector to automatically adjust the focus after it is powered on.

## (2) Electric/Manual Focus

You can also press the Focus buttons on the remote or go to HomePage  > Settings  > Focus > Manual Focus to sharpen the image focus until the blurry image becomes clear.



## - Keystone Correction -

### (1) Auto Keystone Correction

When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.



#### Tip


You can enable more automatic features by going to HomePage  > Settings  > Keystone.

- Auto Correction After Boot: Automatically corrects vertical distortion after the projector is powered on.
- Auto Screen: Automatically adjusts the projected image to match your screen.
- Auto Avoid: Automatically detects and avoids obstacles in specific areas.

In case the Auto Avoid/Auto Screen is not performing optimally, you can achieve the desired effect by adjusting the keystone/focus.


## (2) Manual Keystone Correction

Go to HomePage  > Settings  > Keystone > Four Points Correction to manually correct the image shape by four points.

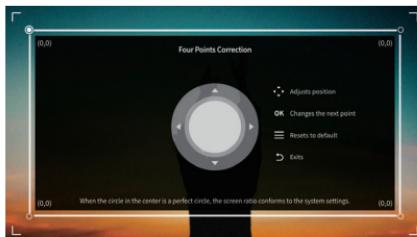


### - Image Scaling -

Go to HomePage  > Settings  > Zoom to reduce or enlarge the image size between 50% and 100%.

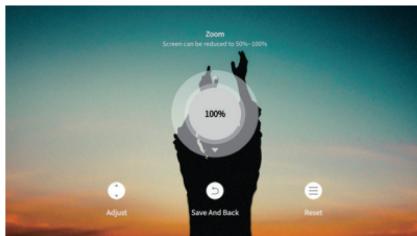

## 5. Play Contents from Officially Licensed Apps like Netflix, Prime Video and YouTube

Go to the Homepage and select your preferred platform via the shortcuts on the remote, then log in to your account to play the corresponding contents.

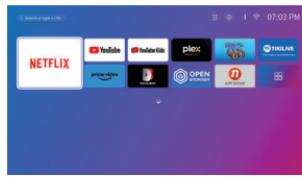

## PROJECTOR CONNECTION AND INPUT SOURCE

Connect your device to the projector correctly, then select the right input source.

## 1. USB Connection

To play files stored on a USB disk, insert the disk into the projector. Then go to **HomePage** > **Inputs** and select **USB** to play the desired file directly.


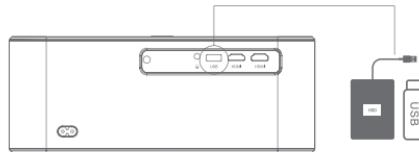


Photo Format Supported	JPG/PNG/BMP/GIF
Audio Format Supported	MP3/AC3/WAV/WMA/M4A/OGG/FLAC
Video Format Supported	MP4/MKV/WMV/3GP/MPG/TP/TS/DAT/FLV/TRP/MOV/VOB/VOP


## 2. HDMI Connection

To connect a device with an HDMI output to the projector, use the provided HDMI cable to connect it to the projector's HDMI input port. Then go to Homepage  > Inputs and select HDMI1/HDMI2.

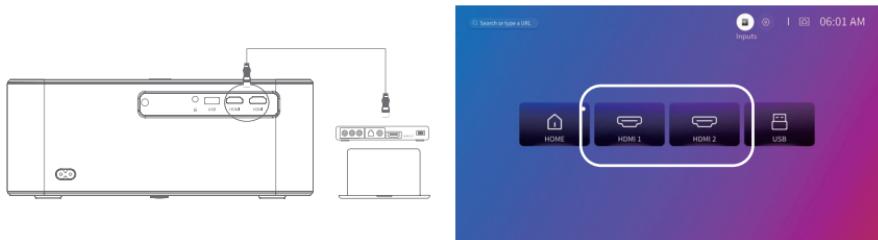

## 3. Wired Speaker and Headphones Connection

This option is not required to select any input source.

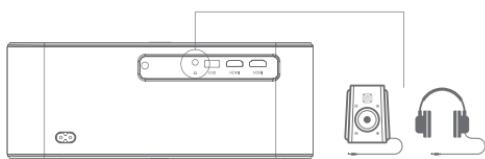

**Note**

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.