

Mintal


White Noise Machine User Guide MW01




Product Features:

- Wireless Speaker
- 8 Unique Natural Sounds, DIY Support
- Earphone Output: 3.5mm

Operation Instructions:

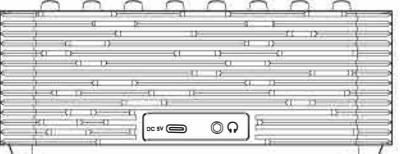

- Plug the 5V/2A power adapter into the Type-C outlet on the back of the machine to power it on.
- Long press the ON  button to enter the "White noise" mode (Indicator light will turn green).
- There are 8 different natural sounds to choose from. Slide different sound sliders to mix and simulate natural environments.
- Adjust the volume with the volume up and volume down +/- buttons.

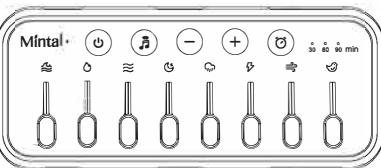

Control Buttons:

Power On / Off Button

To turn your Mintal White Noise Machine ON or OFF, press and briefly hold the power button.

Mode Switch Button

Long press the mode button to switch between the "White noise" mode and the "Bluetooth speaker" mode. In "White noise" mode, short press the mode button to mute. In "Bluetooth speaker" mode, short press the mode button to pause/play.

Volume Down / Last Track Button

In "White noise" mode, short press the "-" button to turn the volume down for all sounds. In "Bluetooth speaker" mode, short press the "-" button to turn the volume down, or long press the button to return to the previous track.

Volume Up/Next Track Button

In "White noise" mode, short press the "+" button to turn the volume up for all sounds. You will hear a beep upon reaching the maximum volume level. In "Bluetooth speaker" mode, short press the "+" button to turn the volume up, or long press the button to advance to the next track. You will hear a beep upon reaching the maximum volume level. Press the volume up and volume down +/- buttons at the same time to remove the Bluetooth pairing.

Auto-Off Timer

The Mintal White Noise Machine features 3 timer options: 30/60/90 minutes. Short press the  button to set the timer so the unit will automatically turn off after a specified time period. An LED light display will show the timer setting and the light will turn off when the machine turns off automatically.

Natural Sounds:

Wave

To control the volume of the wave sound, slide the wave slider up or down. Slide the wave slider to the bottom to turn off the wave sound.

Campfire

To control the volume of the campfire sound, slide the campfire slider up or down. Slide the campfire slider to the bottom to turn off the campfire sound.

River

To control the volume of the river sound, slide the river slider up or down. Slide the river slider to the bottom to turn off the river sound.

White Noise

To control the volume of the white noise sound, slide the white noise slider up or down. Slide the white noise slider to the bottom to turn off the white noise sound.

Rain

To control the volume of the rain sound, slide the rain slider up or down. Slide the rain slider to the bottom to turn off the rain sound.

Thunder

To control the volume of the thunder sound, slide the thunder slider up or down. Slide the thunder slider to the bottom to turn off the thunder sound.

Wind

To control the volume of the wind sound, slide the wind slider up or down. Slide the wind slider to the bottom to turn off the wind sound.

Bird

To control the volume of the bird sound, slide the bird slider up or down. Slide the bird slider to the bottom to turn off the bird sound.



Scan the QR code to download the Mintal Deep Sleep app.



Please read this user guide carefully before use

Manufacturer: HiClub Inc.
Address: Roppongi Hills Mori Tower 6-10-1 Roppongi, Tokyo, Japan
Official website: www.mintalworld.com
Contact us: support@mintalworld.com

Thank you for choosing the Mintal White Noise Machine. These instructions are intended to provide you with general information about the product, and knowledge of how to use it in an effective, safe way. Please read the instructions carefully before using.

Important Safeguards:

Before using your new Mintal White Noise Machine for the first time, you must read and follow the operating and safety instructions carefully and understand all of them:

- Do not hit the item seriously.
- Do not touch chemicals such as benzene and thinner.
- Do not disassemble, repair or modify by yourself.
- Dispose of used packaging and used electronic products separately.

Product Specifications:

Bluetooth Version	V4.2	Bluetooth Device Name	Mintal MW01
Transmission Range	≥10m	Output Power	3W+3W
Wireless Power	85dB	Harmonic Distortion	≤10%
SNR	75dB	Frequency Range	70Hz-18kHz
Speaker Parameters	φ40MM 4Ω 5Wx2	Product Dimensions	183x77x74mm

Bluetooth Connection:

- To turn on Bluetooth mode: Turn on your Mintal White Noise Machine and long press the mode button until the LED light begins to flash green rapidly.
- Find the Mintal White Noise Machine on your Bluetooth streaming device of choice, and pair it: Turn on Bluetooth on your device and select "Mintal MW01" from the list of displayed Bluetooth devices.
- Confirm successful pairing: When pairing is complete, a notification sound is heard and the LED light will stop blinking. Music played on your device will now play through your Mintal White Noise Machine.
- Disconnect: Press and hold the mode button for at least 3 seconds to disconnect from Bluetooth.
- When you turn on the machine next time, the machine will automatically try to establish a Bluetooth connection with the last connected device. If the device is nearby and its Bluetooth function is on, the Bluetooth connection will be established automatically.

One-Year Limited Warranty:

- This product is guaranteed to be free from defects in material and workmanship under normal and intended uses for a period of one year from the date of your purchase.
- The manufacturer will charge a related repair fee which includes material costs and labor, if such services are needed for out-of-warranty products.
- Our Limited Warranty Does Not Apply to Any of the Following Cases:
 1. Products that have been damaged by accident, abuse, misuse, fire, floods, earthquake, other external causes, or failure to follow product instructions.
 2. Products that have been damaged during transit, by improper transportation, improper storage or inadequate care.
 3. Consumable parts such as consumable accessories or bulbs.
 4. In the event that the warranty card is not filled in appropriately, without a purchase date or dealer stamp.
 5. Products that have been damaged due to an unfavorable environmental conditions, for example, corrosion by humidity, or acidity in volcanic environments, or by high salt concentration in the air.
 6. Products that have not been used in the ways described in the manufacturer's instructions provided.
 7. Products that have been sold with additional conditions and clauses that are not covered under warranty.
- If you have to return your product for repair, pack the product properly. You are responsible for ensuring that any product shipped or returned to the manufacturer arrives to its intended location, and you assume risk of loss during transportation.
- This warranty does not apply to products that have been altered, repaired and/or modified by non-authorized personnel.

Connect to Mintal Deep Sleep App:

- Scan the QR code to download Mintal Deep Sleep app on your mobile phone.
- Turn on Bluetooth mode on your Mintal White Noise Machine.
- Turn on Bluetooth on your mobile phone. Pair the Mintal White Noise Machine with your phone.
- After pairing successfully, you can open the Mintal Deep Sleep app to play the sounds or music. Music played on your mobile phone will now play through your Mintal White Noise Machine.



FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.