



XPON ONU/GPON ONU

FD614GS series

User Manual

Version: WEB 3.0

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Compliance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Content

1 Note	1
1.1 Installation Precautions	1
1.2 Precautions for Use	1
2 Brief	3
2.1 Product Features	3
2.2 Product Operation Introduction	4
2.3 Product Specifications	4
2.4 Device Connection	4
3 Login Web Management Locally	5
3.1 Physical Connection of ONU and PC	5
3.2 PC Access the WEB of ONU	6
4 ONU Register Information Config(When adaptive to GPON mode)	7
4.1 View ONU Status	7
4.2 View ONU Optical Power Information	7
4.3 LOID Authentication Config	8
5 ONU Register Information Config(When adaptive to EPON mode)	8
5.1 View ONU Status	8
5.2 View ONU Optical Power Information	9
5.3 LOID Authentication Config	9
6 Basic Configuration for Internet	10
6.1 Route Mode Configuration	10
6.1.1 Configure PPPOE WAN Connection for Internet in Route Mode	10
6.1.2 Configure DHCP WAN Connection for Internet in Route Mode	12
6.1.3 Configure Static IP Address WAN Connection for Internet in Route Mode	13
6.2 Configure Bridge WAN Connection for Internet	15
6.3 View the WAN Connection Status	16
6.4 Delete the WAN Connection	16
7 ONU LAN Configuration	17
7.1 LAN IP Address Configuration	17
7.2 View LAN Client	17
8 WLAN Configuration	18
8.1 Wireless 2.4G wifi configuration	18
8.1.1 2.4G WLAN Advance Configuration	18
8.2 Wireless 5G wifi configuration	18
8.2.1 5G WLAN Advance Configuration	18
9 TR069 Remote Management	19
9.1 Configure Channel for TR069 Remote Management	19
9.2 TR069 Client Configuration	20
11 The Configuration for VoIP	20
11.1 SIP Settings	20
12 CATV Configuration	22
12.1 Configure CATV Port Parameter	22

13 Device Management	23
13.1 Restore Default Setting	23
13.2 Firmware Upgrade	23
13.3 Device Reboot	24

1 Note

1.1 Installation Precautions

- Do not place the equipment near flammable or conductive items, high temperatures (such as direct sunlight) or in wet conditions, or on a PC chassis, and check that the surrounding appliances are stable.
- Check the cable for aging. Check and verify that the AC or DC input voltage is within the permissible range of the device and that the polarity of the DC is correct.
- Unless the manufacturer permit, use the type of power indicated on the label and the adapter supplied with the product.
- To prevent damage to the product from lightning, make sure that the ground of the power outlet and the power adapter is securely grounded. In the thunderstorm, be sure to unplug the power and all the connections.
- Equipment input voltage fluctuation should be less than 10%, the power plug, refrigerators, hair dryer and iron should not use the same socket.
- To avoid electric shock or fire due to overload of the power outlet, damage to the cord or damage to the plug, check the power cord regularly. If damage is found, replace it immediately.
- Please place the device on a flat surface and can not place items on the device.
- Equipment is easy to produce heat when working, should maintain the appropriate cooling space to avoid damage caused by overheating products. The elongated hole on the shell is designed for heat dissipation. Keep the ventilation clean and avoid falling from the heat sink into the equipment. Otherwise, the equipment may be damaged or fire. Do not spill liquid onto the surface of the equipment.

1.2 Precautions for Use

- Please read the user manual carefully before using the equipment and follow all the precautions on the user manual and the product.
- Avoid eye looked at the optical interface directly, so as to avoid the laser beam emitted by the interface damage the eyes. Please try to wear safety glasses to effectively protect your eyes from damage. It is best to plug in the fiber optic interface jacket when the optical interface is not in use .
- Turn off the power when the device is not in use
- Before plugging the power supply, make sure that the power switch is turned off to avoid surge. Be careful when unplugging the power supply and the transformer temperature may be high.

- To ensure safety, do not open the enclosure of the device, especially when the device is powered up.
- Unplug the power supply before cleaning the equipment. Use a soft dry cloth to clean the equipment to avoid the use of liquids or sprays.
- Do not connect this product to any electronic product unless it is instructed by our customer engineer or your broadband supplier, as any incorrect connection may cause power or fire hazard.

2 Brief

Fd614GS series XPON ONU is satisfying with Telecom, Radio and Television, and Fiber To The Home (FTTH) multi service access. It's based on the mature, stable, high cost performance EPON/GPON technology and has Gigabit and Fast Ethernet switching HFC technology, WLAN technology and powerful routing forwarding technology. Fd614GS series XPON ONU has a higher bandwidth, higher reliability, easy management and good quality of service (QoS) guarantee with technical performance of equipment meet the ITU-T G. 984 requirements and have good compatibility with third party manufacturers OLT.

Fd614GS series XPON ONU can integrate wireless function with meet 802.11 n/b/g/ac technical standards and built-in high gain directional antenna, the wireless transmission rate up to 867 Mbps. It has the characteristics of strong penetrating power and wide coverage. It can provide users with more efficient data transmission security.

Note: This document is written in reference to 4GE+2WIFI (Dual Band) +1POTS XPON HGU, the rest of XPON HGU can be referenced to this document configuration.

2.1 Product Features

- Single-fiber access, providing broadband Wi-Fi, Internet,CATV ,POTS service access, and so on.
- Comply with ITU-T G.984 and IEEE802.3ah technical standards
- WIFI-type equipment exact match 802.11 a/b/g/n/ac/ax wireless standard protocol, support 20Mhz / 40Mhz/80MHZ
- Support PPPoE, DHCP, static IP broadband service access
- Support NAT, static routing, port forwarding
- Support data encryption, VLAN transparent transmission, vlan tag and other functions
- Support up and down bandwidth limit function
- Support upgrade through the OLT remote / local ONU WEB
- Support broadcast storm suppression
- Different data ports are isolated from each other
- Support OLT as SNMP-agent way of the unified management of the network management, easy to install and maintain
- Provide a variety of fault alarm function, easy to fault diagnosis
- Support DBA technology and priority based on the dual management model to ensure that the user's minimum specified bandwidth requirements

2.2 Product Operation Introduction

The dual-mode ONU is a "combination" of GPON and EPON ONU. Compared with the single-mode EPON/GPON ONU, the main difference lies in the registration process. The dual-mode ONU adds a pre-judgment to the current application system (EPON/GPON). That is, the dual-mode ONU first switches mode, and then starts and completes registration process in the corresponding mode. When the ONU runs normally in the current system, its configuration and processing of various messages are basically the same as single-mode EPON/GPON ONU.

This product mode switch depends on the packet sent by the front-end OLT device to the ONU. When ONU receives OAM message sent by the EPON OLT, the ONU automatically switches to the EPON mode after detecting it. In this case, the ONU can be regarded as the EPON ONU. When the ONU receives OMCI message sent by the GPON OLT, the ONU automatically switches to the GPON mode after detecting it. In this case, the ONU can be used as the GPON ONU.

2.3 Product Specifications

Ambient temperature: 0°C~50°C

Relative humidity: 10% to 90% (non-condensing)

TX Optical Power: 0.5~5dBm

RX Optical Power: -8~-28dBm(GPON)

-3~-27dBm(EPON)


2.4 Device Connection

- Connect the fiber: Insert the SC fiber connector into the PON connector on the rear panel of the ONU.
- Connect the Ethernet cable: Connect the RJ-45 Ethernet cable to any LAN port and each home device.
- Connect the AC adapter: Plug the AC / DC adapter into the AC wall jack and the ONU 12V DC power jack.

3 Login Web Management Locally

3.1 Physical Connection of ONU and PC

- a) Local NIC of PC connects to LAN port or ETH port of ONU via wires.
- b) Set the IP address of PC's local NIC as **192.168.101.X (X: 2-254)**.

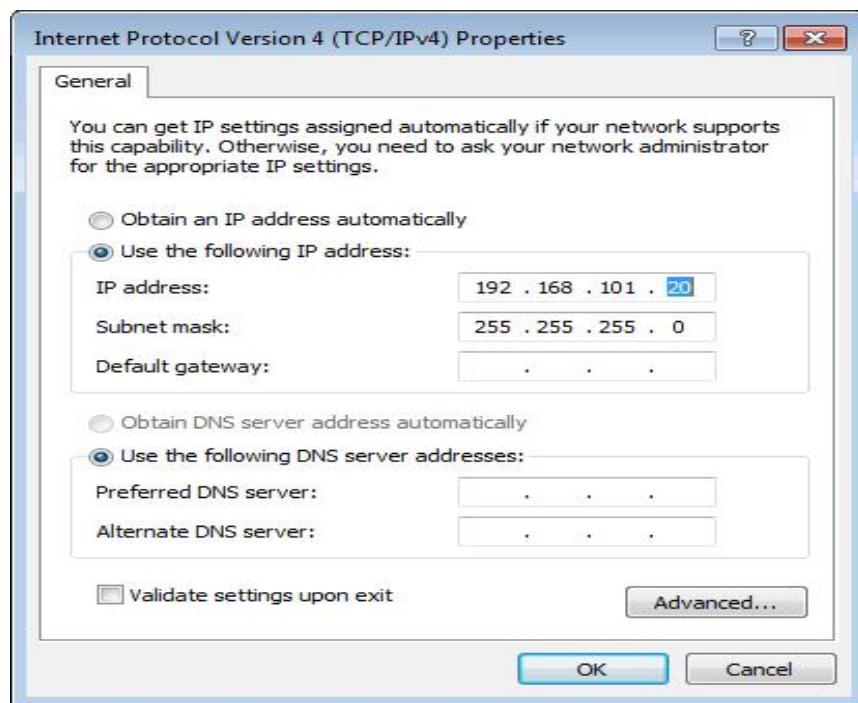

- c) Open cmd windows and make sure that PC can ping the management IP (**192.168.101.1**) of ONU.

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\tcl1>ping 192.168.101.1


Pinging 192.168.101.1 with 32 bytes of data:
Reply from 192.168.101.1: bytes=32 time=2ms TTL=64
Reply from 192.168.101.1: bytes=32 time=1ms TTL=64
Reply from 192.168.101.1: bytes=32 time=1ms TTL=64
Reply from 192.168.101.1: bytes=32 time=1ms TTL=64

Ping statistics for 192.168.101.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 2ms, Average = 1ms

C:\Users\tcl1>
```


3.2 PC Access the WEB of ONU

Make sure you can ping the ONU like #3.1. Open the **IE Web browser (IE, Firefox, Google)**, copy and paste URL: <http://192.168.101.1>, the following pop-up Prompt landing page:

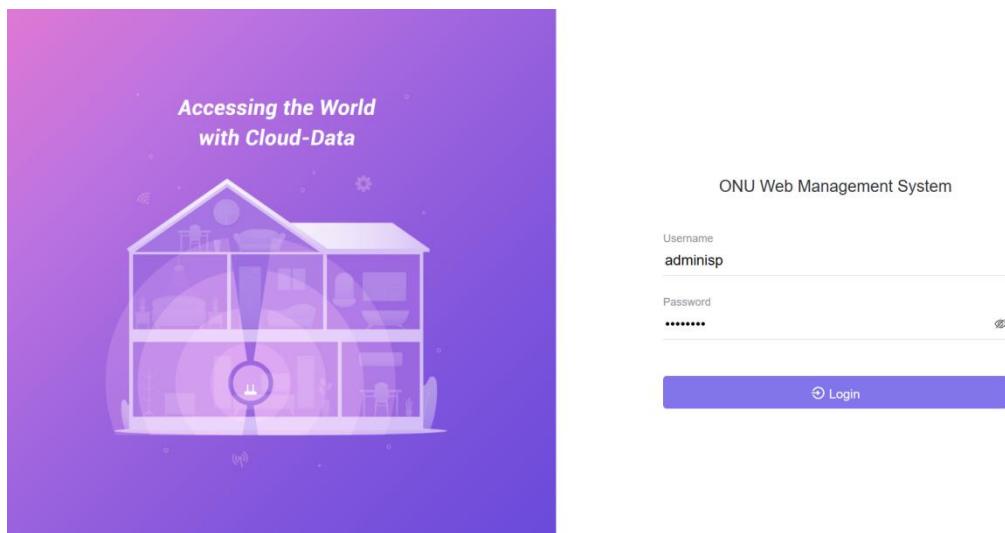

Input Username: **adminisp** Password: **adminisp**

Click “Login” button. The product basics page appears, as follows:

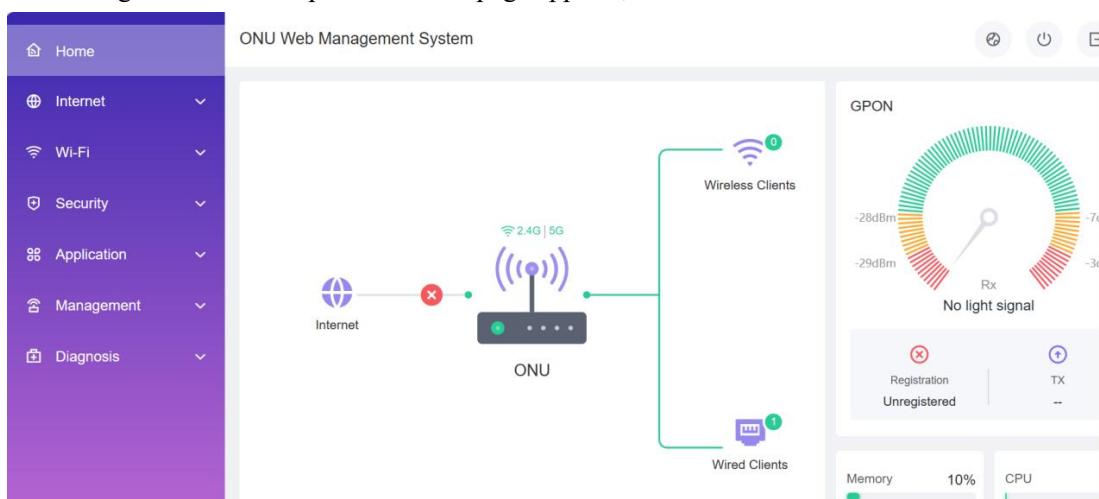


You can start further configuration.

4 ONU Register Information Config(When adaptive to GPON mode)

4.1 View ONU Status


1. Login ONU WEB, select **Internet ---> PON** , view the ONU PON status

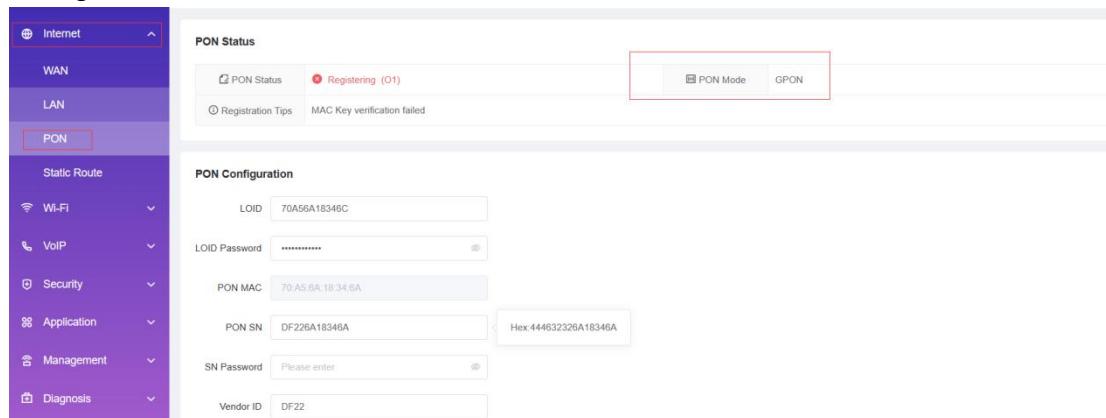

The screenshot shows the ONU PON status configuration interface. The left sidebar has a 'PON' tab selected. The main area has two sections: 'PON Status' and 'PON Configuration'. In 'PON Status', the 'PON Mode' is set to 'GPON' and the status is 'Registering (O1)'. In 'PON Configuration', fields include LOID (70A56A18346C), LOID Password (redacted), PON MAC (70:A5:6A:18:34:6A), PON SN (DF226A18346A), SN Password (redacted), and Vendor ID (DF22).

4.2 View ONU Optical Power Information

1. Login ONU WEB, view Rx power and Tx power of ONU:

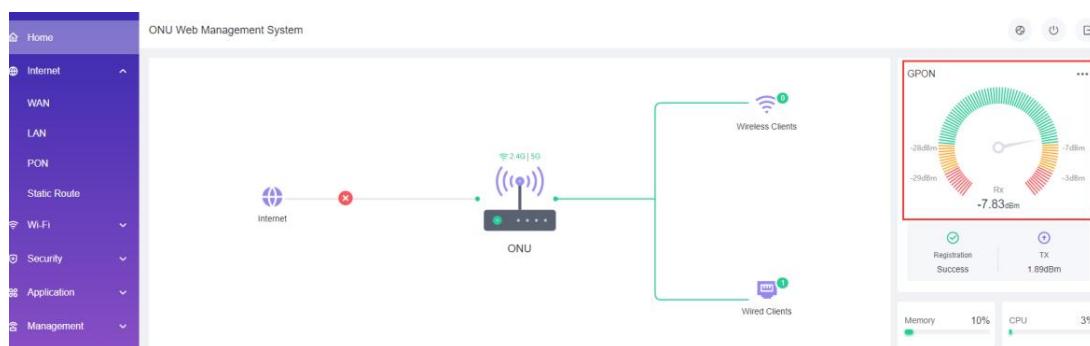


The screenshot shows the ONU Web Management System interface. The left sidebar has a 'PON' tab selected. The main area displays a network diagram with an 'Internet' connection to an 'ONU' device, which then connects to 'Wireless Clients' and 'Wired Clients'. To the right is a circular 'GPON' power meter showing Rx power at -7.83dBm and Tx power at 1.89dBm. Below the meter, status indicators show 'Registration Success' and resource usage for 'Memory' (10%) and 'CPU' (3%).

4.3 LOID Authentication Config

LOID of ONU is mainly applicable of the authentication mode of LOID and LOID + Password for ONU. By default, ONU registers for the OLT by SN and rarely uses LOID for register.

Normally, we needn't to configure LOID. But the configuration as follows:


1. Login ONU WEB, select **Internet >PON** , view or configure LOID and password of ONU:

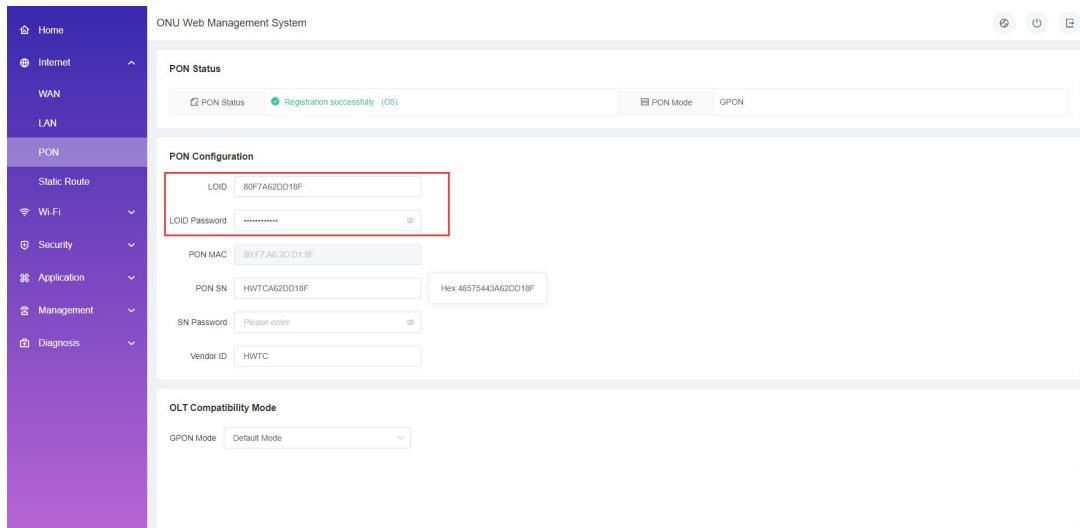

5 ONU Register Information Config(When adaptive to EPON mode)


5.1 View ONU Status

1. Login ONU WEB, select **Internet-> PON** , view the ONU status:

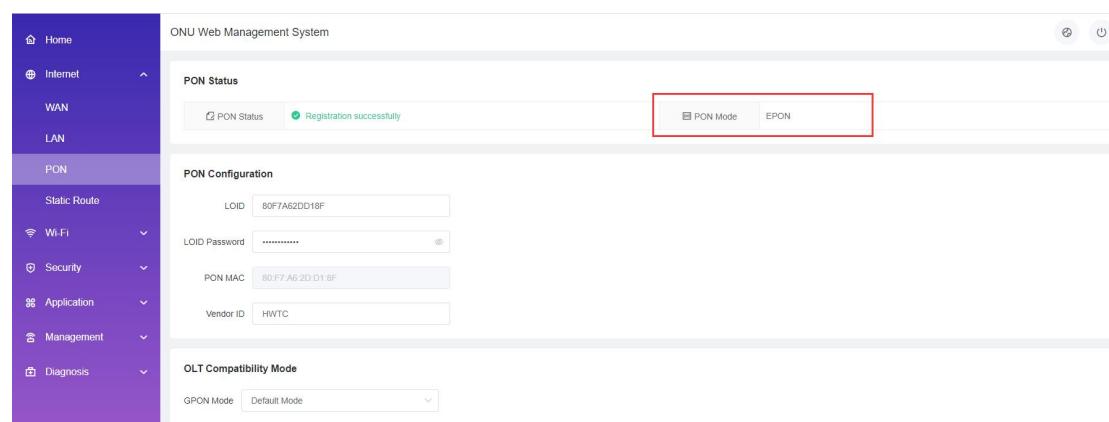

5.2 View ONU Optical Power Information


1. Login ONU WEB, view Rx power and Tx power of ONU:

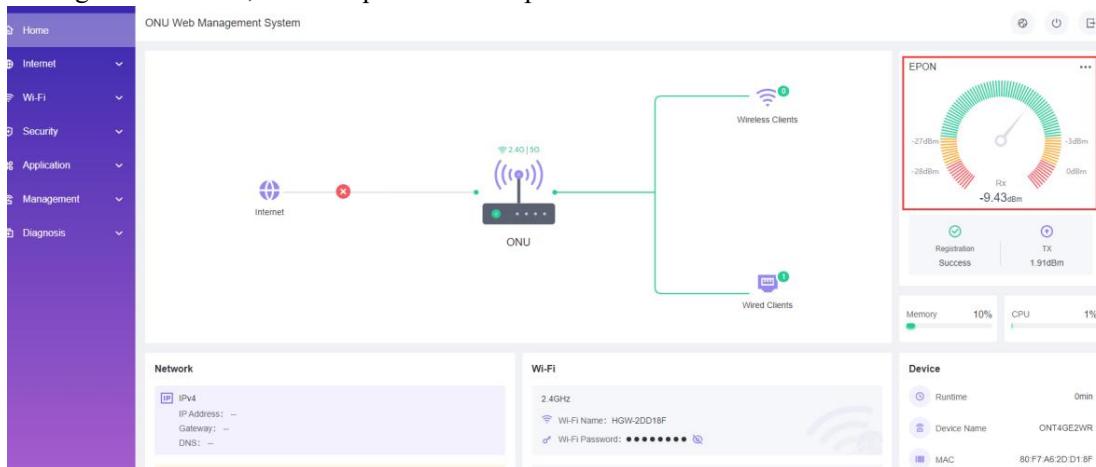

5.3 LOID Authentication Config

LOID of ONU is mainly applicable of the authentication mode of LOID and LOID + Password for ONU. By default, EPON ONU registers for the OLT by MAC and rarely uses LOID for register. Normally, we needn't to configure LOID. But the configuration as follows:

1. Login ONU WEB, select **Internet-> PON**, view or configure LOID and password of ONU:

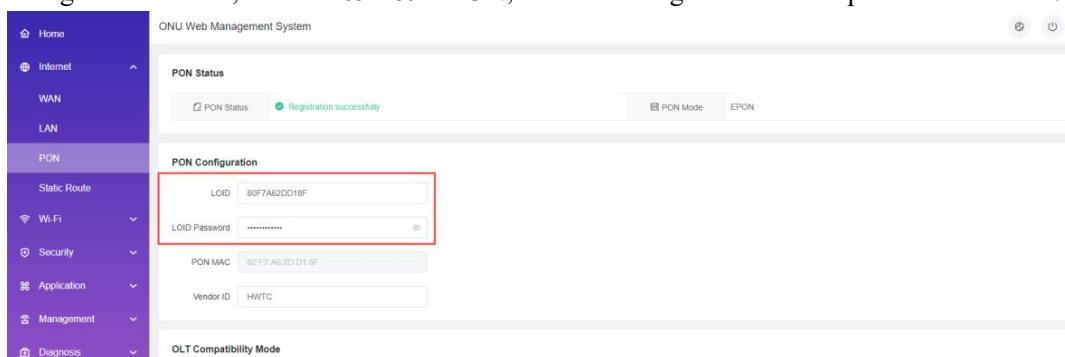

6 Basic Configuration for Internet

Home Gateway Unit (HGU) ONU supports route function, so that there are route mode and bridge mode for internet. The difference between route mode and bridge mode as follows :

Route mode: ONT as a home gateway equipment, ONT IP address can be obtained in three ways, which includes **DHCP**, **Static IP Address** and **PPPOE**. The IP address of the device on the user side is obtained through the DHCP address pool of the ONT, or by manually setting;

Bridge mode: The ONT does not obtain the IP address assigned by the upper device or can not manually set the static IP address. It is used as a relay device and does not process the data. There are three ways to obtain the IP address of the user side device, namely **DHCP**, **PPPOE**, **Static IP Address**.

6.1 Route Mode Configuration

6.1.1 Configure PPPOE WAN Connection for Internet in Route Mode

Login ONU WEB, select **Internet** -> **WAN**>**Click “Add” button**, and then there are some parameters for us to configure as follows:

【Vlan】 We can set this option according to your network plan. If there is vlan in the network for internet, we have to chick ‘ VLAN ‘ option. If not, we needn’t check this option, which will be VLAN transparent mode.

【Vlan ID】 Configure this option according to our network plan.

【Priority】 Set the priority of vlan, The same as "Vlan", depending on the network vlan planning to configure. The default priority is 0.

【Mode】 Choose PPPOE.

【Service Type】 Choose Internet.

【IP Protocol】 Select ‘Ipv4’; If there is Ipv6 in the network, we can select ‘Ipv4/Ipv6’.

【MTU】 The default is 1492; we have to change to lower MTU, **such as 1400**, if we can ping the DNS but not access the website via WEB browser.


【NAT】 Check ‘ NAT ’ feature; NAT is mainly used for address translation function of local network and external network. The default is checked enable status. If you do not check this option, maybe you can’t surf the internet.

【UserName】 Type PPPOE account, normally offered by ISP, for Internet;

【Password】 Type PPPOE password, normally offered by ISP, for Internet;

【Port Binding】 Bind the physical ports (Lan port 1-4 and wireless) with PPPOE WAN connection.

Note: By default, all LAN ports and WIFI data are not bound by this WAN connection (a LAN and WIFI SSID can only be bound to a WAN connection at the same time).

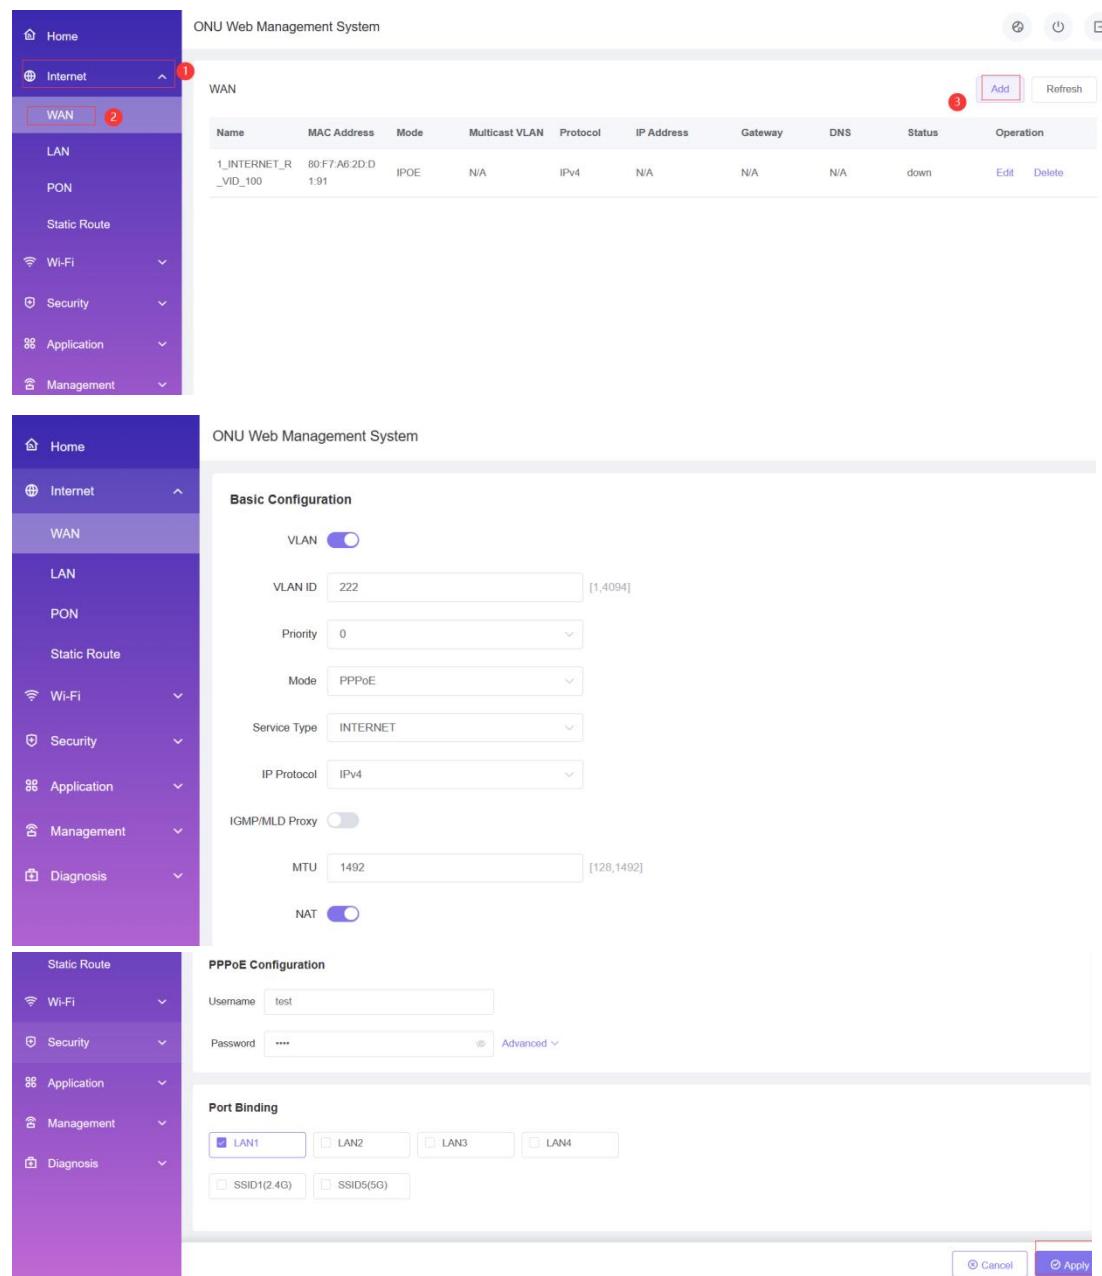

ONU Web Management System

WAN

Name	MAC Address	Mode	Multicast VLAN	Protocol	IP Address	Gateway	DNS	Status	Operation
1_INTERNET_R	80:F7:A6:2:D 1:91	IPOE	N/A	IPv4	N/A	N/A	N/A	down	Edit Delete

ONU Web Management System

Basic Configuration

VLAN

VLAN ID: 222 [1,4094]

Priority: 0

Mode: PPPoE

Service Type: INTERNET

IP Protocol: IPv4

IGMP/MLD Proxy

MTU: 1492 [128,1492]

NAT

PPPoE Configuration

Username: test

Password: Advanced

Port Binding

LAN1 LAN2 LAN3 LAN4

SSID1(2.4G) SSID5(5G)

[Cancel](#) [Apply](#)

After configuring the parameters of PPPoE WAN connection as above, click ‘**Apply Changes**’ to finish the setting.

6.1.2 Configure DHCP WAN Connection for Internet in Route Mode

1. Login ONU WEB, select **Internet -> WAN->Click “Add ”button**, and then there are some parameters for us to configure as follows:

【Vlan】 We can set this option according to your network plan. If there is vlan in the network for internet, we have to chick ‘ VLAN ‘ option. If not, we needn’t check this option, which will be VLAN transparent mode.

【Vlan ID】 Configure this option according to our network plan.

【Priority】 Set the priority of vlan, The same as "Vlan", depending on the network vlan planning to configure. The default priority is 0.

【Mode】 Choose IPOE.

【Service Type】 Choose Internet.

【IP Protocol】 Select ‘Ipv4’; If there is Ipv6 in the network, we can select ‘ Ipv4/Ipv6 ’.

【MTU】 The default is 1500; we have to change to lower MTU, **such as 1400**, if we can ping the DNS but not access the website via WEB browser.


【NAT】 Check ‘ NAT ’ feature; NAT is mainly used for address translation function of local network and external network. The default is checked enable status. If you do not check this option, maybe you can’t surf the internet.

【IPv4 Mode】 Choose DHCP.

【Manual DNS】 Not select, the ONU will get DNS from upper DNS server automatically; Selected , we have to configure an static DNS for the ONU by manual. We can configure one of them according to network plan.

【Port Binding】 Bind the physical ports (Lan port 1-4 and wireless) with DHCP WAN connection.

Note: By default, all LAN ports and WIFI data are not bound by this WAN connection (a LAN and WIFI SSID can only be bound to a WAN connection at the same time).

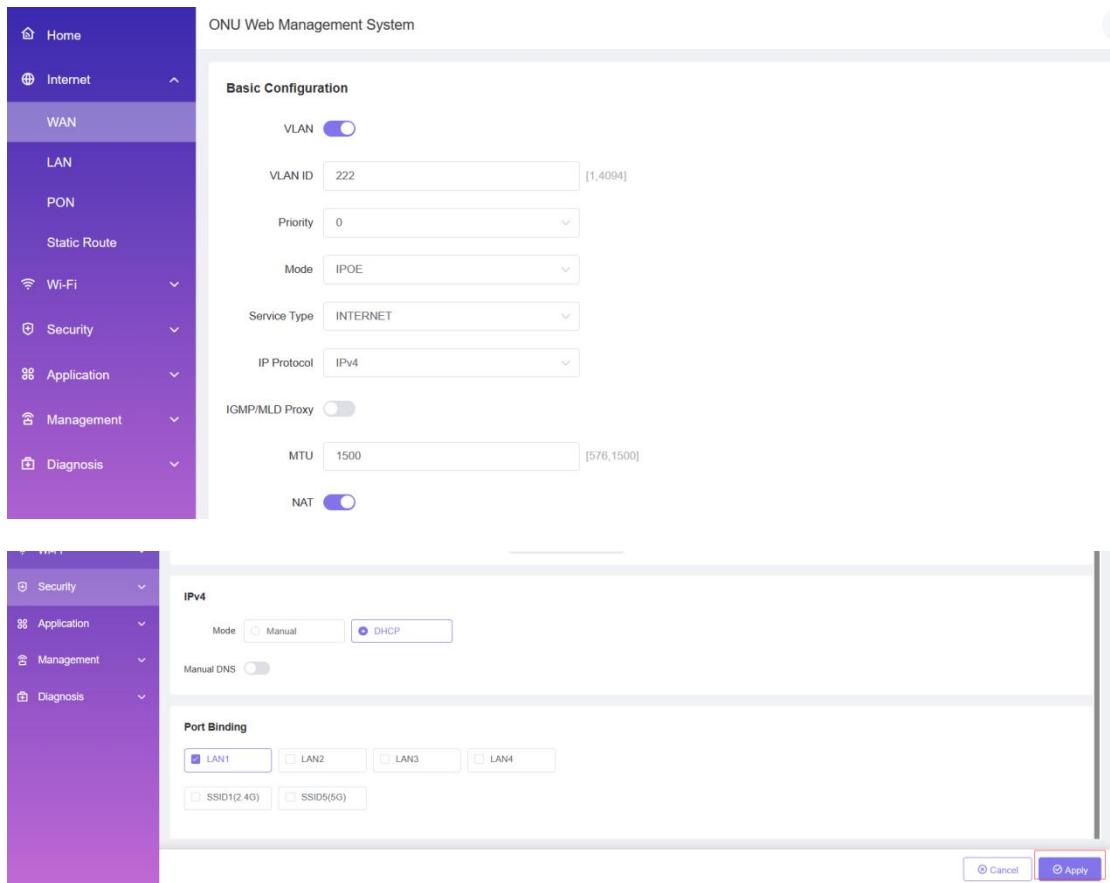

2. After configuring the parameters of DHCP WAN connection as below, click ‘Apply’ to finish the setting.

6.1.3 Configure Static IP Address WAN Connection for Internet in Route Mode

Login ONU WEB, select **Internet** -> **WAN**->Click “Add ” button, and then there are some parameters for us to configure as follows:

【Vlan】 We can set this option according to your network plan. If there is vlan in the network for internet, we have to chick ‘ VLAN ‘ option. If not, we needn’t check this option, which will be VLAN transparent mode.

【Vlan ID】 Configure this option according to our network plan.

【Priority】 Set the priority of vlan, The same as "Vlan", depending on the network vlan planning to configure. The default priority is 0.

【Mode】 Choose IPOE.

【Service Type】 Choose Internet.

【IP Protocol】 Select ‘Ipv4’; If there is Ipv6 in the network, we can select ‘ Ipv4/Ipv6 ’.

【MTU】 The default is 1500; we have to change to lower MTU, **such as 1400**, if we can ping the DNS but not access the website via WEB browser.

【NAT】 Check ‘ NAT ’ feature; NAT is mainly used for address translation function of local

network and external network. The default is checked enable status. If you do not check this option, maybe you can't surf the internet.

IPv4 :

【Mode】 Select ' Manual'.

【IP Address】 Set static IP address;

【Mask】 Set the mask of static IP address;

【Gateway】 Fill in the address of the gateway

【Manual DNS】 Closed for modification, need config DNS.

【Primary DNS】 Set static primary DNS address and secondary DNS address;

【Secondary DNS】 Set static second DNS address and secondary DNS address;

【Port Binding】 Bind the physical ports with Static WAN connection.

Note: By default, all LAN ports and WIFI data are not bound by this WAN connection (a LAN and WIFI SSID can only be bound to a WAN connection at the same time).

After configuring the parameters of Static IP WAN connection as below, click ‘**Apply Changes**’ to finish the setting.

6.2 Configure Bridge WAN Connection for Internet

Login ONU WEB, select **Internet -> WAN->Click “Add ” button**, and then there are some parameters for us to configure as follows:

【Vlan】 We can set this option according to your network plan. If there is vlan in the network for internet, we have to chick ‘ VLAN ‘ option. If not, we needn’t check this option, which will be VLAN transparent mode.

【Vlan ID】 Configure this option according to our network plan.


【Priority】 Set the priority of vlan, The same as "Vlan", depending on the network vlan planning to configure. The default priority is 0.

【Mode】 Choose Bridge.

【Service Type】 Choose Internet.

【Port Binding】 Bind the physical ports (Lan port 1-4 and wireless) with Bridge WAN connection.


Note: By default, all LAN ports and WIFI data are not bound by this WAN connection (a LAN and WIFI SSID can only be bound to a WAN connection at the same time).

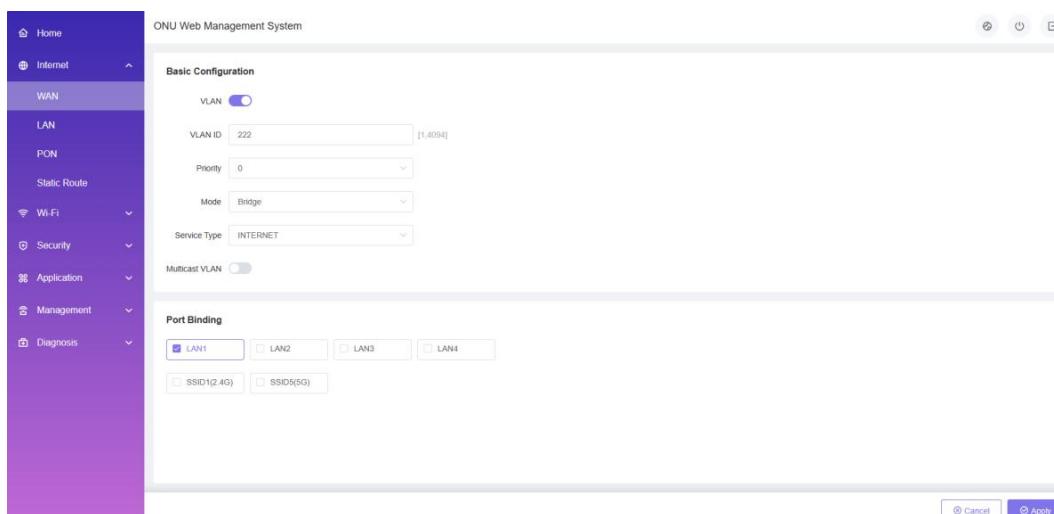

After configuring the parameter of Bridge WAN connection as above, click ‘**Apply**’ to finish the setting.

6.3 View the WAN Connection Status

Login ONU WEB, select **Internet-->WAN**. In here, we can view WAN connection status, check the route WAN connection if it gets an IP address and Bridge WAN connection , **Down or UP**. As follows:

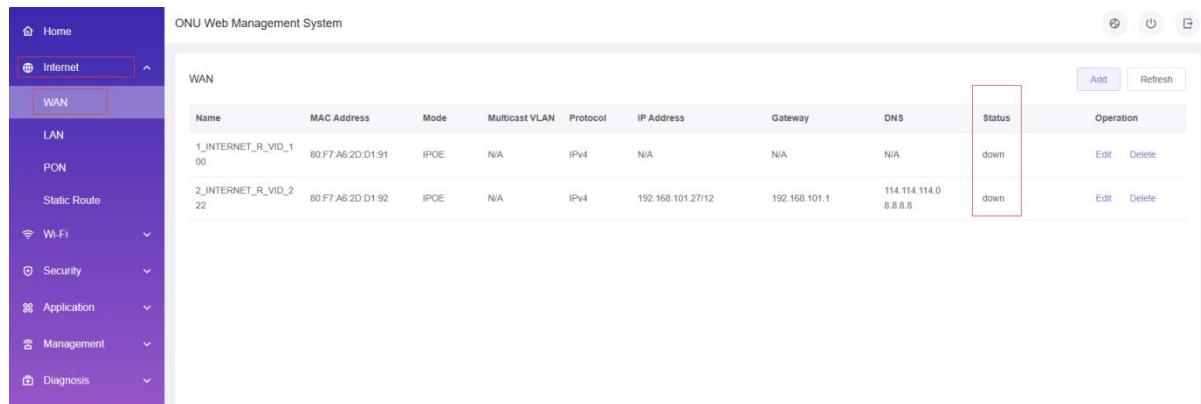


The screenshot shows the ONU Web Management System interface. The left sidebar has a purple background with various navigation options: Home, Internet (selected), WAN (selected), LAN, PON, Static Route, Wi-Fi, Security, Application, Management, and Diagnosis. The main content area is titled 'ONU Web Management System' and shows a table for 'WAN' connections. The table has columns: Name, MAC Address, Mode, Multicast VLAN, Protocol, IP Address, Gateway, DNS, Status, and Operation. There are two entries: '1_INTERNET_R_VID_1' and '2_INTERNET_R_VID_2'. Both entries show 'down' in the Status column. The 'Operation' column for each entry contains 'Edit' and 'Delete' buttons.

Name	MAC Address	Mode	Multicast VLAN	Protocol	IP Address	Gateway	DNS	Status	Operation
1_INTERNET_R_VID_1	80:F7:A6:2D:D1:91	IPOE	N/A	IPv4	N/A	N/A	N/A	down	Edit Delete
2_INTERNET_R_VID_2	80:F7:A6:2D:D1:92	IPOE	N/A	IPv4	192.168.101.27/12	192.168.101.1	114.114.114.0 8.8.8.8	down	Edit Delete

6.4 Delete the WAN Connection

Login ONU WEB, select **Internet-->WAN->Click “Delete” button**, then brings up a pop-up window to confirm it.

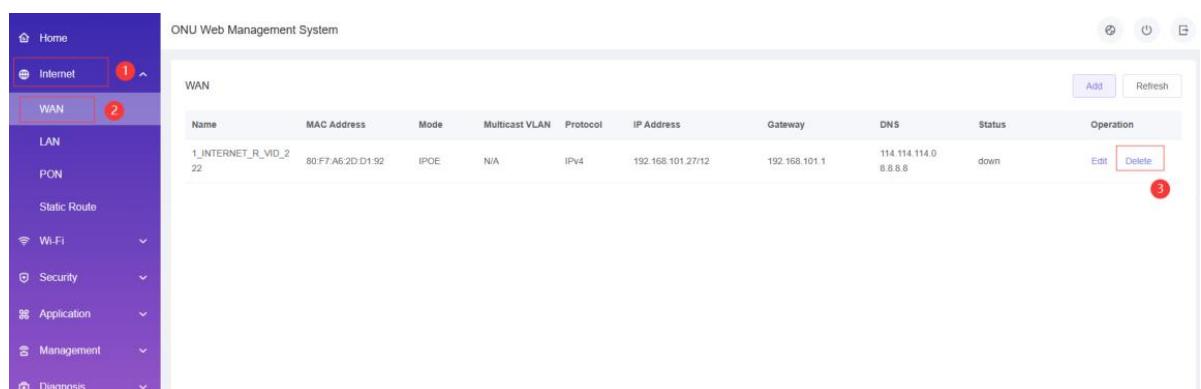

This screenshot shows the same ONU Web Management System interface as the previous one, but with a red circle and the number '1' over the 'Internet' button in the sidebar, and another red circle with '2' over the 'WAN' button. A third red circle with '3' is over the 'Delete' button in the 'Operation' column of the table. A small pop-up window is visible in the bottom right corner, asking for confirmation to delete the selected WAN connection.

7 ONU LAN Configuration


7.1 LAN IP Address Configuration

Login ONU WEB, select **Internet->LAN** and then there are some parameters for us to configure as follows:

【IP address】 Set local management IP address of ONU. The default IP address is 192.168.101.1.

【Mask】 Set the mask of local management IP address of ONU.


【Port Isolation】 Default is Disable.

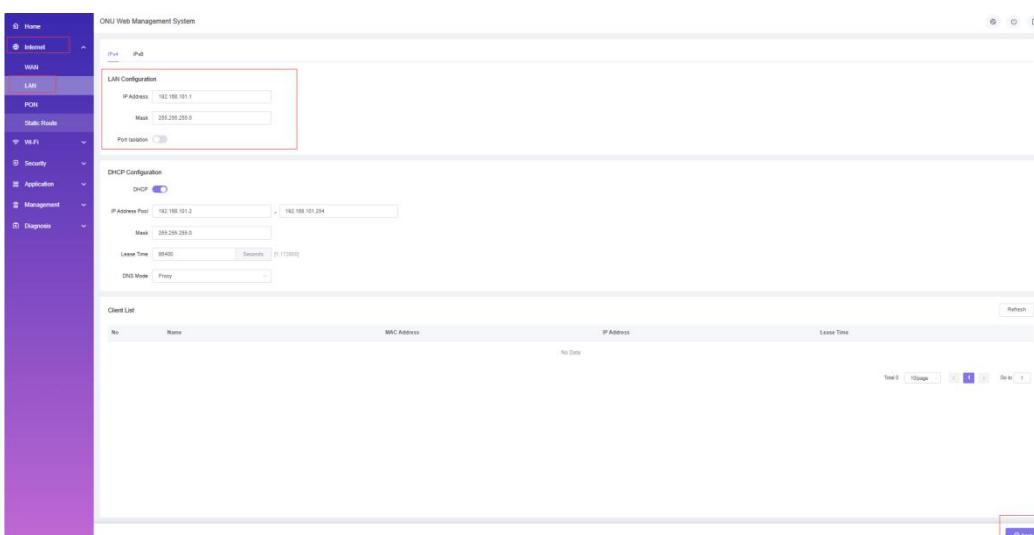

After configuring the parameters of LAN address as above, click ‘**Apply**’ to finish the setting

7.2 View LAN Client

Login ONU WEB, select **Internet->LAN**. View client that access via LAN ports . As follows:

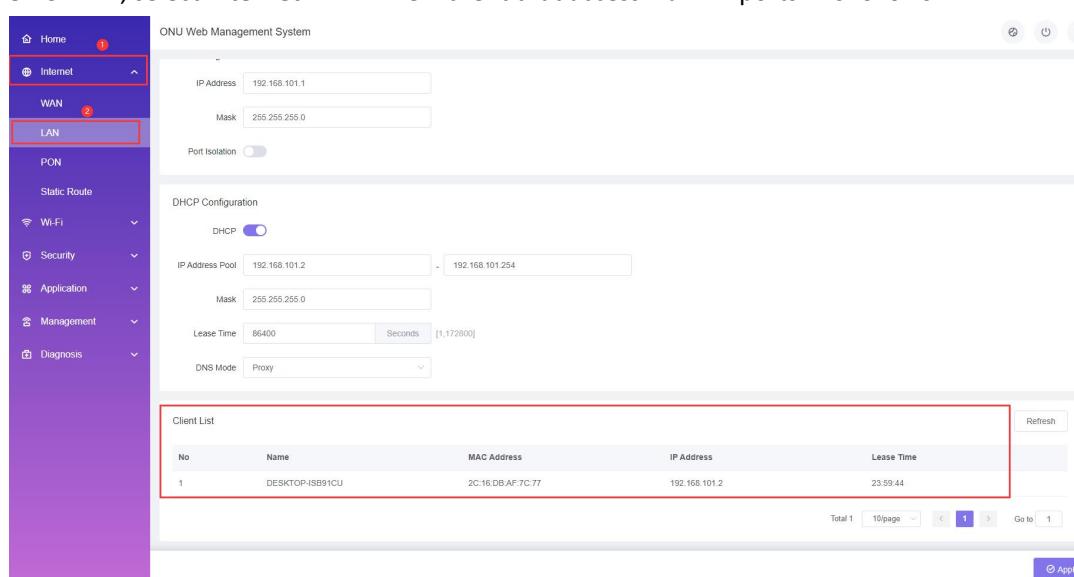

8 WLAN Configuration

8.1 Wireless 2.4G wifi configuration

8.1.1 2.4G WLAN Advance Configuration


Login ONU WEB, select **Wi-Fi->Advance->2.4G**, and then there are some parameters for us to configure as follows:

【Mode】 The default is 802.11 b/g/n.

【Country/Region】 Choose the corresponding city according to your own area.

【Bandwidth】 Default is Auto;

【Channel】 The default is Auto; We can select a channel without glitches by manual according to the surrounding environment;

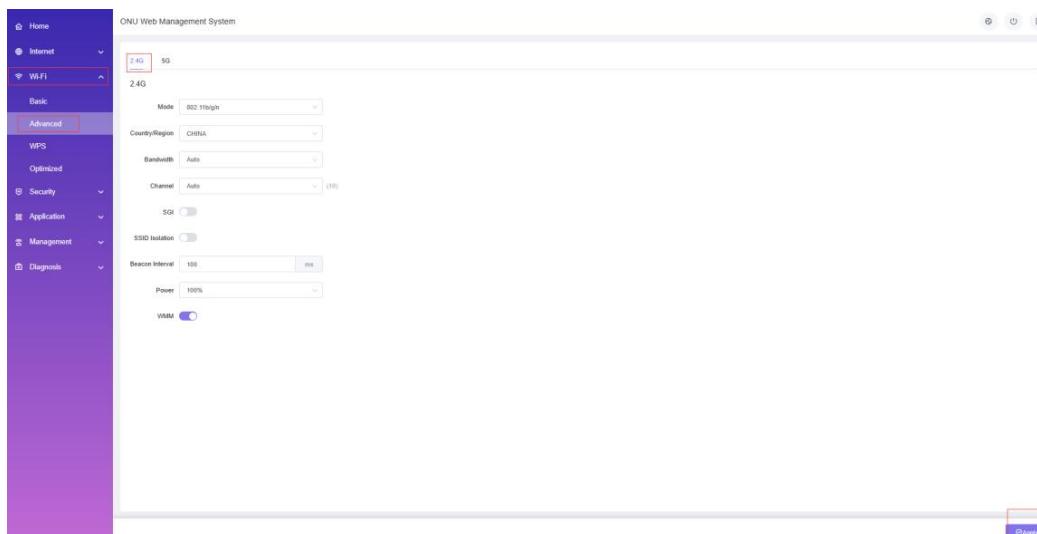

After setting wireless configuration, click ‘**Apply**’ button to finish setting.

8.2 Wireless 5G wifi configuration

8.2.1 5G WLAN Advance Configuration


1. Login ONU WEB, select **Wi-Fi->Advance->5G**, and then there are some parameters for us to configure as follows:

【Mode】 The default is 802.11 a/n/ac.

【Country/Region】 Choose the corresponding city according to your own area.

【Bandwidth】 default is Auto;

【Channel】 The default is Auto(DFS); We can select a channel without glitches by manual according to the surrounding environment;

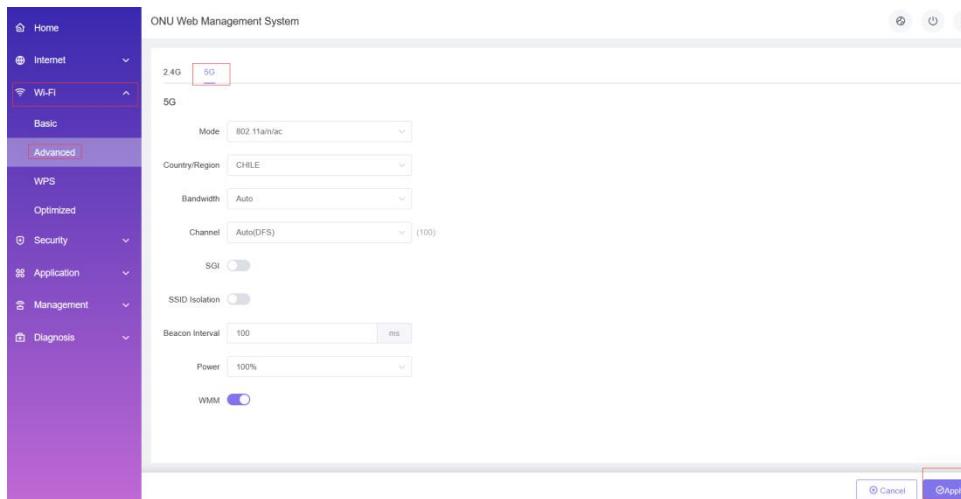


After setting wireless configuration, click ‘**Apply**’ button to finish setting.

9 TR069 Remote Management

ONU TR069 remote management is mainly used for some network that support TR069 server centralized remote management, the current management is mainly used in many large networks, ONU as TR069 remote management of the client need to do the following settings.

9.1 Configure Channel for TR069 Remote Management


Firstly, refered to #6.2, set a Route WAN connection with ‘Service Type’ as TR069, which is used to act as a channel for TR069 server.

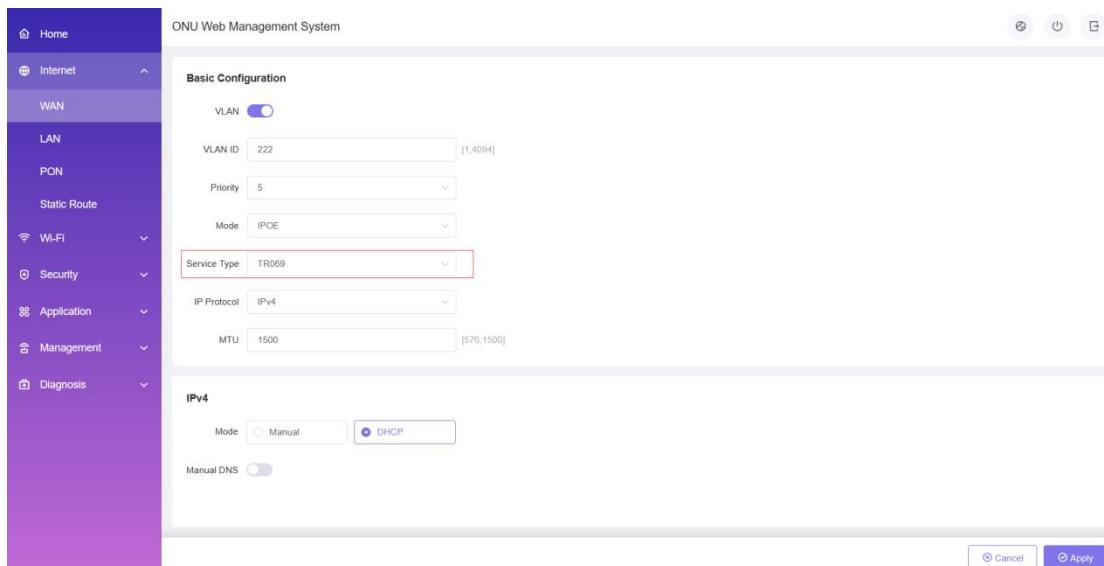

9.2 TR069 Client Configuration

Login ONU WEB, select **Management->Remote Management**. In this page, we can set ONU's parameter of TR069 client (User Name, Password, URL).

Note: All of parameters of TR069 are offered by ISP.

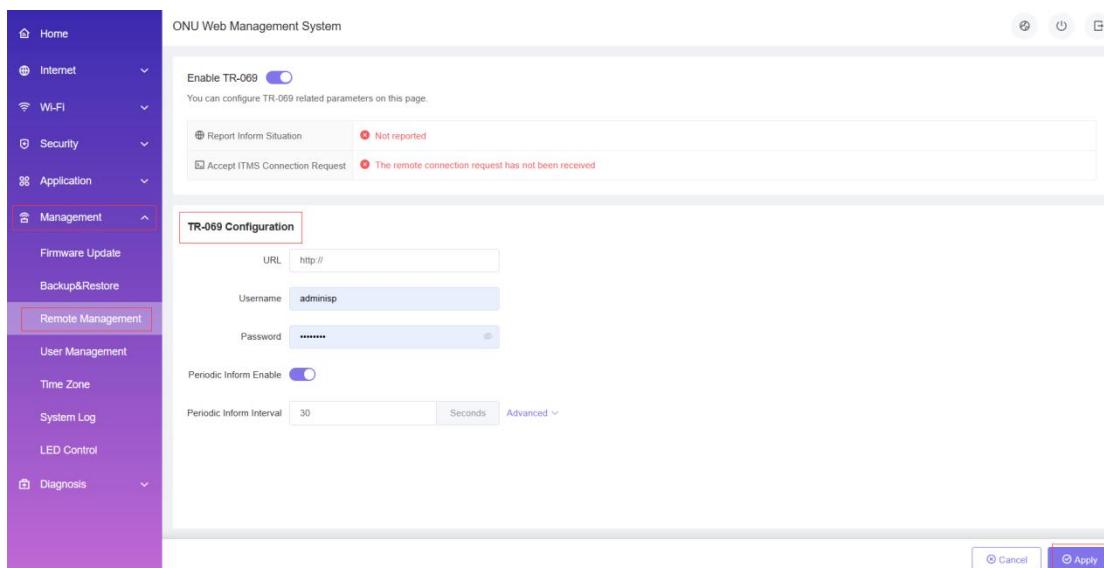

After setting wireless configuration, click 'Apply' button to finish setting.

11 The Configuration for VoIP

11.1 SIP Settings

Firstly, login onu's web and configure a WAN connection to carry Voice service according to #6.1 or 6.2 and select "VOICE" or "VOICE_INTERNET" or "VOICE_TR069" or "VOICE_INTERNET_TR069" in Service List.

Then select **Voip->Basic**, and then there are some parameters for us to configure as follows:

【Number1/2】 Fill in the telephone number.


【Username】 Fill in the Auth User name that can register to the voice server.

【Password】 Fill in the password that can register to the voice server.


【Password】 Fill in the password that can register to the voice server.

【Register Server】 Fill in the Register Server's ip address.

【Proxy Server】 Fill in the Proxy server IP

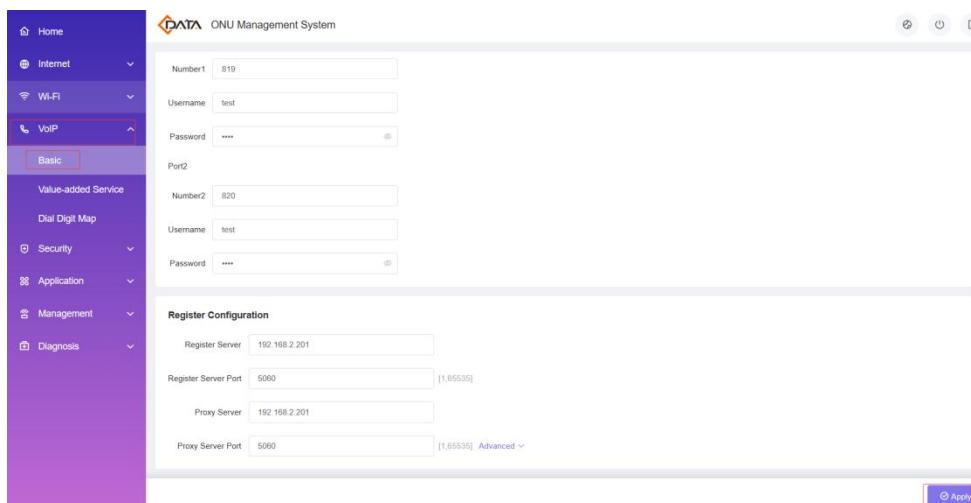

The direction of the arrow can see the status of the registration

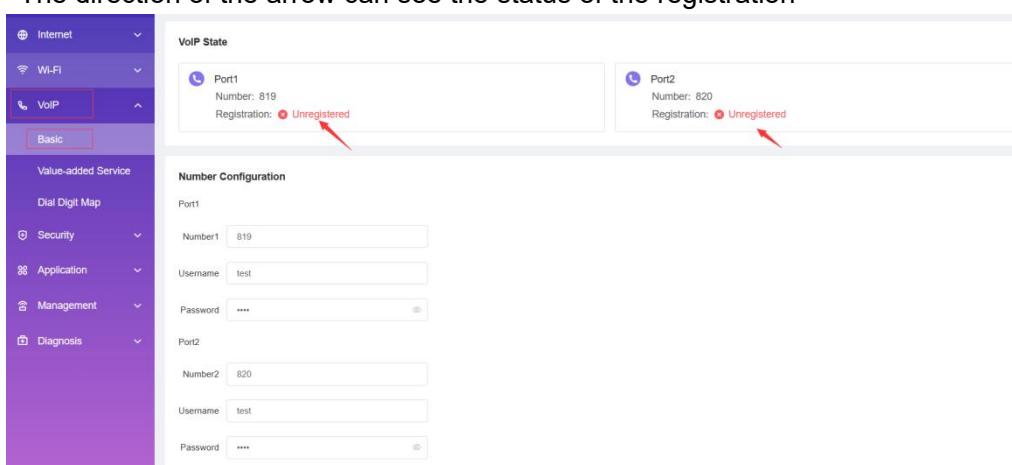


12 CATV Configuration

CATV management is mainly applied to ONU with light machine, we need to configure the ONU optical machine parameters through the ONU's WEB.

12.1 Configure CATV Port Parameter

1. Select CATV .
2. CATV Module, we can enable or disable CATV port.
- 3.Click “More” button to set the the parameters.

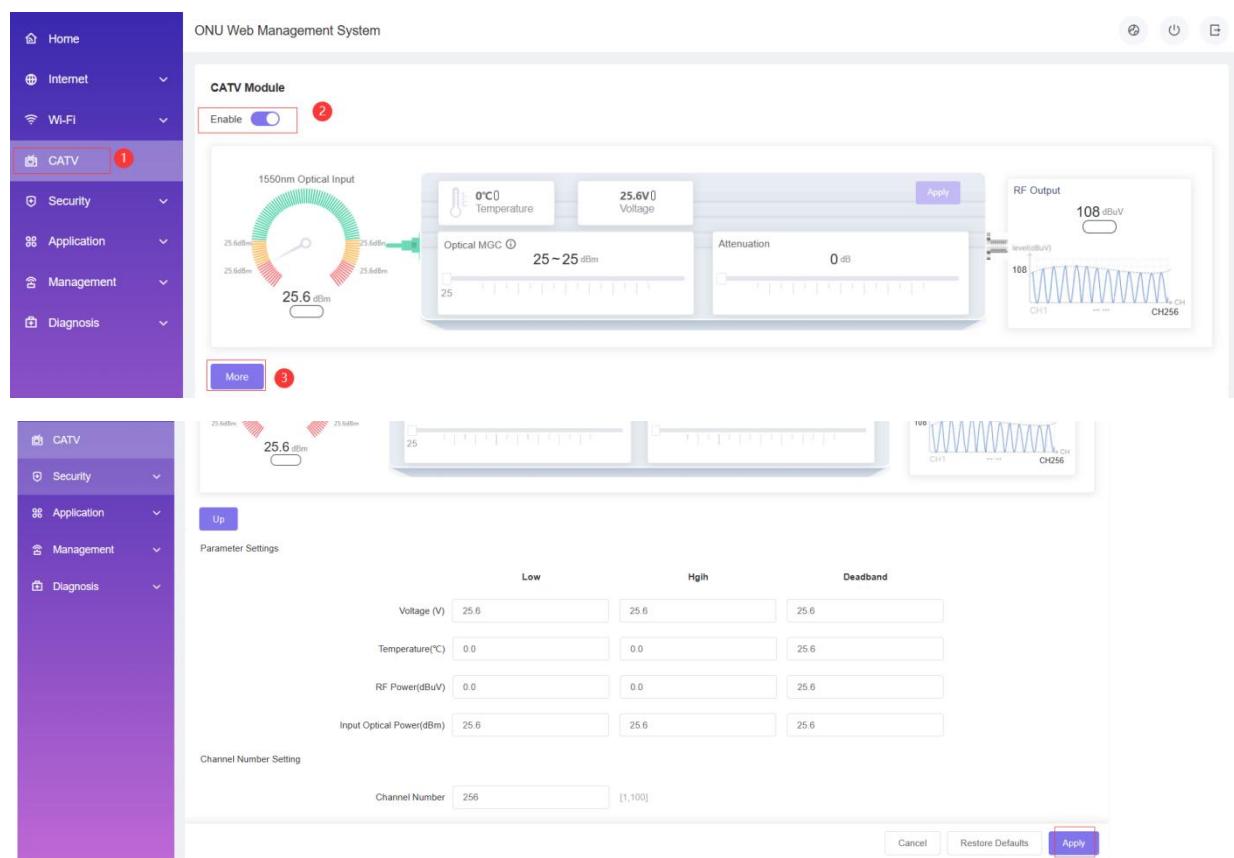


Click ‘Apply’ button to finish the setting


13 Device Management

13.1 Restore Default Setting

Login the ONU WEB. Select **Management** --->**Backup/Restore** . Click ‘**Factory Restore**’ button. The device will restore the factory defaults after the application.

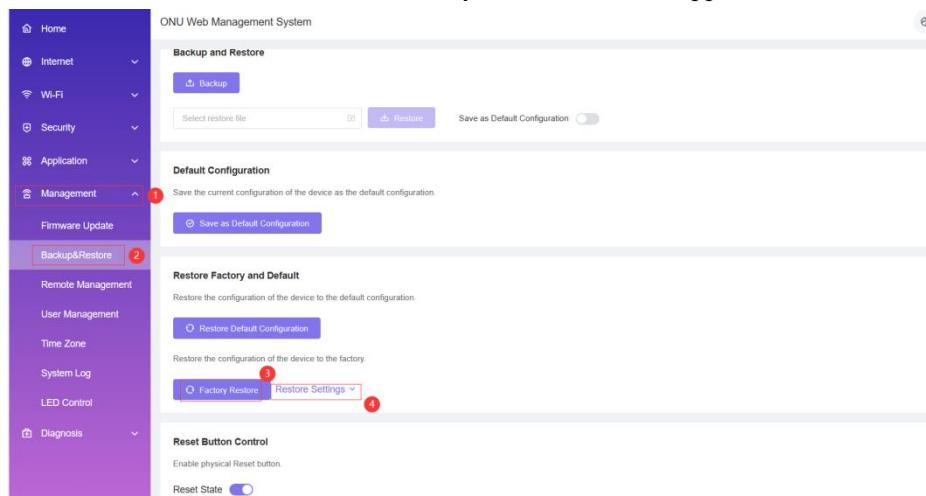


Click ‘**Restore Settings**’ button, You can choose some configurations not to revert to factory settings

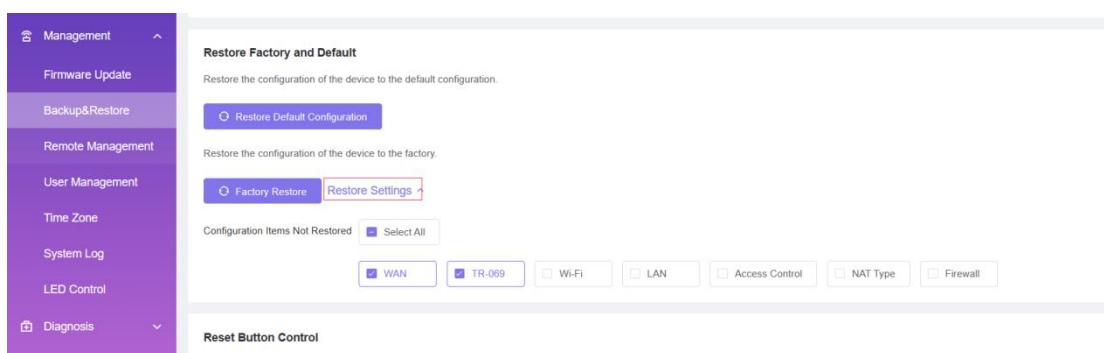

13.2 Firmware Upgrade


Login the ONU WEB. Select **Management** ->**Firmware Update**. Click ‘**+**’ to select firmware file, click ‘**Upgrade**’ button to upgrade the ONU. After the application, the device is upgraded to the latest software version.

Note: We needn’t extract Realtek project production’s firmware, just upgrade the .tar file. It will take 4 minutes to upgrade. After upgrading, the ONU will reboot automatically. We needn’t reboot it by manual.

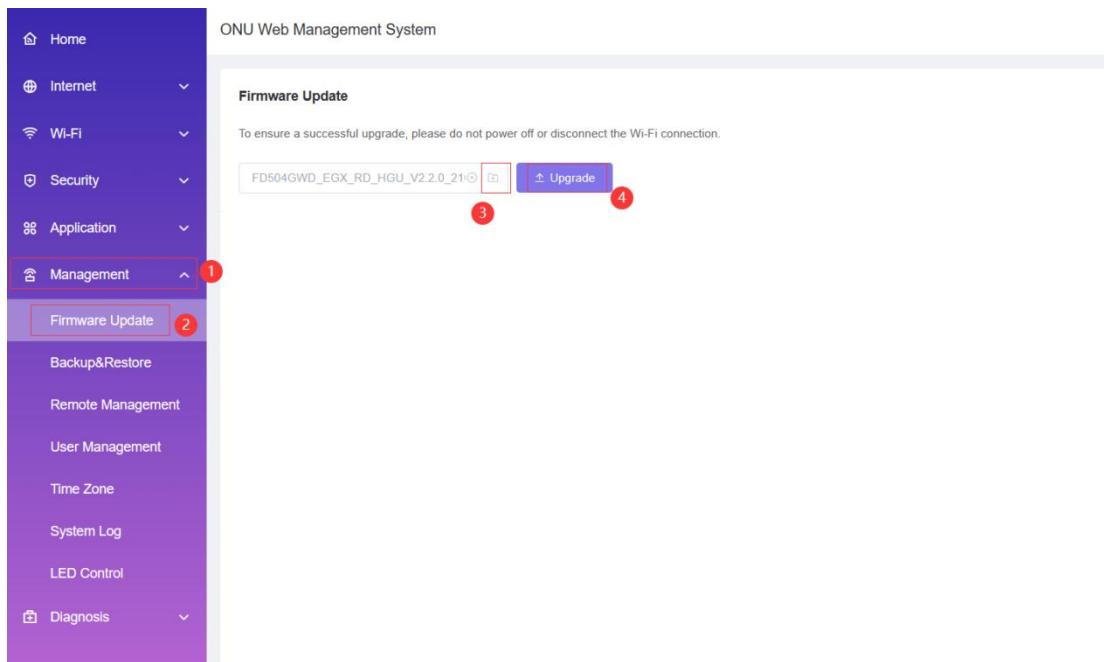

13.3 Device Reboot

Login the ONU WEB. In the top right corner of the main menu, see the direction of the arrow.
Restart the device immediately after application.

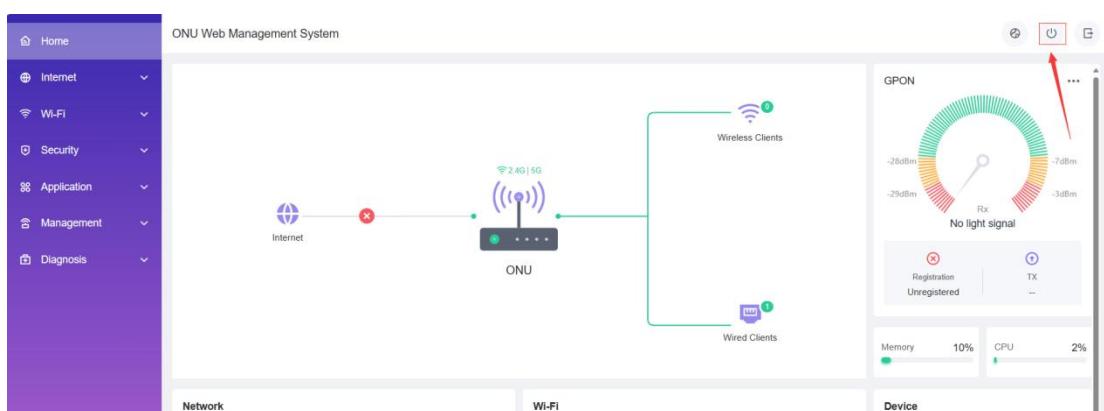

Copyright © Shenzhen C-Data Technology Co., Ltd. 2023. All rights reserved.

Without the prior written consent of C-DATA, any reproduction, excerpting, backup, modification, translation or any other form of commercial use of this document or any portion of this document, and in any form or by any means, to transmit the document are prohibited.