

 


V1.1

Model O WIFI Lock

Installation and Setup guide

Required tools



Door checker paper



Phillips head screwdriver

Additional Tools (depending on application)



Hammer



Chisel

Table of Contents

Before You Begin	1
What's Included	2
Explosive View	3
Installation Instructions	4
Using Your Lock	11
Set Up with APP	12
Features	13
FAQ	14
FCC/Return and Warranty Information	15

Before You Begin

1

Download the Sifely Smart Lock App

Start with the Sifely app for step by step installation videos, which is much simpler and more comprehensive than following paper instructions.



2

If you're only handling the installation and don't need to download the app, no worries! Simply scan the QR code to view the step-by-step interactive instructions.







3

No internet? No porblem

Follow this Quick start guide to install you lock

What's Included

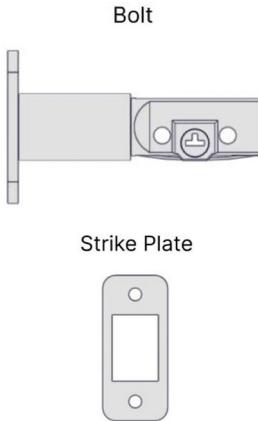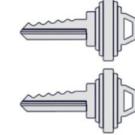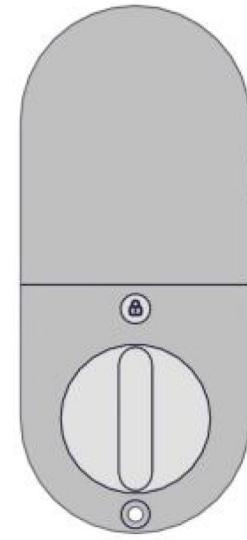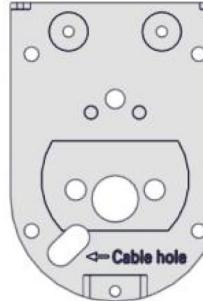Latch and strike	Exterior Assembly	Interior Assembly	Screws
 <p>Bolt</p> <p>Strike Plate</p>	 <p>Exterior Keypad</p> <p>1 2 3 4 5 6 7 8 9 * 0 </p> <p>SIFELY</p> <p> Fobs</p> <p> Keys</p>	 <p>Interior Lock</p> <p> Cable hole</p>	 <p>Strike Plate Screws</p>  <p>Bolt Screws</p>  <p>Mounting Plate Screws</p>  <p>Interior Lock Screws</p>




Phillips head screwdriver



Note: No drill needed


Explosive View

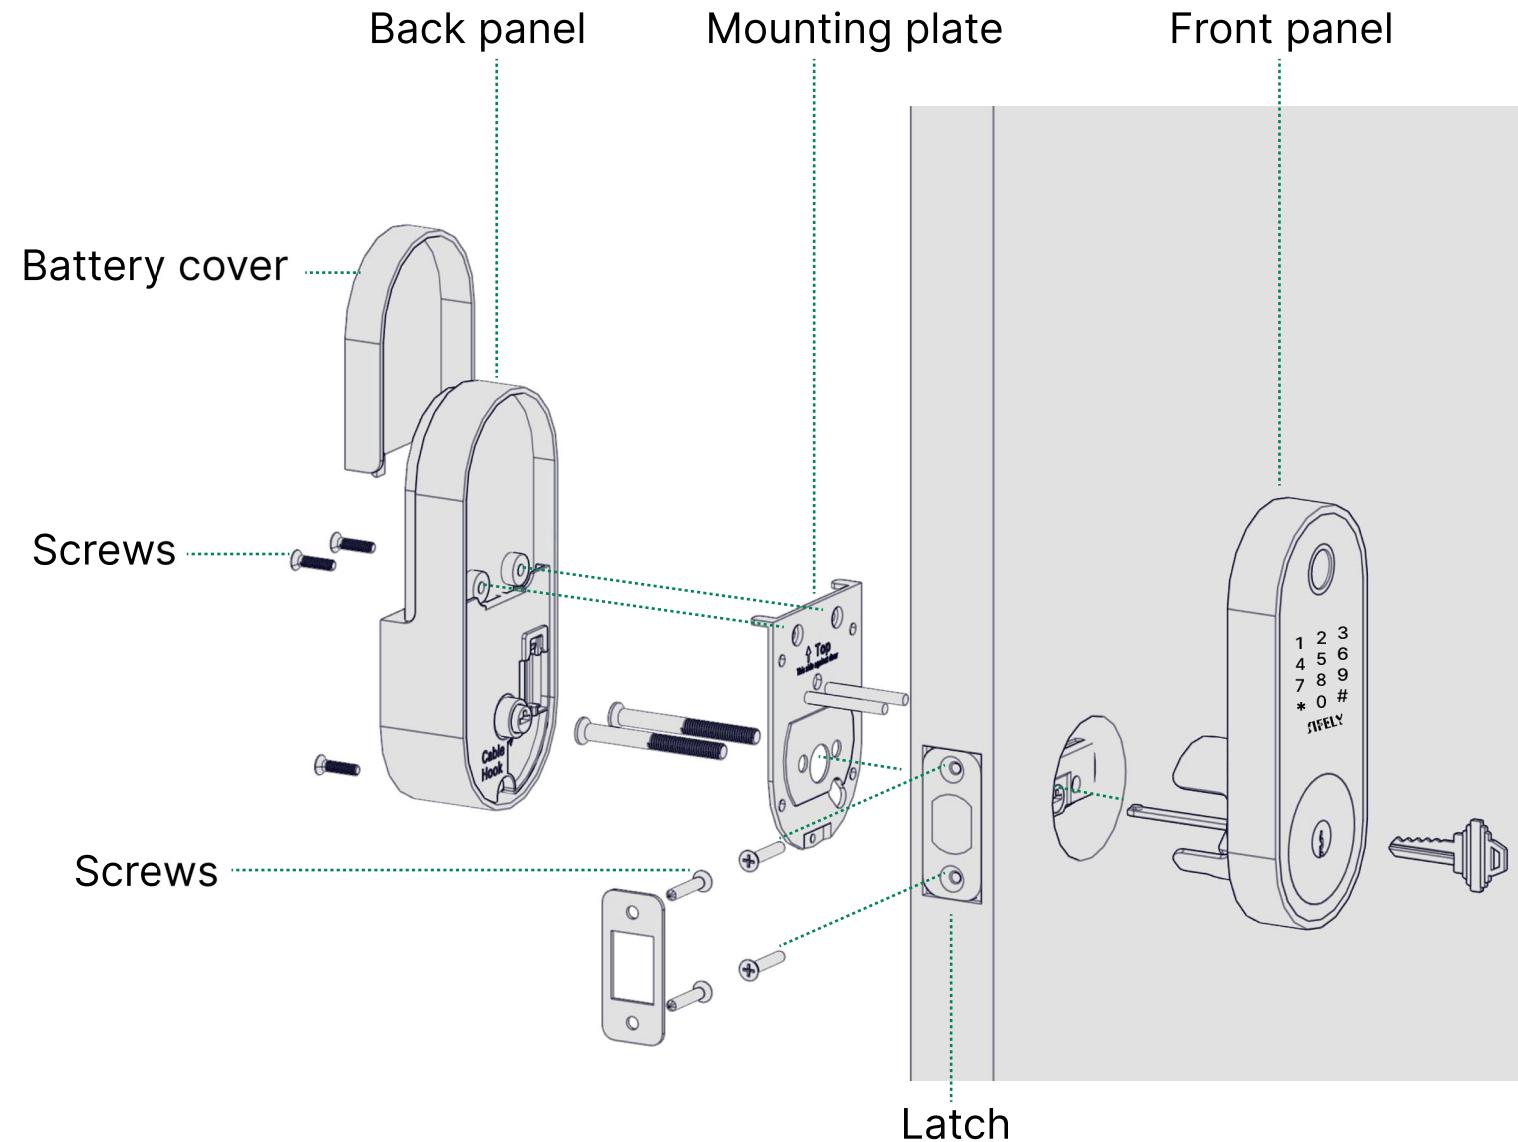


1

Adjust the backset of latch (if needed)


Hold the bolt in front of the door hole to check the T-shaped hole centered in the door hole.

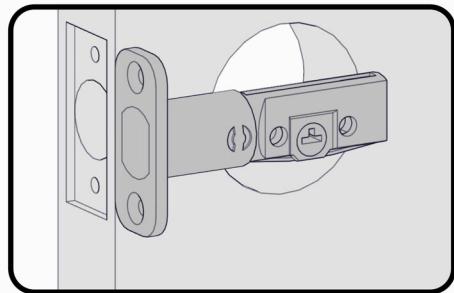


If the T-shaped hole is centered in the door hole. No adjustment needed! Proceed the next step.

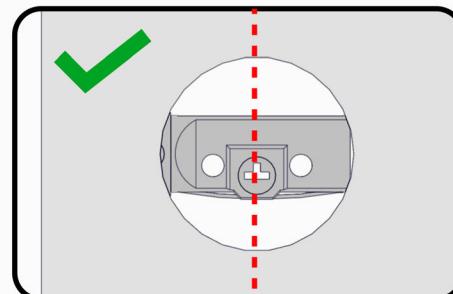

If the T-shaped hole is NOT centered in the door hole, adjust needed. See "Bolt adjustment"

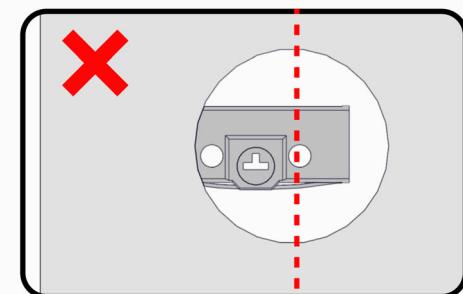


Bolt adjustment(only if needed)

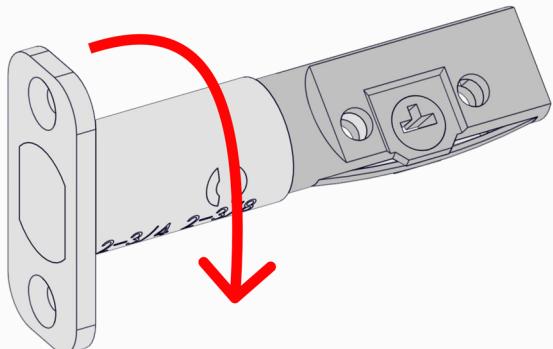

Install the bolt.


- Align strike plate with deadbolt latch.
- Make sure UP arrow on the deadbolt is facing upwards.

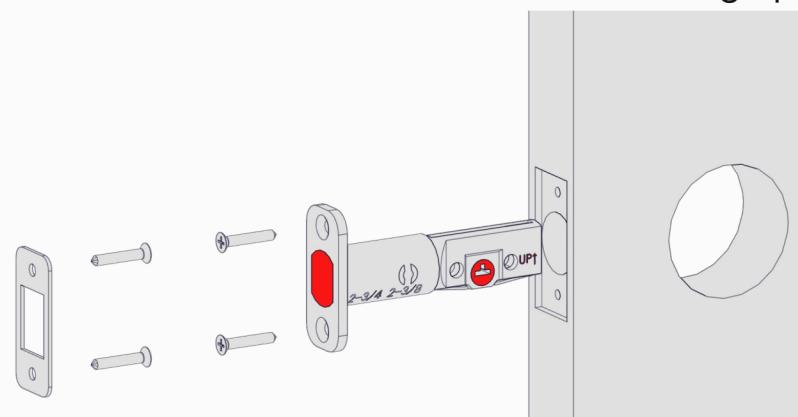

Note: If the deadbolt latch is extended, use a small flathead screwdriver to rotate slot until deadbolt latch is retracted.

2 Install Exterior Keypad


1. The bump on the tailpiece aligns with the slot in the bolt as shown.
2. Guide the wire cable **UNDER** the deadbolt.
3. Slide the keypad in place, making sure its on the exterior part of your door.

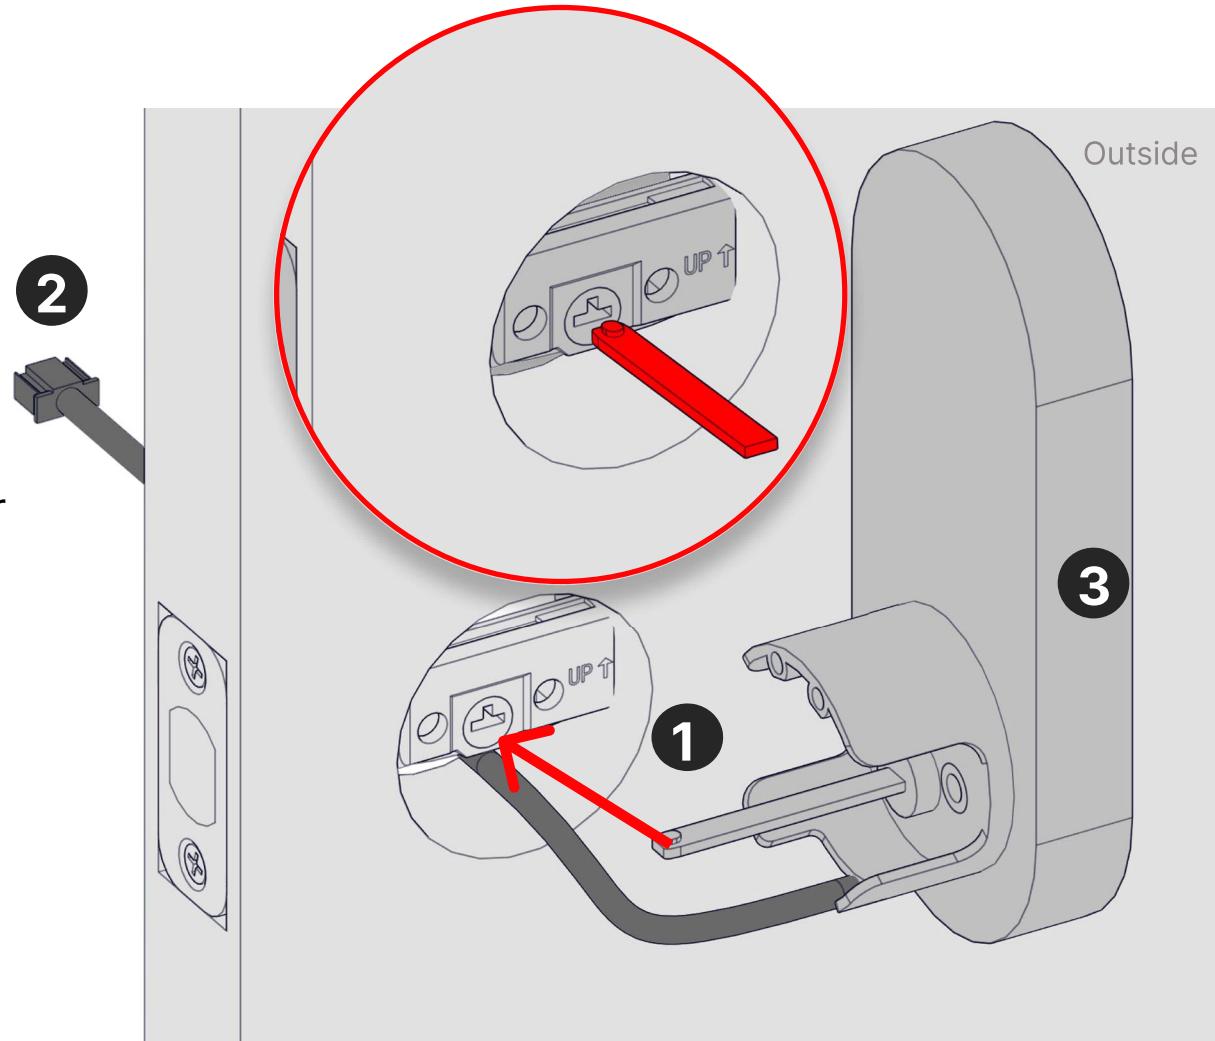

Install your lock with the door open. Do not close your door until all the steps are completed.

3 Install Mounting Plate


1. Route the cable through the cable hole on the bottom of the mounting plate.
2. Guide posts of the mounting plate into the holes on the exterior keypad.
3. Tighten screws with a screwdriver to secure the mounting plate with screws. Make sure the outside keypad and the mounting plate is straight before tightening screws all the way.

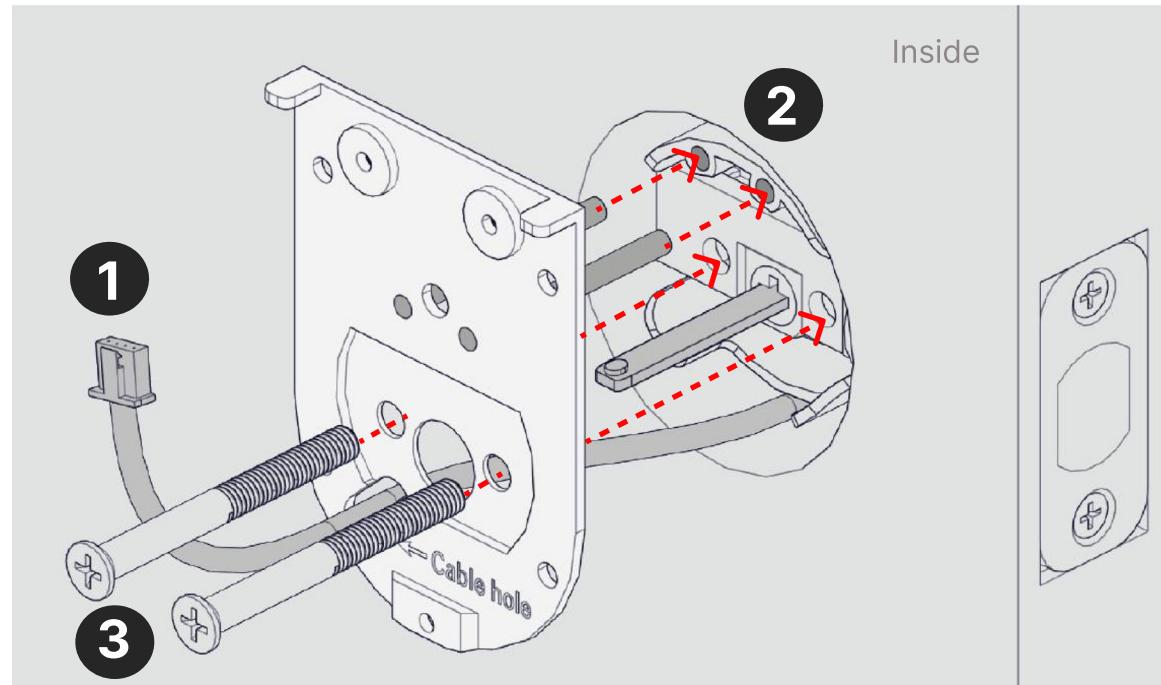

- Refer to measurements B, C, and D on the Door Checker paper to select screws.
- Ensure that screws are secure enough, but DO NOT over tighten screws.


4 Attach Wire Cable to Interior Lock

1. Remove battery cover by pulling it upwards off the body of the interior lock.
2. Make sure the side of the cable end with the ridges and the marked line faces outward.
3. Push cable into the designated slot until you hear a click.
4. Route the cable into cable hook.

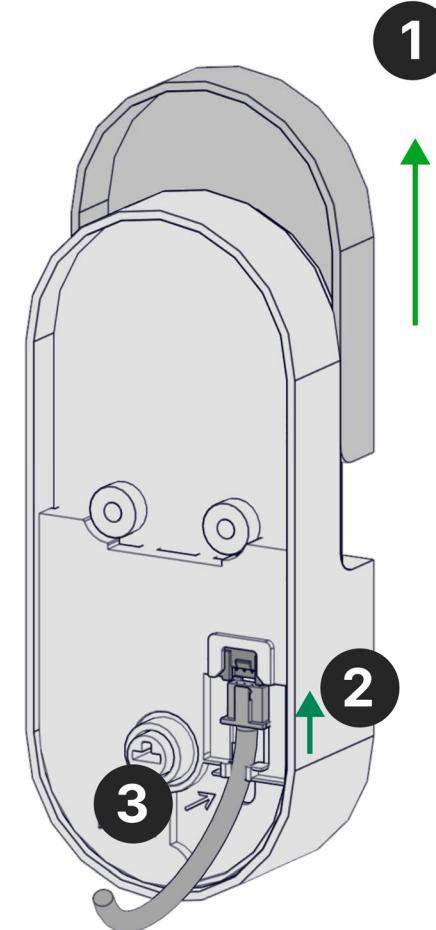


Please DO NOT install batteries until complete step 6

5 Install Interior Lock

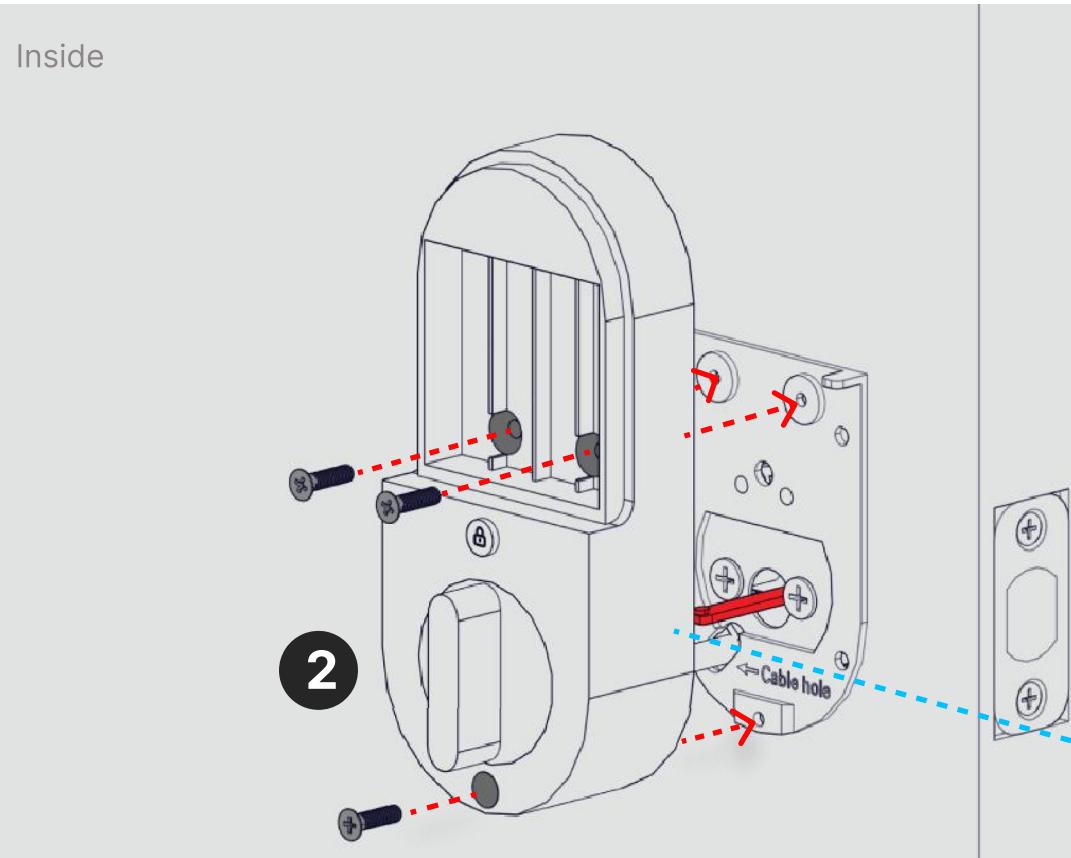

1. Slide the tailpiece through the designated slot on the back of the thumbturn. The bump on the tailpiece aligns with the slot in the back of the inside assembly.
2. Attach the interior lock against the mounting plate and tighten 3 screws.

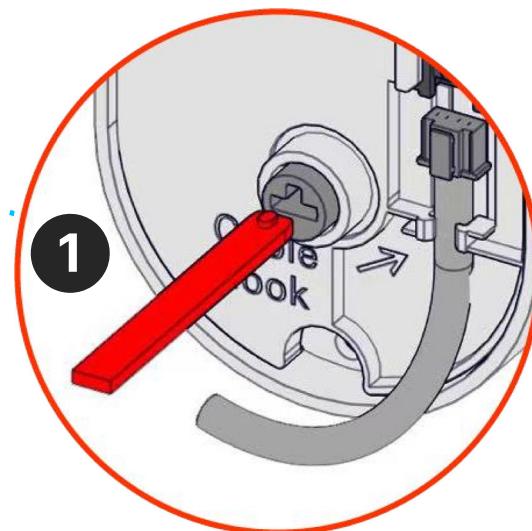


When fully tightened, lock should be flush to door.

6

Perform Calibration for your door

1. Keep your door open
2. Install 4AA batteries.
3. Enter "123456#", your lock will enter door handing process. When the bolts stops moving, the process is complete.

Your lock is now installed!
Remember, you still have to set up your lock to use it.

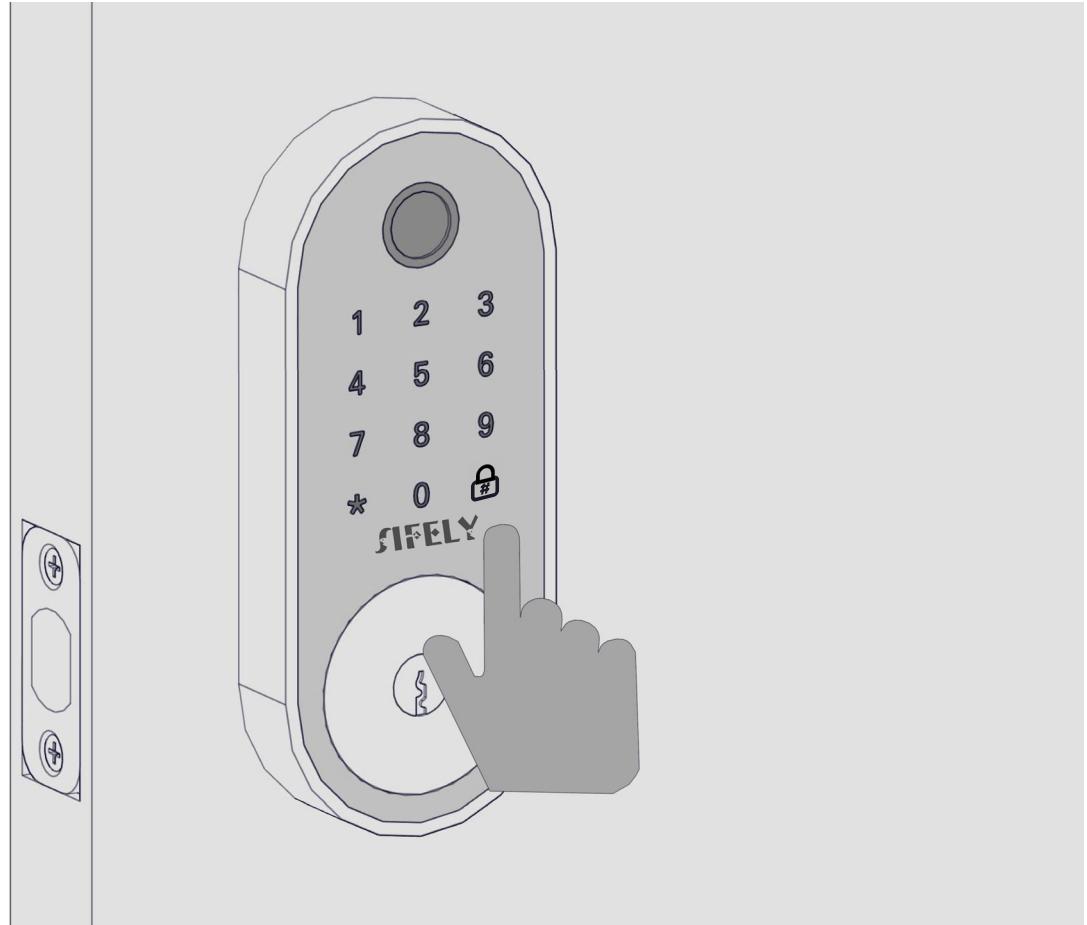

Need Help?

If the bolt doesn't extend or retract during testing, visit sifely.com/faqs-0.

7

Test the lock and check door alignment

With the door open,insert the key to extend the bolt. Ensure that the bolt extends smoothly.



Turn the key 90° to retract the bolt. Ensure that the bolt retracts smoothly.



Close the door,Insert and rotate the key to lock the door. Ensure that the door locks smoothly.




Turn the key 90° to retract the bolt. Ensure that the door unlocks smoothly.



Ensure that the bolt opens and closes smoothly will optimize battery life. If the bolt doesn't extend or retract during testing, visit sifely.com/fags-0 Or contact sifely Customer Support at sifely.com

Using Your Lock

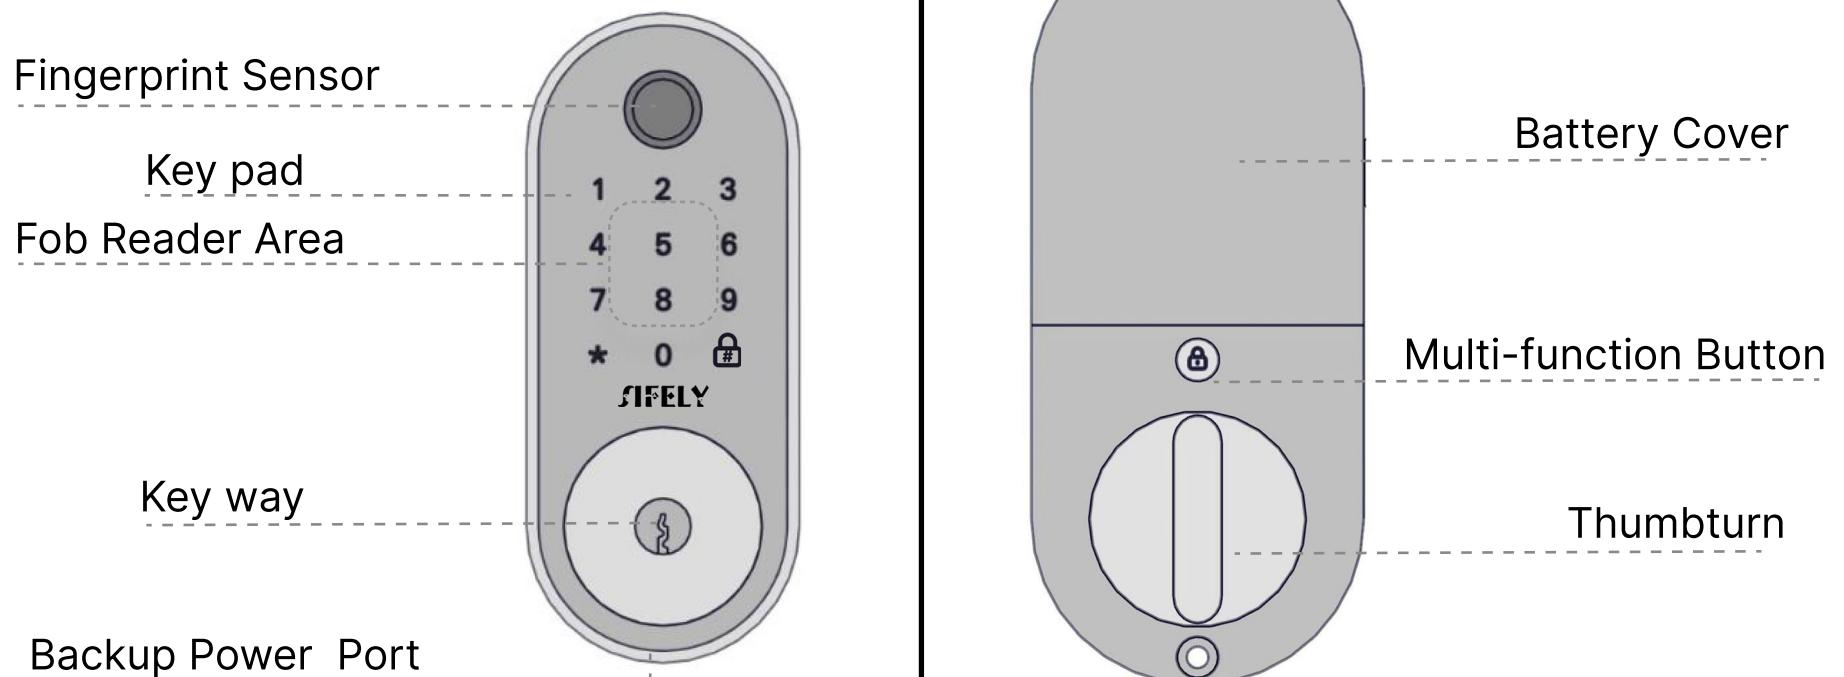

Lock your door from outside:

1. Wake up the keypad first, press and hold # on keypad.
2. Enable auto-lock feature and the lock will lock automatically.
3. Open app and tap  icon within bluetooth range.

Unlock your door from outside:

1. Wake up the keypad tap you code + # to unlock.
2. Place your finger on fingerprint scanner.
3. Place your Fob on fob reader area.
4. Open app and hold  icon with in bluetooth range.

Set Up with APP

Scan the QR code or visiting sifely.com/download on your smartphone. Register Sifely account and log in the account, Pair the lock follow the app guide and start to use it.



The Sifely app is needed to use this lock. If this lock was professionally installed (or installed by someone other than the homeowner), make sure this step is performed by the homeowner.

Features

eKeys	eKeys work by sharing App access of your lock with another Sifely account. Lock admin can manage ekeys in Sifely App.
Passcodes	Passcodes are used to unlock your door. Create entry codes from the "Passcodes" tab in the Sifely App. You can set permanent, recurring, and temporary entry codes.
Fingerprint	Unlock your door by scanning your fingerprint.
Cards	Cards are used to unlock your door by wipe it on the Fob reader area. You can add permanent, timed, and recurring card with Sifely App.
Passage Mode	Use passage mode when you want to disable Auto-Lock for an extended period of time. Press and hold the Multi-function button 10s until you hear the voice response to turn it on. Locking from outside or inside will automatically turn passage mode off.
Auto-Lock	Auto-Lock automatically locks the door for you. It can be set to lock on a timer for as short as 5 seconds, or as long as 15 minutes. When using the Auto-Lock feature with wireless door sensor, your door will not lock until it is closed. Auto-lock can be set up in the lock settings of the app.
Privacy Mode	Use privacy mode when you don't want to be disturbed by someone else with a code. Press the Multi-function button will turn it on. You can disable the privacy button in Lock Settings>Privacy Mode.
Remote Unlock/lock	Use the Sifely App control the lock anywhere/anytime.

FAQ

Q: I entered a code or fingerprint incorrectly too many times and my lock will not accept any new inputs.

A: Unlock the lock once via the app or wait 5 minutes.

Q: How can I manually lock the lock?

A: Press and hold # to lock the lock.

Q: The batteries died before I could replace them. What can I do?

A: Use the provided physical keys to open or plug in a powerbank into the slot on the underside of the keypad to power it up to be able to enter and change the batteries.

Q: How do I share access of the lock on 2 different phones?

A: Refer to eKeys or Authorized Admin section on how to do that is.



 SCAN ME

Explore our constantly updating FAQ for Sifely O Smart Lock

Not working like it should? Contact us with the following information for quicker resolution.

- Which product do you have?
- Where are you in the setup process?
 - Installing the product.
 - Setting up the app and pairing the product.
 - Already set up app with the product.
- How long have you had our products for?

Here is how you can contact us:

Email: cs@sifely.com

Live Chat: sifely.com

Text/SMS: 805-519-8895



 SCAN ME

Take a look at our FAQ
Got More Questions?



Warning: Changes or modifications to this device, not expressly approved by LIFYFUN LLC, could void the user's authority to operate the equipment.

Return and Warranty Information

Return Policy

30 day money back guarantee from date of purchase. Some exceptions may be made with a restocking fee on a case by case basis and buyer may be responsible for return shipping cost. For inquiries regarding this, please contact us at cs@sifely.com.

Product Warranty

We offer a 1 year free replacement from the date of purchase. To claim your warranty replacement, the first request or inquiry must be made within 1 year of date of purchase. Any requests or inquiries after 1 year from the date of purchase are not eligible for warranty. Sifely reserves the right to deny a replacement request. For inquiries regarding this, please contact us at cs@sifely.com.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



Please contact us before you decide to
return it! We are here to help.

For any technical questions or support,
please email us at cs@sifely.com
or visit our website sifely.com to chat with us.

Support is available:
MON-SUN- 9 AM to 5 PM PST
www.sifely.com