





Initiate TWS Pairing


- 1 If the both earphones have never been paired, the earphones will initiate TWS pairing mode right after earphones are removed from the charging case.
- 2 Touch and hold both MFB buttons of earphones for 5 seconds to initiate pairing mode when the earphones are turned off.

Power On/Off

- 1 Turn on/off the earphones by touching and holding MFB buttons for each earphone for 3 seconds.
- 2 Remove the earphones from the charging case, they will automatically be turned on and connected to your device. The earphones will automatically turn off when putting the earphones back into the charging case

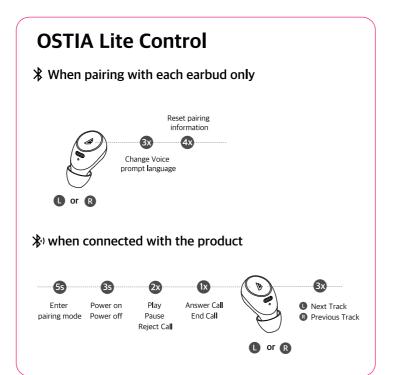

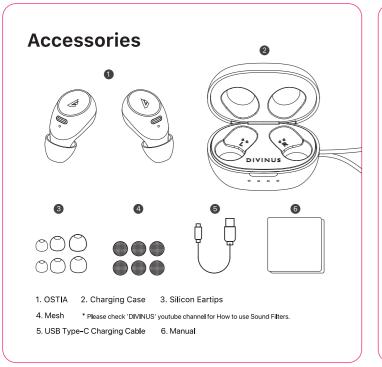

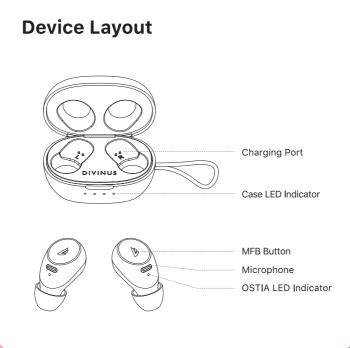

Basic Function

Power on

- Turn on earphones by touching and holding MFB buttons for each earphone for 3 seconds.
- Remove the earphones from the charging case, they will automatically be turned on and connected to your device.

Power off

- Turn off earphones by touching and holding MFB buttons for each earphone for 3 seconds
- The earphones will automatically turn off when putting the earphones back into the charging case.

TWS reconnection

If you have already initiated pairing mode, it will automatically reconnect to your device.

Auto power off

- 1. If there's no connection with the device for 2 minutes, the earphones will be turned off.
- The power will be turned off after 2 minutes when there's no operation after disconnecting the earphones.

Reset earbuds

Take the earbuds out from the charging case and touch both earbuds for 2secs to turn them off (Red LED lights on)

After the power is off for both earbuds, touch both earbuds for more than 10secs (White LED > After White and Red LED lights goes on/off)

When the LED lights are off take hands off from the touch pads and put them into the charging case

Call

Answer calls

Touch MFB button to answer incoming calls.

Refuse cal

Double touch MFB button to reject calls.

Hang u

When the call is finished, single touch of the MFB button to end the call.

Answer Incoming Call After Hanging Up the Current Call

If there is new incoming call during the call, single touch of the MFB button to hang up the current call and single touch of MFB button again to answer the new incoming call.

* This function requires mobile phone/wireless carrier support

Answer Call After Call Waiting

If there is new incoming call during the call, long touch of the MFB button to make the current call to wait and single touch of MFB button again to answer the new incoming call.

* This function requires mobile phone/wireless carrier support

Call Forwarding

If there are two callers in line, one in the current call, one waiting, long touch of the MFB button to make the current call to forward to another call.

* This function requires mobile phone/wireless carrier support

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.