

SHRP-TWS05 - Touch Tone Wireless Earbuds

User Manual - Black and White Printing

5 in

5 in

6.5 in

WARNING

Please disconnect the charger and turn your product off before cleaning. Warranty will be voided if you attempt to disassemble the product yourself. Placing the product in direct sunlight can cause premature aging. Avoid operating in dusty places or dirty environments. Avoid extreme heat or cold when using product (-10°C to 40°C). Avoid spilling liquid or inserting foreign objects into the device. The product must not be dropped or subjected to intentional impact. Disassembly, impact, sun exposure, fire, and compression can cause battery failure. If the battery is compromised please do not continue to use.

WARRANTY

This product has a 1 year warranty against defects in manufacturing under regular consumer use. For instructions about how to obtain warranty service for your product, please contact Customer Service: info@primebrandsgroup.com.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. This product is compatible with all wireless audio devices, Bluetooth® and non-Bluetooth®.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

PB **GR** ©2025 Prime Brands Group. All rights reserved. All trade names are registered trademarks of the respective manufacturers listed. Made in China.

SHARPER IMAGE®

TOUCH TONE

USER MANUAL

Thank you for choosing the Touch Tone Earbuds by Sharper Image. These innovative Bluetooth 5.4 earbuds combine premium audio performance with a smart touchscreen charging case for total control at your fingertips. With features like Active Noise Cancellation, customizable EQ, hands-free calling, and a variety of unique case functions, including flashlight, camera shutter, and social media shortcuts, the Touch Tone Earbuds are designed to keep you connected, entertained, and in control throughout your day.

Includes:

- Touch Tone Wireless Earbuds
- LED Touch Display Charging Case
- USB-C Charging Cable, Ear Gels, & User Manual

PRODUCT KEY

1. Earbud LED Indicator Light
2. Multi-Function Button
3. Silicone Ear Gels
4. Earbud Charging Connectors
5. Touch Screen Charging Case
6. Power On Button (Back)
7. Lanyard Attachment Holes
8. LED Touch Screen
9. USB-C Power Input (Bottom)

SPECS

TOUCH TONE : SHRP-TWS05-BLK
TWS Earbuds with LED Display + ANC

Bluetooth® : 5.4
Play Time : 6H, total 36H
*at 50% Volume
Charge Time : 1.5 H
Working range : up to 30ft (10m)
Battery : 30 mAh, 200mAh
Charging Port : USB-C
ANC : Active Noise Canceling
Languages : 21 supported
Frequency : 2.402-2.480 GHz

6.5 in

▶/⏸ OPERATION

Audio Controls

Play / Pause Music : Touch the left or right earbud Multi-Function Button once
Next Track : Touch the left earbud Multi-Function Button twice
Previous Track : Touch the right earbud Multi-Function Button twice
Increase Volume : Touch the left earbud Multi-Function Button three times
Decrease Volume : Touch the right earbud Multi-Function Button three times

Call Controls

Answer a Call : Touch the left or right earbud Multi-Function Button once
Hang Up : Touch the left or right earbud Multi-Function Button once
Reject a Call : Touch and hold the left or right earbud Multi-Function Button for 2 seconds

Additional

Activate Voice Assistant : Touch and hold the left earbud Multi-Function Button for 2 seconds
Toggle Noise Reduction Mode : Touch and hold the right earbud Multi-Function Button for 2 seconds
Remove Pairing / Reset / Power Off : Touch either earbud five times

POWER ON + PAIRING

The earbuds power on automatically when removed from the charging case, or can be turned on manually by holding the touch area for five seconds. To connect, enable Bluetooth on your device, select "SHRP-TWS05" from the list, and you're ready to go. Once successfully paired, they pair automatically with your device once powered on.

If only a single earbud connects, return both earbuds to the case and remove them again, or manually restart them to enable dual-earbud pairing.

Charging Case & Touchscreen Controls

The charging case powers on by holding the back button for four seconds, and the touchscreen allows menu navigation with swipes. Holding the back button for two seconds lets you restart, power off, or restore the case. On first use, a single tap connects the earbuds to the case and locks or unlocks the screen.

CHARGING

Charging the Earbud Case

Connect the charging case to a wall adapter using the included USB-C cable. Remove from power source when fully charged to preserve battery life.

Charging the Earbuds

Place the earbuds in the charging case. They will begin charging automatically. A red LED light will appear on each earbud to indicate charging is in progress. The light will turn off when charging is complete. When the earbud battery is running low, you will hear a warning sound. If not recharged, the earbuds will power off automatically.

SCREEN FUNCTIONS

Title Screen	Music Control	Volume
Swipe to advance	Play, pause, skip tracks	Adjust up or down
Noise Mode	Equalizer	Alarm
ANC, Transparent, Off	Choose sound profile	Set or adjust alarm
Screen Brightness	Language Selection	Wallpaper
Adjust screen level	Switch between 16 options	Change lock screen image
Find Earbuds	Time Setting	Short Video Control
Locate left or right earbud	Set time and date	Forward, back, like TikTok/Instagram/Reels
Camera Control	Flashlight	
Remote shutter control	Turn on LED light	