

SOAR

USER
MANUALDIGIX2
TRUE WIRELESS EARBUDSDUAL CHARGING
POWERBANK

Safety

- Keep it away from children: this product is not a toy.
- Do not throw this product to avoid any damage.
- Do not disassemble, repair or reform this product.
- Do not clean this product with any chemical solvents.
- For charging, please use a charger with DC 5V input.
- Keep or use this product at normal temperature
- Do not throw it away or expose it to temperature above 60°C or fire to avoid any danger.
- Clean only with dry cloth.
- Dispose the device properly at the end of its life cycle.

Package

1. TWS earbuds with charging case x1
2. Type-C charging cable x1
3. User manual x1

Product Specifications

Bluetooth version: V5.3
Wireless Distance: up to 30 feet
Frequency Response: 20 Hz - 20 kHz
Battery (earbuds and case): 45 mAh / 1,200 mAh
Charging time: 1-1.5 hours
Playing time: about 8 hours
Standby time: 100 days



Power on / Power off

Power off:

Take the earbuds out of the charging case, the earbuds power on automatically and pairing until blue and red light flashing alternately.

Power off

Put the earbuds into the charging case, the earbuds power off and disconnect automatically.

Bluetooth pairing mode

After power on the earbuds, turn on the bluetooth on your device and search for bluetooth pairing name "SR-DX2" to connect.

Earbuds Touch & Function

| Touch | Left Earbuds | Right Earbuds |
|--------------------------|---|---|
| Single Touch | Play/pause/answer/end a call | |
| Double Touch | Next track | Previous track |
| Triple Touch | Increase volume | Decrease volume |
| Long press for 2 seconds | Call voice assistant (Siri) / reject call | Call voice assistant (Siri) / reject call |

Charge the Earbuds

1 You need to charge your device for 10 minutes before using it for the first time or after a long period of absence.

2 When the battery of the earbuds is low, it will have a low battery sound to remind to charge.

3 Put the earbuds into the charging case, the earbuds will be charged automatically.

4 The red LED keep turned on while charging and turn off while fully charged.

Charge the Charging case

Use a type-c cable (DC 5V 1A) for charging, when charging the led display flashes, and the led display off after fully charged.

Charge for mobile phone

Use a mobile phone charging cable to connect the charging case and mobile phone.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

FCC ID: 2AZSY-SR-DX2

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Prime Brands Group • Brooklyn, NY 11232 • SHOPSOAR.COM

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.