

Bluetooth/TF Card Speaker Manual

Thank you very much for your choosing the Bluetooth speaker. Please read this manual carefully before use, so that you can proper operation and better use of superior performance products.

Attention(dos and don'ts):

Please in room temperature environment storage and use;
Do not expose the product to rain or humid environments;
Do not throw, avoid damage caused by falling;
Do not disassemble the repair and reconstruct the product;
The external lithium battery of the product, please do not arbitrarily discarded or to the fire, so as to avoid the risk !

Warm Tips

1. To help prolong the speakers use life and your health, please don't listen to music in the long time, high volume environment, in order to avoid damage to your hearing.
2. When a fault occurs, please immediately turn off the power switch, unplug the USB plug, prevent speaker and other components damaged.
3. The electricity shortage will affect the Bluetooth distance or Bluetooth is easily broken, please charge in time.

The speaker has versions: Bluetooth Version (model MD564), 1. Turn on the Bluetooth speaker. 2. Press the mode knob to enter Bluetooth mode. 3. Bluetooth connection: power on, speaker preferred automatically enter the Bluetooth search state,; automatic matching, Bluetooth devices will be prompted whether matching, device model for MD564 click search match, after a successful connection, sound will be made beep a Ding Dong. Turn on the power supply within 5 minutes after the Bluetooth speaker couldn't find any Bluetooth device will automatically shut down, to connect again to switch on electricity. The machine has the function to link, after connecting the device successfully opened again will automatically connect to bluetooth.

In mode Right long press: Reduce volume. Right short press: FM mode switch to previous station, in MP3 mode switch to previous song. Long press: BT/USB/TF/FM/AUX modes switch, Short press is Play/Pause. Left long press: Increase volume. Left short press: In FM mode switch to next station, in MP3 mode switch to next song. Can be charged. USB TF card can be inserted.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.