

## SPRAY CAR INSTRUCTIONS



COOL LIGHT



DRIFT STUNT



HIGH SPEED



MECANUM WHEEL

AGES  
6+

2.4GHz

PLEASE READ THIS MANUAL BEFORE USE

# CONTENTS

中文	01
English	06

感谢您选择我们的遥控玩具。

为确保正确使用, 请阅读以下说明并使用前对产品有充分的了解。

## 电动控制产品

- ▲适合6岁以上的儿童。
- ▲所有电子产品都应小心使用, 以防触电。

## 注意事项

- ▲本产品包含电子组件。
- ▲不要在水或潮湿的环境中使用它。用布擦拭表面。
- 1.将开关设置在汽车和遥控器的OFF位置。（如果有开关）
- 2.打开遥控器的电池盖。
- 3.根据下图1 安装可充电电池组, 并根据电池盒中相应的“+”和“-”极安装电池。
- 4.合上电池盒。


## 产品附件




## 电池安装

### ● 遥控器电池的安装

1. 取下电池仓盖。
2. 在电池仓中安装两节1.5VAA电池（不包括在内）。确保遵循极性标记（+和-）。
3. 合上电池仓盖。

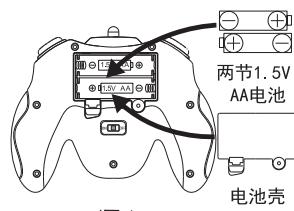

## 功能键分析

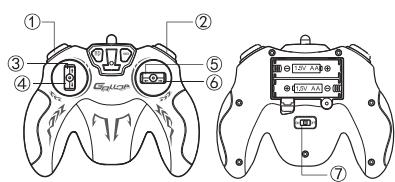

### 遥控

①自动演示（长按三秒钟可自动关闭声音）  
②喷雾火焰 ③前进 ④后退 ⑤左转  
⑥右转 ⑦开关

### 手表遥控器：



注意：使用手表遥控器时必须关闭遥控器，两种遥控器不可同时使用。


## 遥控器和汽车的操作

1. 将汽车和遥控器上的开关转到“ON”位置。（如果有开关）
2. 然后，操作汽车。
3. 当您的汽车开始失去性能，动力或功能时，可能是时候更换电池或为电池组充电了

充电时间：45分钟  
使用时间：45分钟  
遥控距离：50米

### ▲ 注意：

当遥控器无法控制遥控车时，请先取出遥控器的电池并重新安装电池，关闭遥控车的电源，再打开电源，然后遥控器重置遥控器的电源。

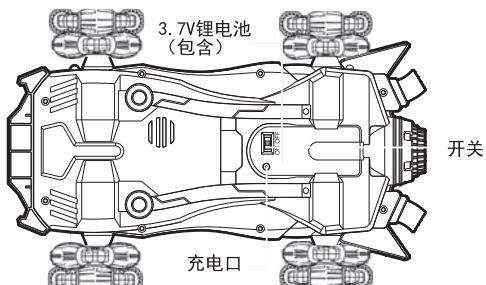

## 汽车操作

### 1. 方向 (图A)

遥控器的左控制杆可以向前和向后控制车辆，右控制杆可以控制车辆的左和右。

### 2. 向左/向右转动 (图B)

当同时控制遥控器的左摇杆和左/右时，车辆将向左/右转。

### 3. 漂移 (图C)

当汽车向前或向后移动时，将遥控器的右控制杆向左/右移动，汽车将漂移。

### 4. 自动演示 (图D)

按下遥控器左上角的按钮一次，以演示车辆的自动特技。（可以旋转360°）

#### ● 停止

当您要停止自动演示功能时，请按遥控器上的任意按钮。

### 5. 喷雾 (图E)


按下遥控器右上角的按钮，汽车将喷洒。

## ▲注意:

(将水倒入注水喷嘴。注意不要注满水，以免溢出。加水后旋入软盖)。

## 注意事项

1. 本产品包含不可更换的电池。请不要拆卸或弄湿电池。
2. 不使用产品时，建议将电池和产品分开存放在阴凉干燥处。
3. 当不使用喷漆车时，请从喷漆车电路板上的电源插座上拔下电池插头，以免损坏电池。
4. 请不要长时间无人值守充电。产品充满电后，请断开充电器。
5. 请勿为6岁以下的儿童使用玩具。

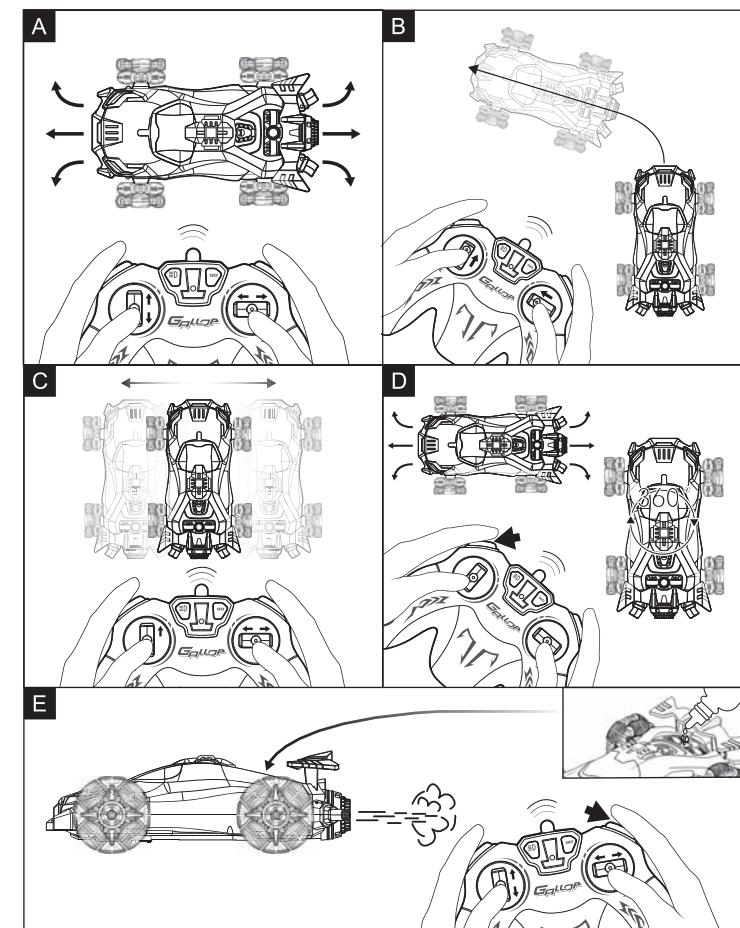

**电池安全使用说明**

1. 电池使用类型：遥控车使用1\*3.7V充电电池（不可拆卸）  
遥控器使用2\*1.5V “AA” 非充电电池
2. 用螺丝刀打开电池盖，按正确的  
方式取出放入电池；
3. 非充电电池不可充电
4. 不同类型的电池或新旧电池不能  
混用；
5. 型号相同或与推荐型号等同的电  
池才可以使用；
6. 电池以正确的极性放入；
7. 用尽的电池应从玩具中取出；
8. 充电电池只能在成人监护下充电；
9. 电源端子不得短路
10. USB充电线不是玩具。玩具充电器在使用过程中，应定期检查其电线、插头、外壳和其他部件是否损坏，发现损坏时应停止使用直至修复完好。

**注意事项**

1. 可拆卸的小零件放好，千万不可  
以让小孩吞食。
2. 对拆除后的包装物，请不要随地  
丢弃，以免污染环境卫生。
3. 不要置于近火和高温，潮湿的地  
方储藏。
4. 喷雾玩具车加水说明：只可增加  
生活饮用水。

**合 格 证**

品 牌：恒中意	总代理(品牌方)：汕头市澄海区中意玩具实业有限公司
产品名称：遥控玩具	地 址：广东省汕头市澄海区澄华街道西门宁泰六路
产品型号：1203B	南7号三楼
主要材质：塑胶和电子元件	生 产 厂：汕头市澄海区中意玩具实业有限公司
适用年龄：6岁以上	生产地址：广东省汕头市澄海区德政路与安菜路交叉口
执行标准：GB6675. 1-2014 GB6675. 2-2014 GB6675. 3-2014 GB6675. 4-2014 GB19865-2005	维 护 保 养：用干布擦拭表面污迹。

**△ 警 告**

内含小零件和小球有窒息危险，不适合3岁以下儿童玩耍，使用时必须有成年人在场，以便监护和指导。  
USB充电线不是玩具。玩具充电器在使用过程中，应定期检查其电线、插头、外壳和其他部件是否损坏，  
发现损坏时应停止使用，直至修复完好。

该包装含有重要信息，请给予保留。

中国制造

Thank you for choosing our remote control toys.  
To ensure proper use, please read the instructions below and have a good understanding of the products before use.

## Electric Control Products


- ▲ Suitable for children over 6 years old.
- ▲ All electronic products should be carefully used to prevent electric shock.

## Maintaining

- ▲ This product contains electronic components.
- ▲ Don't use it in water or damp environment. Wipe the surface with cloth.

1. Set the switch on the OFF position of the car and the remote control. (if switch is available)
2. Open the battery cover of the remote control
3. Install the rechargeable battery pack according to the figure 1 below, and install the battery according to the corresponding "+" and "-" poles in the battery box.
4. Close the battery box.


## Spare part list

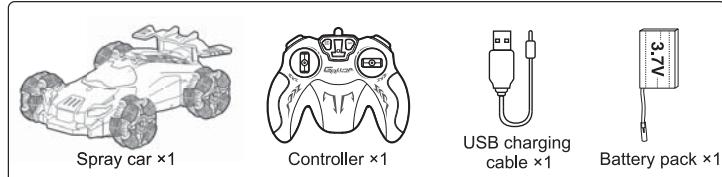


## Battery installation

- Remote control battery installation

1. Remove the battery compartment cover.
2. Install two 1.5V AA batteries (not included) in the battery compartment. Make sure to follow the polarity markings (+ and -).
3. Close the battery compartment cover.

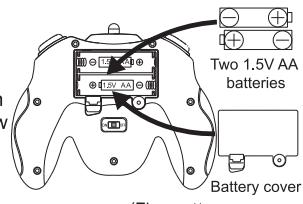


## Function key analysis

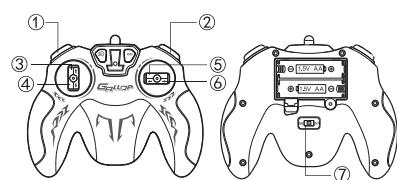

### Remote control

①Auto-Demo(Long press for three seconds to turn off the sound automatically)  
②Spray Flame ③Forward ④Backward  
⑤Left ⑥Right ⑦Switch

### Watch remote control:

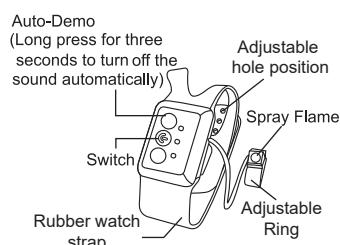

Attention: When using the watch remote control, the remote control must be turned off. Both types of remote controls cannot be used at the same time.


## Operations of remote control and cars

- 1.Turn the switch on the car and remote control to "ON" position. (if switch is available)
- 2.Then, operate the car.
- 3.When your car starts to lose performance, power, or function, it may be the time to replace the battery or charge the battery pack

Charging time: 45minutes,  
use duration: 45minutes,  
remote control  
distance: 50meters

### ▲ Note:

When the remote control cannot control the remote control car, first remove the battery of the remote control and re-install the battery, then turn off the power of the remote control car, then turn on the power, and then the remote control resets the frequency.

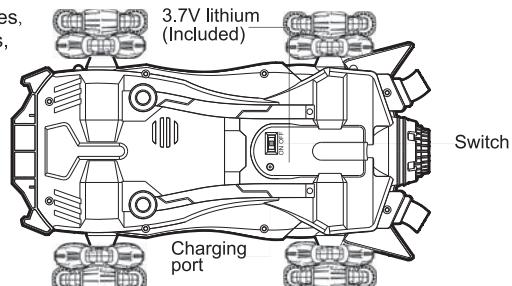

## Car operation

### 1.Direction (Figure A)

The left control lever of the remote control can control the vehicle forward and backward, and the right control lever can control the left and right of the vehicle.

### 2.Turn left/right (Figure B)

When the left rocker of the remote control is controlled up and left / right at the same time, the vehicle will turn left / right.

### 3.Drift (Figure C)

When the car moves forward or backward, move the right control lever of the remote control to the left / right, and the car will drift.

### 4.Automatic presentation (Figure D)

Press the button in the upper left corner of the remote control once to demonstrate the automatic stunt of the vehicle.(Can rotate 360°)

#### ● Stop

When you want to stop the auto demo function, press any button on the remote control.

### 5.Spray (Figure E)


Press the button on the upper right corner of the remote controller and the car will spray.

#### ▲ Note:

(Fill water into the water fillingnozzle. Pay attention not to fill the water too full to avoid overflow. Screw on the softcap after adding water).

## Matters needing attention

- 1.This product contains non replaceable batteries. Please do not disassemble or damp the batteries.
- 2.It is recommended that the battery and the product should be stored separately in a cool and dry place when the product is not used.
- 3.When the spray car is not used, the battery plug is disconnected from the power socket of the spray car circuit board to avoid battery damage.
- 4.Please do not charge for a long time unattended. Please disconnect the charger after the product is fully charged.
- 5.Do not use toys for children under six years old.

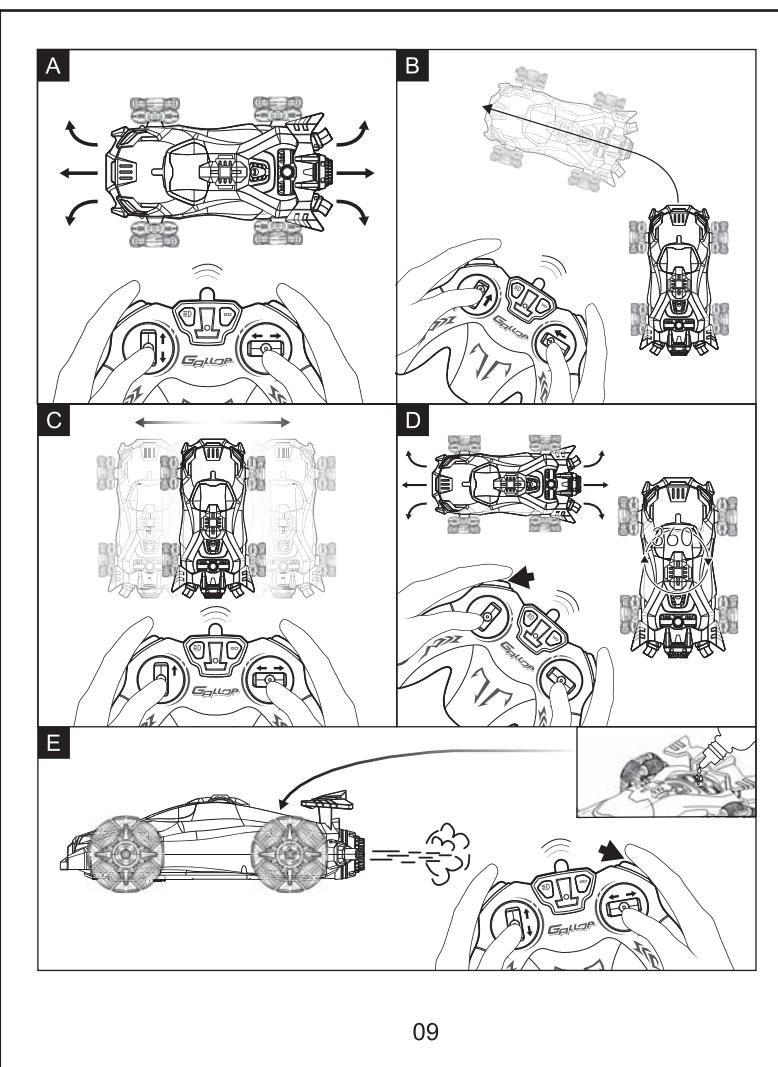

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**