

INSTRUCTIONS FOR USE

 
 
Use a Phillips screwdriver to loosen the battery cover at the bottom of the car, install 3 1.5V "AA" batteries on the bottom of the car, and lock the battery cover tightly.

Loosen the remote control battery cover with a Phillips screwdriver, install 2 1.5V batteries in the remote control, and tighten the battery cover.



Turn the switch on the bottom of the car to "ON", press and hold the remote control "ON" for 3 seconds to start the car, and you can start playing.

When the indicator light of the remote control is dimmed, it means that the battery is low and needs to be replaced with a new one.

When the battery of the remote control car is low, the speed of the remote control car will slow down and it is not easy to walk upright. Please replace the battery.

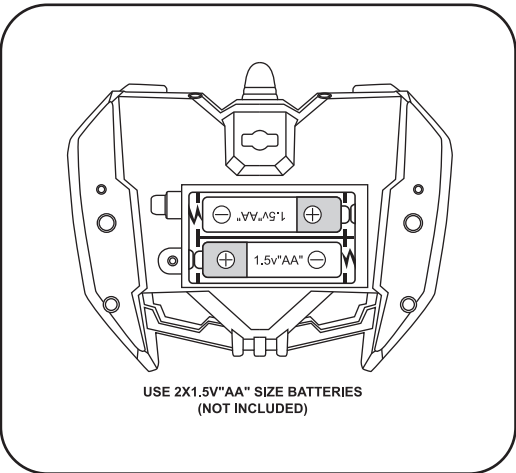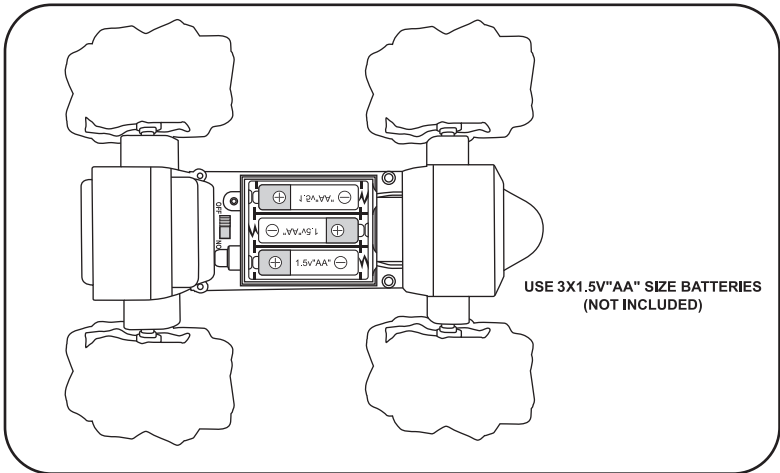

FEATURES INTRODUCTION

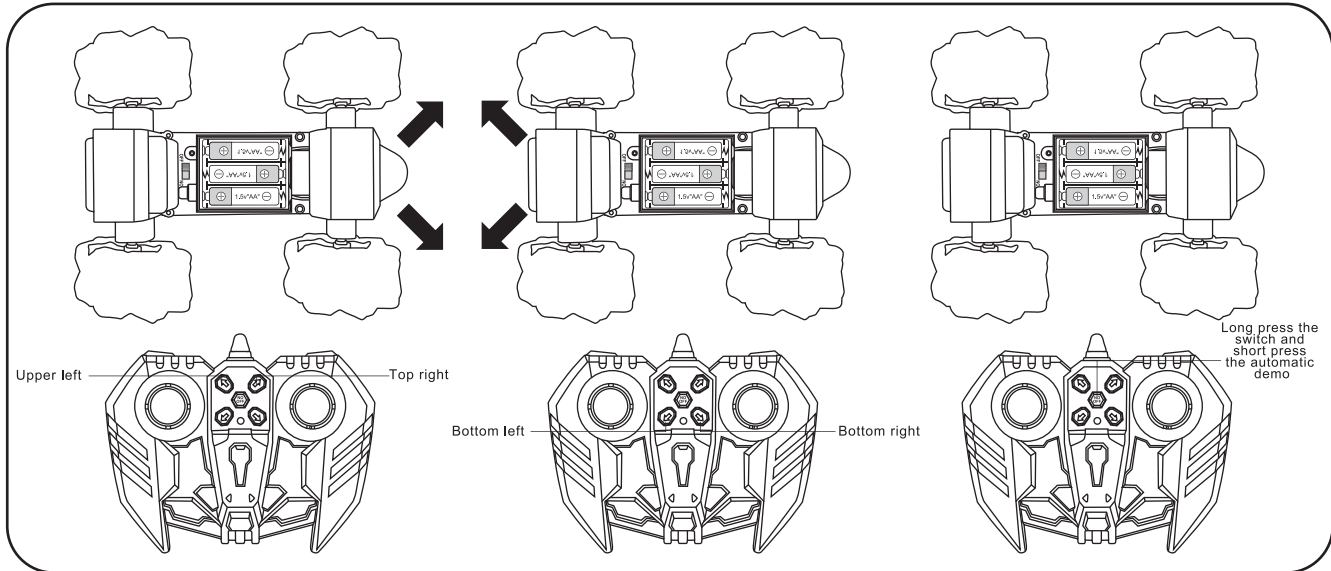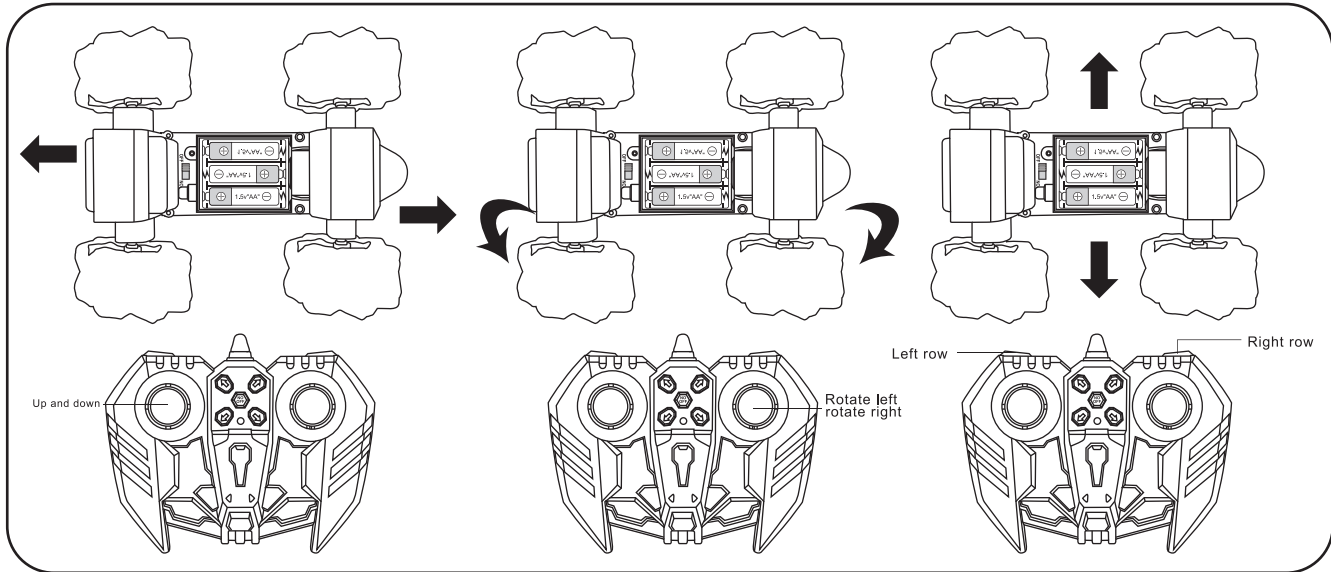  

**WARNING:**  
CHOKING HAZARD - small parts,  
Not for children under 3 years.

**PRECAUCIONES:**  
PELIGRO DE AHOGARSE. Contiene  
partes pequeñas. No recomendado  
para niños menores de 3 años.

**WARNING:**

Batteries are to be inserted with the correct polarityDo not mix different types of batteries or new and used batteries. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the toy before being charged. The supply terminals are not to be short-circuited. Remove batteries from the toy when not in use for extended time or when batteries become exhausted. Battery installation by an adult required Dispose of batteries responsibly. Do not dispose of in fire.

2.4GHz



Please keep the packaging for future reference  
Product may vary slightly from image shown  
Read the instructions before operating this product  
PerformanceTips:Do not drive the vehicle on  
grass, sand, rocks or through water. Do  
not drive the vehicle into any hard object.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.