

GEONFINO



Smart Lock
Model No.G5
Installation instruction



PASSWORD



APP



RFID CARD



BLUETOOTH

Please keep and read this instruction before installation, we also prepared instruction video to help on Amazon Page. If you need further assistance, please contact Customer Service by email: support@geonfino.com

Table of Contents



- < 1 > Installation Guide
- < 11 > How to Use
- < 13 > Programming Instructions
- < 15 > APP Guide
- < 23 > Low Power
- < 24 > Restore Factory Settings
- < 25 > Troubleshooting
- < 26 > FCC Warning
- < 27 > About GEONFINO

Installation Guide

What is inside		
A.Latch	B.Keypad	C.Battery Cover
D.Interior Assembly	E.Mounting Plate	F.Strike
G.Strike Box	H.Interior Assembly Screws	I/J.Mounting Plate Screws
K.Latch / Strike Screws	L.RFID Card	M.Keys

1 Prepare the door and check dimensions


- A** Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm) .

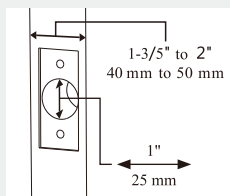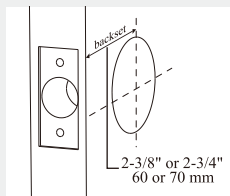

- B** Measure to confirm that the hole in the door edge is 1" (25mm). And measure to confirm that the door is 1-3/5" to 2" (40 mm to 50 mm) thick.

2 Install the latch and strike


- A** Hold the latch in front of the door hole, with the latch face flush against the door edge.

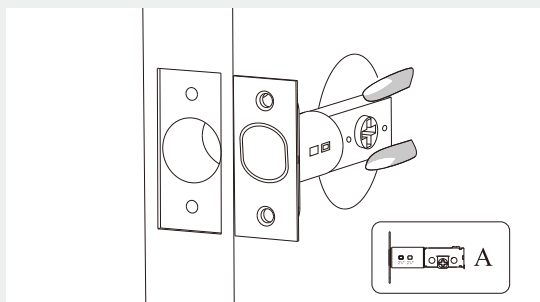

<2>


Is the slotted hole centered in the door hole?

YES

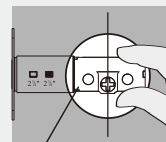


No adjustment is required. Proceed to next step.

Slotted hole is centered.

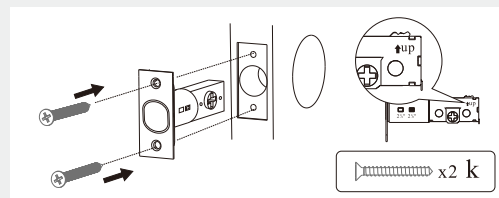


NO

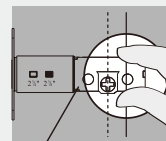


Rotate and pull the latch as shown to extend latch.

Slotted hole is not centered.

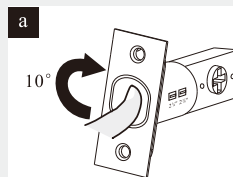


Rotate the head of latch 10°

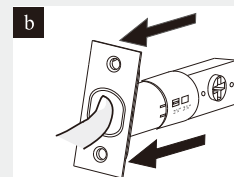


Stretch the latch


<3>

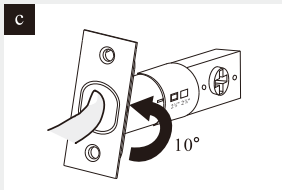

Rotate the head of latch back to right position.




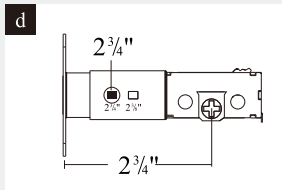


- B** Use a screwdriver to test if deadbolt works smoothly. When the screwdriver turn, the deadbolt would be lock/unlock.

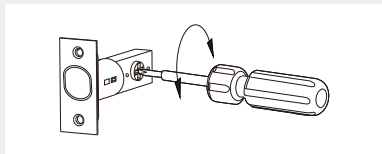

- C** Install strike on the door frame.

   

⚠ IMPORTANT: Make sure hole in door frame is drilled a minimum of 1" (25 mm) deep.

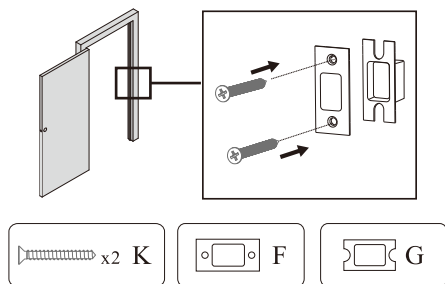

< 4 >

3 Installation instructions


- A** **⚠ IMPORTANT:** Before installation, make sure the latch is fully retracted (in the unlocked position) .

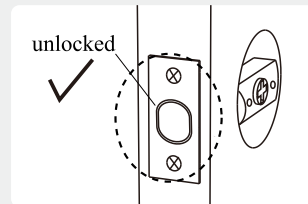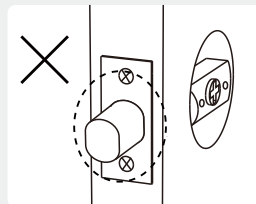


- B** Install Keypad

If the hole is bigger than 2 1/8" (54mm), install the keypad directly

YES

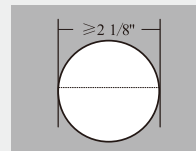


No adjustment is required. Proceed to next step.

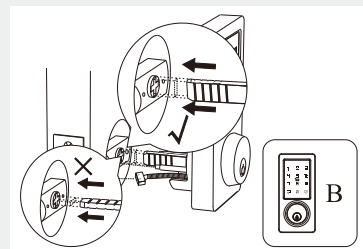


Please ensure the tail bar is vertical during installation. The IC wired need to under the deadbolt.

< 5 >


NO

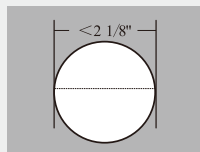


Remove the hole cover

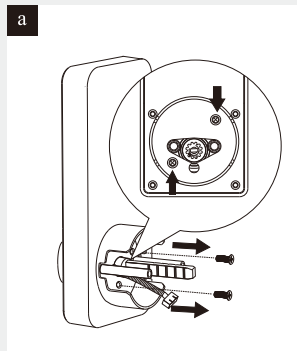

Remove screw from hole cover

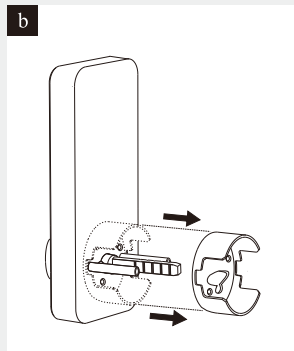


Remove the hole cover

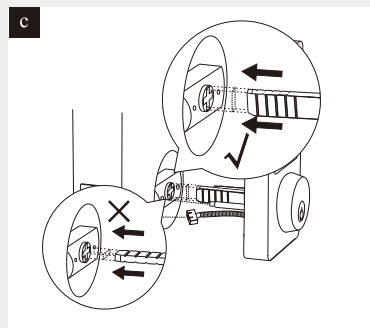


Please ensure the tail bar is vertical during installation. The IC wired need to under the deadbolt.

<6>


C Install Mounting Plate

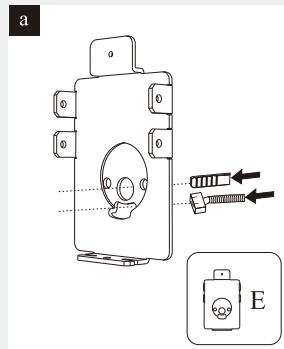

The IC wired and tail bar go through the hole of mounting plate

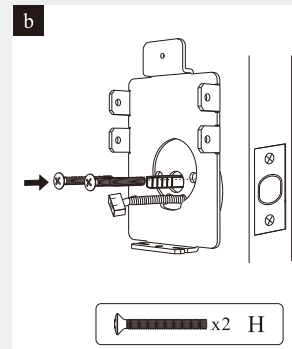


Secure the mounting plate with the supplied screws.

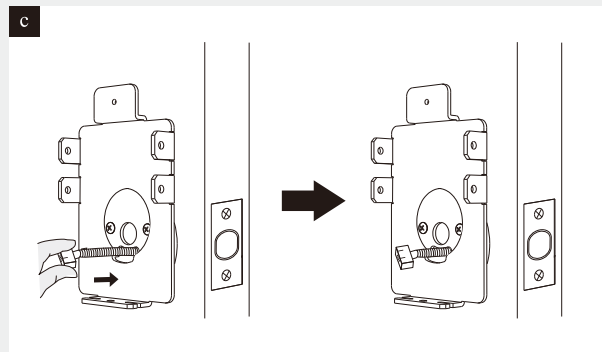

Make sure the IC wired not too long.


<7>

D Confirm the direction of the door

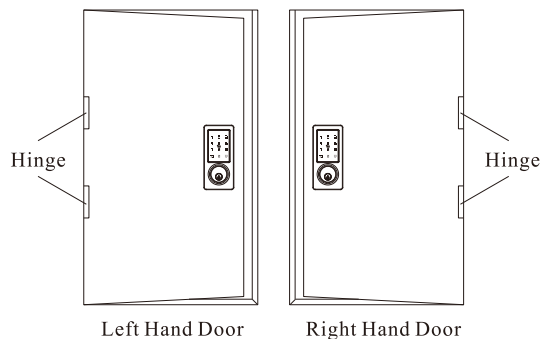

If the door is left handle.


- 1.To install the lock for left side handling, ensure the toggle button on the back assembly is set to "L".
- 2.Setting direction of the turnpiece : Horizontal for Left handle when in unlock status.

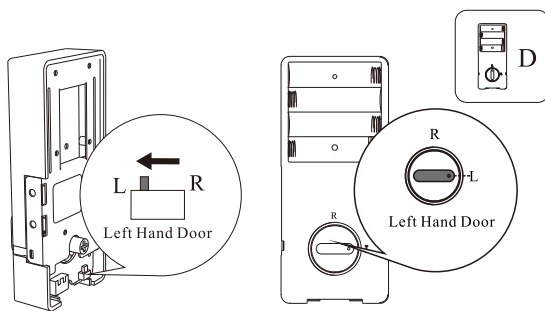


<8>

If the door is right handle.

- 1.To install the lock for right side handling, ensure the toggle button on the back assembly is set to "R".
- 2.Setting direction of the turnpiece : Horizontal for Right handle when in unlock status.

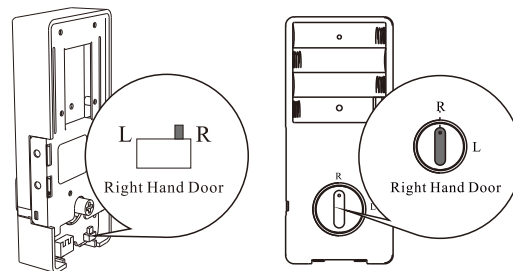


E Install Interior Assembly

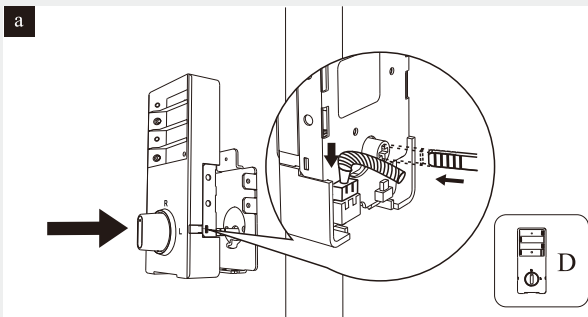

Connect the cable and ensure tight cable connection. And the tail bar insert the turnpiece hole.


<9>

b

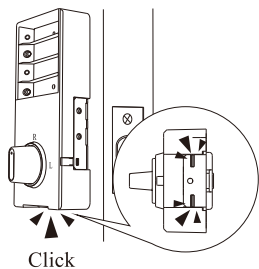


Install the interior assembly on mounting plate and make sure they click on together

c

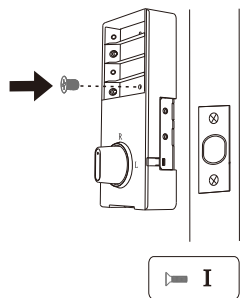

Secure the interior assembly with the supplied screws.

d

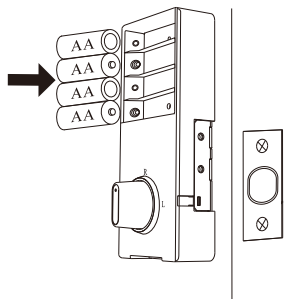


Load 4 AA batteries into the interior assembly.

⚠ IMPORTANT: For best results, use new, non-rechargeable Alkaline batteries only.

F


Install Battery Cover

a

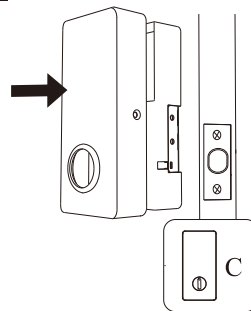

Install battery cover

b

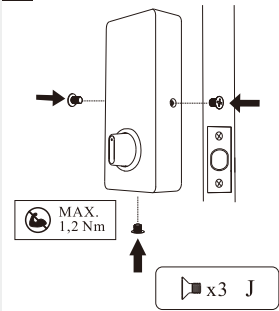

Secure the interior assembly with the supplied screws.

How to Use

LOCK the door from outside

Manual Mode

Press "✓" key on keypad for 3 seconds.



LOCK the door from inside

 
Manual Mode

Rotate the thumb turn to Lock position.



UNLOCK the door from outside


RFID Card




Master/
User code



 
Key



UNLOCK the door from inside

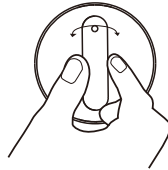

Rotate the thumb turn to
Unlock position.

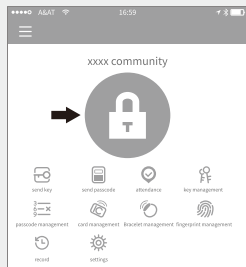



Via APP

Long press "🔒" to LOCK the door from outside or inside.
Click "🔓" to UNLOCK the door from outside or inside.

Note: Please keep your phone near the door lock within 32.8ft(10m).

Auto Re-lock Mode

Auto Re-lock Mode can be set up in APP.(5s,10s,15s, 30s,60s,Custom) When the lock be unlocked via APP, passcode or RFID card, it will re-lock automatically in the reset time.

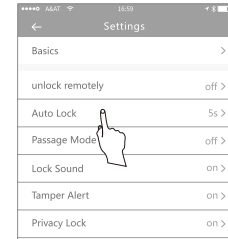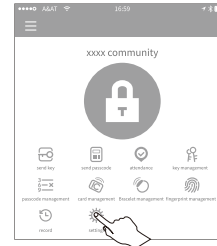

Programming Instructions

Information & Safety Warnings

- Protect your User Codes and Master Code.
- Protect your key. It is suggested to put it outside the door, such as your car.
- Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.

⚠ IMPORTANT: Do not load batteries until lock is completely installed.

Definitions

Master Code

Required for programming and feature settings. Master code can be used to unlock the door under vacation mode. The default master code needs to be changed before programming.

Property owner/manager should keep this information confidential.

1. Master Code(6 to 8) digits: The default Master Code is 123456.

It is required that you change it to a code of your own before programming.

2. User Code(6 to 8)digits: A total of 200 User Codes may be programmed.

Auto Lock

Automatically locks the deadbolt after unlocking. This feature is off by default. You can set the auto lock time in the app.

Wrong Entry Limit

After 5 unsuccessful attempts at entering a valid PIN code, the unit will shut down for 5 minutes.

Unlock with Fake Code

User can prevent PIN code exposure from strangers by entering random digits before or after PIN code.

83618 137192 14710

password

Random digits

APP Guide

A Download APP "TTLock "



Android Mobile Phone--Search "TTLock" from Google Play.
Apple Mobile Phone--Please search "TTLock" from App Store.

B Register a new account(phone number or email)

