




## USER MANUAL


Q37 Karaoke Microphone




### STRUCTURE

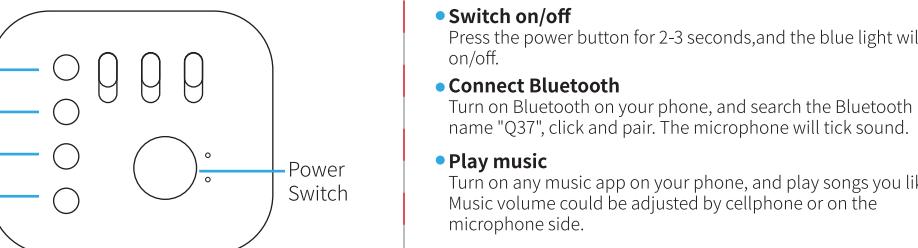


### HOW TO ACHIEVE THE BEST KARAOKE EFFECT

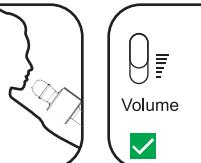

Distance between mouth and microphone  
> 4 cm

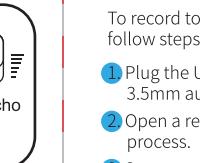

Distance between mouth and microphone  
< 3 cm

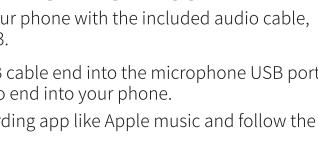

Turn up mic volume and echo to the top

### INSTRUCTIONS

#### HOW TO USE

##### • Switch on/off

Press the power button for 2-3 seconds, and the blue light will be on/off.

##### • Connect Bluetooth

Turn on Bluetooth on your phone, and search the Bluetooth name "Q37", click and pair. The microphone will tick sound.

##### • Play music

Turn on any music app on your phone, and play songs you like. Music volume could be adjusted by cellphone or on the microphone side.

##### • Control Volume

Adjust voice volume and echo volume sliders to a suitable place. Start listening and singing.

#### HOW TO RECORD

To record to your phone with the included audio cable, follow steps 1-3.

1. Plug the USB cable end into the microphone USB port and the 3.5mm audio end into your phone.

2. Open a recording app like Apple music and follow the user process.

3. Start recording.

\*Bluetooth will automatically disconnect when the audio cable plugs in.

\* For IOS system users, connect your phone to the microphone via Bluetooth, and then turn on the Music App to record.

### FAQS

Trouble	Reason	Solution
The power light is not on	Low battery power, or the charging cable is not plugged properly when charging	Go to charge, and check if the power connector & charging cable connects well
Microphone no or low sound	The machine is not powered on or the mic and echo volume are not turned up	Restart the mic first and turn up both mic and echo volume
No reverberation	The echo volume is not turned up	Adjust the echo volume slider
There is noise when singing or recording	Environmental noise	Use in a quiet place
	Phone signal interference	Put more distance between the mic and your phone
	Music software setup problem	Lower the mic volume
Some phones don't record well	The phone model doesn't match, or the voice processing chips in mobile phones are weak	Restart or replace other apps/phones to try again
Sound interrupts when playing Bluetooth music	The Bluetooth device is too far away from the mic, or there is an obstacle between the phone and the mic	Stay close to the phone and avoid obstacles

### ISED CANADA STATEMENT

#### FCC WARNING STATEMENT

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. this device may not cause interference and

2. this device must accept any interference, including

interference that may cause undesired operation of the device.

This device complies with part 15 of the FCC rules.

The device is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Exposition aux rayonnements: cet équipement est conforme au rayonnement Canada

Les limites d'exposition fixées pour un environnement non contrôlé afin de maintenir la conformité avec les directives d'exposition aux RF d'IC. Ce dispositif ses antennes ne doivent pas être co-localisées ni fonctionner en conjonction avec une autre antenne ou un autre émetteur.

3 days: No reasonable-back guarantee, 1-year warranty, and 24 hours of friendly customer service.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

If you are disappointed and even angry, please don't hesitate to contact us at:

[support@bonaok.com](mailto:support@bonaok.com)

Thank you for your support!

### SPECIFICATIONS

Microphone:	Capacitive
Output power:	5W
Frequency Range:	100Hz-10KHz
Maximum sound pressure level:	>115dB SPL (1% THD)
Reverberation:	Echo sound reverberation
Charging voltage:	DC 5V, 1A

### CUSTOMER SERVICE

1. When the battery power is too low, the microphone will automatically shut down;

2. Use the included Type-C cable to connect with your phone's standard charger, the red light shows charging;

3. Normal charging 2 hours, charging is completed, the red light is automatically extinguished