



# X1

Magnetic Golf Speaker


## 1. Accessory

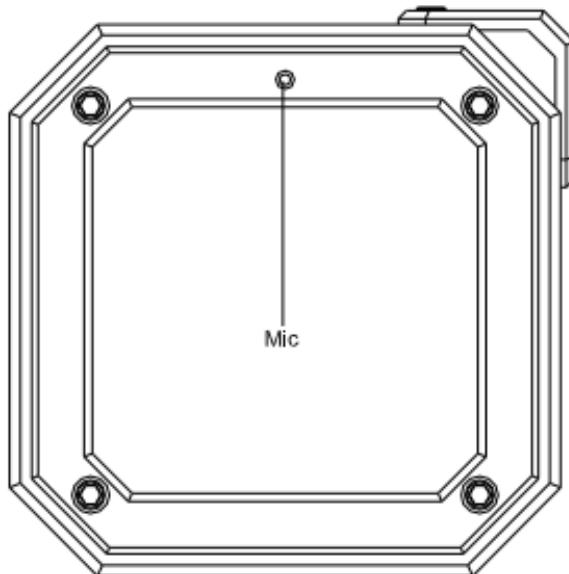

Lifting rope 60CM


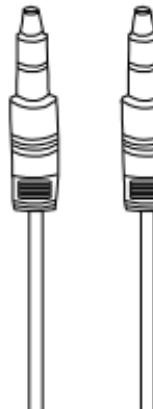


◦3.5mm Audio Cable

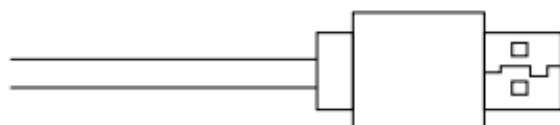

◦Type-C Charging Cable

### IIIlustration

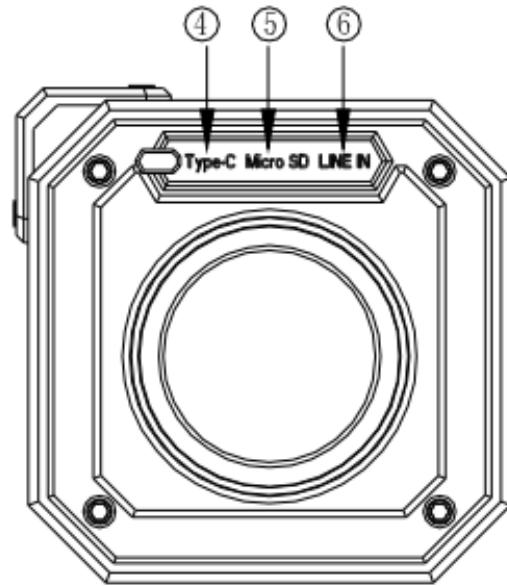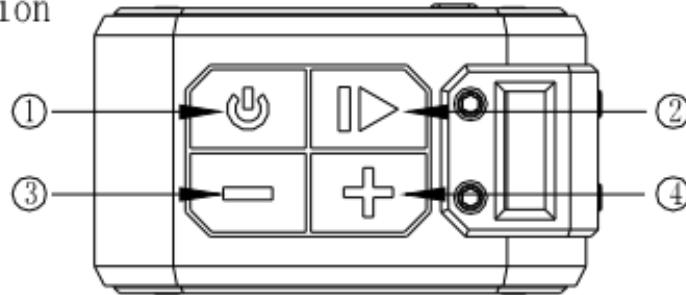

- ① Power ON/OFF/TWS
- ② Play/Pause/Answer or Reject Phone call
- ③ Volume -/Previous Track
- ④ Volume +/Next Track
- ⑤ Charging Port
- ⑥ Micro SD Port
- ⑦ AUX IN

### 3. Parameter

Bluetooth Version	V4.2
Rated Power	10W(RMS)
Waterproof	IPX7
Battery Capacity	Built-in 2000
Power Supply	DC 5V/1A
Frequency Response	115Hz-15KH
Receiving Range	<b>≤30M(Open Field)</b>
Driver Unit	<b>4Ω5W/50m</b>
Charging Port	Type-c
Playing Time	UP to 10 hours
Charging Time	3 hours

2. After power ON the speaker, quick press 2 times will shift to TWS mode

#### 4.Function Key

Key	Operation	Function
	ON/OFF/TWS	1.Short press to turn on
		2.After power ON the speaker, quick press 2 times will shift to TWS mode
		Long press for 3 seconds to turn off.
		Long press for 8 seconds to reset.
	Play/pause	1.Press once when music is playing/pause, answer incoming call or hang up a phone call. 2.Press and hold for 2 seconds to reject the incoming call. 3.Hold for 3 seconds to disconnect Bluetooth
	Volume-/Previous Track	1.Press once to decrease volume 2.Hold for 2 seconds to previous track
	Volume+/Next Track	1.Press once to increase volume 2.Hold for 2 seconds to next track

## 5. LED Indicator:

- 1.Blue LED blinks when the speaker is waiting for connection, and turns solid blue after Bluetooth connects successfully.
- 2.Red LED turns solid red when the speaker is recharging, and turns off after the battery is fully charged.
- 3.The yellow light on the top of the speaker is a matching indicator,Slow flash means entering into the matching mode, long brightness means the matching is successful.

## 6. Bluetooth Pairing:

- 1.Power on the speaker, the blue LED will blink, go to Bluetooth settings on your device, find X1 and select to pair.

## 7. Micro SD/AUX Mode:

- 1.Max support reading 64GB Micro SD card.
- 2.Insert any Micro SD card, the speaker will play the audio files in the Micro SD card automatically.
- 3.Insert the 3.5mm audio cable, the speaker will switch to AUX mode.

## FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

## What is TWS ?

TWS means ture wireless stereo.Let's say two Bluetooth speakers are able to be paired and playing music synchronously.

## How to pair your device?

1. Please make sure these two speakers to be paired disconnect from your bluetooth device before you turn them on.  
Then please turn on two speakers
2. Select any one of speaker and double click the POWER key. You will hear a remind sound and yellow LED light will blinking, the speaker is waiting for TWS paring.
3. When enter into the matching mode with the voice prompt , the yellow light on the two speakers will be bright in the mean time the light control on the main-speaker is normal and the yellow light brighting on the sub-speaker
4. Select the searching mode on your device ,When your device finds "X3 Pro",select it and connect.
5. They will perform as the stereo sounding system.
6. Once the speakers are well paired at the first time, they will be automatically paired next time without the above pairing operation.
7. If the speaker used to be paired, it is suggested to press"MODE" button for 5 seconds to forcibly cut off the power.  
Then restart and have the same speaker re-paired with the required new speaker according to the above instruction item 1-item 5.