

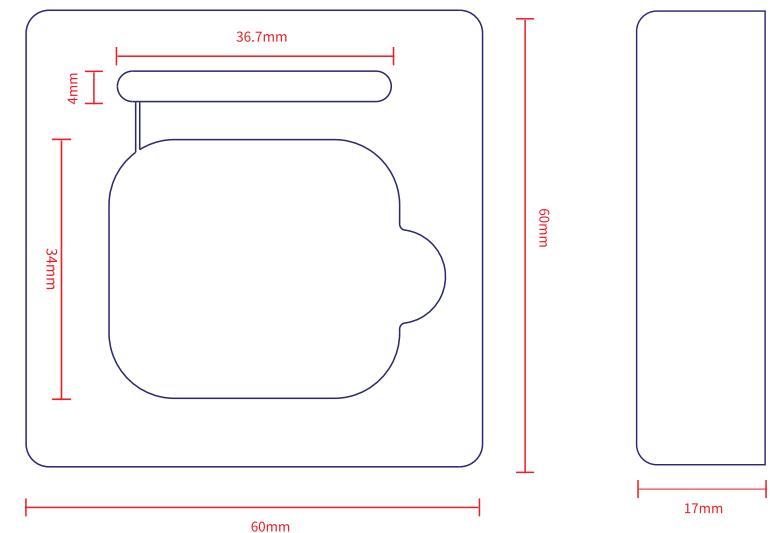


LINES IN RED - DO NOT PRINT - THEY REPRESENT FOLDS AND SAFE LINES

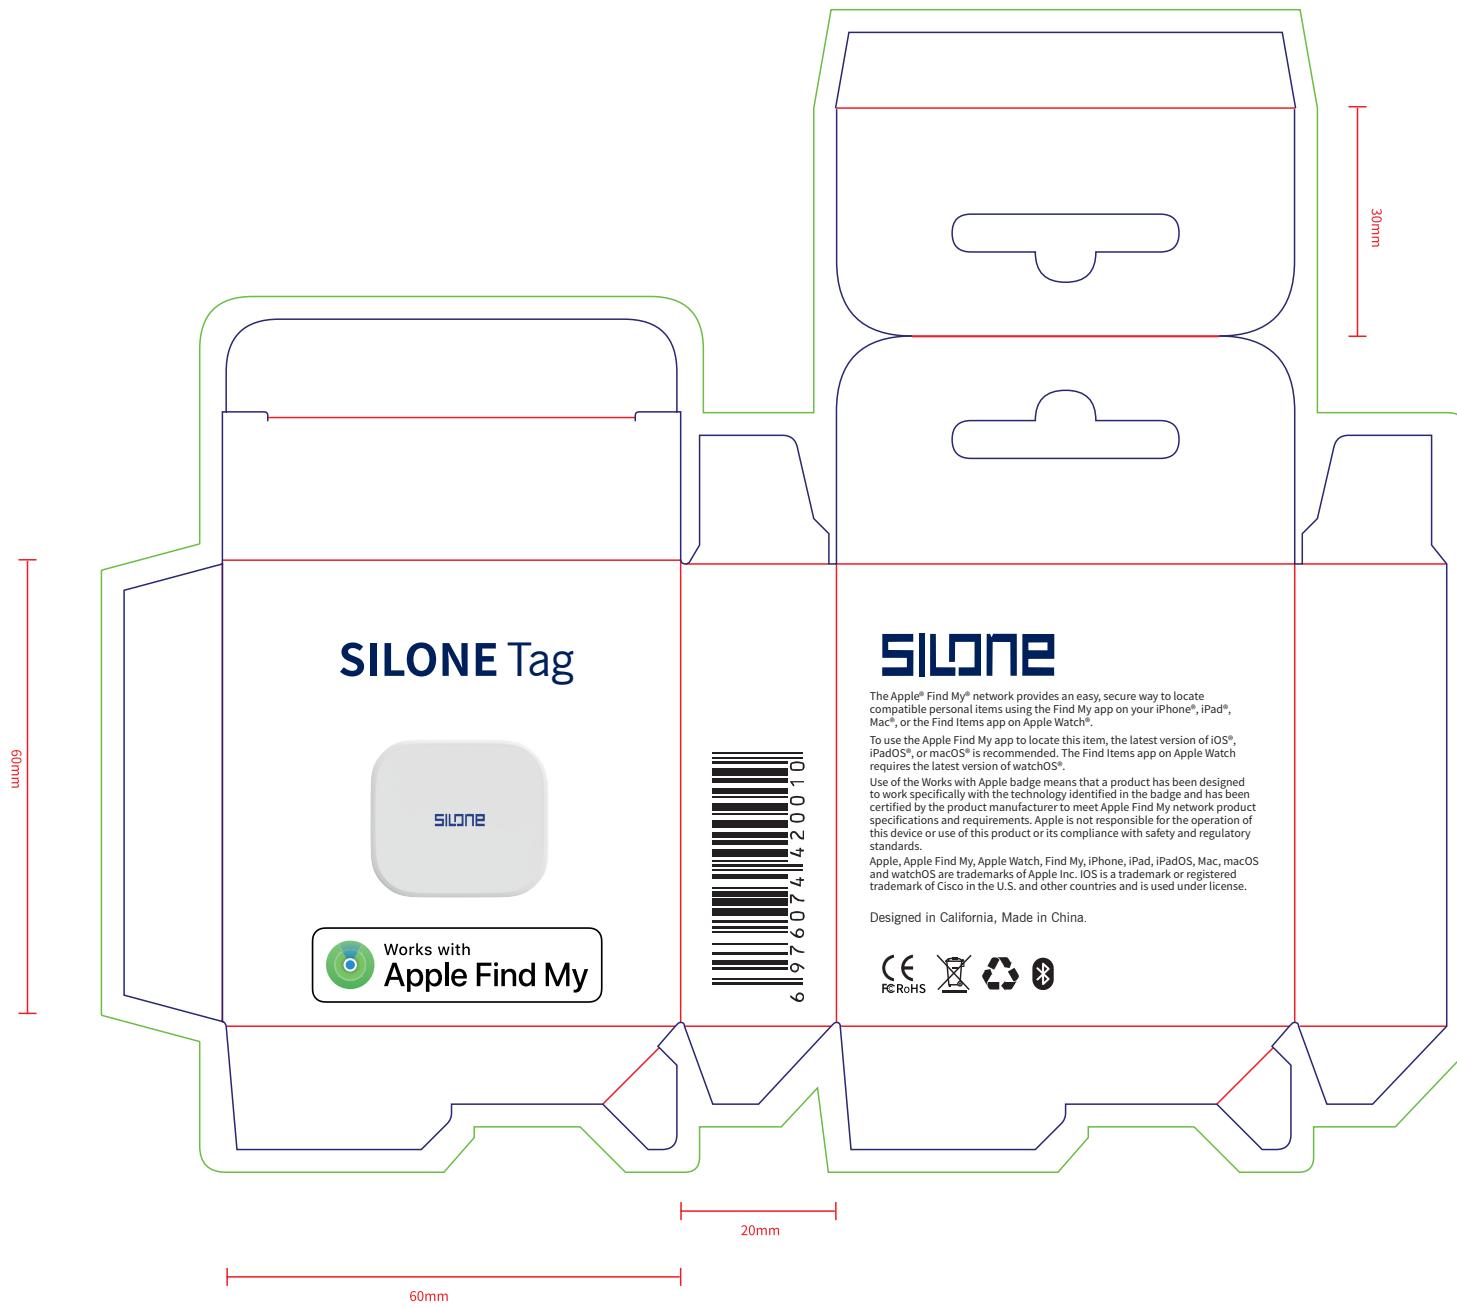

- Bleeding line
- Fold line
- Cut line

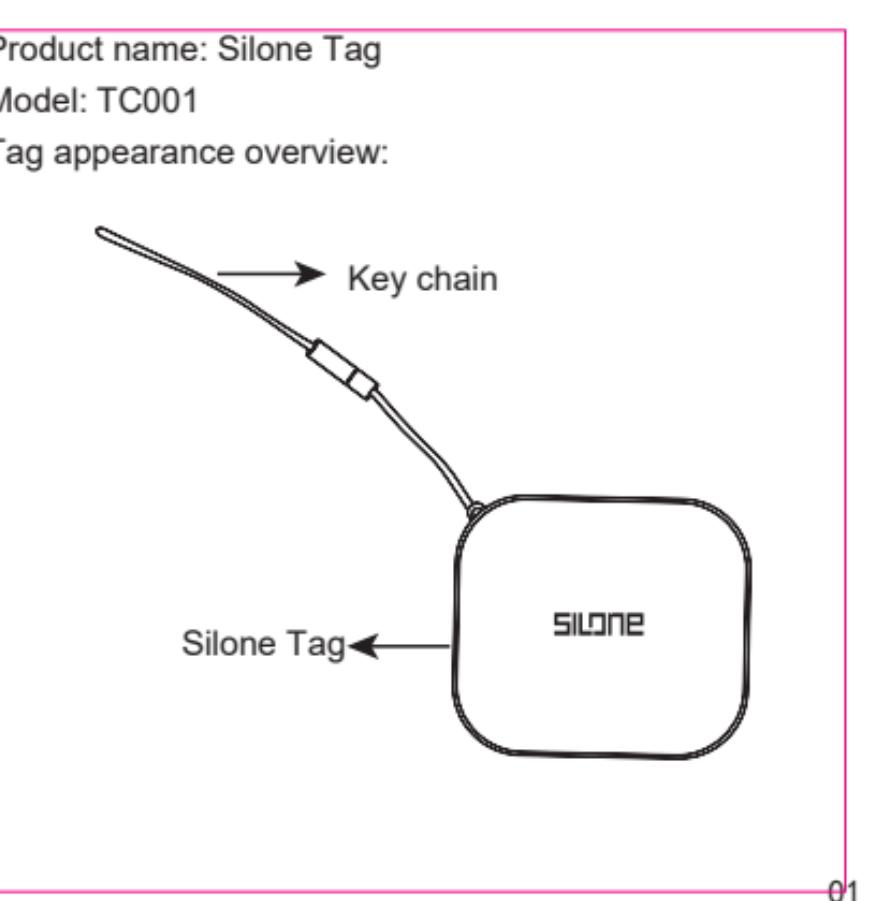

01

Product Function:

1. Network location

When the Silone Tag is beyond the Bluetooth range of the iPhone®, the Silone Tag can not be connected in the Find My® app. You can select: Lost mode, then select: Enable, enter your contact number, etc. If the Silone Tag is disconnected from your iPhone for more than a period of time, you will receive a notification and the latest location in the Find My app.

2. Play the sound

When the iPhone and Silone Tag are within the Bluetooth range of about 20 meters, click to play sound in the Search app, and Silone Tag will beep to help you find nearby items quickly.

02

3. Remove Silone Tag from your device

Place the Silone Tag with the phone and make sure the device can search for the Silone Tag.

4. Replace the battery

Take out the old battery and replace the newly purchased CR2032 battery (vol \geq 3V; capacity:175mAh) into the Silone Tag.

03

5. Malicious tracking alert

If the battery fails, don't expose skin or eyes to the leaking fluid. At this time, Silone Tag will not shut down, and it can be re-paired with app when it needs to be used again.

6. Privacy protection

Use the Apple Find My app to locate the device. The positive pole (+) must face up. If a prompt tone is heard, the Tag does not leave the owner's side; it will not trigger the alarm.

04

7. Security Information:

1. Turn on the Silone Tag

Before using and operating the device, please read and follow the original design characteristics and functions of the Ranten and Tag appearance overview.

- Please dispose batteries according to local regulations. Do not dispose batteries as household waste. Improper disposal of batteries may lead to battery explosion.
- The pairing connection can be performed after hearing the beep sound.

2. Pair Silone Tag

Open the Find My app on your iPhone. Hold the Silone Tag near your iPhone, tap the Items tab, select Add New Item, and tap Other Supported Item. Select the Tag with the word Silone and tap "Connect."

3. Remove Silone Tag from your device

Place the Silone Tag with the phone and make sure the device can search for the Silone Tag.

4. Replace the battery

Take out the old battery and replace the newly purchased CR2032 battery (vol \geq 3V; capacity:175mAh) into the Silone Tag.

05

5. Malicious tracking alert

If the battery fails, don't expose skin or eyes to the leaking fluid. At this time, Silone Tag will not shut down, and it can be re-paired with app when it needs to be used again.

6. Privacy protection

Use the Apple Find My app to locate the device. The positive pole (+) must face up. If a prompt tone is heard, the Tag does not leave the owner's side; it will not trigger the alarm.

06

7. Security Information:

1. Turn on the Silone Tag

Before using and operating the device, please read and follow the original design characteristics and functions of the Ranten and Tag appearance overview.

- Please dispose batteries according to local regulations. Do not dispose batteries as household waste. Improper disposal of batteries may lead to battery explosion.
- The pairing connection can be performed after hearing the beep sound.

2. Pair Silone Tag

Open the Find My app on your iPhone. Hold the Silone Tag near your iPhone, tap the Items tab, select Add New Item, and tap Other Supported Item. Select the Tag with the word Silone and tap "Connect."

3. Remove Silone Tag from your device

Place the Silone Tag with the phone and make sure the device can search for the Silone Tag.

4. Replace the battery

Take out the old battery and replace the newly purchased CR2032 battery (vol \geq 3V; capacity:175mAh) into the Silone Tag.

07

5. Malicious tracking alert

If the battery fails, don't expose skin or eyes to the leaking fluid. At this time, Silone Tag will not shut down, and it can be re-paired with app when it needs to be used again.

6. Privacy protection

Use the Apple Find My app to locate the device. The positive pole (+) must face up. If a prompt tone is heard, the Tag does not leave the owner's side; it will not trigger the alarm.

08

7. Security Information:

1. Turn on the Silone Tag

Before using and operating the device, please read and follow the original design characteristics and functions of the Ranten and Tag appearance overview.

- Please dispose batteries according to local regulations. Do not dispose batteries as household waste. Improper disposal of batteries may lead to battery explosion.
- The pairing connection can be performed after hearing the beep sound.

2. Pair Silone Tag

Open the Find My app on your iPhone. Hold the Silone Tag near your iPhone, tap the Items tab, select Add New Item, and tap Other Supported Item. Select the Tag with the word Silone and tap "Connect."

3. Remove Silone Tag from your device

Place the Silone Tag with the phone and make sure the device can search for the Silone Tag.

4. Replace the battery

Take out the old battery and replace the newly purchased CR2032 battery (vol \geq 3V; capacity:175mAh) into the Silone Tag.

09

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and;

(2) This device must accept any interference received, including interference that may cause undesired operation.⁴⁾

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.⁴⁾

-- Reorient or relocate the receiving antenna.⁴⁾

-- Increase the separation between the equipment and receiver.⁴⁾

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.⁴⁾

-- Consult the dealer or an experienced radio/TV technician for help.⁴⁾

The device has been evaluated to meet general RF exposure requirement.⁴⁾