


DELXO®



JQS1220
Smart Speaker

BUTTONS AND SOCKETS FUNCTION DESCRIPTIONS:

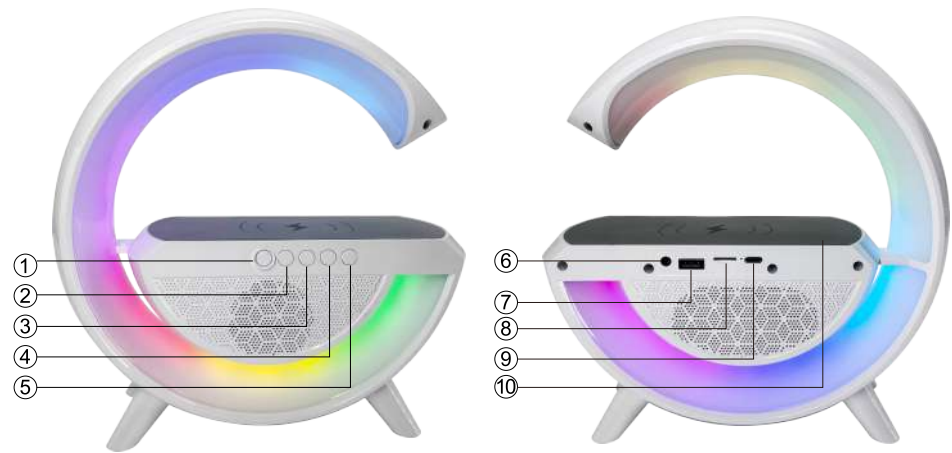

- ① **LED light control and power on/off button:**
1.Long press to switch the device on or off;
2.Short press to switch the light mode or turn off the light effect (except radio FM mode).
- ② **M Mode switch button:** short press to switch between Bluetooth mode, TF card mode, USB (U disk) mode, AUX mode, FM mode (only switch between Bluetooth mode and FM mode when other modes are not triggered).
- ③ **◀/▶ - Volume down/previous song/previous radio channel button:**
1.Short press to switch the previous song in Bluetooth, TF card, USB (U disk) mode;
2.Short press to switch to the previous channel in FM mode;
3.Long press to lower the volume in any mode.
- ④ **▶/⏸/TWS Play/pause/online play disconnect button:**
1.Short press the pause play button to pause or play music in Bluetooth, TF card, USB (U disk) mode;
2.Short press the pause play button to automatically search for channels in FM mode;
3.Turn on the speaker, long press the sub-audio pause/play button to disconnect the sub-audio from the main audio;
4.Turn on the speaker, long press the main audio pause/play button to disconnect both the main and sub audio and the Bluetooth device;
5.Turn on the speaker, press and hold the Pause/Play button twice to activate the TWS online mode for both the main and sub audio.
- ⑤ **▶/▶+ Volume up/next song/next radio channel button:**
1.Short press to switch to the next song in Bluetooth, TF card, USB (U disk) mode;
2.Short press to switch to the next channel in FM mode;
3.Long press to increase the volume in any mode.
- ⑥ **AUX audio input interface:** can be connected to PC, MP3, mobile phone, CD player and other multimedia audio devices via 3.5mm audio connection cable, output to the speaker to play sound.
- ⑦ **USB (U disk) reading interface:**
1.Built-in battery for the speaker, can be used as a rechargeable battery to charge other devices (only when the power is on);
2.Can read out MP3 and WAV format music files from the root directory of the U disk to play songs.
- ⑧ **TF card slot:** can read out music files in MP3 and WAV format from the root directory of TF card and play songs.
- ⑨ **TYPE-C charging port:** charge the audio built-in lithium battery through the TYPE-C charging cable, the recommended adapter size is 5V/1A
- ⑩ **Wireless charging:** wireless charging of other wireless charging devices is only possible when the audio is charged via TYPE-C.

OPERATING INSTRUCTIONS FOR EACH MODE CONNECTION:

- (1) Bluetooth connection operation:
1.Long press the power switch button to start the device, short press the mode switch button to switch to Bluetooth mode;
2.Open the Bluetooth setting interface of your computer or mobile phone, turn on the Bluetooth switch and automatically search for and connect to a device with a Bluetooth signal of Delxo-JQS1220 .
When the connection is successful, the sound beeps when the connection is successful. (The next time you restart the audio Bluetooth mode, it automatically connects within 10 S);
- Noted:
1.Each speaker can be connected to only one Bluetooth device;
2.TWS mode allows one Bluetooth device to be connected to a maximum of two audio devices at the same time;
3.Non-TWS mode can connect multiple audio devices at the same time.
- (2) AUX audio connection operation:
1.Press and hold the power switch button to start the device;
2.Connect the 3.5mm audio connection cable to the stereo and multimedia audio player to automatically switch to AUX audio mode.
- (3) USB audio connection operation:
1.Press and hold the power switch button to start the device;
2.Insert a USB stick with music files in MP3 and WAV format from the root directory into the USB port to automatically switch to USB audio mode, USB supports music file formats (mp3、WAV) .
- (4) TF card audio connection operation:
1.Press and hold the power switch button to start the device;
2.Insert a TF card with music files in MP3 and WAV format from the root directory into the USB port to automatically switch to TF card audio mode, TF card supports music file format (mp3、WAV、exFAT、FAT、FAT32), USB/TF supports maximum capacity (Below 128G)
- (5) TWS mode of operation:
1.Long press the power switch button to start the audio device, short press the mode switch button to switch to Bluetooth mode;
2.Open the Bluetooth setup interface of your computer or mobile phone, turn on the Bluetooth switch and automatically search and connect to one of the main audio devices whose Bluetooth signal is Delxo-JQS1220. When the connection is successful, a successful connection beeps the audio;
3.Start another secondary audio device, press the pause/play button twice quickly and wait for the secondary audio device TWS to connect, the primary and secondary audio connection beep once each, then the primary and secondary audio connection is successful, playing songs can play both primary and secondary audio; (next time when restarting the audio Bluetooth mode, it will automatically connect within 10s);
4.Turn on the speaker, press and hold the sub audio pause/play button to disconnect the sub audio from the main audio;
5.Turn on the speaker, press and hold the main audio pause/play button to disconnect the primary and secondary audio from the Bluetooth device at the same time;
6.Turn on the speaker, press the Pause/Play button twice quickly and briefly to activate the TWS online mode for both the main and subsonic audio.
- (6) FM Mode:
1.Long press the power switch button to start the audio device, short press the mode switch button to switch to FM radio mode;
2.Short press the pause/play button once to enable automatic search for radio channels;
3.Wait for a clear channel, then press the Pause/Play button briefly to stop searching for a radio channel;
4.Short press the channel switch button ▶/◀, Select the station you want to listen .

OPERATING INSTRUCTIONS FOR EACH MODE CONNECTION:

Product specification					
Model	JQS1220	Color	White	Single net weight	0.91KG
Wireless charged	5W	Speaker Diameter	2"	Product Size	237x82x245mm
Frequency Range	100Hz - 18kHz	Speaker Power	15W	Color box size	242x87x250mm
SNR	≧80dB	Speaker Power	8W	Charging Time	2-3 Hours
Support functions	BT/USB/TF/FM/TWS/ RGB Lights	Charging Voltage	DC5V	Playing Time	About 80 mins
Battery	3.7V/3000mAh- Polymer batteries				

CAUTIONS:

- (1) The device is not waterproof, do not get wet or immersed in water to prevent damage to the internal circuitry;
(2) Wireless charging equipment varies, wireless charging time is long, avoid placing in a confined space, sun exposure or high temperature environment, may cause your equipment to heat up; when fully charged, please stop charging to avoid overcharging equipment heat verification. Affect the life of the battery.
(3) For long periods of non-use, please turn off the power supply and unplug the power cord, otherwise the battery life will be affected;
(4) If not used for a long time, please fully charge the device, and then turn off the power, to avoid the loss of battery power, or affect the battery life.

Maintenance instructions: daily use a clean towel to wipe the shell, avoid storage in long-term high temperature, humidity, dusty environment.

Q&A:

(1) Why is wireless charging obviously hot, can I charge wirelessly for a long time?

A: This device is not designed for different wireless charging devices without overcharge protection function, it is not recommended to charge wirelessly for a long time, and it is recommended to stop charging after full charge, otherwise it will affect the battery life due to overheating. Due to the nature of the working principle of wireless charging, the charging process has a loss of heat, so you should avoid charging in high temperature sunlight, closed environment where it is difficult to dissipate heat.

(2) Why can't I connect the audio device to another mobile phone?

A: The audio device cannot be connected to more than one different Bluetooth device at the same time, you must disconnect the connected Bluetooth device and then connect other Bluetooth devices.

(3) Is it possible to charge the stereo with the fast charging adapter? What will be the effect?

A: There is no fast charging protocol for this audio device. It supports DC 5V 1A with 5W adapter for charging. It is not recommended to use more than 10W adapter for charging, it may damage the device.

(4) Why did the light go out when I switched FM radio mode? Can't control the light.

A: Because in FM radio mode, the radio waves from the LED light may interfere with FM radio waves and affect the radio channel playback.

(5) Why is there no response when I press the switch mode button in FM radio mode?

A: Because the first time use, change of location or location area, thunderstorm, radio wave interference will affect the radio signal reception, follow the "FM radio mode operation" guide, and search for radio stations again.

For manual customer
service assistance

scan here:



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.Used only the supplied antenna.