

## After-sales Service

Thank you for purchasing our products. If there is any quality problem, please contact with the distributor.

Note:

1. From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free maintenance service for the whole machine.
2. Other consumables and accessories are not covered by the warranty.

Non-warranty Coverage:

1. Improper use
2. Damage caused by natural disasters and other irresistible forces

## ISED Compliance Statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. **The base bracket is installed and operated with minimum distance 20cm between the radiator and human body.**


L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. **La distance minimale entre le radiateur et le corps humain lors de l'installation et du fonctionnement du support de base est de 20 cm.**

**P@B PBell**

## Multi-Function Electric Swing

### USER MANUAL

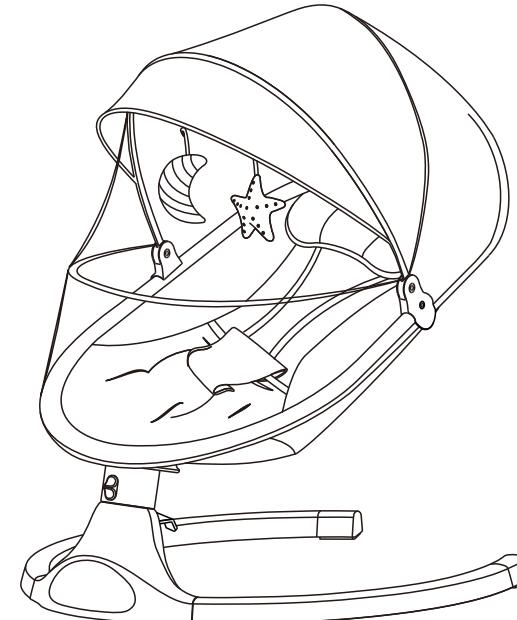

**IMPORTANT! KEEP IT FOR FUTURE REFERENCE.**

**Before installing and using, please follow the instructions carefully to ensure the safety of your baby.**

## Product Contents

<b>Product Introduction</b>	2
Product Specification	2
Product Features	2
<b>Parts Instruction</b>	3
<b>Installation</b>	4
For Base Bracket	4
For Pillow and Seat Cover	4
For Canopy With Toys	5
Safety Belt Instruction	5
Table Assemble And Adjustable Backrest Guidance	6
<b>User Instruction</b>	7
Button Description	7
Motion Lock	7
Remote Control	8
Power Supply	8
WARNING	8
<b>WARNING</b>	9
<b>Clean &amp; Maintenance</b>	10
Clean	10
Maintenance	10
<b>Troubleshooting</b>	10
<b>After-sales Service</b>	11
<b>ISED Compliance Statements</b>	11

## Clean & Maintenance

### Clean

1. Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
2. Removable and washable fabric
  - Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
  - Canopy: Take it off and put a little cleaner, wash it gently by hands. Rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
  - Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

### Maintenance

1. Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect/install it again if necessary.
2. This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.

## Troubleshooting

Fast self-inspection solution below

No.	Trouble	Solution
1	Not energized	1. Check whether the adapter and DC cable are firmly connected. If loose, connect them firmly. 2. DC cable may be damaged. Please contact customer service to replace DC cable.
2	The power lamp keeps flashing	Use matchable adapter with an output voltage of 5V and 1A
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again

Note: For other trouble, please contact our customer service for help.  
Never disassemble and repair the swing by yourself.

# ⚠️WARNING

1. Never leave the child unattended.
2. Do not use this product once your child can sit up unaided or weighs more than 9 kg.
3. This product is not intended for prolonged periods of sleeping.
4. Never use this product on an elevated surface (e.g. a table).
5. Always use the restraint system.
6. To avoid injury ensure that children are kept away when unfolding and folding this product.
7. Do not let children play with this product.
8. Do not move or lift this product with the baby inside it.
9. This product does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
10. Do not use the product if any components are broken or missing.
11. Do not use accessories or replacement parts other than those approved by the manufacturer.

## FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries falling from swings and have strangled in straps

- ALWAYS use restraints. Adjust to fit snugly.
- STOP using product when infant attempts to climb out (approximately 6 months)
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.



SUFFOCATION HAZARDS: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. ALWAYS keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

## FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The base bracket is installed and operated with minimum distance 20cm between the radiator and body. -9-

## Product Introduction

### Product Specification:

Product Name	Multi-Function Electric Swing
Model Number	BB006K
Input Voltage	100-240V~
Output Voltage	5V
Output Current	1A
Frequency	50/60Hz
Application	Children up to a weight of 9 kg or unable to sit up unaided
Main Material	100% polyester fiber, aviation aluminum base bracket
Certificate	EN12790, EN16232, ASTM F2088-22, ASTM F963-17


### Product Features:

1. Swinging from side to side, with five gears mimicking human movement.
2. Protecting baby's spine design on the basis of human engineering.
3. Power supplied by safe 5V low voltage adapter.
4. One-button installation and disassembly, simple and convenient to use.
5. Seat cover made of environmental-friendly super soft fabric and non-textile, cozy, breathable and safe & removable and machine washable seat fabric.
6. Made of aluminum alloy base with light weight and strong hardness guaranteeing safety for baby.
7. Controlled by touching screen or remote controller, easy to operate.
8. With motion lock and safety belt for protection.
9. With built-in soft nature sounds & Bluetooth enabled for music.

## Parts Instruction


Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.

1) Plush toy*2	5) Remote controller
2) Pillow*1	6) Adaptor*1, 2 meters of USB cable*1
3) Mosquito net with canopy*1	7) Seat frame*1
4) Seat cover	8) Base bracket*1

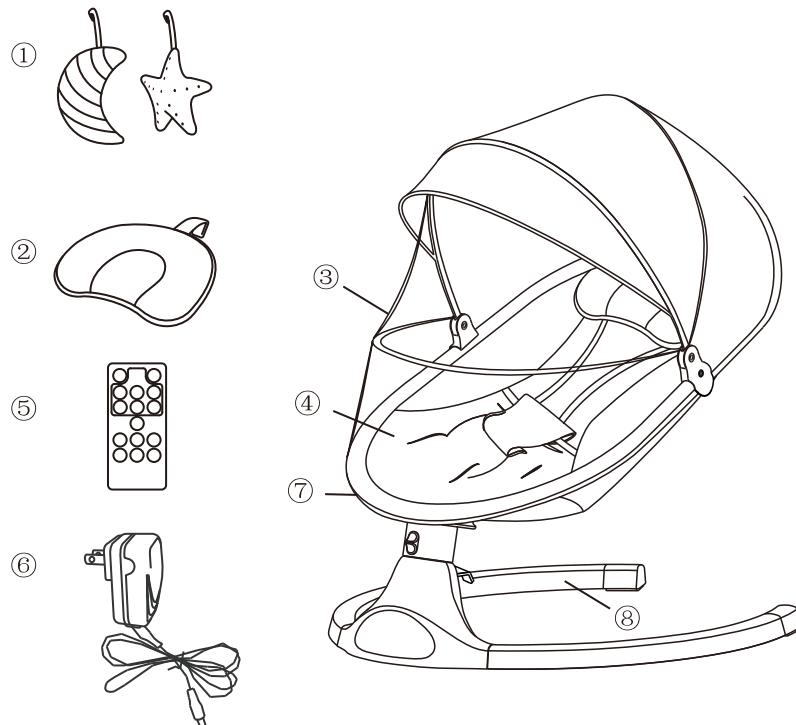


## Remote Control

	Power on/off
	Play/pause
	Time setting
	Previous song
	Built-in music/ Bluetooth music
	Next song
	Volume up
	Volume down
	Five swing gears
	Sleep mode: press to enter sleep mode/gear 2 with timer 15 minutes
	Stop swing: press to stop swing, and press any gear key to resume swing.

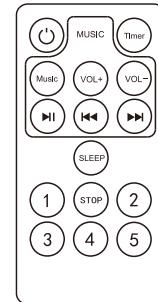

## Power Supply

1. DC plug can be inserted into 100-240V ~ 50 / 60Hz AC power supply.
2. Adapter output parameters: voltage is 5V and current is 1A.

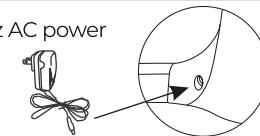


## ⚠ WARNING

- The power terminals must not be short-circuited.
- Do not use adapters other than those supplied with this product to power the product.
- Keep children away from working adapter.
- Check the adapter cable connection regularly.

## User Instruction

### Button Description

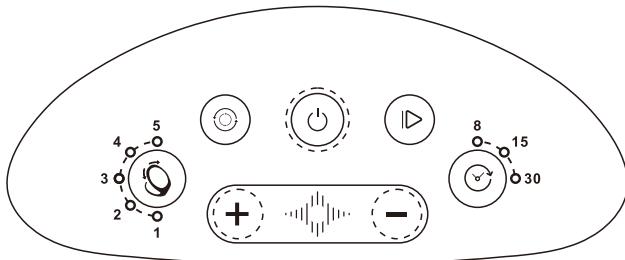


- 1 Power button: Plug in and the indicator light is on. Press the button to turn the swing off.
- 2 Touch the button to play the built-in music. Touch it again to turn the sound off.  
\* Turn on the bluetooth on smart phone and connect with "BT\_BABY006". The swing beeps, and then bluetooth is now connected well. Then the music from phone plays.
- 3 Music priority: Bluetooth>Built-in music
- 4 Touch the button to make swing settings. There are five swing gears indicated by the lights.
- 5 Touch the button to set the time. The first touch will have the swing chair swing for 8 minutes, the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.
- 6 Touch the button to play the next song.
- 7 Touch the button to increase the volume gradually.
- 8 Touch the button to decrease the volume gradually.

### Motion Lock

Push the motion lock down to lock the seat frame and stop movement.

Pull the motion lock up to unlock the seat frame and the baby swing will swing again.

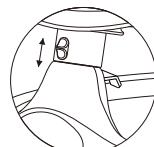


## Installation

### For Base Bracket

Assembling: Put the frame in the base with "O" shape components aligned.


Disassembling: Pull out of the sheet metal and pull up the seat frame.

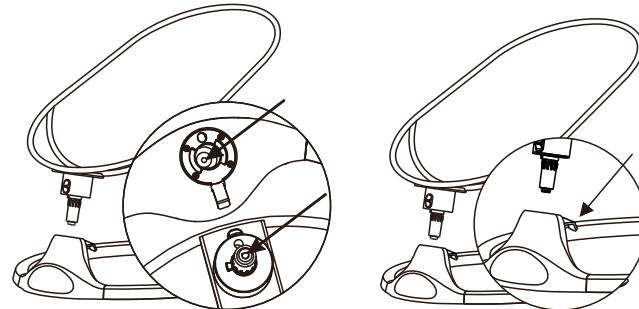

### For Pillow and Seat Cover

Installation: Put the seat cover on the seat frame and fasten the snap button on the back. Attach the pillow to the top retaining ring of the seat frame and press the Velcro of the pillow.


Removing: Pull off the Velcro to detach the pillow and unfasten the snap button to remove the seat cover.

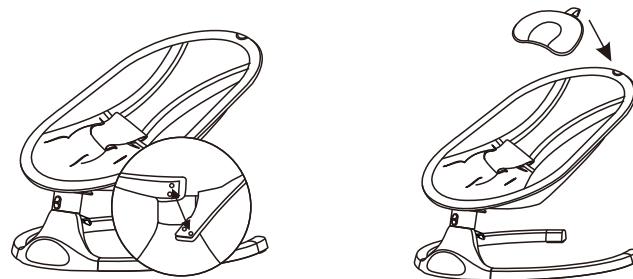

## For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame.


Dismantling: Put out of the clasps to remove the canopy.

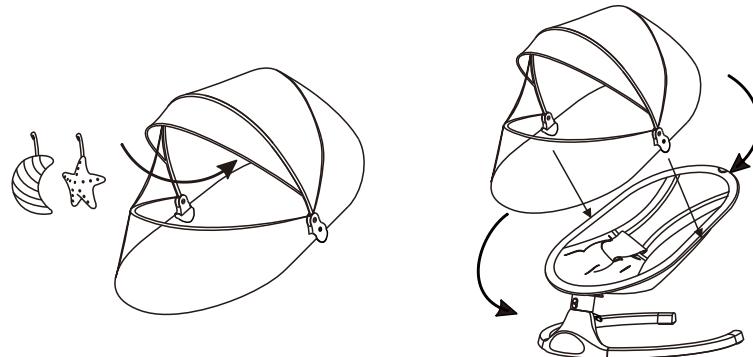

## Safety Belt Instruction


Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.

Note: Be sure to use the safety belt correctly when your baby lie on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

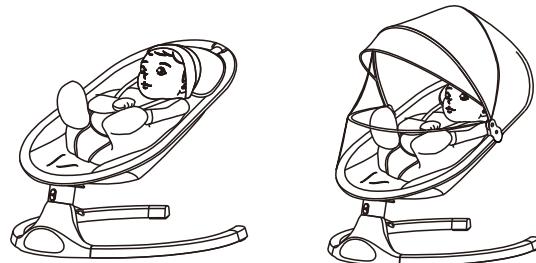


## Table Assemble And Adjustable Backrest Guidance


① Align the fixing column with the hole in the middle of the bottom of the desktop, then align and fix screws into four small holes .

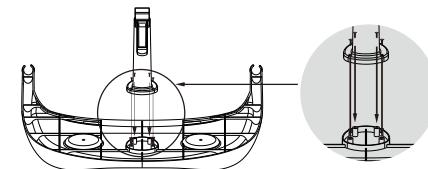


② How to clip the table on the seat frame  
A.Clip on the round tube  
B.Push down and snap it  
C.Clip the bottom of seat frame  
D.Press the buckle up and fixe

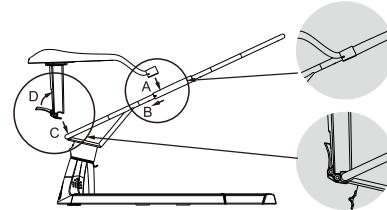

Adjustable backrest:  
Hold two side steel tube,lift up to  
adjust recline of the backrest

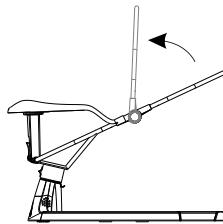

Detach backrest Press buttons on  
left and right side and press down to detach

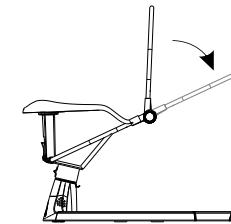

Cautions:Infants and children are not allowed to stay in the swing during the above operation  
Above picture is for assebly installation only,product please refer to the actual.



**WARNING**  
Guardian should take good care of your child,prohibit  
to play accessories and avoid to get hurt or swallow !