



Wireless Speaker

Model: A500



Before using this product, please read these instructions carefully for proper use.

Before putting the equipment into use, please read this manual carefully. Save this manual for future reference. The operation of this device is subject to the following two conditions

- 1. This equipment or device may not cause harmful interference.
- 2. This equipment or device must accept any interference. Including the one that may cause your unwanted operation

Electrical Characteristics

- 1.Voltage: 5V===
- 2.Signal to noise ratio: ≥75dB
- 3.Audio Frequency: 20Hz - 20KHz
- 4.Battery capacity: 2200 mAh
- 5.Battery charging time: 3 h
- 6.Working time: 6h

Charge the Speaker

- 1. Plug the included USB cable into the charging port located on the bottom rear of the speaker.
 - 2. Connect the other end of the USB cable to any other power source.
- USB power and charge for hours. During the charging phase, the power LED will light red. Unplug the speakers when ready to use.

NOTE: The speaker can also be used while plugged in to the USB power cable for extended use without draining the battery.

Turn on and connect to your device

- 1. Slide the switch on the back of the speaker to the ON position to turn it on.
- 2. Press the mode change button to select Bluetooth, FM Radio, AUX, USB or Micro SD.

Pair your A500 with a phone or other device Make sure the speakerphone is in on mode.

- 1. Start the Bluetooth function
- 2. Search for nearby Bluetooth devices, A500 will appear.
- 3. Pair your device with A500.

Once the speaker is paired and connected to your device, the next time you turn on the speaker, it will automatically connect as long as your mobile phone's Bluetooth is turned on.

Radio mode

- 1. Press the button to turn on the speaker and automatically the Bluetooth mode will be activated. After power on, press M button to switch to radio mode.
- 2. Press - or + once to change the radio station

*Recommendation: If you are in a place with few exceptions, just plug in the charging cable (no need to connect it to the light current). The cable will work for you to amplify the signal and improve the audio quality of the radio station.

Speakerphone Calls

Integrated microphone to make calls on speakerphone. Press the play/pause button to answer incoming calls.

Button function



Using Device Input

- 1. To use the speaker's USB or aux input, plug the cable into the back of the speaker and connect it to your device to "play" music.
- 2. To use memory card input, insert a compatible SD memory card into the slot. Use the speaker controls to control music playback.

Warn

- Keep the device away from heat sources and direct sunlight.
- Do not insert any metal objects into the device.
- Risk of short circuit.
- To avoid static electricity, do not use the device in extremely dry climates.

Precautions

- Do not handle the speaker, USB cable, or power supply with wet hands.
- Do not allow dust or other matter to accumulate on the product and power cord.
- Do not use the speaker if it has been dropped or damaged in any way.
- Never disassemble this equipment, always have it serviced by a qualified technician.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.