

Quick Installation Manual

Model:X30

Read the safety manual detailedly before use.
Please read installation instructions and use the product properly. Keep this manual carefully.

Device approval code CMIIT ID:2022AP5949

CIBN Internet TV supervised

Preparations for installation

Please check all accessories before installation.

Accessories check before opening box.

- main machine of projector light
- lamp cover、decoration board
- fixing bracket
- remote controller
- batteries for remote (carbon zinc AAA batteries *2pcs)
- screw kit for quick installation

Remote controller preparations

- ① Press the groove to open battery box.
- ② Install two carbon zinc AAA batteries and put the lid on.

Installation sequences


1



Switch off the light power (or turn off the circuit breaker).

2

Install the fixed bracket to the ceiling.

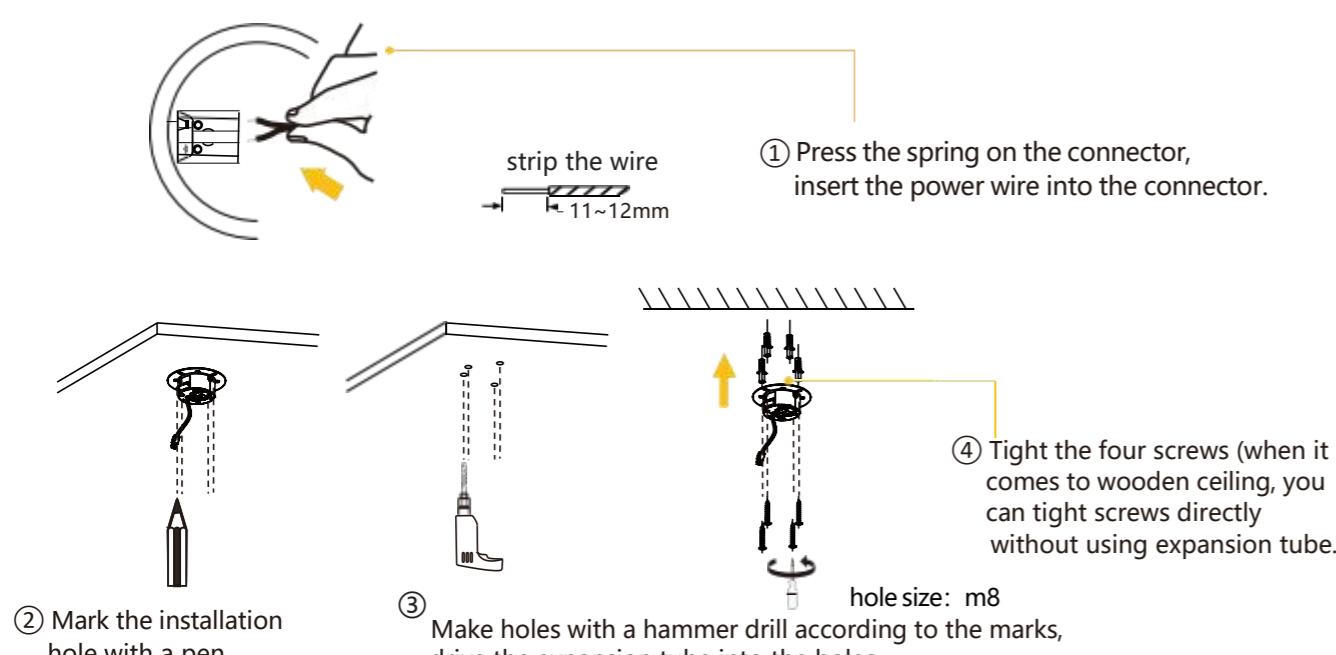


1

Initial setting

Start the system, it will show [Now Loading...] on the screen, after system reading, please operate according to voice and image instructions.


1 remote controller match

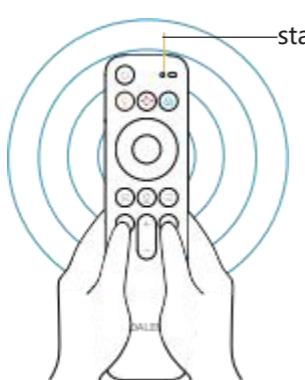

Hold the remote controller within 50cm distance from the main device, long press Home button and previous page button .

The state light on remote controller will start flickering , after a "ding" sound, match successfully.

2 focusing and definition adjustment

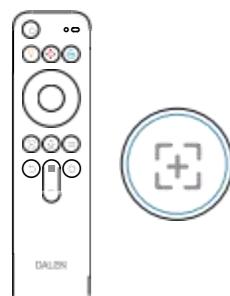

Press focusing button , then press direction buttons (left and right) to adjust the image to high definition state.

3 Image position adjustment



Press focusing button to show the focusing image, press direction buttons to adjust the image position up and down.

4 Image keystone correction



Select the four corners of image via direction button , click "OK", you can choose corresponding corner and adjust balance via direction button , press OK button and finish setting for this corner. Other corners can be adjusted like this. Press "down" button , click "OK" to enter the next step .

3



Take out the projector light from package.

- ① open the lamp cover by rotating it clockwise;
- ② open the decoration board by rotating it anticlockwise




Install the main device of projector light

- ① Lift the projector light with both hands pass the bracket plug through the round hole in the middle of the light.
- ② Lift the main device up until hearing "click" sound
- ③ Push the control stick on the fixing bracket to LOCK position and lock it.
- ④ Confirm the main device is in horizontal balance state.



Connect the bracket plug with the socket inside the main device.

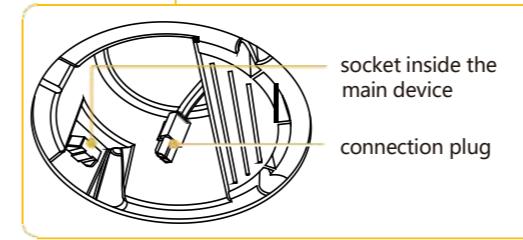

Please do not rotate the projector violently after the plug connected. (connection box may fall down)
If you need to adjust direction by large angle, please pull out the plug first.

6




Install the lamp cover

- ① Rotate the decoration board clockwise towards the mark.



- ② Rotate the lamp cover anticlockwise to fix it.

7

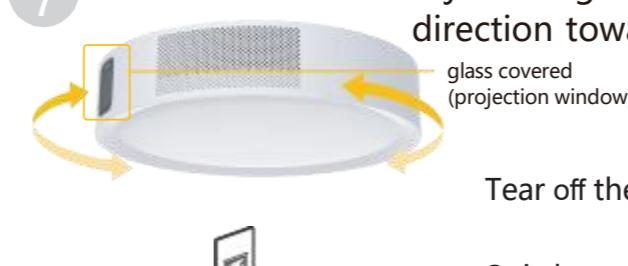

Adjust the glass-covered area(projection window) direction towards the wall, installation finished.

Tear off the protective film on projection window.

Switch on the light power (or turn on the circuit breaker)

2

5 connect to network



According to the network detected on the screen, press up and down button to choose the network, click "OK" to confirm.



Please type in network passwords when it shows the following image. Control the keyboard by using direction button. Click here to switch capital. Finish passwords input and press "OK" button . If you do not want to set network, please select "skip". Please select connecting by hand if the network you want does not show on the screen,

4


Light operation

Light on · Light off

remote control operation Please turn on the light power when using remote controller.

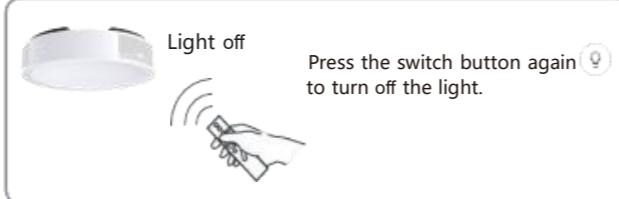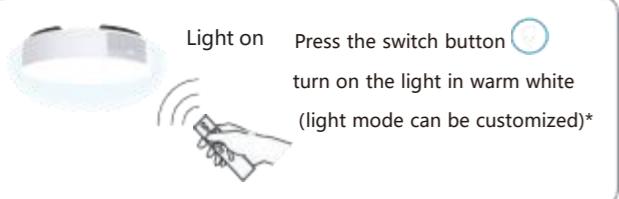

Brightness & color temperature remote controller

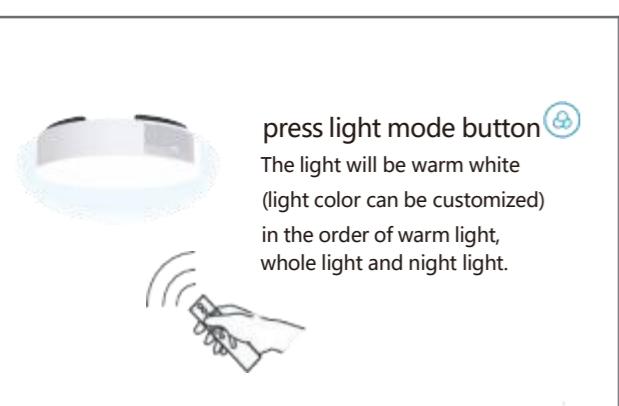


*Light brightness and color can be customized via "light setting" function in "system setting" on the homepage.

Display operation



Select brightness adjustment in "light setting" function in "setting" on the homepage.

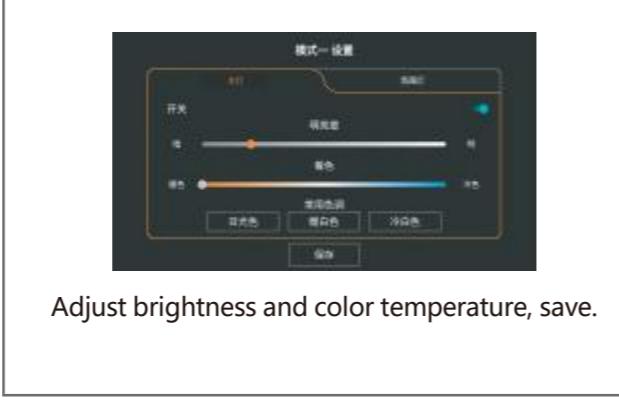

Adjust brightness and color temperature, save.


*Save the settings to reserve the chosen light color.

5

Power

Power OFF

Remote controller operation

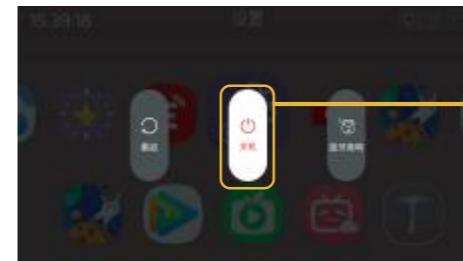


Press the power button on remote.

Press direction buttons and select the function you need, press "OK".

Wireless screen casting

Casting operation

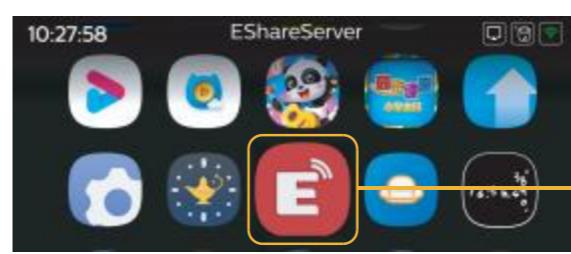

Select EShare App via remote controller.
Connect wireless screen casting by following instructions.
Android/ios/windows devices supported.

6

Disassembly

1



Switch off the light power (or turn off the circuit breaker).

2




①Take down the lamp cover.

Rotate to the left and take the cover off.

②Take off the decoration board.

3

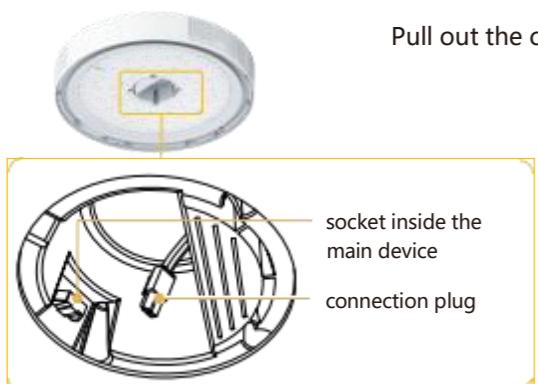

Pull out the connector plug from the socket inside the main device.

socket inside the main device
connection plug

4




Take down the main device from the fixing bracket.

①Hold the main device by one hand, grab the balance grip with the other hand.

②Push the control sticker in the connection box to OPEN position while holding the balance grip, then unlock.

5

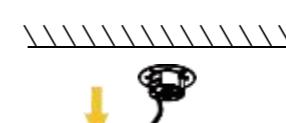

Take off the fixing bracket from the ceiling.
Loosen the four screws and take the fixing bracket off.

Abnormal

situation	reason	solution
remote controller failure	The wall switch of the light is off. There may be shelters between the remote controller and main device. Bluetooth between remote controller and main device is disconnected.	Turn on the wall switch and try remote controller again. Remove the shelter and put the remote controller close to main device. ①Put the remote controller within 50cm distance from the main device, long press the homepage button and return button at the same time. ②Release the button when the state light on remote controller starts flickering, after hearing "ding" sound, match successfully. If the projector still fails to be turned on, press the state light on remote controller directly. (The state light is red when standby and turns green when the device is on.)

The batteries in remote controller is wrongly installed, please confirm the battery direction.
Out of battery, please change new batteries.



③Hold the main device carefully, take it down.

7

8

Factory Reset

Factory Reset

1. Enter the setting APP via remote controller.
2. Enter "Other" option.
3. Select "factory reset", waiting for the countdown, click "confirm" to finish factory reset.



System Update

Online Update




System Update

1. Enter the online update APP via remote controller.
2. Click "check for updates".
3. Select "online update" to finish the system update.

9

RC Spec.

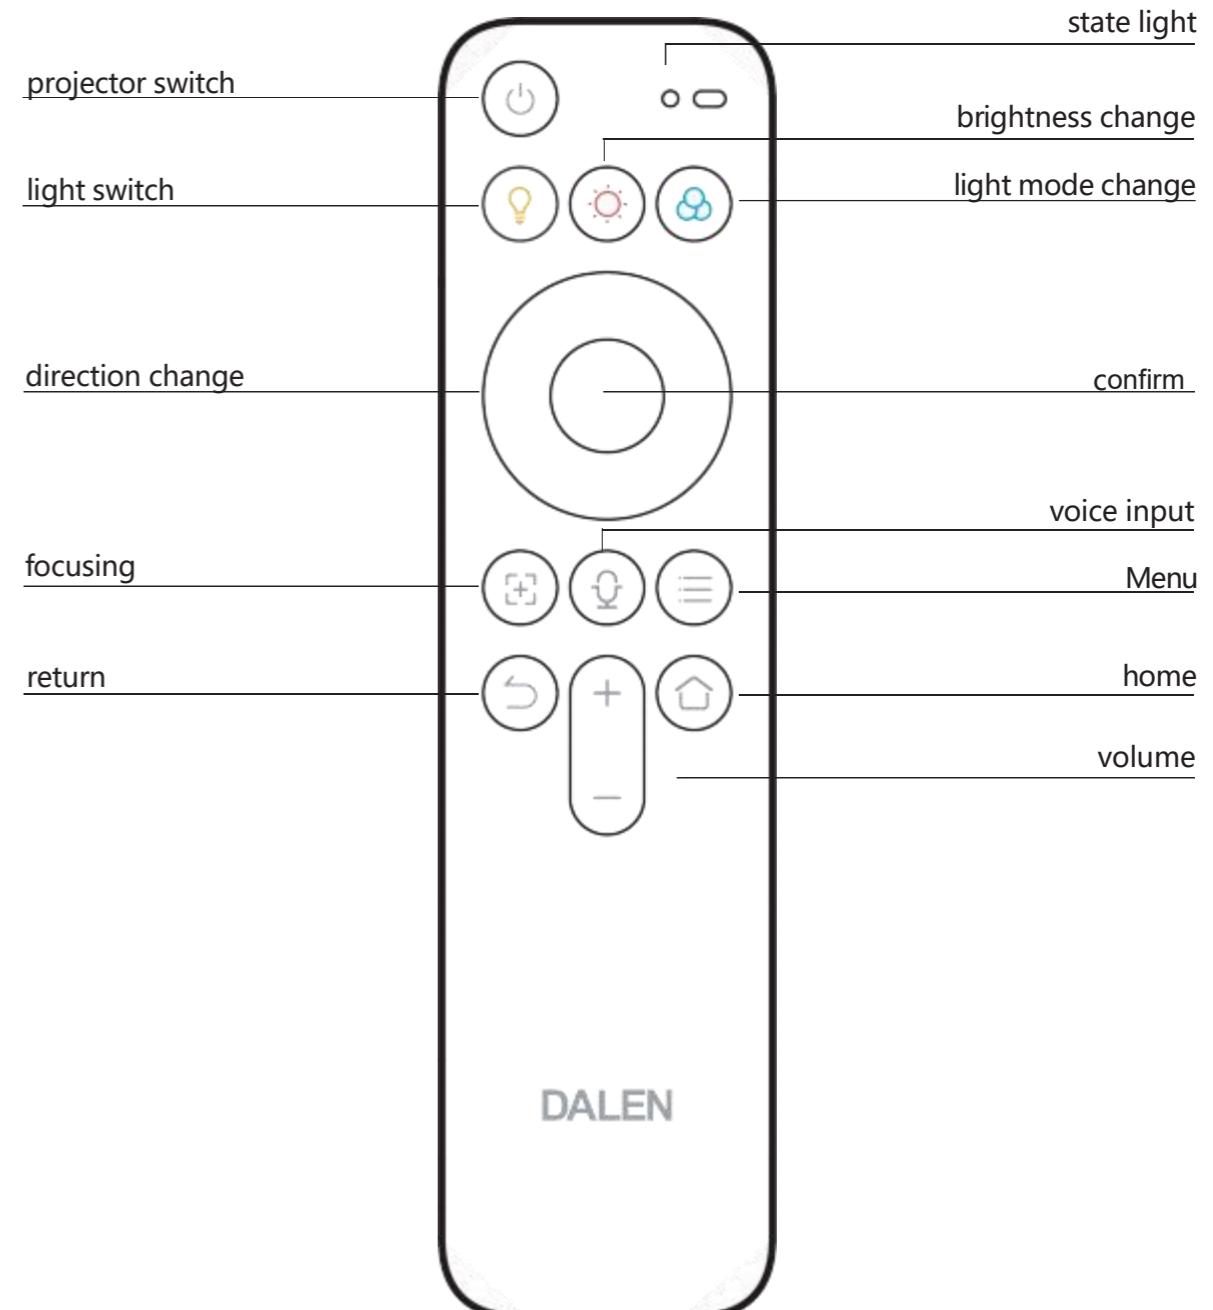

10

Specifications

Product name: DALEN Aladdin magic light

Model: X30

Power: 100W

Input: 220 - 240V~, 50/60Hz

Light source: 80 × 1W/LED module + 72 × 0.2W/LED module

Executive standard: GB 17625.1 - 2012; GB/T 17743 - 2021;

GB 7000.1 - 2015; GB 7000.201 - 2008;

GB 4943.1 - 2011; GB/T 9254 - 2008

Precautions

- Please use the power line with national electricity standard to ensure the device power's stability.
- Please use exactly the power supply type marked on the device.
- Please do not disassemble the device by yourself, or you will lose official warranty service.
- To prevent electric shock, please avoid water splashing on the device as it's not waterproof.
- Please turn off the device power or the whole power if you won't use it for a long time.
- Please use the original protective cushion package during delivery.
- Please contact customer service if you find the product broken, do not fix it by yourself.

Harmful substances in the product

Part name	Harmful substances					
	lead (Pb)	mercury (Hg)	cadmium (Cd)	hexavalent chromium (Cr(VI))	polybrominated biphenyls (PBB)	polybrominated diphenyl ethers (PBDE)
outer cover	O	O	O	O	O	O
electric board module	O	O	O	O	O	O
battery	O	O	O	O	O	O
remote controller	O	O	O	O	O	O
accessories	O	O	O	O	O	O

This form follows SJ/T 11364

O: Indicates that the content of the harmful substances in all materials of the components is below the limit requirements in GB/T 26572.

X: Indicates that the content of the harmful substances in at least one material of the components exceeds the limit requirements in GB/T 26572.



The number in this mark indicates the product environmental protection lifetime is 10 years in normal use. Some components may have environmental protection use limits mark, please refer to the number in that mark. Due to different models, the product may not include all above components besides the main device, please refer to the actual product sales.

Warranty Card

DALEN Aladdin Magic Light Warranty Policy

1. If the product has quality problems within 7 days from purchase, consumers can choose to refund as the invoice price or replace it with another product of the same model and specifications.

2. Warranty period: 12 months from the date of purchase.

3. If you apply for a 7-day return for no reason, please make sure that the film is undamaged, the product and accessories are complete; Within 15 days from purchase, if the product has any quality problem, consumers can choose to replace it with another one of the same model and specifications.

4. There is no damage or scratches on the product itself, accessories, product appearance or on the package.

5. During the free warranty period, the returned product will be inspected and confirmed by an authorized service provider who can decide to repair, refurbish or replace it, and the replaced parts will not be returned. As for the products found to be fault-free during inspection, they will be returned as they are.

DALEN Aladdin Magic Light Non-Warranty Policy

1. Damage caused by improper use, maintenance or storage not in accordance with the product manual;

2. Damage caused by dismantling or repairing by non-authorized service providers of this product;

3. Damage caused by force majeure;

4. The product model or code on the warranty card does not match the actual product;

5. Normal discoloration, wear and consumption during use;

6. The product use failure caused by the consumer's own network problems;

7. The returned power supply has obvious hard damage, breakage, broken feet, serious disguise, power line damage, disconnection, bare core, etc., this kind of power supply is not guaranteed to be replaced.



Brand owner/Manufacturer :
Jiangsu Dalen Electronic Co., Ltd.
Website : www.dalen-tech.com
Email : sales@dalen-tech.com
Hot line : 4006-460-988
After-sale service supported by DALEN

13

14

User Stub

User Stub

User Information (Please fill in true information, DALEN

promises to use it only for after-sale service.)

Name _____ Phone _____

Email _____ Post code _____

Address _____

Product Information

Item _____ Model _____

Color _____ Package SN number _____

Service Return Change Maintenance

Fault descriptions _____

Application date _____

Maintenance signature _____

Factory Stub

Factory Stub

User Information (Please fill in true information, DALEN

promises to use it only for after-sale service.)

Name _____ Phone _____

Email _____ Post code _____

Address _____

Product Information

Item _____ Model _____

Color _____ Package SN number _____

Service Return Change Maintenance

Fault descriptions _____

Application date _____

Maintenance signature _____

15

16

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.