



```

AVS(operation-mirror-remote)#
Help:
      list - Show the remote port mirroring settings
      enable - Enable the remote port mirroring
      disable - Disable the remote port mirroring
      .. - Navigate up one category
      exit - Exit Command line interface

AVS(operation-mirror-remote)# list

Remote Port Mirroring:
Status: Enabled



| Send Node | Capture Port | Recv Node | Mirror Port |
|-----------|--------------|-----------|-------------|
| root      | Port 1       | third     | Port 3      |



AVS(operation-mirror-remote)# disable
Disable the remote port mirroring? (y/n): y

The remote port mirroring has been disable

Remote Port Mirroring:
Status: Disable



| Send Node | Capture Port | Recv Node | Mirror Port |
|-----------|--------------|-----------|-------------|
| N/A       | N/A          | N/A       | N/A         |



AVS(operation-mirror-remote)#

```

Download the Support Logs

You can download the support logs from this page and send it to Airvine support for further investigations.

[WEB GUI]

System > Operations > System Operation > Download Logs



