

## Bud Light Amp Speaker

MODEL NO.: TWG22125

### USER MANUAL

READ THIS INSTRUCTION MANUAL BEFORE OPERATING THE APPLIANCE AND SAVE IT FOR FUTURE REFERENCE.

#### ! WARNING !

##### CAUTION- Symbol Definitions

**DANGER** - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. This symbol appears only in the most extreme situations.

**WARNING** - Indicates a potentially hazardous situation which could result in death or serious injury.

**CAUTION** - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property/damage. It also warns against unsafe practices

**! The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.**

**CAUTION** **RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**

**! The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### READ ALL INSTRUCTIONS BEFORE USE

 Always follow basic safety precautions when using this Bluetooth sound bar, especially when children are present

#### ● TO PREVENT FIRE AND ELECTRIC SHOCK:

- Only use battery and charger provided and specified by manufacturer. Use of the wrong type of battery for charger could cause a fire or explosion.
- DO NOT use the battery or charger for any other product. Overheating, fire or explosion could occur.
- NEVER modify the electric circuit system. Alterations could cause a shock, fire or explosion.
- DO NOT allow any type of liquid on the battery or its components. Explosive gases are created during charging. DO NOT charge near heat or flammable materials. Charge in a well ventilated area ONLY. Charge the battery in a dry area ONLY.
- DO NOT open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- DO NOT open the unit. Exposed wiring and circuitry inside case may cause electric shock.
- ONLY ADULTS may handle or charge the battery. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- DO NOT drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger and the connectors.
- DO NOT charge the battery if any damage to parts has occurred. Replace with manufacturer's parts ONLY.
- DO NOT allow the battery to drain completely; recharge the battery after each use or once a month if not used regularly.
- DO NOT charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child if the vehicle tips over. Risk of fire. Do not bypass.
- If a battery leak develops, avoid contact with the leaking acid and place the damaged battery in a plastic bag. See information in "Disposal of Battery" for proper disposal.
- If acid comes in contact with skin or eyes, flush with cool water for at least 15 minutes and call a physician.
- If acid is internally ingested, give water, milk of magnesia or egg white immediately. Never give emetics or induce vomiting. Call a physician.

#### 1. SAFETY INSTRUCTIONS

- 1) Read this Instruction Manual before you attempt to connect or operate the appliance.
- 2) Keep these instructions in good condition. Heed all warnings. Follow all instructions.
- 3) Save this Instruction Manual for future reference.
- 4) The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- 5) No naked flame source, such as candles, should be placed on the product.
- 6) Children should be supervised to ensure that they do not play with the appliance.
- 7) Ventilation should not be impeded by covering the ventilation openings.
- 8) Ensure that the unit is plugged into an AC 120V 60Hz power outlet. Using higher voltage may cause the unit to malfunction or even fire catching. Turn off the unit before unplugging it from power source to completely switch it off.
- 9) Do not plug/unplug the power plug into/from an electrical outlet with wet hands.
- 10) If the power plug does not fit into your outlet, do not force the plug into an electrical socket if it does not fit.
- 11) Only use accessories, which are specified by the manufacturer.
- 12) Use replacement parts, which are specified by the manufacturer.
- 13) Install the unit in accordance with the manufacturer's instructions.
- 14) Place the unit where there is good ventilation. Place the system on a flat, hard and stable surface. Do not expose to temperatures above 40°C. Allow at least 10 cm clearance from the rear and the top of the unit and 5 cm from each side.
- 15) Press the player's buttons gently. Pressing them too hard can damage the Bluetooth sound bar.
- 16) Dispose of used batteries in an environmental-responsible manner.
- 17) Always ensure that the product is unplugged from the electrical outlet before moving or cleaning. Clean it with dry cloth only.
- 18) Unplug the product during lightning, storms or when it will not be used for long periods of time.
- 19) This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing. Take the product to the electronics repair shop of your choice for inspection and repair.
- 20) NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
- 21) Don't mount this product on a wall or ceiling.
- 22) Do not place the unit near TVs, speakers and other objects that generate strong magnetic fields.


#### 2. CONNECTING POWER SOURCE

This unit was designed to operate with an AC120V 60Hz power supply. Connecting this system to any other power source may cause damage to the system. Unwind the AC power cord to its full length. Connect the plug to the AC mains inlet of the unit, and then the mains plug into a standard AC socket outlet. Make sure the AC plug is fully inserted into the socket outlet. The set is now connected and ready to use.

To switch the unit off completely, withdraw the power cord from the wall outlet.


- 1) Unwind the AC power cord on the rear of the unit. Do not plug or unplug the power cable in wet hands.
- 2) Once connected to the power supply, the unit will enter standby mode. Press the Power button to power the unit on.
- 3) Please disconnect the mains plug from the AC outlet if the appliance is not going to be used for a long period of time.

#### FRONT PANEL

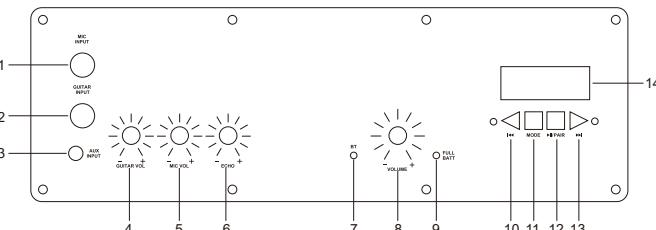

- 1) Microphone input (6.3mm): Connect a wired microphone to this microphone input terminal.
- 2) Guitar input (6.3mm): Connect a guitar to this guitar input terminal.
- 3) AUX in jack(3.5mm): The Input is designed to connect directly to a Mp3 Player or any other stereo level audio device.
- 4) Guitar Volume Knob: Turn this knob to adjust the volume level of your guitar.
- 5) Microphone Volume Knob: Turn this knob to adjust the microphone volume level of the microphone input.
- 6) Microphone Echo Knob: Use this knob to adjust the echo for the microphone input.
- 7) Bluetooth Indicator : Bluetooth indicator will light up solid when in connecting, and it flashes when pairing.
- 8) Volume Knob: Turn this knob to increase /decrease the voice level.
- 9) When the unit is fully charged, the LED will light up in green color.
- 10) Previous Track Button: press this button to move to the previous track.
- 11) Input Mode Button: Press this button to select the desired mode between the various inputs
- 12) Play/Pluse button: Press this button to play or pause the track , When on Bluetooth mode, press it will disconnect/ connect the pairing
- 13) Next Track Button: press this button to move to the next track.
- 14) LED display

## REAR PANEL

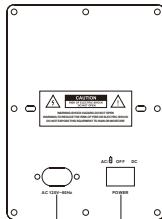

- 15) electrical outlet: connect the main power into the rear of the unit and then connect the plug into the power supply
- 16) Power Button/AC socket: Press this button to power the unit on the unit. If the battery needs to be charged, set the button to AC position and connect the power cable to the rear of the unit. When set to AC, the unit can also be powered by an external power supply (electrical outlet) even if the battery is dead. To turn the unit off set the power button to OFF. It is recommended to fully charge the battery prior to using the unit for the first time. It is also recommended to charge the battery at least every 2-3 months to keep the battery operating to its highest capacity.

## BASIC OPERATING INSTRUCTIONS

### 1) Turning on/off the unit

Press the power switch on the rear of the unit to AC side to select AC power supply, or select the DC side to select the battery power supply, to off side to switch off the speaker.  
Note: Make sure the power plug is properly connected to a 120V~ 60Hz household AC power outlet.

### 2) Operating mode selection

Press the MODE button on the unit to select the desired mode Aux(line in)/BT as you want.

## AUX IN (LINE IN) Function

Connect the Audio Output jacks of your auxiliary sound source (TV, VCR, DVD Player, MP3 player, Cassette Deck, Mini Disc Player, etc.) to the Line in socket on the control panel. The auxiliary function will only be supported when the AUX in jack has a suitable sound source connected via an AUX in cable.

Press the Power button to AC or DC side to power on the Bluetooth speaker.

Once the AUX in cable is connected with your audio device and your speaker system, turn your auxiliary source 'On' and operate it as usual.

Press the MODE button on unit repeatedly to select desired function. The sound from the auxiliary source will be heard through the speakers of this system.

Press the VOLUME+/- to adjust the sound effect level.

## PAIRING A BLUETOOTH DEVICE

Turn on your Bluetooth device.

Turn on the speaker and press the MODE button to select the Bluetooth mode, the unit will automatically go into pairing mode to search for Bluetooth device. You will know you are in pairing mode.

If your Bluetooth device is not able to pair to the unit, disconnect the unit's Bluetooth to break the previous Bluetooth connections and reset the Bluetooth module.

Navigate to your Bluetooth device's setup screen, find "Bud Light Speaker" and connect.

Bluetooth indicator light will light up solid when in connecting. Flashes twice when pause playback, flashes when ready for pairing.

To disconnect pairing, hold PLAY/PAUSE button.

Note: You can connect with a smart phone or tablet PC with Bluetooth.

## BATTERY

1. The unit is powered by the AC power supply or the built in battery pack. Unplug the AC power plug from the AC socket, and slide the power switch to DC mode, the built in battery can be powered the speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. The unit takes approximately 8 hours to fully charge. The unit will automatically begin charging once the power cord is connected to a power source, and then set the Power button at the AC. The unit will also power on when connected to a power source even if the battery power is low. When connected to a power source, the unit will play while also charging the battery. When the battery is full, the full charging indicator light on front panel will ON.
2. Upon completion of the charging, Please disconnect the power cable.
3. If all green battery indicator turned off and only the red low LED lights up, please power off the unit and begin charging the battery.
4. With standard usage, a fully charged battery can play for about 3 hours. It depends on the playback volume level and the surrounding environment you selected. It is advised that you wait 10-20 minutes before recharging the battery pack if it has turned flat or any distortion during operation.
5. Battery can be recharged about 1000 times in its life time.
6. When not in use, the speaker should always be set of OFF to prevent the unit from draining the battery.
7. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

## CARE AND MAINTENANCE

Disconnect the appliance from the power source when cleaning.  
If the unit becomes dusty, wipe it with a soft and dry duster. Use a soft cloth to clean this appliance. Do not use any wax, polish sprays, or abrasive cleaners on the unit.

## CAUTION

Never allow any water or other liquids to get inside the unit while cleaning. Dispose of used batteries in an environmental-responsible manner. This product is not intended for commercial use. Household use only. Before taking the unit to be repaired, please check the following table when a problem occurs. Consult your dealer or service center if the problem cannot be solved with the following information.

## TROUBLE SHOOTING

Problem	Remedy
Power System does not turn on or	-Make sure AC power plug is connected to the wall socket outlet properly and it has power. -If this does not help, leave the unit unplugged before seeking advice.
Pairing the product Cannot pair successfully	Check whether the speaker is in standby or searching mode. Check whether there are other Bluetooth receivers around your Bluetooth device. Turn them off to avoid any disturbance. Attempt to pair again. You can click "Forget this device" and then repair it again if required. Search for "Bud Light Speaker" on the Bluetooth device and pair it again.
Cannot play properly, the music plays intermittently	Check whether the distance between the speaker and your Bluetooth device is out of its working distance (10m), or whether there are some obstacles blocking the communication between the speaker and the Bluetooth device. Move the speaker or the Bluetooth device to get the best reception.
The sound is distorted	Check the volume setting on both the speaker and your Bluetooth device and adjust the volume to a suitable level.
No sound can be heard	Check the volume is set in MUTE mode, and then adjust the volume level in desired level.

## STANDARD ACCESSORIES

Speaker	1
Instruction Manual	1
AC Cord	1
Wired Microphone	1

If in the future you need at any time to discard this product, please note that electrical products should not be thrown away with regular garbage. Please place this product in the recycling bins or go to designated recycling areas. Check with your local authority or the retailer which is the best recycling process.

Manufactured by:  
THE WONDERFUL GROUP, L.L.C.

1220 SE 2ND STREET

FORT LAUDERDALE, FLORIDA 33301

Tech Support: +1-954-292-5641 Tech Support: patty@twgintl.com