



## Rechargeable and Waterproof Remote Dog Training Collar Operation Guide

Please read the entire guide before using

1

3

## Features

- 1.Rechargeable Remote Transmitter
- 2.Rechargeable and Waterproof Receiving Collar
- 3.1000 feet remote control range between Remote Transmitter and Receiving Collar.
- 4.Beep Mode activates a correcting tone on the Receiving Collar
- 5.Adjustable vibration intensity level from 1-99 level
- 6.Adjustable static shock intensity level from 1-99 level (optional)
- 7.Power saving modes:
  - The Receiving Collar will go into Standby Mode if it's idle for more than 5 mins. Any movements will activate the Receiving Collar.
  - The Transmitter will go into Standby Mode (0 will be light off with 30S, will be light off with 1min).
- Press button to re-activate it from Standby mode.
- 8.The Remote Transmitter can be used to control up to 2 Receiving Collars.
9. 2 pairs of metal contacts (1 short and 1 long) are included to suit the length of your dog's hair.
10. The Transmitter with lock key function.

## How does the Rechargeable and Waterproof Dog Training Collar Work

The Rechargeable and Waterproof Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs. This system allows you to control your dog within a range up to 1000 feet. At the press of a button, the Remote Transmitter sends signal to the Receiving Collar and activates a Beep, a Vibration or a Static Shock correction output. By using the Training Collar properly, you can correct much of your dog's undesired behavior and teach basic and advanced obedience commands.

2


Thanks for choosing the Rechargeable and Waterproof Remote Dog Training Collar.  
Our mission is to provide you with the safe tools and techniques to train your dog.

## Contents


1. Features
2. How Does the Rechargeable and Waterproof Training Collar Work
3. Precautions
4. Components
5. Key Definition
7. Operation Guide
- Step1 Preparing the Remote Transmitter
- Siep2 Preparing the Receiving Collar
- Step3 Encoding the Remote Transmitter and Receiving Collar
- Step4 Testing the Rechargeable and Waterproof Training Collar
- Step5 Fitting the Receiving Collar to your dog
8. Frequently Asked Questions
- 9 General Tips for Training Your Dog
- 10 Common Weights of Different Dog Breeds
- 11 Indicator & Display

4

## Components

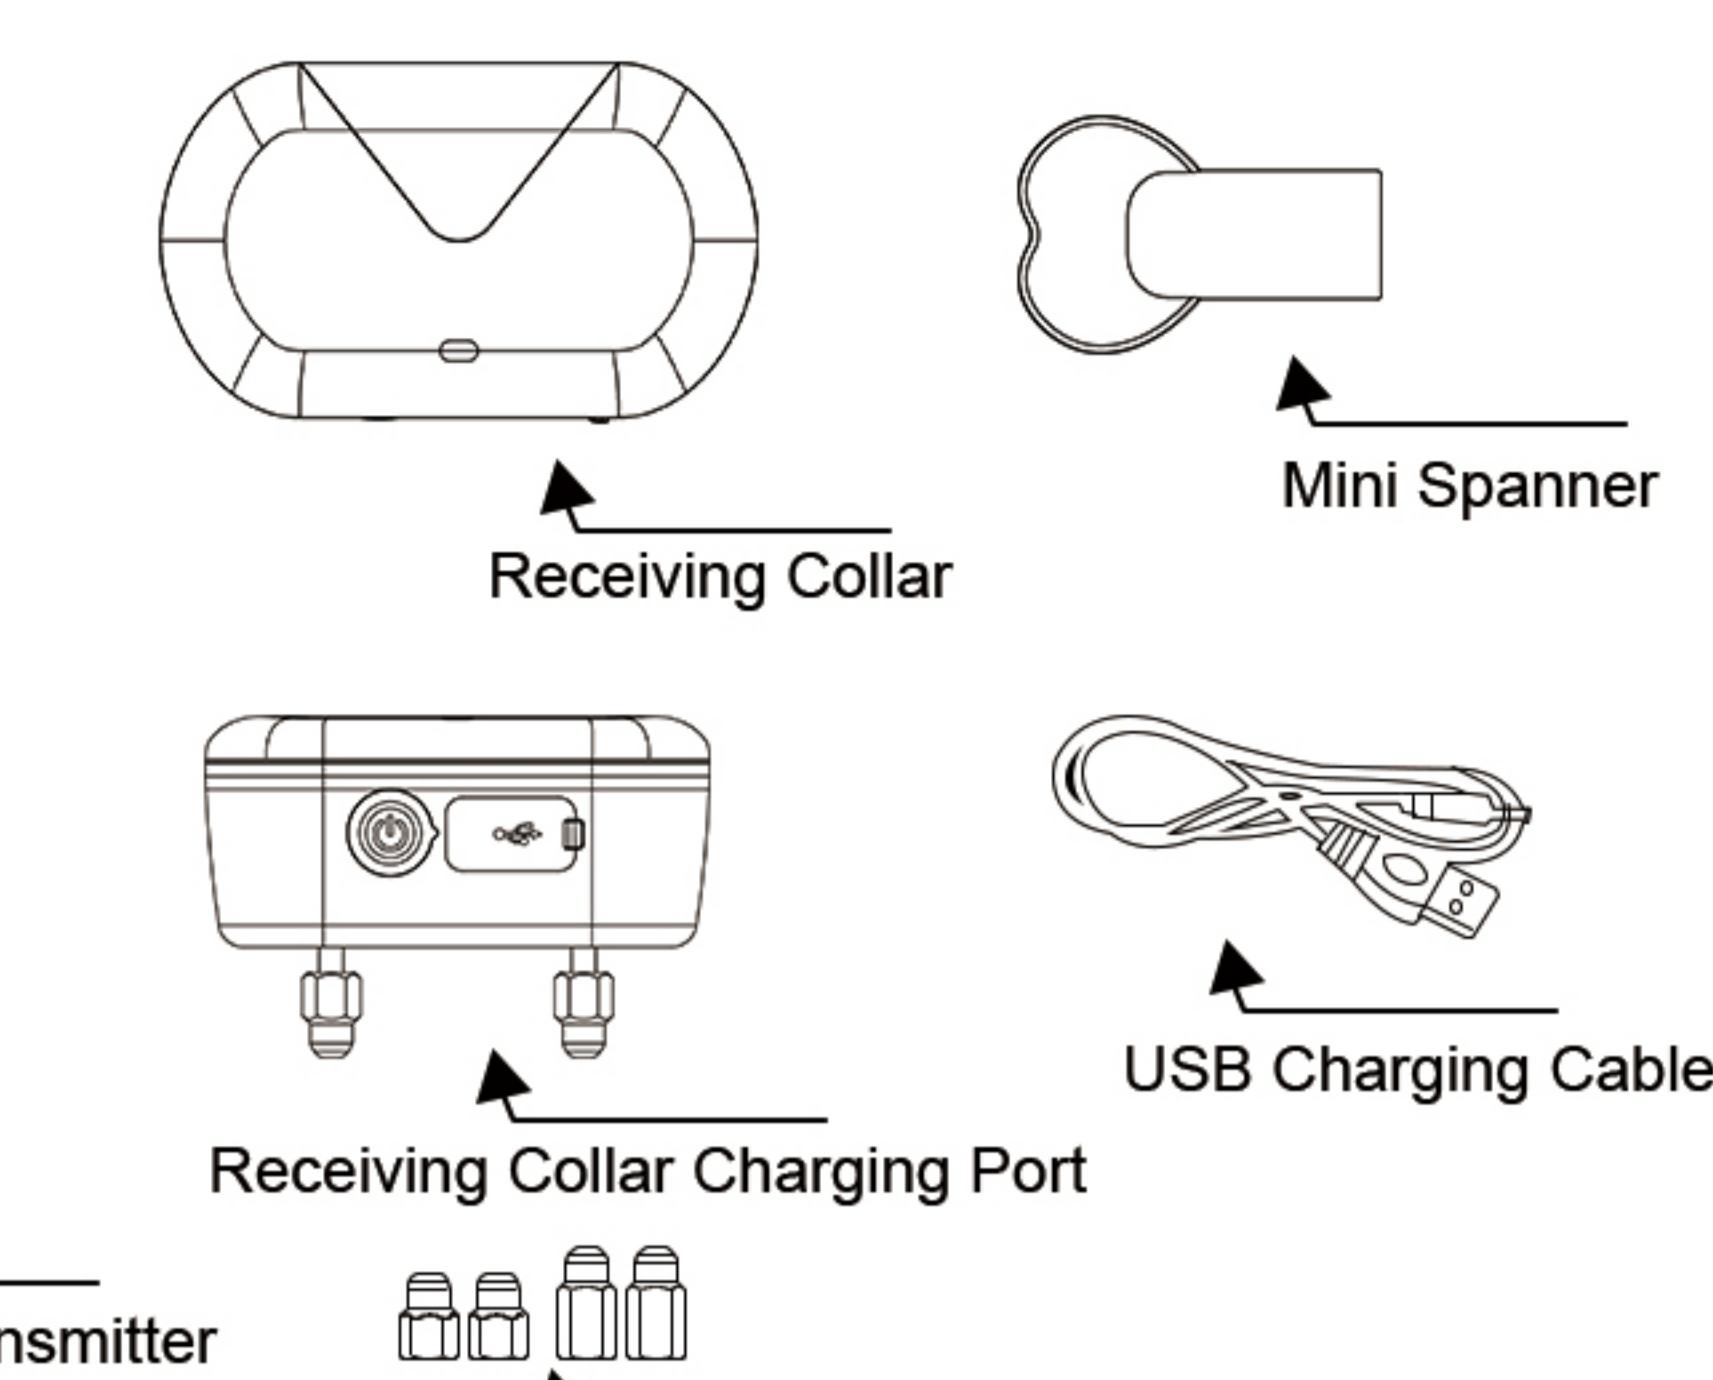

How to change the contact point to the Receiver Collar

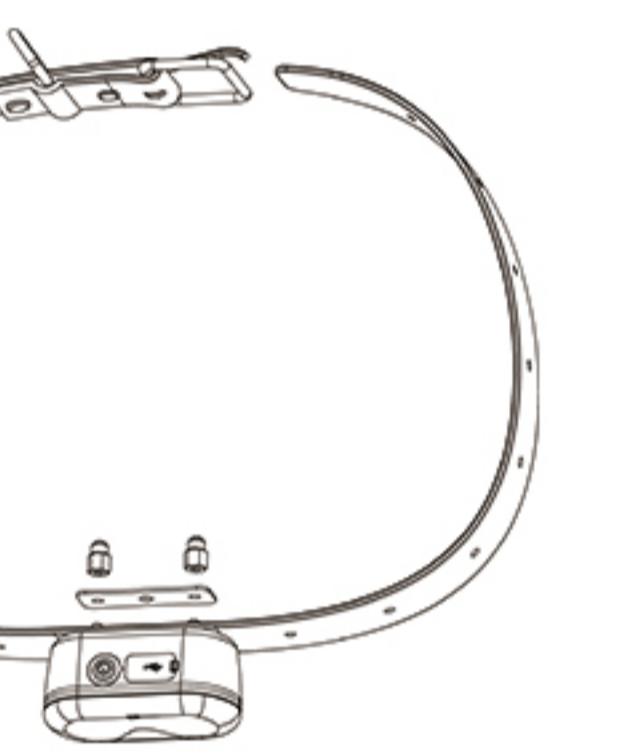

5

Low battery: when this symbol is display, means the transmitter is in low battery and need to be recharged.

Key lock: when this symbol is display, mean the transmitter is under key lock.

Channel 1/4:select 1/4 channel to encode the Receiving Collar 1/4.

2.Adjustment Button: adjustment button to adjust the Intensity of the Vibration or Shock from the lowest level 1 to the highest level 99.

3/4/5.Shock/Vibration/Beep button: press this button to launch the correct signal.

6.Channel button: press this button to change between the 1-4Receiving Collar (if applicable).

7.Key Lock switch: push up/down the switch to lock/unlock the key function.

8.Charging port: plug the USB charging cable into the port to charge the Remote Transmitter.


\*Lithium battery: 3.7V 300mAh for the Remote Transmitter  
3.7V 250mAh for the Receiving Collar

\* Operating Frequency: RF433 MHZ

\* Contact points: 2 pairs of metal contacts to be chosen to suit the length of your dog's hair.

\* Mini Spanner: a tool to screw/unscrew contact points on the electrodes

Contact Points;  
Deliver vibration / safe static correction

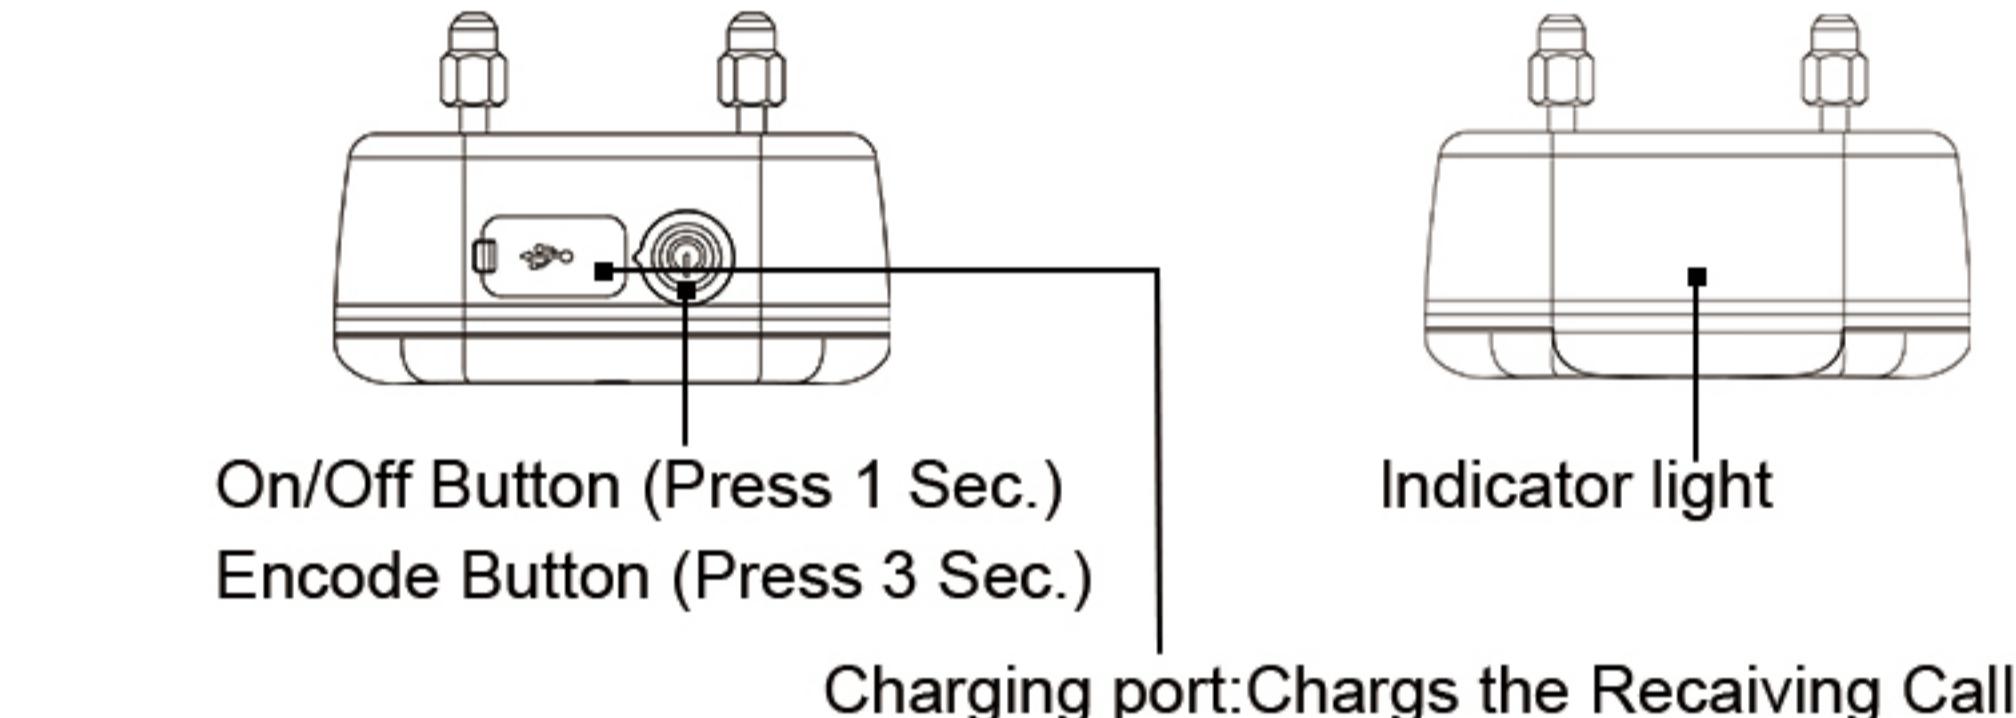

7

3.The red LED will keep lighting when the Receiving Collar is charging.  
4.The green LED will be lighting once it's fully charged with 1.5 hours.  
5.Remove the Charging Cable, and put back the rubber cover.

**Low battery indicator:** The red LED will be flash with 30seconds, then Receiving Collar will be turned off automatically.

**How to use the Receiving Collar:**

Press the On/off button to turn the Receiving Collar on, the green indicator light will blink.


**Power Saving Mode:** The Receiving Collar will go into Standby Mode if it is idle for more than 5 mins. Any movements will activate the Receiving Collar. If the Receiving Collar does not be activated when you press the on Transmitter, and the Green LED on receiving collar is not on, then gently shake the Receiving Collar, the Receiving Collar will be activated and the Green LED light will illuminate.

**Step 3 Encoding the Remote Transmitter and the Receiving Collar:**

- 1.Push down the lock switch to make sure the Transmitter is on work status.
- 2.Press the to choose Channel 1 to 4.
- 3.Press the Power button for 3 seconds on the receiving collar first When the Green LED flash. press the Beep/ Vibration/Shock button on the transmitter simultaneously to encode.Then Green LED on the receiving collar will be steady on, they are encoded successfully.
- 4.Press Beep/Vibration/Shock to launch signal.
- 5.Repeat steps 2-4 to encode other Receiving Collar(if needed). Please wait at least en seconds to encode other Receive Collar.

9

## Key Definition

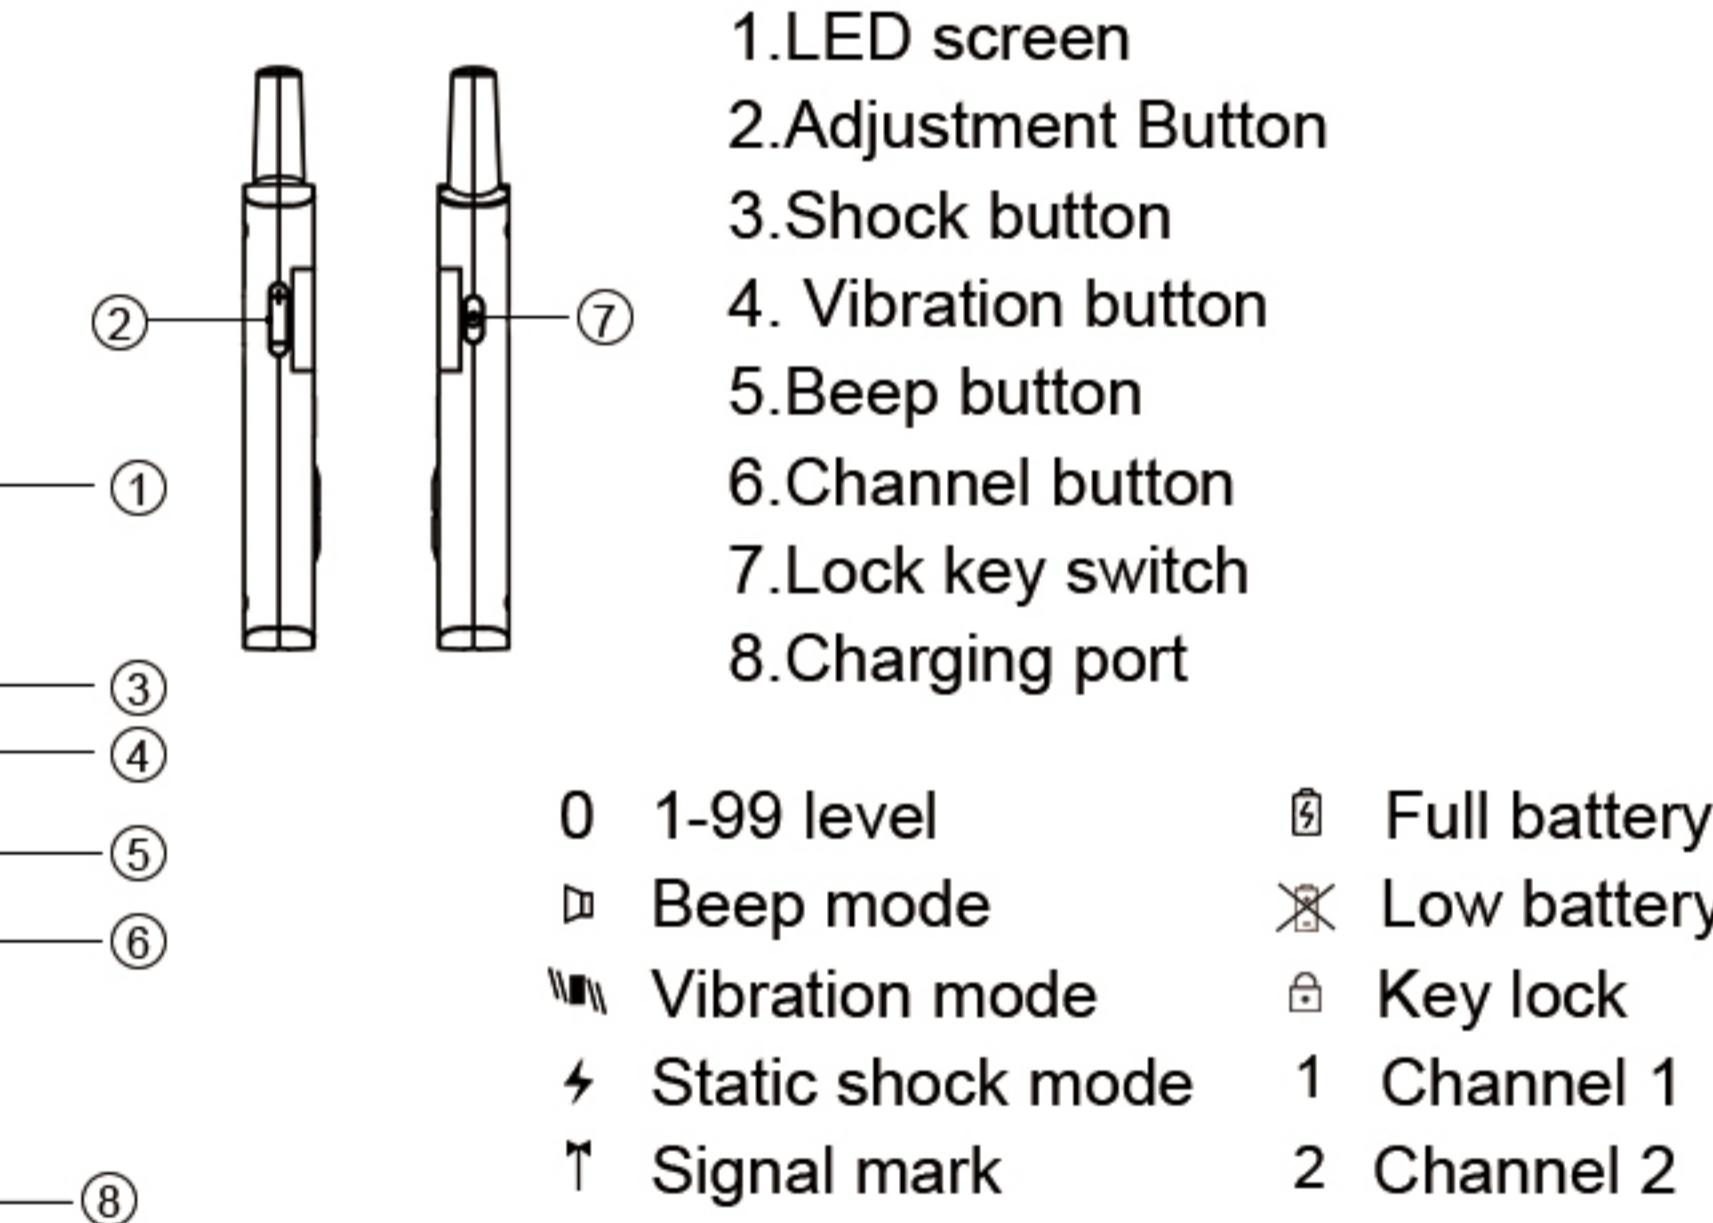

### 1.LED Screen:

Beep mode: When this symbol is displayed, press the button to activate a Beep tone on the Receiving Collar.

Vibration Mode: when this symbol is displayed, press the button to activate Vibration. Rotate the knob to adjust the intensity of the vibration from 1 to 99.

Static Shock Mode: when this symbol is displayed, press the button to activate Static Shock. Rotate the knob to adjust the intensity of the shock from 1 to 99.

Signal: when this symbol is displayed, means the transmitter is launching signal.

Full battery: when this symbol is display when charging, means the battery is in full.

6

## Operation Guide

**Step 1 Preparing the Remote Transmitter Charging the Remote Transmitter**

- 1.Plug the USB Charging Cable into the Charging port
- 2.Plug the Adapter into a standard outlet.
- 3.The number in LCD screen will be lighting circularly when charging.
- 4.The LED screen will show once its fully charged with 2.5 hours. Remove the USB Charging Cable.

**Low battery indicator:** The LED screen will show and flash 30seconds,then transmitter will be turned off automatically.

### How to use the Remote Transmitter

1.Push down the key lock switch,the LED screen light.

2.Press Shock/Vibration/Beep button, the LED screen will display () which mean the corresponding mode is activated.

3.Rotating to set the intensity of shock or vibration

4.Select different channels for 1-4Receiving Collars

**Power Saving Mode:** the Remote Transmitter will go into Standby Mode if it is idle for 1 min. The LED screen on the Remote Transmitter will not display anything in this case(will be light off with 30s will be light off with 1min), press any button to re-activate it.

**Lock Key function:** Push up the lock switch the / will flash for 6 seconds. then it goes into key lock mode and it won't be activated anymore,( ) will flash for 6 seconds again if any button be pressed.Push down the lock switch,the Transmitter will on work

**Step 2 Preparing the Receiving Collar Charging the Receiving Collar**

- 1.Remove the rubber cover and plug the USB Charging Cable into the charging port.
- 2.Plug the Adapter into a standard outlet.

8

**Note:** Most of the Rechargeable and Waterproof Training Collars have already been encoded before leaving the factory. If so , just press any button on the transmitter to activate, then press the with 1sec on receiving collar to turn on it, after that, you can test the function refer to step 4. (Page 9)

**Step 4 Testing the Rechargeable and Waterproof Training Collar: Testing the Static Shock Function**



The static impulse generated by the Receiving Collar cannot be seen by naked eyes. Test whether the Static Shock Function works by using the following procedure:

• Remove the Test Light from the package and connect it to the contact points on the receiving collar.

• Press the button on Remote Transmitter to launch Static Shock signal,

• If the Test Light flashes, the Static Shock Function is working correctly

• The intensity of the Static Shock can be adjusted by rotating the rotary knob from level 1-99.

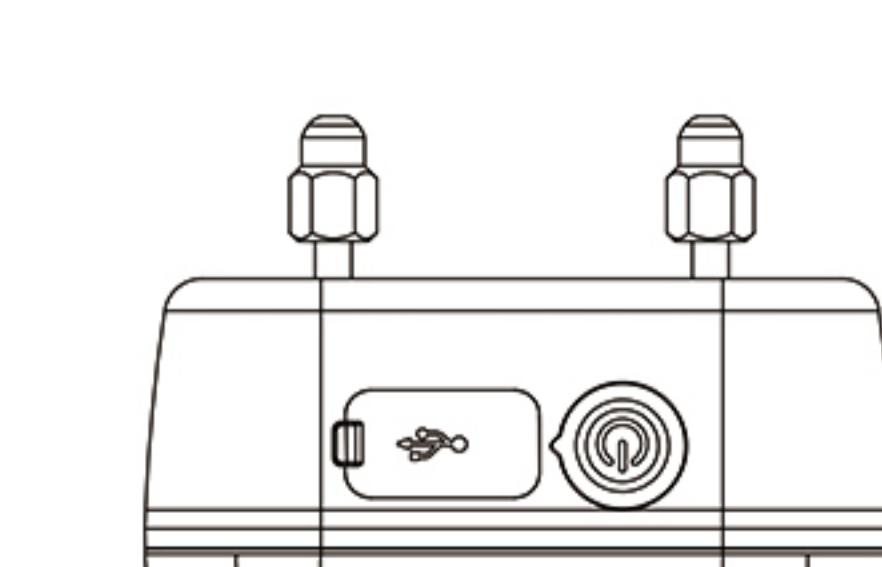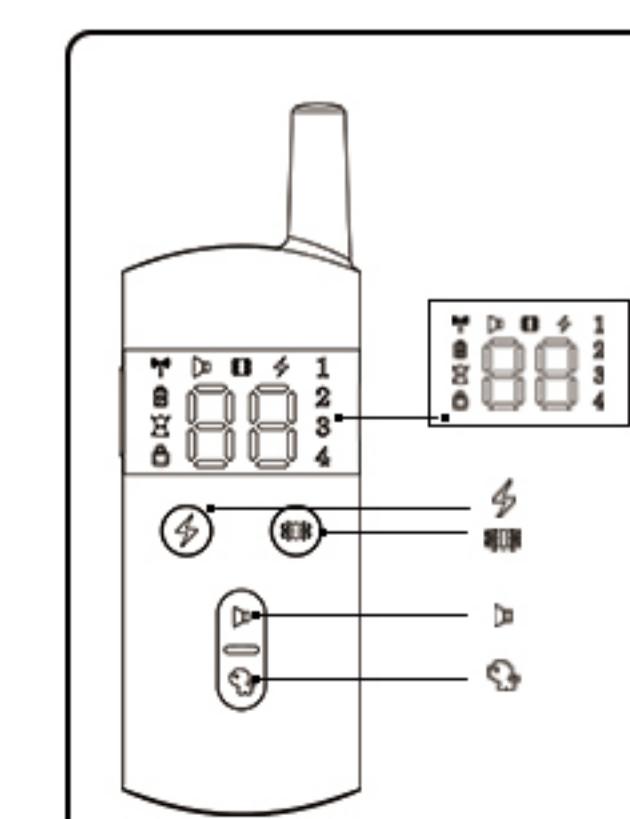

10