



MARGARITAVILLE

Light the Way
LIGHT UP LANTERN
Wireless Speaker



Important Safety Precautions

When using your Lantern Speaker, basic safety precautions should always be followed, including:

1. **READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.**
2. Clean using a soft cloth or paper towel. Do not use abrasive chemicals to cleans this speaker.
3. This product is not a toy, do not allow children to play with it. Adult supervision is advised.
4. Do not expose your speaker to excessive heat or fire.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
6. Do not expose your speaker to temperatures above 100°F.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
8. Do not drop, puncture or expose the speaker to extreme physical force.
9. Your speaker is not intended for commercial use.
10. Do not place near objects that generate a strong magnetic field.
11. Unplug this device when not in use for long periods of time and during lightning storms.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing the Light the Way Light Up Lantern Speaker, item MA123. You can connect your speaker with most smartphones and Bluetooth devices to stream music wirelessly while camping, gathering or partying outside. Using the built-in clip, you can attach this speaker for easy travel and set-up. Please read this manual carefully before using the speaker.

Package Contents

- Light the Way Lantern Speaker
- USB Charging Cable
- User's Manual with Warranty Information

Specifications

Bluetooth Specification: V5.1

Bluetooth Range: Up to 33 feet (10 meters)

Battery Type: 1200mAh Lithium Ion Battery

Play Time (Music only): 20 Hours**

Play Time (Music and Lights): 7 Hours**

Play Time (Lights Only): 11 Hours


**Applicable at 50% of maximum volume. Results will be lower when volume is higher.

Charging Your Speaker


Micro USB
Plug




1. The USB charging cable has a Micro USB plug and a standard USB plug.

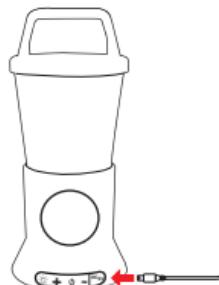

2. Lift the rubber flap and insert the USB charging cable's Micro USB plug into the speaker's charging port.

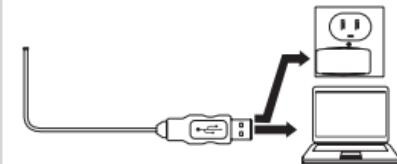

3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable 5V 1A USB charging adapter.

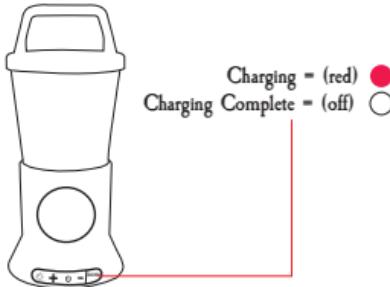

4. The LED Indicator Light behind the speaker's charging port will turn red when the speaker is charging and will turn off when charging is complete.

NOTES:

-When battery power is running low, your speaker will emit a beeping sound. Recharge your speaker's battery when you hear this sound.

-Remove the charging cable once charging is complete.

-Overcharging could reduce the life of the battery.

-A charged battery will lose its capacity if it is not used on a regular basis.

-Make sure the rubber battery compartment seal is securely closed once charging is complete and before use.

Important: To avoid a complete discharge of the battery, charge your speaker at least once every six months.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth Pairing


PRESS
& HOLD
2 to 3 SECONDS




1. Press and hold the Power button for three to four seconds to turn the speaker On.



3. On your phone, go into the Bluetooth page in the Settings app. Make sure Bluetooth is turned on before connecting to the available device 'MA123'.

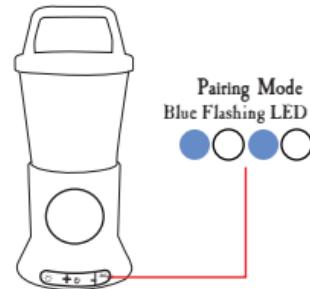

2. The LED Indicator Light behind the charging port will flash blue indicating your speaker is in pairing mode.

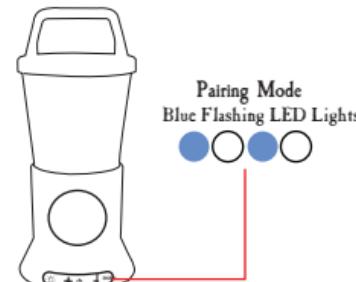

4. The LED Indicator Light behind the charging port will turn solid blue indicating your speaker and phone are paired. The LED Indicator Light will slowly flash blue when music is playing.

Using Your Speaker

Music Control:

Power Button: Press to pause and play music. Press to answer and end a phone call and press twice to decline an incoming call.

+ Button:Short press to increase the volume. Press and hold to the next track.

- Button:Short press to decrease the volume. Press and hold to the previous track.

Light Control:

Press the light button to toggle through the four light modes: Natural Flames, Dim White Light, Bright White Light, and SOS Lights.

True Wireless Pairing:

This feature is if you own two MA123 Margaritaville Light the Way Lantern Speakers. Before pairing the speakers, make sure they are not connected to a bluetooth device.

1. To pair the speakers, turn On the first speaker then turn the second speaker On.
2. Press the power button on the first speaker and it will enter True Wireless Pairing. Press the power button twice on the second speaker, and the speakers will beep indicating they have paired.
3. Go to the Bluetooth page in the Settings app and connect to the available device 'MA123' to connect to the speakers.
4. To disconnect, first to disconnect BT paring, then press the power button twice on a speaker.

Maintenance and Care

- Before using your speaker, inspect the ports to make sure they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on the USB charging cable when it is connected to your speaker and a wall outlet. Connect and disconnect cables carefully.
- Never expose your speaker to high temperatures or extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Sakar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at www.sakar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), **MUST** be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.

Sakar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.