 


DOG TRAINING COLLAR

OPERATING AND BASIC TRAINING GUIDE

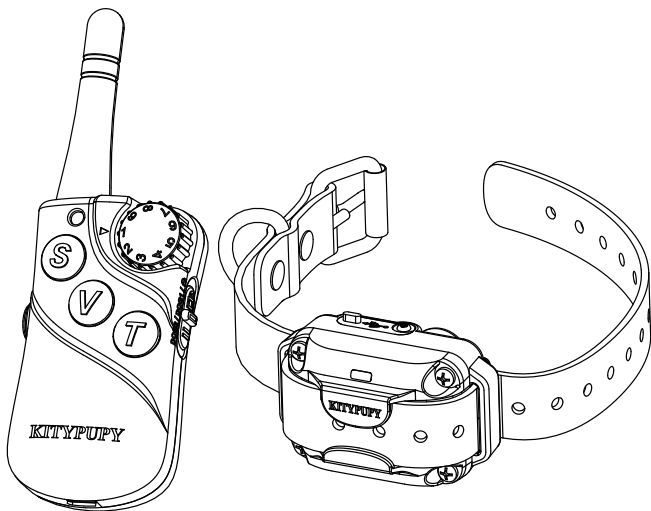

PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING

Table of Contents

| | |
|--|----|
| Important Safety Information | 1 |
| Overview-Remote Transmitter | 2 |
| Overview-Collar Receiver | 3 |
| Attaching the Collar Strap | 4 |
| Installing the Contact Points | 4 |
| Charging the Batteries | 5 |
| Remote Transmitter ON/OFF | 5 |
| Collar Receiver ON/OFF | 6 |
| Pairing | 6 |
| 4 Training Modes and Operation | 7 |
| How to Use the Test Light Tool | 7 |
| Fitting the Collar Receiver | 8 |
| Static Intensity Level Selection | 8 |
| Maximizing the Distance | 9 |
| Training Tips | 9 |
| Frequently Asked Questions | 10 |
| Troubleshooting | 11 |
| Maintenance | 11 |
| FCC Compliance Statement | 12 |
| Warranty | 12 |
| Product Specification | 13 |

Important Safety Information


WARNING:

1. **Do not use this product if your dog is aggressive or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others.** If you are unsure whether this is appropriate for your dog, please consult your veterinarian, certified trainer, or contact our customer support.
2. This product is designed for use with dogs where training is desired. Do not use this product for anything other than its intended purpose.
3. Not a toy. This product is not intended for use by, on, or near young children, invalids or infirm persons with reduced physical, sensory, or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not attempt to open the product to remove or replace the built-in battery. Do not incinerate, puncture, deform, or short-circuit. The battery used in this product may present a risk or chemical burn if mistreated.
5. Risk of explosion if battery is replaced by an incorrect type. Do not attempt to cut into or pry open the battery, dispose of in fire, or expose to water. Dispose of spent batteries according to the regulations in your area.

CAUTION:

1. **Avoid leaving the collar on your dog for more than 12 hours per day.**
2. When possible, reposition the collar on the dog's neck every one to two hours.
3. Check the fit to prevent excessive pressure; follow the instructions in this manual. Do not make the collar any tighter than is required for good contact. A collar that is too tight will increase the risk of pressure necrosis in the contact area.
4. Examine the contact area daily for signs of a rash or a sore. If a rash or sore is found, discontinue use of the collar until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
5. The product is designed to get your dog's attention, not to punish. However, the initial stimulation may startle your dog. Do not leave your dog alone when using the product for the first time.
6. Do not connect a lead/leash, tags, or other items to the collar; it will cause excessive pressure on the contact points.
7. To ensure waterproof, cover the rubber cap of the charging port after each charge.
8. We recommend that you not use this product if your dog is under 6 months of age or less than 8 pounds.
9. To prevent giving stimulation to your dog by accident, keep the static stimulation intensity at level 1 while not in use. The use of high levels of stimulation should only be used as a last resort or in life-threatening situations.
10. Contact our customer support when a service or repair is required. Unauthorized changes or modifications to the equipment may violate FCC regulations and could void the user's authority to operate the equipment.


Overview-Remote Transmitter

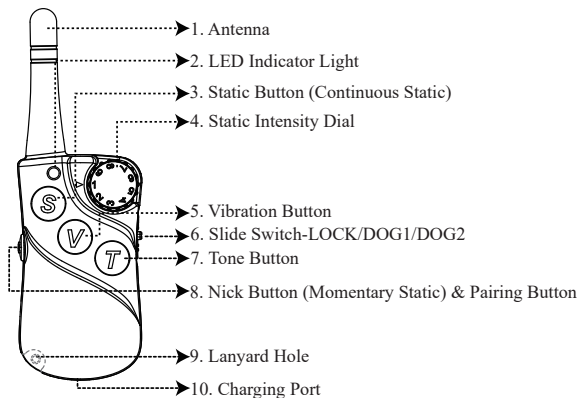

| | |
|---|--|
| 1. Antenna | For transmitting the radio signal to the Collar Receiver. |
| 2. LED Indicator Light | 1. The Indicator Light indicates that a button is pressed. 2. The LED Indicator color indicates the battery life level. Green=Full Charge Red=Low-Battery, needs charging soon. |
| 3. Static Button (Continuous Static) | The Collar Receiver will deliver continuous static stimulation as long as the "S" button is pressed, up to a maximum of 10 seconds. |
| 4. Static Intensity Dial | For adjusting the static intensity, 1-9 levels. At the set level, The continuous static intensity is 10% higher than momentary static intensity (total 18 intensity levels). |
| 5. Vibration Button | The Collar Receiver will deliver the vibration stimulation as long as the "V" button is pressed, up to a maximum of 10 seconds. |
| 6. Slide Switch -LOCK/DOG1/DOG2 | Upper Position:=Lock, the Transmitter is locked and turned off. Middle Position=DOG1, the Transmitter pairs with DOG1 Receiver. Lower Position=DOG2, the Transmitter pairs with DOG2 Receiver. |
| 7. Tone Button | The Collar Receiver will deliver the tone stimulation as long as the "T" button is pressed, up to a maximum of 10 seconds. |


| | |
|---|---|
| 8. Nick Button (Momentary Static) & Pairing Button | The Collar Receiver will deliver a short pulse of static stimulation, regardless of how long the button is pressed. Pairing: When the Receiver is at pairing mode, press and hold the “N” button for 1 second to pair the Receiver. |
| 9. Lanyard Hole | For attaching the lanyard. |
| 10. Charging Port | The Remote Transmitter has a USB-C charging port. |

Overview-Collar Receiver

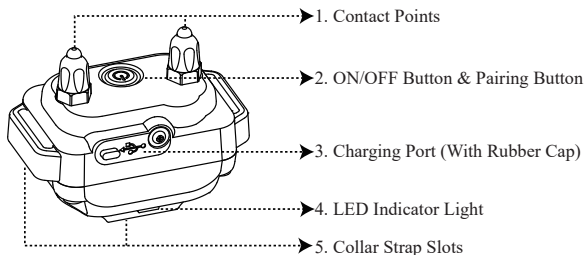


| | |
|--|---|
| 1. Contact Points | The contacts through which the Receiver delivers static simulation. |
| 2. ON/OFF Button & Pairing Button | Momentarily pressing and releasing this button turns the Collar Receiver on and off. Pairing: When the Collar Receiver is OFF, press and hold the button for 3 seconds to enter pairing mode. |
| 3. Charging Port (With Rubber Cap) | The Collar Receiver has a waterproof USB-C charging port. *. Replace the Rubber Cap when charging is complete. |
| 4. LED Indicator Light | 1. The Light flashes once every 8 seconds when the Receiver is on. 2. The Light is on when receiving the signal from the Transmitter. 3. The LED Indicator color indicates the battery life level. Green=Full Charge. Red=Low-Battery, needs charging soon. |
| 5. Collar Strap Slots | The Collar Receiver has three slots for attaching the Collar Strap. |

Attaching the Collar Strap

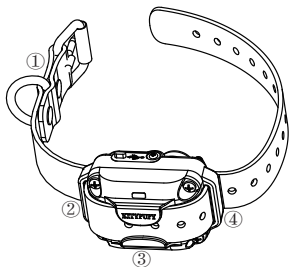

1. With the buckle ① face outward, insert the end of the Collar Strap through the slot ② .
2. Pull most of Collar Strap through the slot ③.
3. Insert the end of the Collar Strap through the slot ④.

Installing the Contact Points

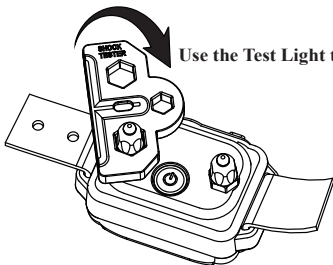


Note: You may skip the following steps because the short contact points have been installed by factory setting.

1. Choose the appropriate length of Contact Points.
For smaller dogs, 2PCS short Contact Points should be used. For larger dogs, or dogs with a heavier hair coat, you should use 2PCS longer Contact Points. You may trim the hair if the coat is too thick but never shave as this may lead to a rash or infection.
2. Turn the Contact Points clockwise down to the Receiver.
3. Use the Test Light tool as a wrench to tighten the two Contact Points securely.

Charing the Batteries

Charging time: 2-3 hours

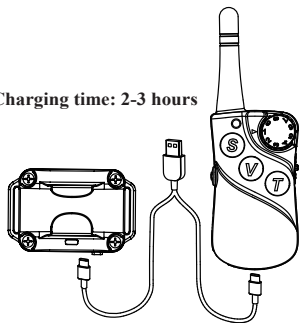


1. Fully charge the batteries before you use the Transmitter and Receiver first time.
2. The both Transmitter & Receiver Indicator Lights will come on solid red during charge cycles and turn green when they are fully charged. (Charging time: 2-3 hours).

Note:

- ①: When storing the unit for long periods, remember to regularly give batteries a full charge. This should be done once every 3 to 4 months.
- ②: The both Transmitter and Receiver can be charged with different USB charger. If you find the Transmitter and Receiver indicator lights do not turn on or turn green instantly when connecting to a USB power source. Try another USB charger.
- ③: The ambient temperature for charging should be within 32°F and 104°F.

Remote Transmitter ON/OFF

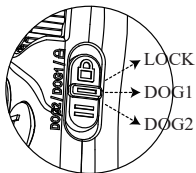

Turning the Remote Transmitter ON:

When the Slide Switch is at LOCK position, push the Slide Switch to the DOG1 position. The Indicator Light will flash once and the Remote Transmitter is turned on. It would connect to the DOG1 Receiver after pairing.

*. If the Slide Switch is pushed to the DOG2 position, the Remote Transmitter would connect to the DOG2 Receiver after pairing.

Turning the Remote Transmitter OFF:

Push the Slide Switch to the LOCK position to turn off & lock the Remote Transmitter.


*. To prevent misoperations, push the Slide Switch to lock position when it is not in use.

Collar Receiver ON/OFF

Turning the Collar Receiver ON:

Hold down the ON/OFF button for 1 second, the Receiver Indicator Light will come on and the Collar Receiver will vibrate and beep 2 times.

The Indicator Light will flash once every 8 seconds when the Collar Receiver is on.

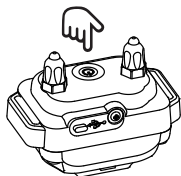

Turning the Collar Receiver OFF:


Hold down the On/Off Button for 2 seconds, the Receiver Indicator Light comes on solid red and the Collar Receiver comes a long beep.

*. To extend the life between charging cycles, turn the Collar Receiver off when it is not in use.

Pairing

Note: For one-dog system, you can skip the following steps because **the Collar Receiver is already paired with the Transmitter's DOG2 channel by default.**

1. Hold down the ON/OFF button for 3 secs

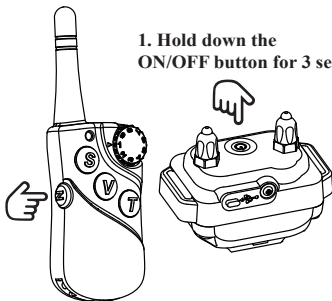


2. Press the "N" button for 1 sec

1. Make sure the Collar Receiver is turned off. Hold down the ON/OFF button on the Receiver for 3 seconds until the Indicator Light turns on and starts flashing. Then release the button.

2. Push the Transmitter Slide Switch to the DOG1 or DOG2 position and press the "N" button for 1 second. The Collar Receiver will vibrate and beep twice to indicate that the pairing is complete.

For a two-dog system, the other Collar Receiver should be purchased. You'll need to pair the other Collar Receiver to the other channel by pushing the Transmitter Slide Switch to the correct position.

4 Training Modes and Operation

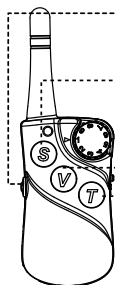

→ **Momentary Static (Nick) Stimulation:**

Press the “N” button, The Collar Receiver will deliver a short pulse of static stimulation.

→ **Continuous Static Stimulation:**

Press the “S” button, the Collar Receiver will deliver constant static stimulation as long as the “S” button is pressed, up to a maximum of 10 seconds.


→ **Vibration Stimulation:**

The Collar Receiver will vibrate when the “V” button is pressed, up to a maximum of 10 seconds.

→ **Tone Stimulation:**


The Collar Receiver will make a rapid beeping twice when the “N” button is pressed, up to a maximum of 10 seconds.

How to Use the Test Light Tool

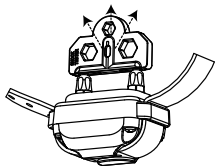

1. Static function test

- Make sure the Transmitter and Receiver Collar are on.
- Hold the Test Light metal contacts to the Contact Points.
- Press a static button on the Transmitter. The Test Light will light up.

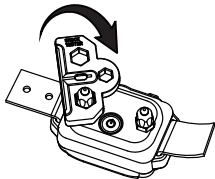


2. As a tool for tightening or loosening the Contact Points

For dog with shorter coats, use 2pcs shorter Contact Points.

For dog with thicker coats, use 2pcs longer Contact Points

*. Make sure to use the Test Light Tool as a wrench to tighten the two Contact Points securely, or they will come loose during daily use.

Fitting the Collar Receiver

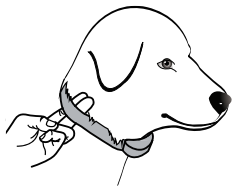

1. Position the Collar Receiver at the front of the dog's neck,
 2. Tighten the Strap so that it is snug around the dog's neck, and fasten the buckle.
 3. When properly fitted, you should be able to fit a finger or two snugly in between the Collar and your dog's skin
 4. Allow your dog to wear the Collar for several minutes, and then recheck the fit.
- *. If the Strap is too long, cut off the excess, leaving at least 3 inches to spare.

Note:

Leaving the receiver in the same location on the dog's neck for an extended period of time can cause skin irritation. If the dog is to wear the Receiver for long periods, occasionally reposition the Receiver so that the Contact Points are moved to a different location on the dog's neck. Make sure you check for skin irritation each time you use the unit.

***. To prevent the occurrence of skin irritations, the Collar Receiver should never be worn for more than 12 hours per day.**

Static Intensity Level Selection

The Training Collar has 9 levels for each continuous static stimulation and momentary static stimulation. At the set level, the continuous static intensity is 10% higher than momentary static intensity (total 18 intensity levels).

Always start at the lowest level and work your way up.

The appropriate level can be found when the dog responds to the stimulation with a mild reaction. This can take many forms, the dog may;

- look around in curiosity
- flick his ears
- stop and scratch his neck
- simply give off a new body posture
- a quizzical look on his face

The stimulation level may vary depending on the training situation. When highly distracted, dogs will require a higher level of stimulation.

Maximizing the Distance

Note: Avoid touching the antenna or the range may decrease substantially.



Maximum Range



Typical Range



Minimum Range

The Training Collar has a 1500ft range in the open field without interference. The range may vary depending on the way the Transmitter is held.

To obtain the maximum range, hold the Remote Transmitter in a vertical position away from your body.

Keep the antenna away from your body or fingers at all times, touching the antenna will greatly reduce the range.

Terrain, weather, vegetation, vehicles, buildings, transmission from other radio devices, and other factors will affect the range.

Training Tips

1. Your dog must know some basic obedience commands before beginning training with the electronic training collar.
 2. When starting e-collar training do so away from distractions.
 3. Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with the training, your dog may become confused.
 4. Keep your training sessions positive, short, and frequent. If you or your dog become frustrated or confused, it's best to take a break.
 5. Be consistent. Give your dog a tone, vibration, or static stimulation with each misbehavior.
 6. Do not overcorrect your dog. Use as few stimulations as possible to train your dog.
 7. If your dog has a timid reaction to the tone, vibration, or static stimulation (especially the first couple of times), do not be alarmed. Redirect his attention to a simple and appropriate behavior (i.e. a known command, such as "Sit").
 8. We recommend that you not use this product if your dog is under 6 months of age or less than 8 pounds.
- Note: Never use the training collar to correct or eliminate any form of aggressive behavior. If your dog exhibits such behavior, contact a professional trainer.**

Frequently Asked Questions

| | |
|---|--|
| Is the stimulation safe for my dog? | While Continuous and/or Momentary Static Stimulation may be unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results. |
| Once my dog is trained and has been obeying my commands, will my dog have to continue to wear the Collar Receiver? | Probably not. You may need to reinforce training with the Collar Receiver from time to time. |
| Is the Collar Receiver waterproof? | Yes, the Collar Receiver is IPX7 waterproof. The Remote Transmitter is non-waterproof. |
| If the rubber cap comes away from the charging port, is the Collar Receiver still waterproof? | Yes, the Collar Receiver is still waterproof even the rubber cap comes away. To ensure better waterproof & charging, make sure the rubber cap is securely in place. |
| Will I get exactly the 1500FT range as advertised? | It would be over 1500FT testing in the open field without interference. The range will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. To get the maximum amount of range, please refer to "Maximizing the Distance" section of this guide. |
| Can I attach a leash to this Training Collar? | Do not attach a leash to the Training Collar. You may put a separate non-metallic collar on your dog's neck and attach a leash. Be sure the extra collar does not interfere with the Contact Points. |
| What do I do if my dog's neck becomes red and irritated? | This condition is due to the Contact Points irritating the skin. Discontinue use of the Collar Receiver for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, resume use, and monitor the skin condition closely. Avoid leaving the collar on your dog for more than 12 hours per day. |

Troubleshooting

| | |
|--|---|
| The Transmitter/Receiver is not turning on. | <ol style="list-style-type: none">1. Check if the batteries have already run out, charge them if the batteries are low.2. Press the ON/OFF button for more than 1s to turn on the Receiver.3. Make sure the Transmitter Slide Switch is pushed to channel DOG1 or DOG2. |
| The Transmitter/Receiver will not charge. | <ol style="list-style-type: none">1. Make sure the USB charger is DC 5V.2. Try another Charger or Power source.3. Check if the USB cable is broken. |
| The Receiver has no response when a Transmitter button is pressed. | <ol style="list-style-type: none">1. Make sure the Receiver is turning on.2. Make sure the Transmitter Side switch is pushed at the correct channel (DOG1 or DOG2).3. Check if the Transmitter and Receiver are paired. |
| The Receiver doesn't seem to provide static stimulation to the dog. | <ol style="list-style-type: none">1. Use the test light to check if the Receiver is providing static.2. Make sure the receiver collar's Contact Points are placed snugly against the dog's skin.3. Use the longer Contact Points if the dog has thick hair. |

Maintenance

1. When not in use, please wipe clean both the Transmitter and Receiver with mild detergent. Turn off the Receiver, lock the keypad, put on the rubber cap on the Receiver's charging port, and store the set in a cool dry place.
2. During cleaning, wipe with soft cloth and mild detergent. Do not use hard brushes which may scratch the surface of the device.
3. If the Receiver has gotten dirty, wipe it clean with a damp cloth
4. If found residues around the charging port's rubber cap, you should wipe it clean to prevent water from seeping in.
5. If the Transmitter fell into water, pick it up quickly and turn off the power. Dry it with cloth as much as you can and let it out to dry. It should resume function normally once the moisture is dried out.

Note: Do not submerge the Receiver into water for long period of time, even though it is waterproof

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.

Warranty

We provide a 1-year warranty for the dog training collar. If your purchased product has a functional issue or breaks within 1 year, please feel free to contact us. The warranty begins from the date of purchase. A proof of purchase such as amazon order id is required for a claim.

The warranty does not cover products for misuse, improper maintenance, and/or lost units.

The warranty does not cover the unit has been altered or an unauthorized person has damaged the unit while attempting repair work.

We does not cover warranty for products that have been bought secondhand or purchased from unauthorized resellers such as online auctions.

The refund period is strictly limited to 30-days starting from the date of purchase.

Product Specification

| | |
|---------------------------------|--|
| Model | DT01 |
| Product Size | Remote Transmitter: (L/W/H) :5.5 x 1.8 x 1.1 inch Collar Receiver: (L/W/H) : 2.5 x 1.5 x 1.4 inch |
| Training Modes | 4 Modes: Momentary Static Stimulation Continuous Static Stimulation Vibration Stimulation Tone Stimulation |
| Signal Range | 1500FT |
| Charging Port | USB-C |
| Water Rating | Remote Transmitter: Non-Waterproof Collar Receiver : IPX7 |
| Charging Time | 2-3 hours |
| Standby Time | Remote Transmitter: >100 days Collar Receiver : 20 days |
| Static Levels | 18 |
| Collar Adjustable Length | 7"-25" |
| Operation Environment | 32°F-104°F, <95% RH |

Contact us:

Website: www.kitypupy.com

E-mail: support@kitypupy.com

WhatsApp Business: Scan below QR code.

