




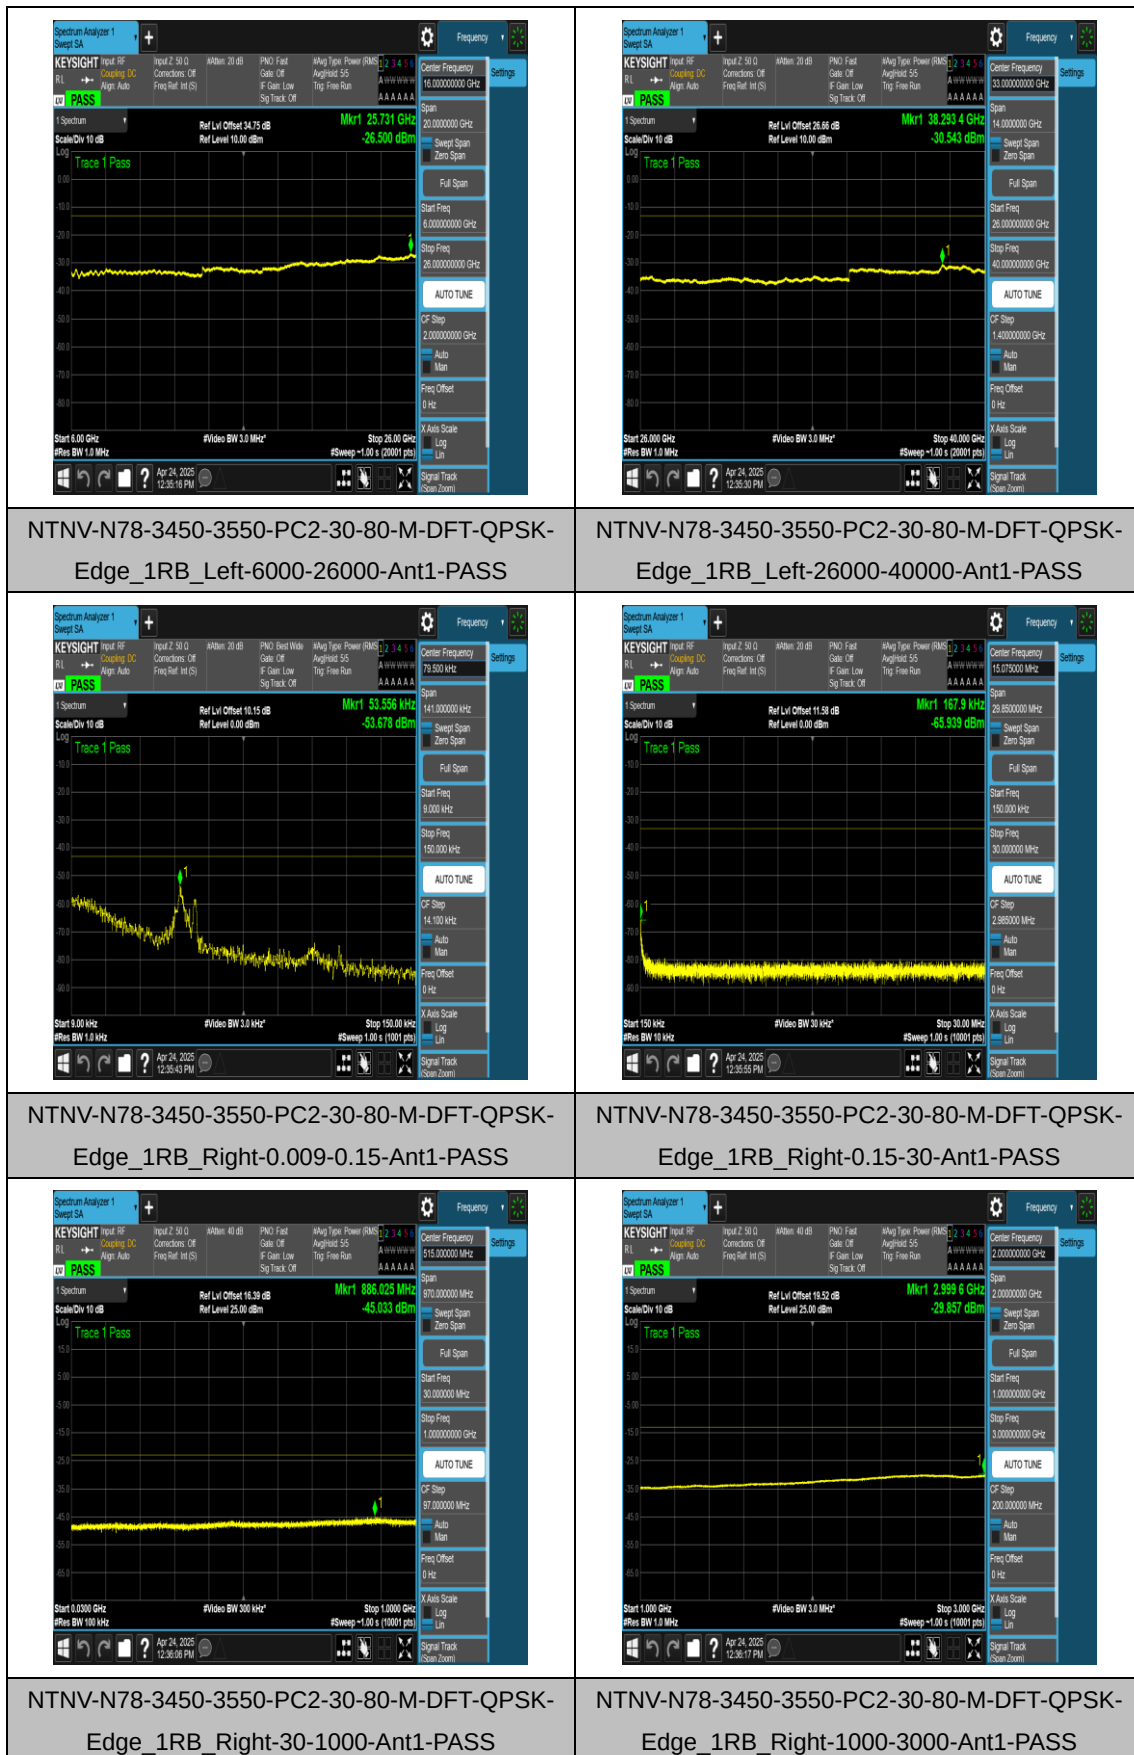

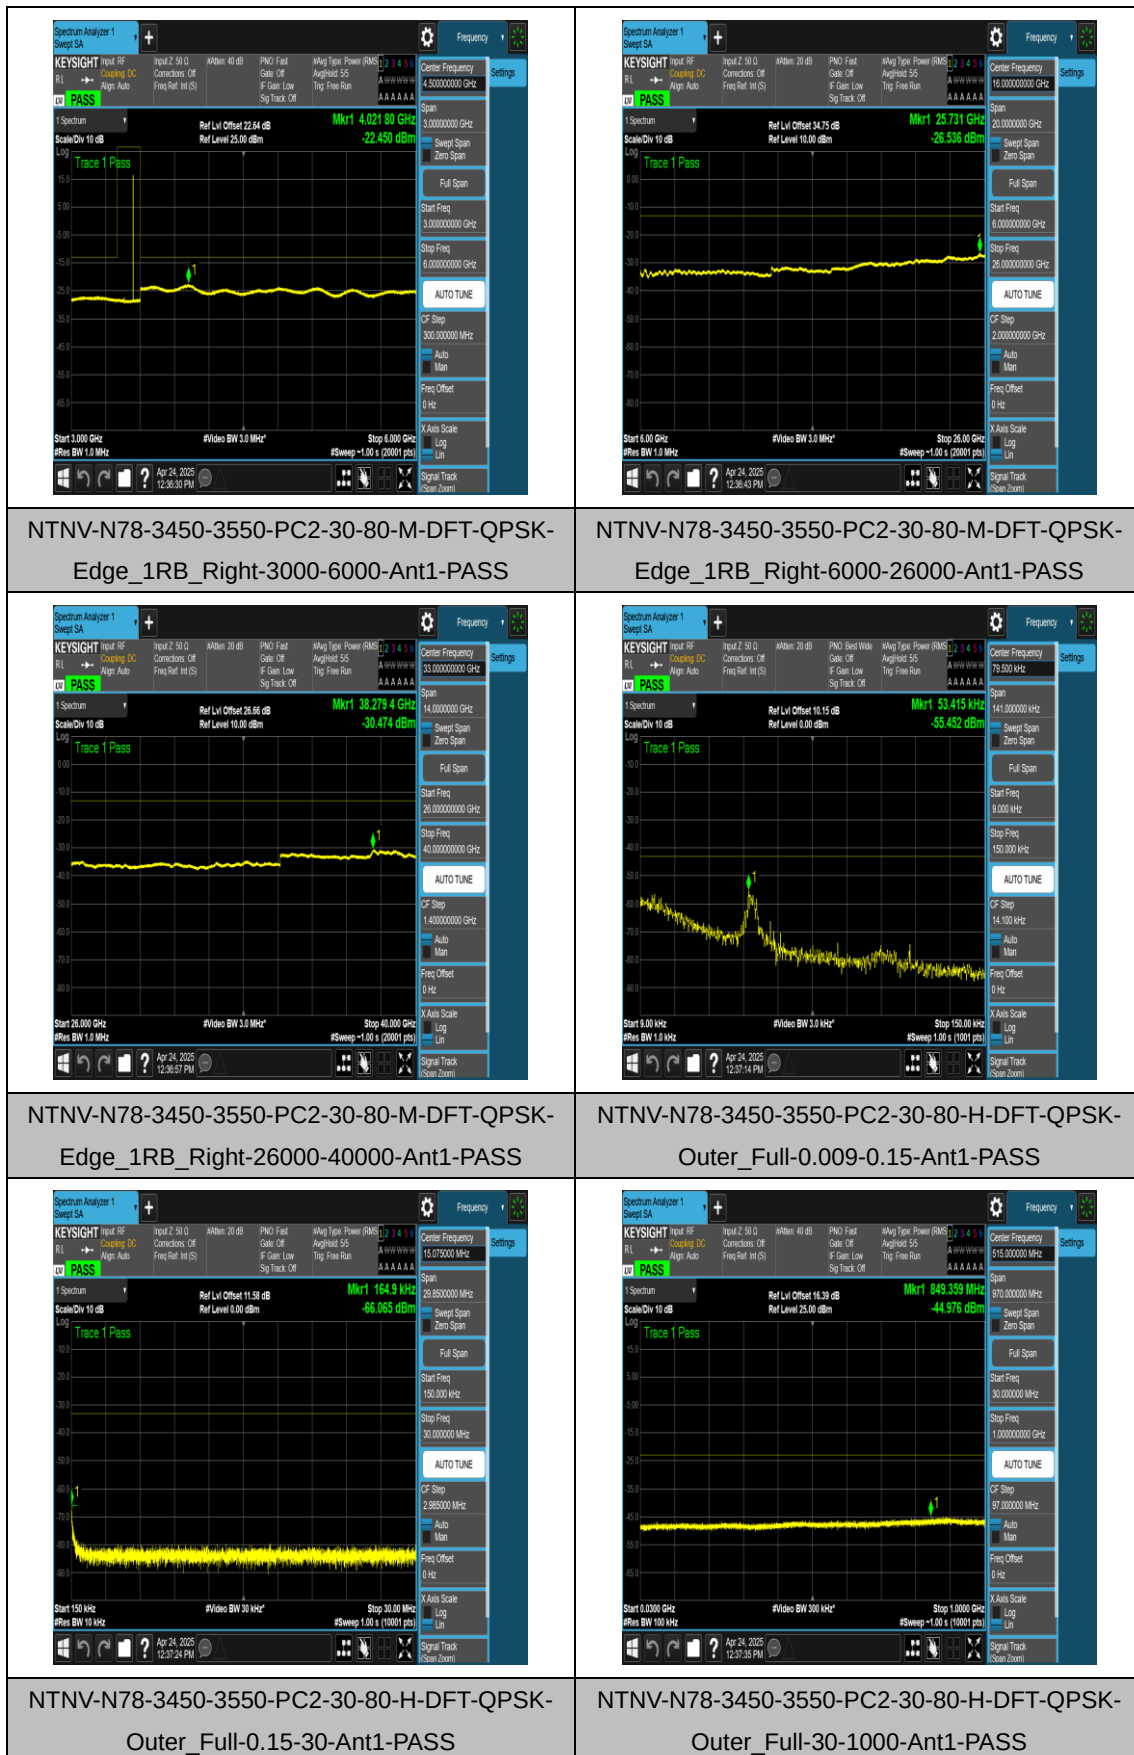

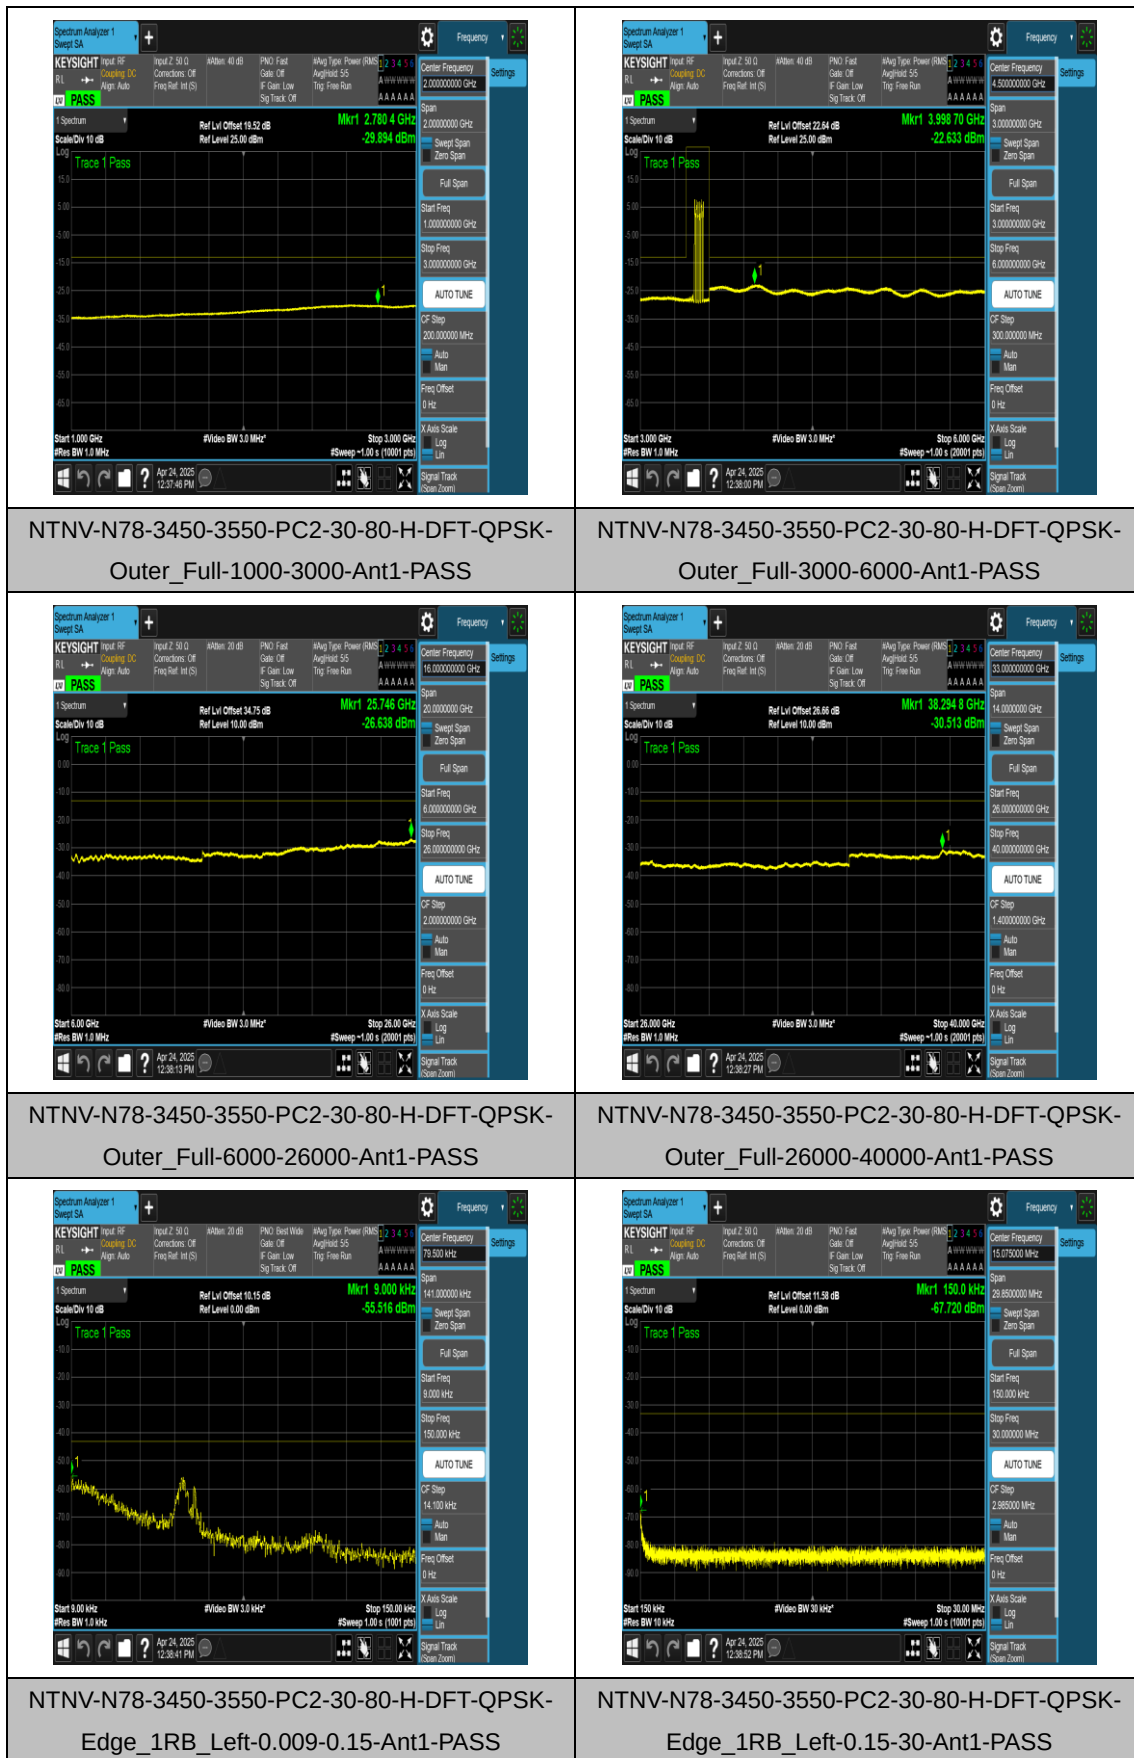

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Outer_Full-1000-3000-Ant1-PASS


NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Outer_Full-3000-6000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Outer_Full-6000-26000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Outer_Full-26000-40000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-0.009-0.15-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-0.15-30-Ant1-PASS

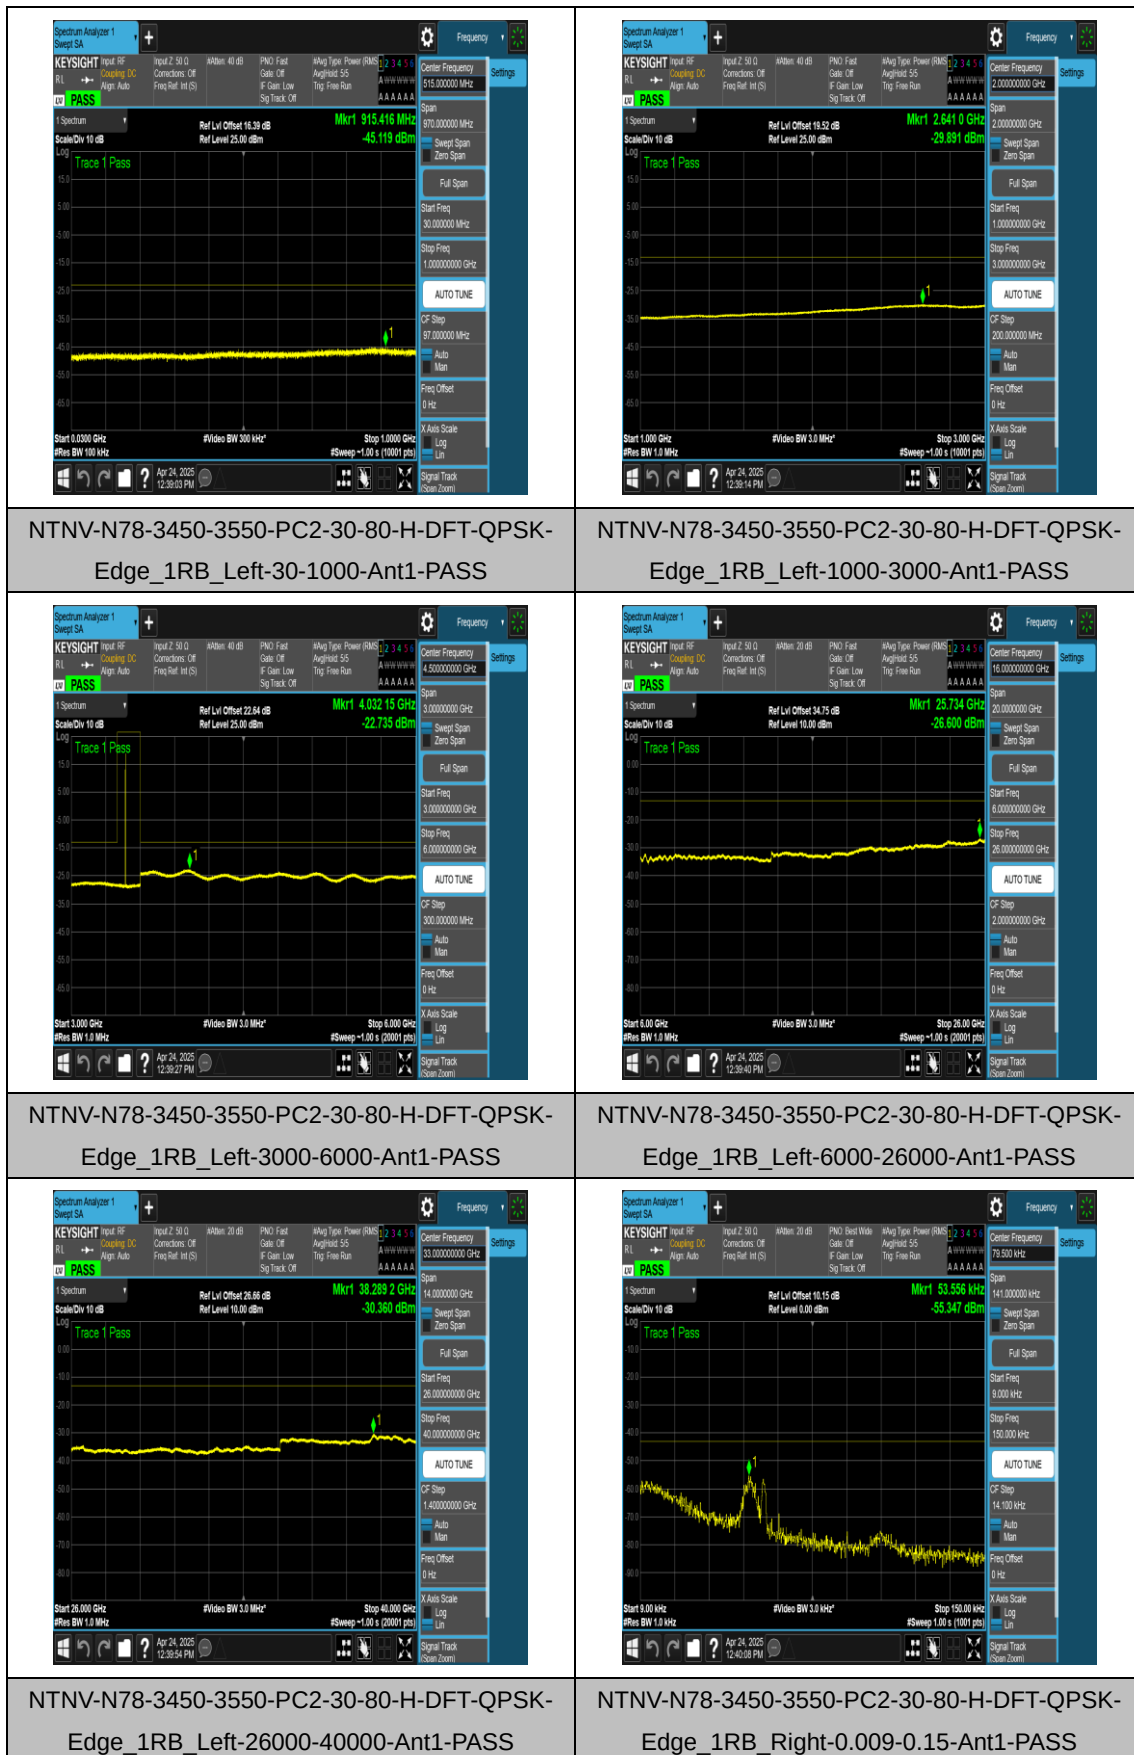

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-30-1000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-1000-3000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-3000-6000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-6000-26000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Left-26000-40000-Ant1-PASS

NTNV-N78-3450-3550-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-0.009-0.15-Ant1-PASS

