






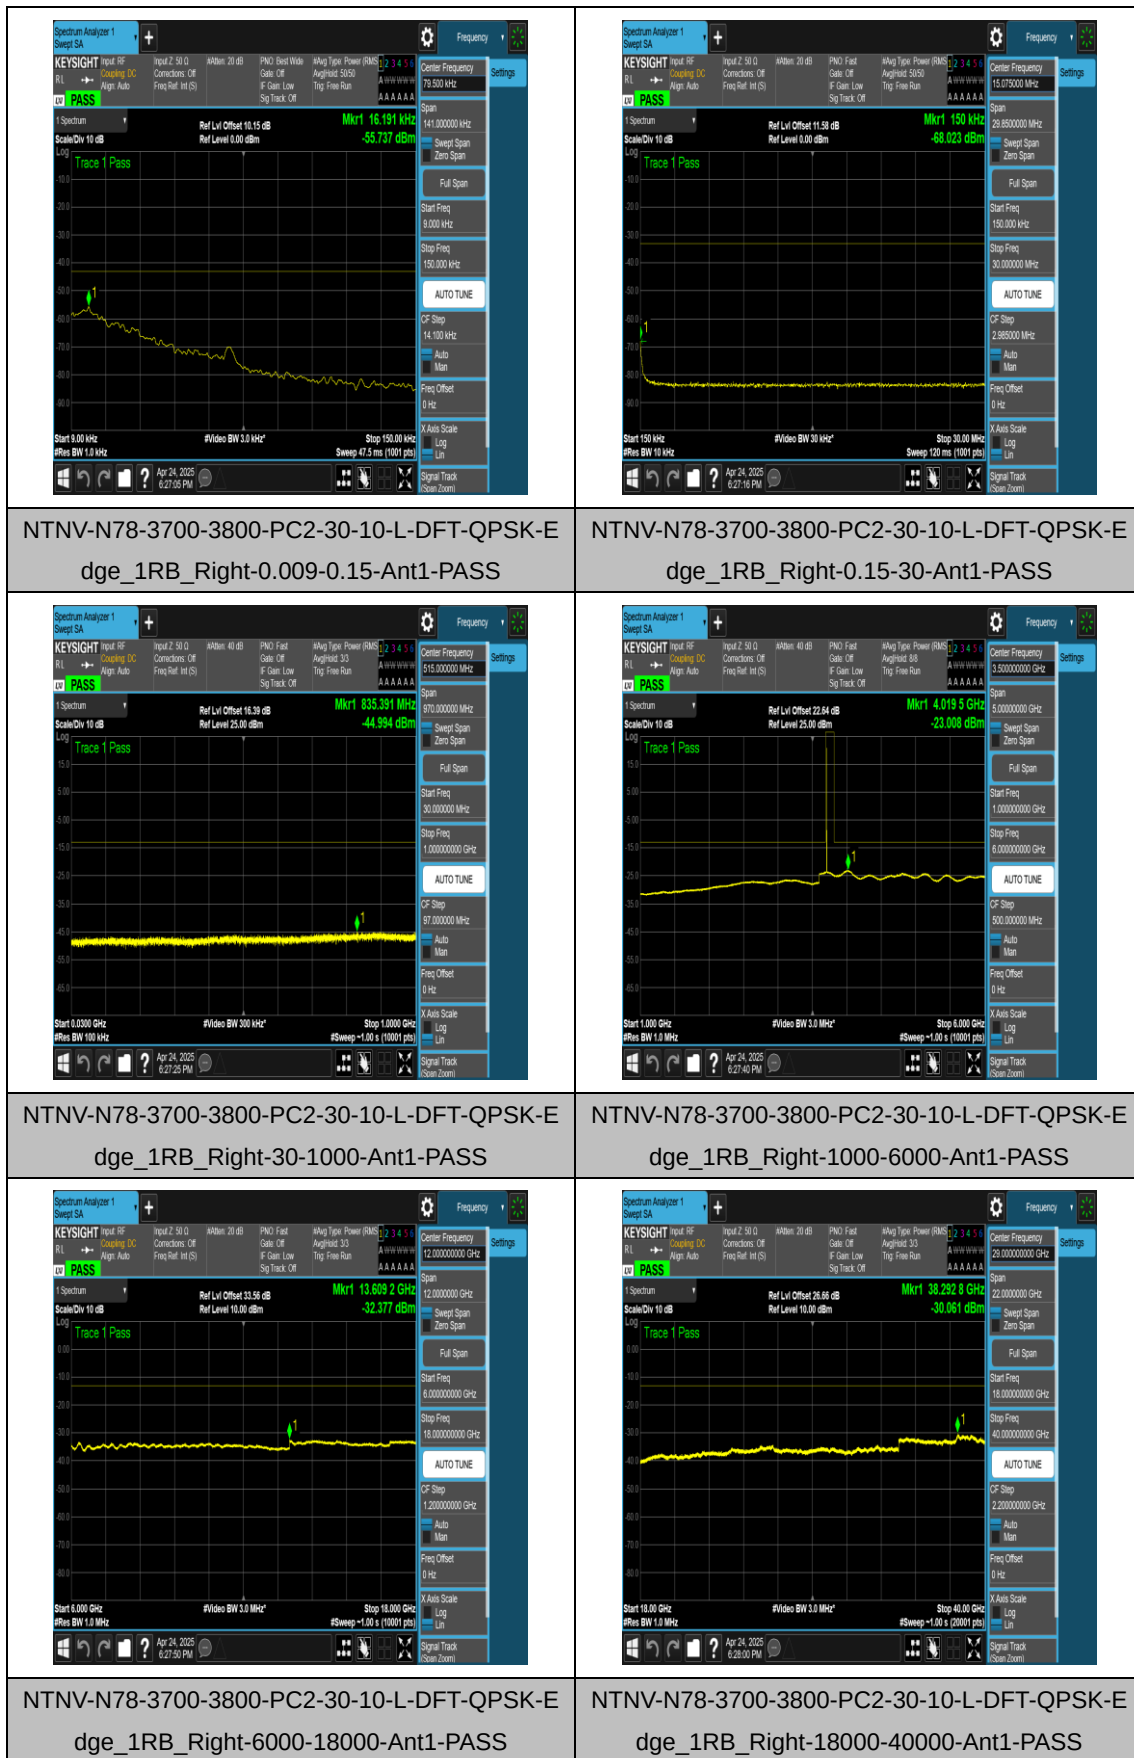


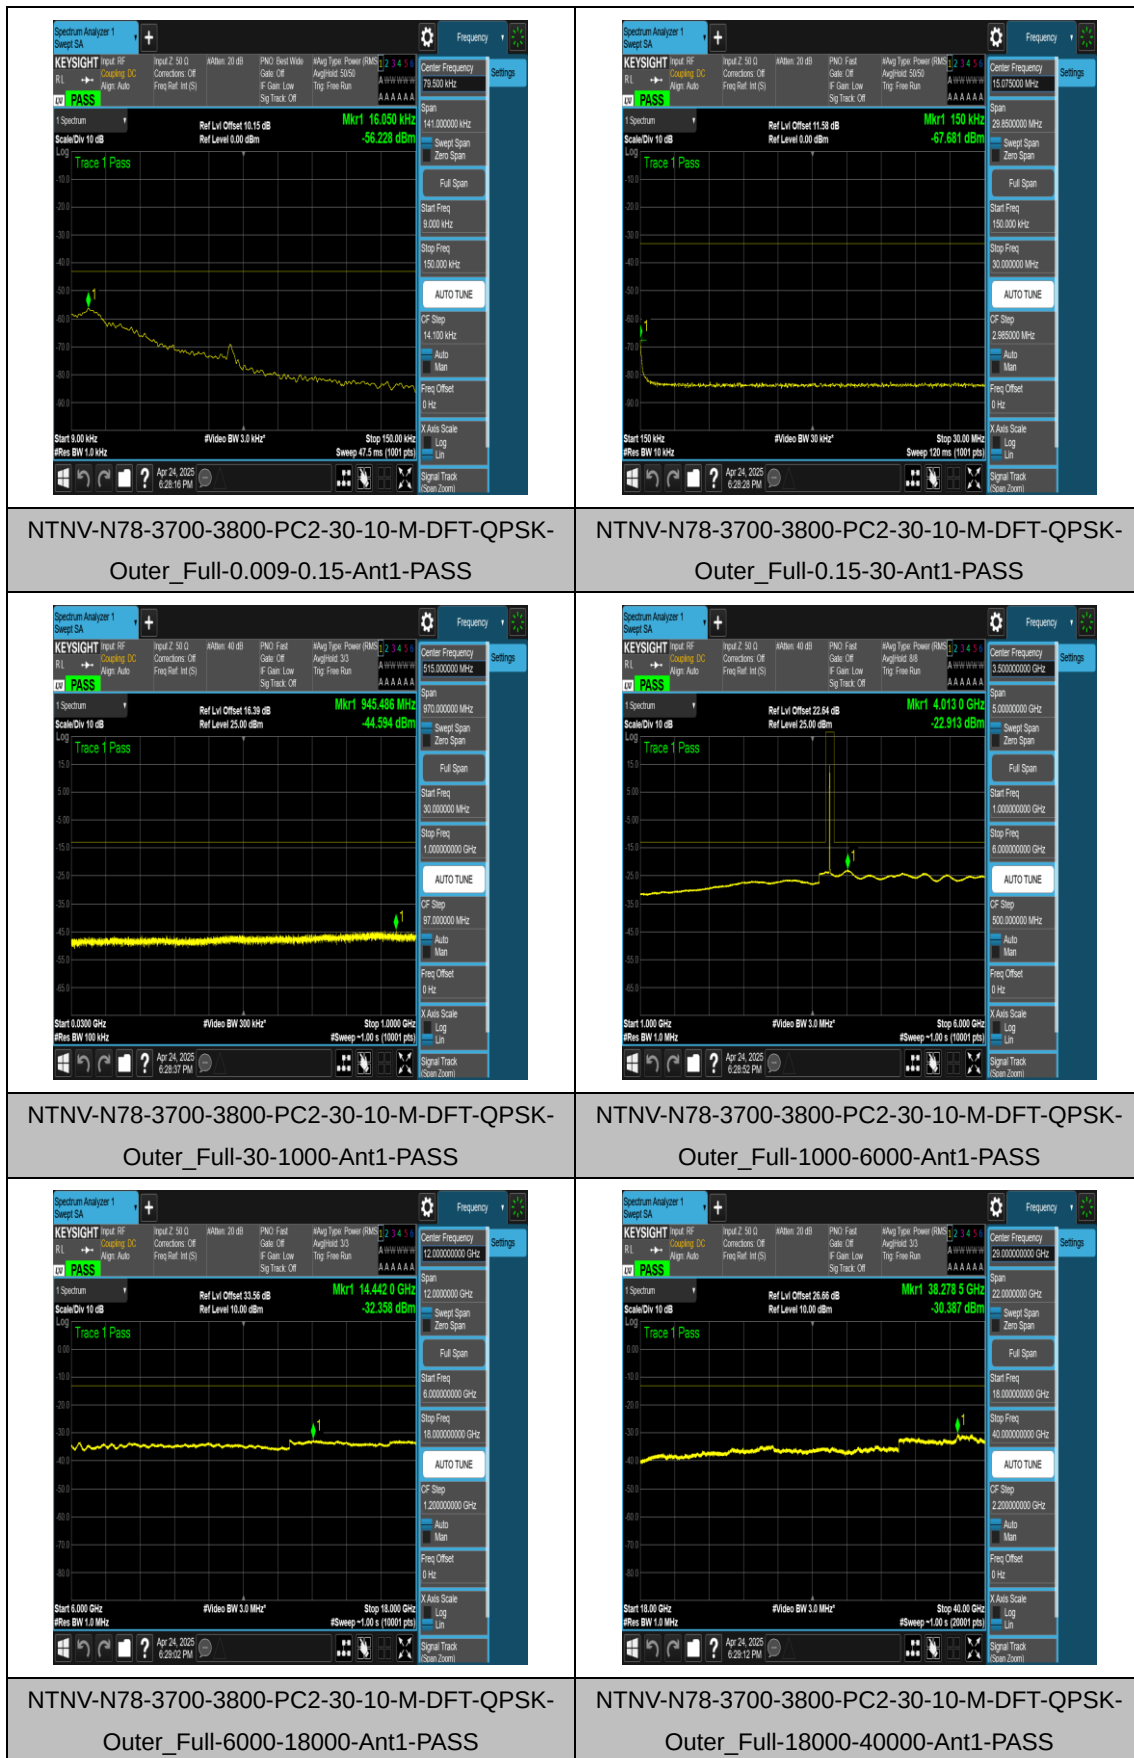


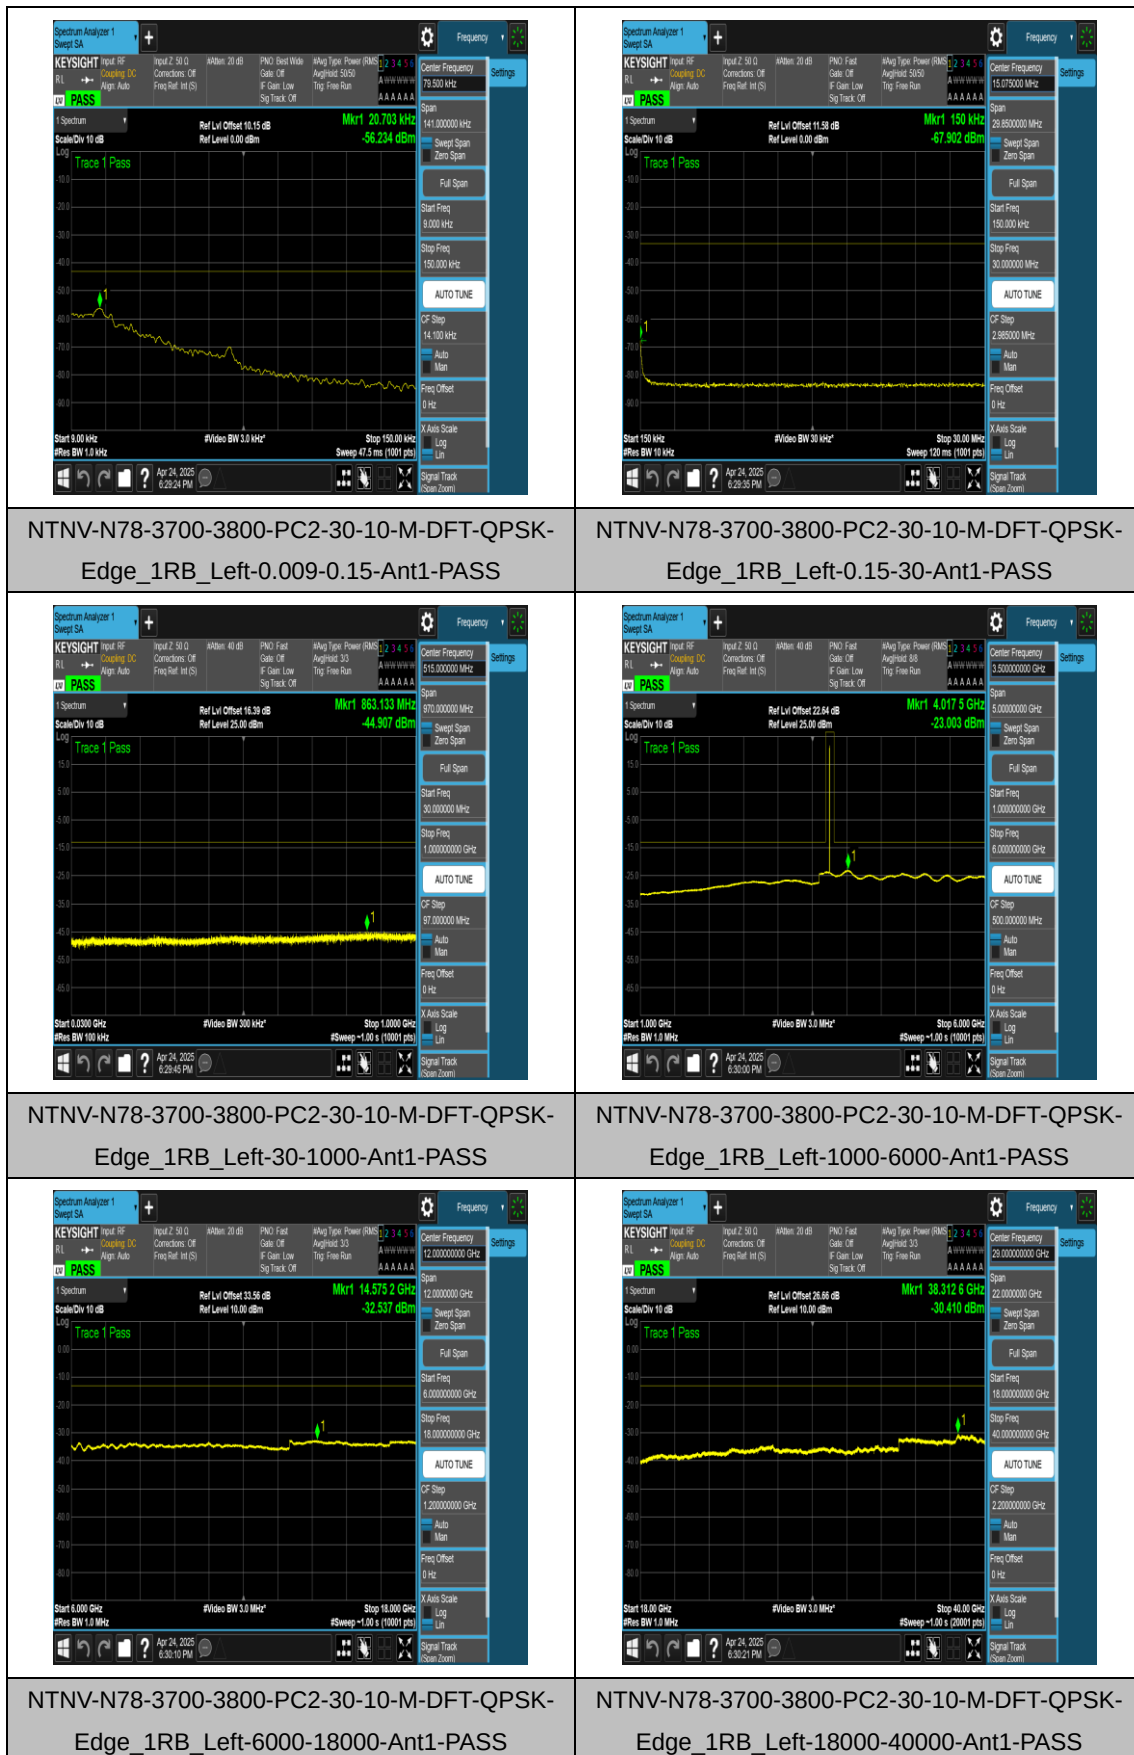


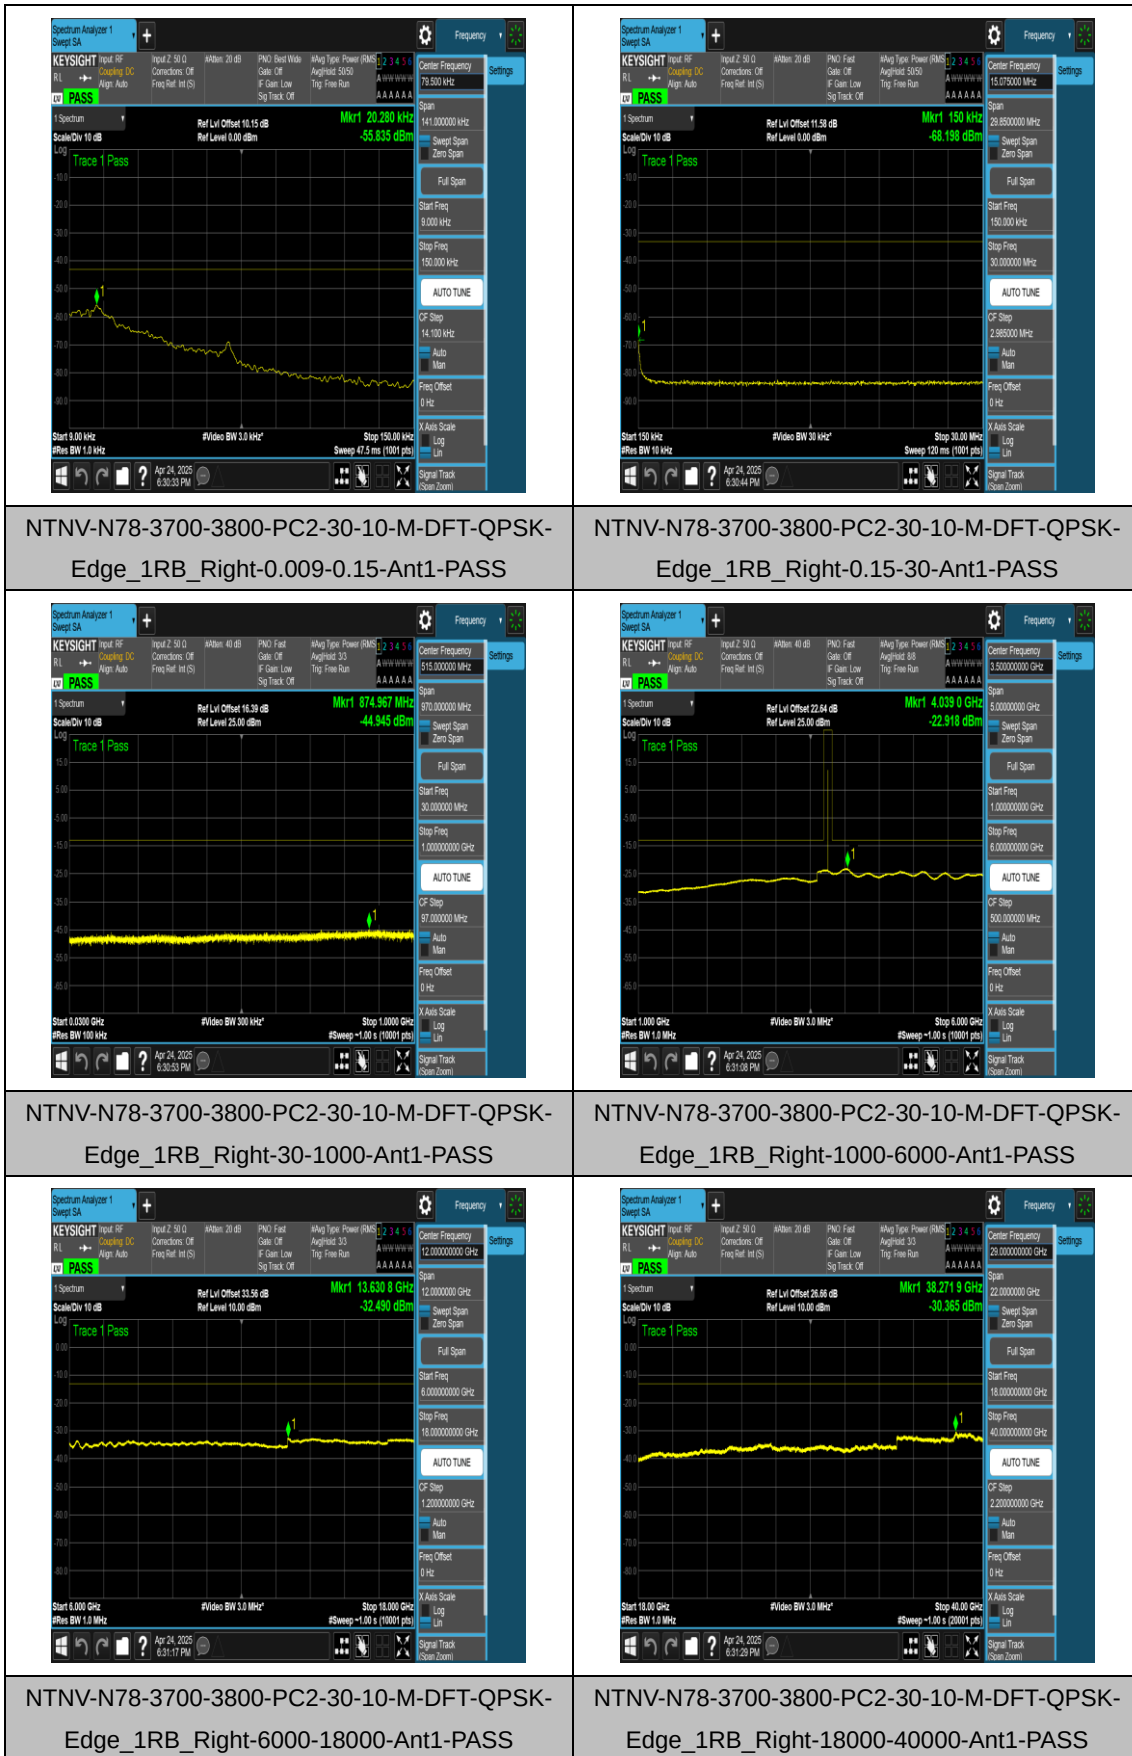


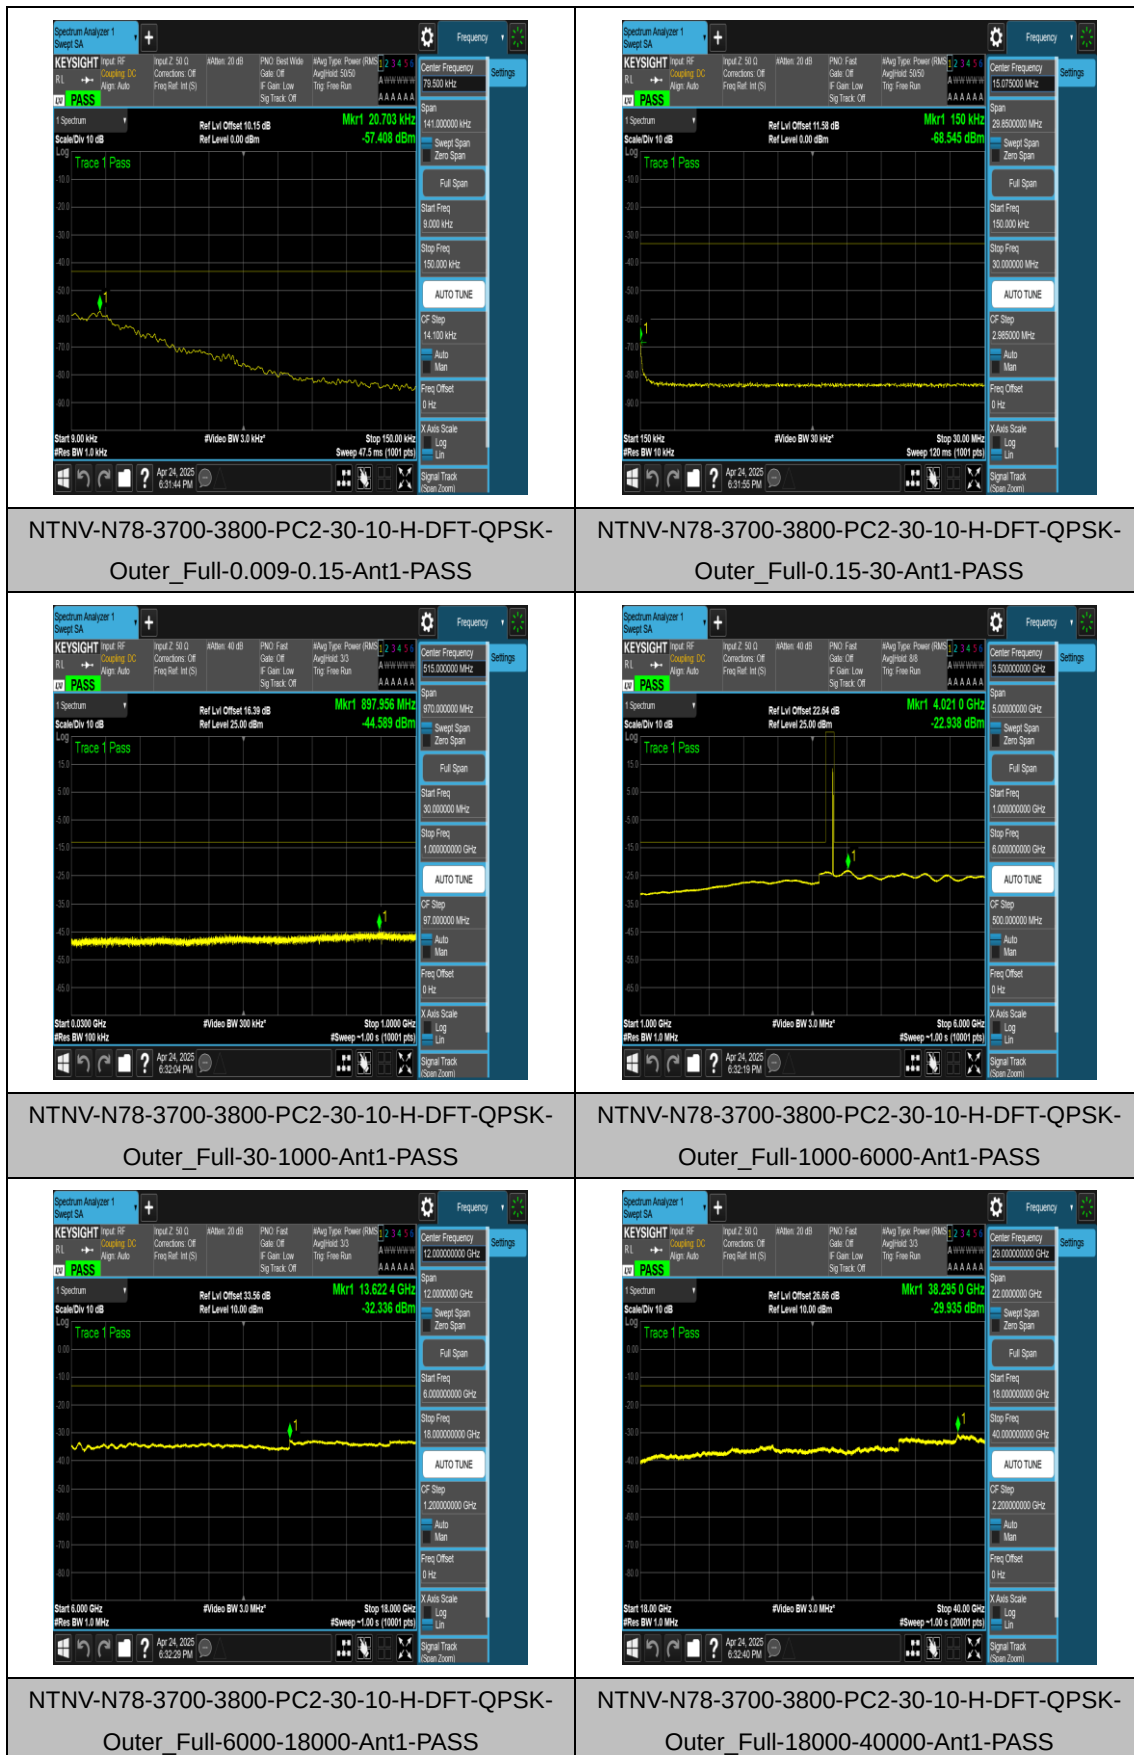


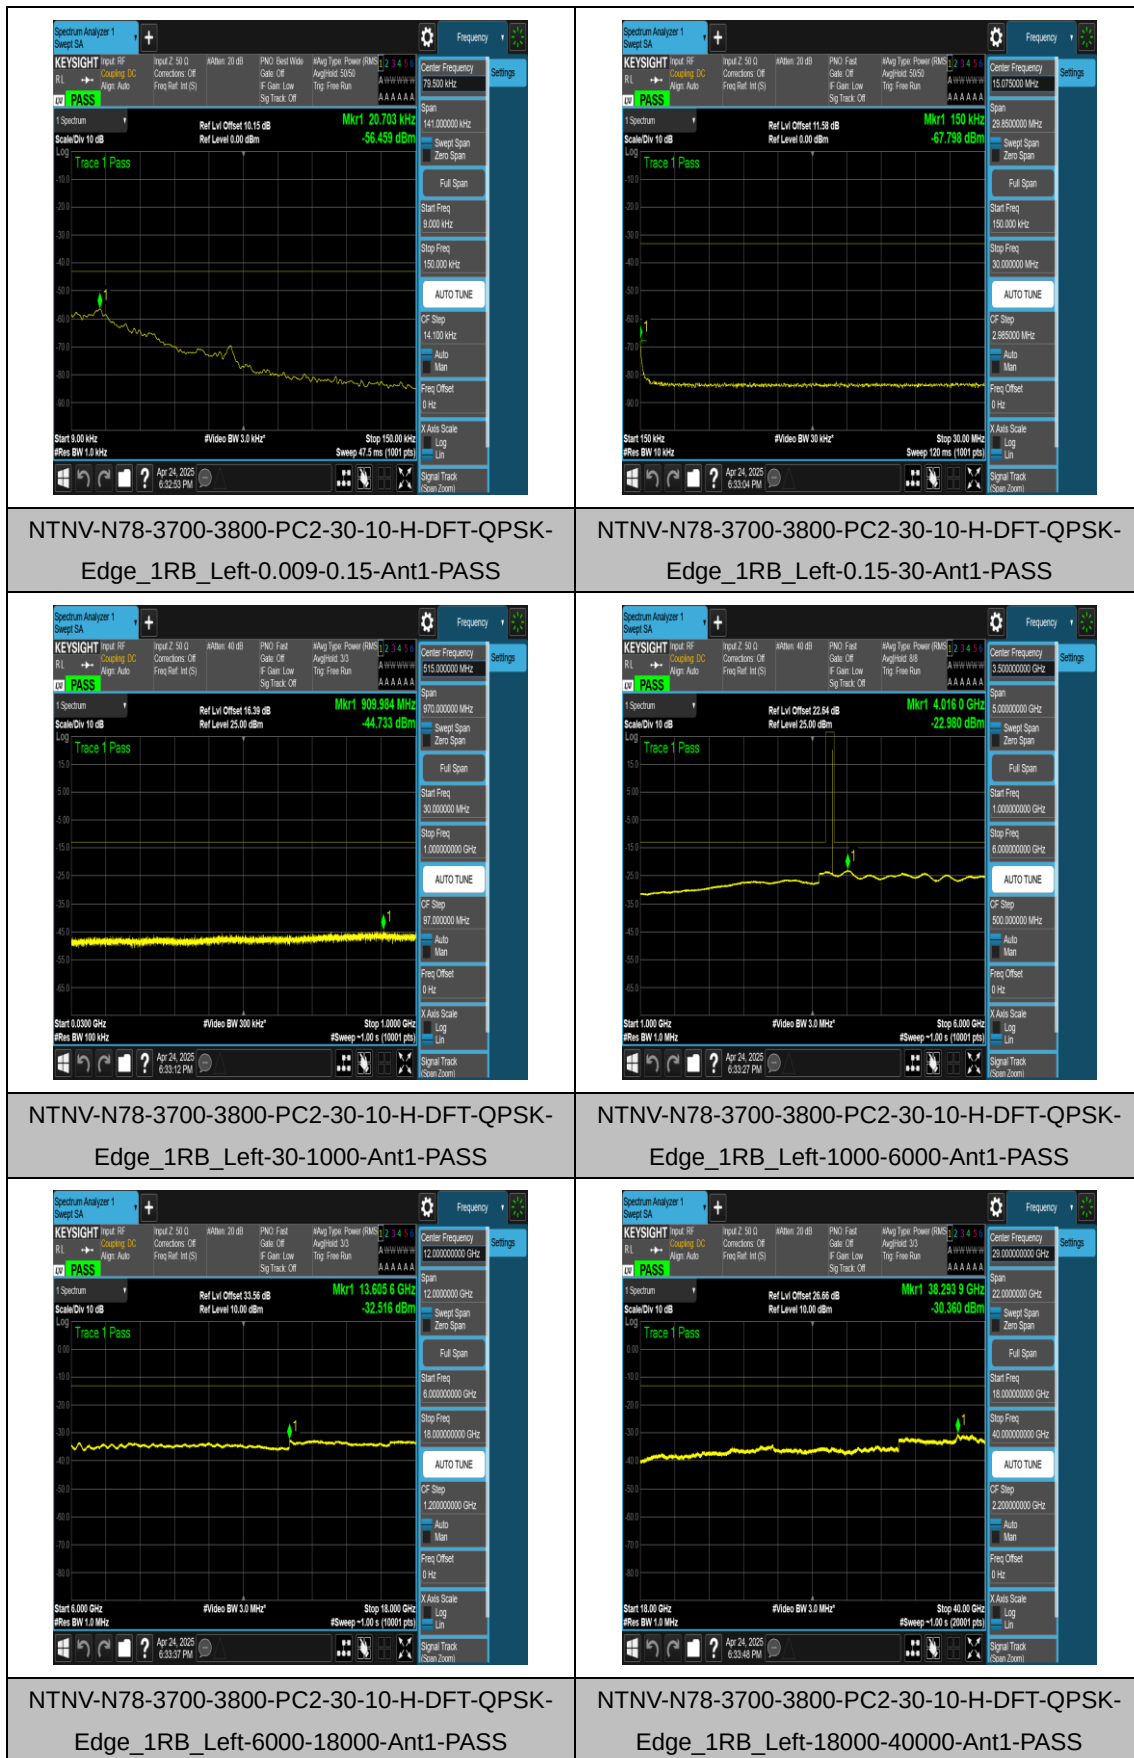


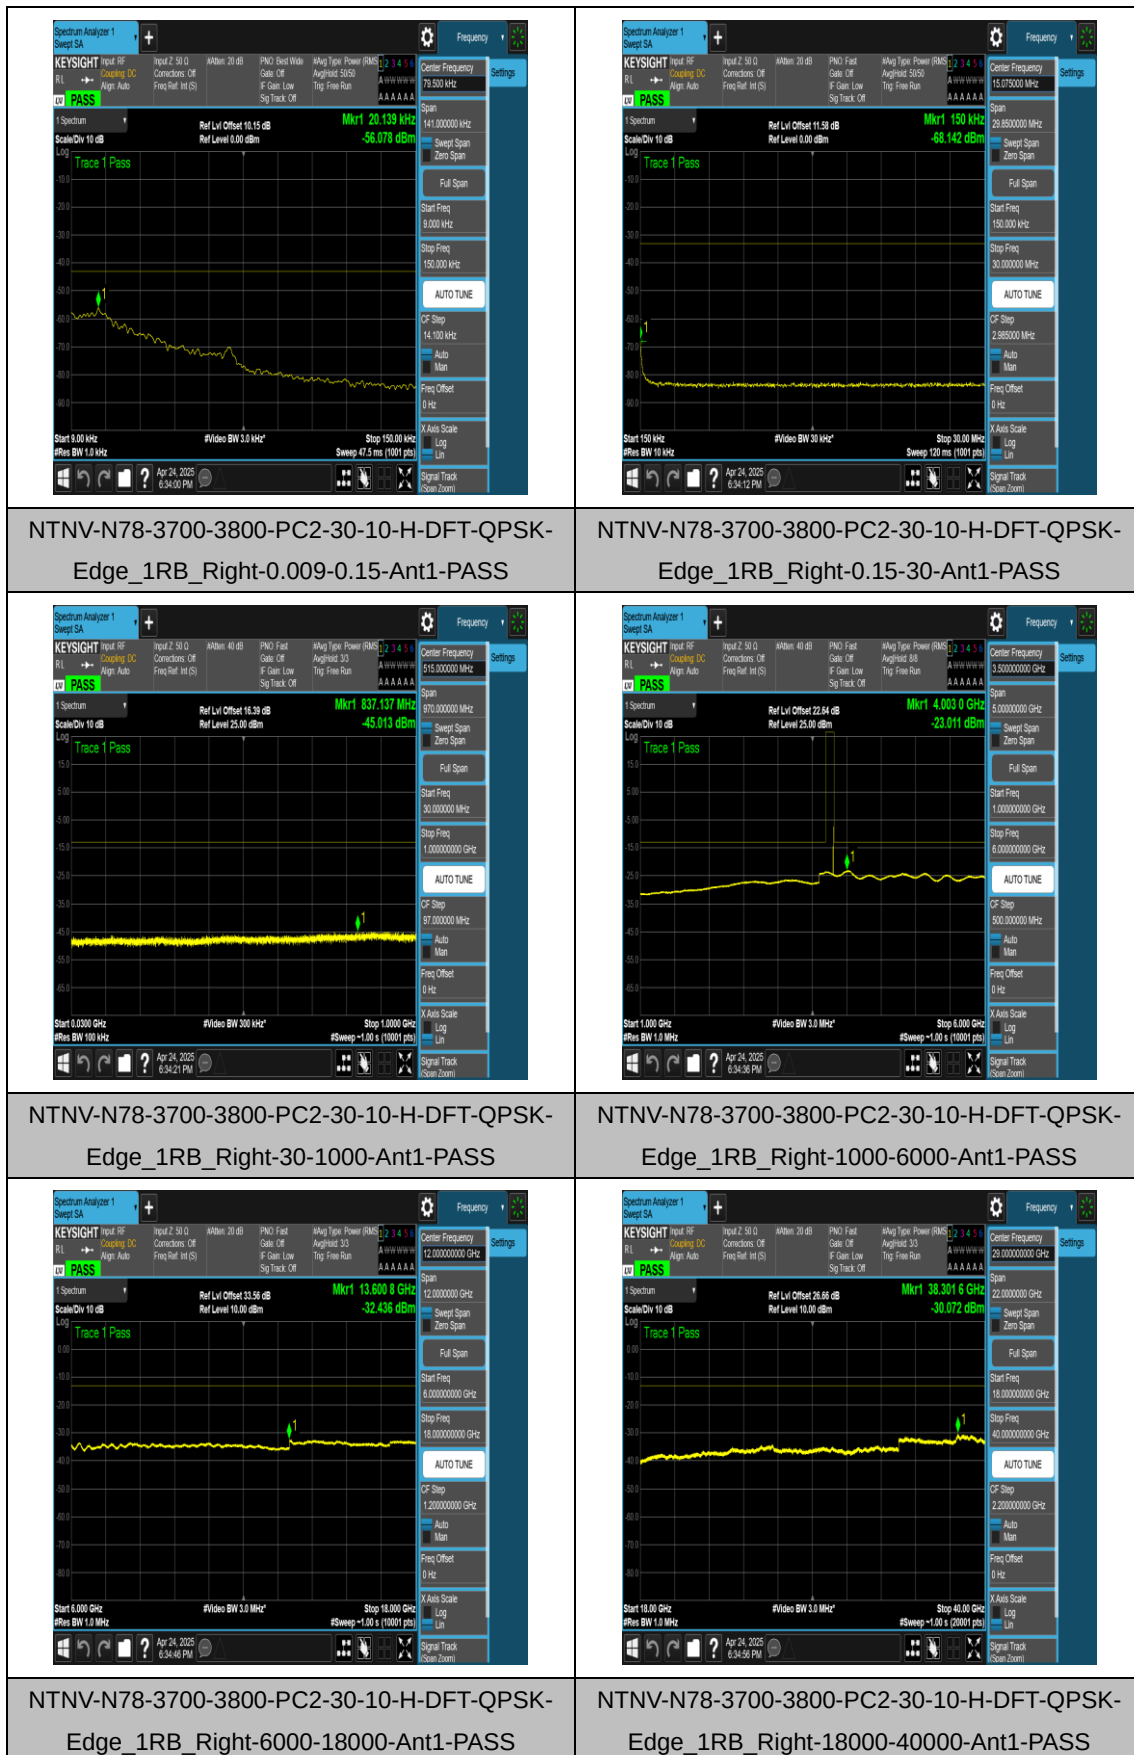

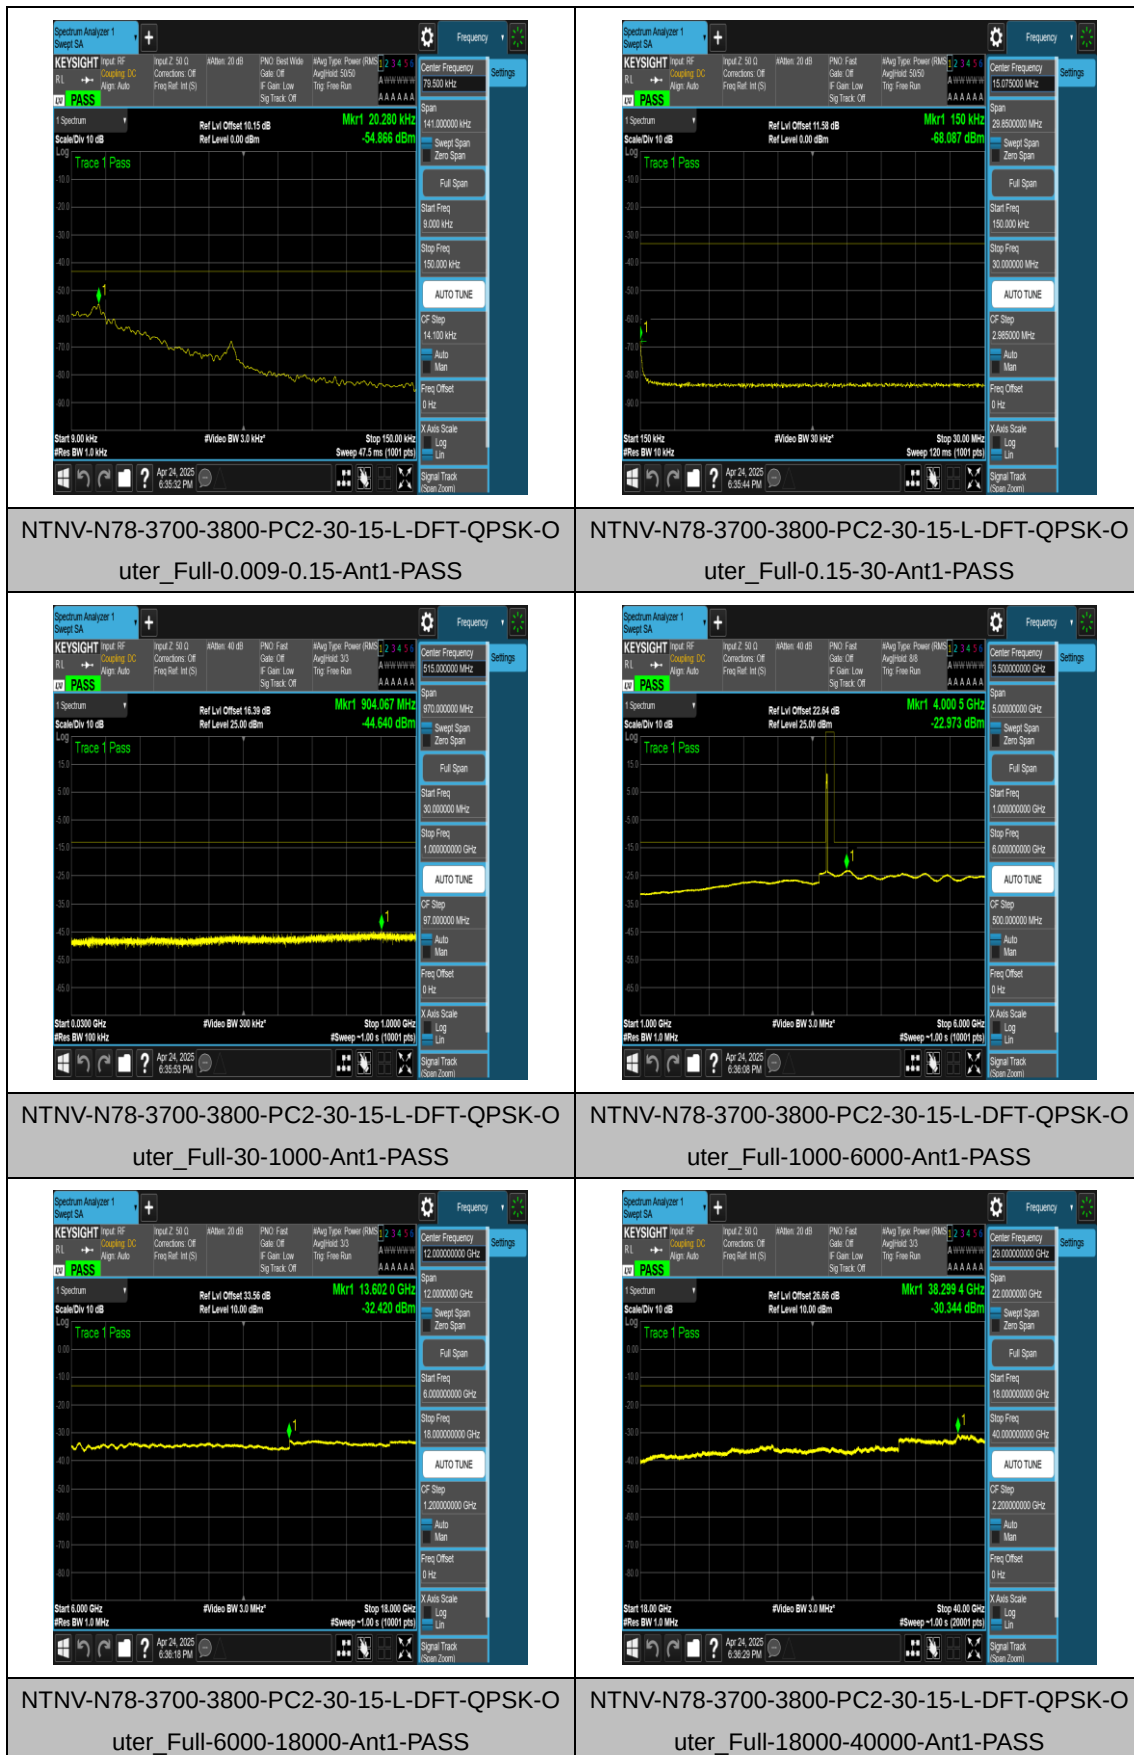

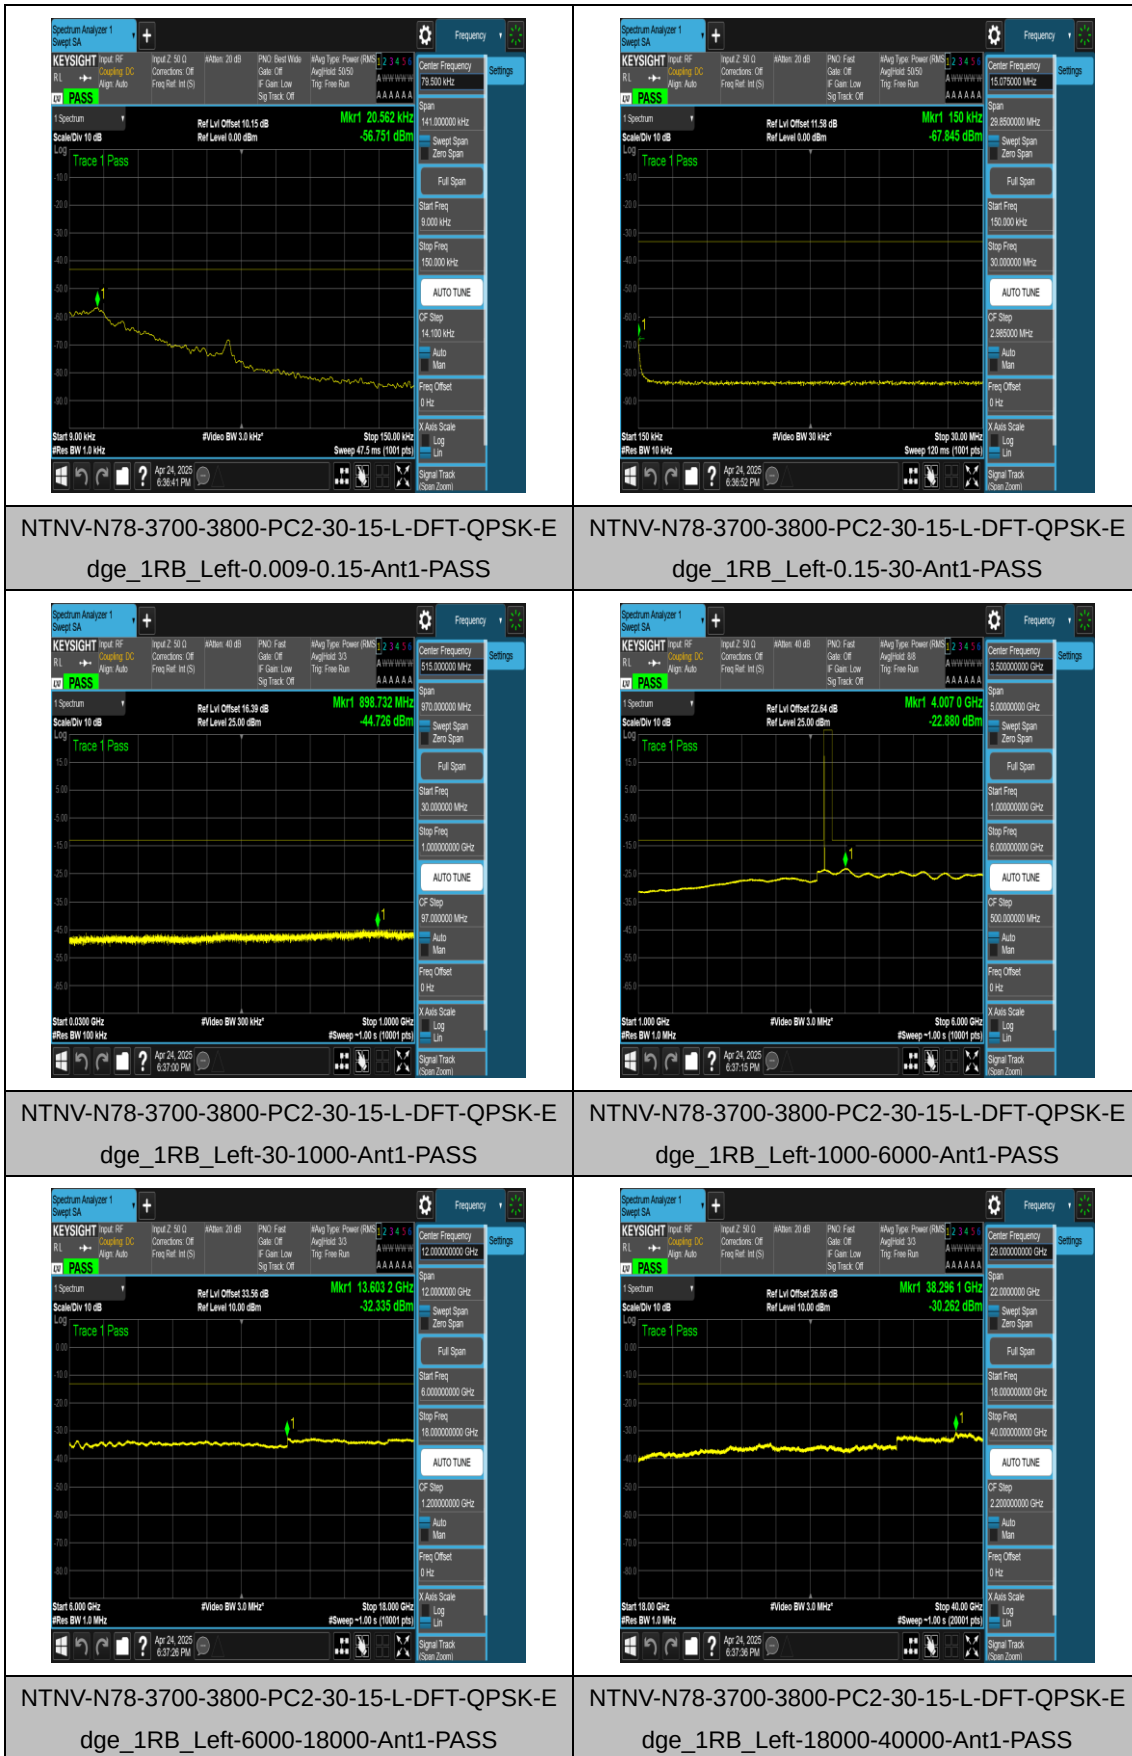

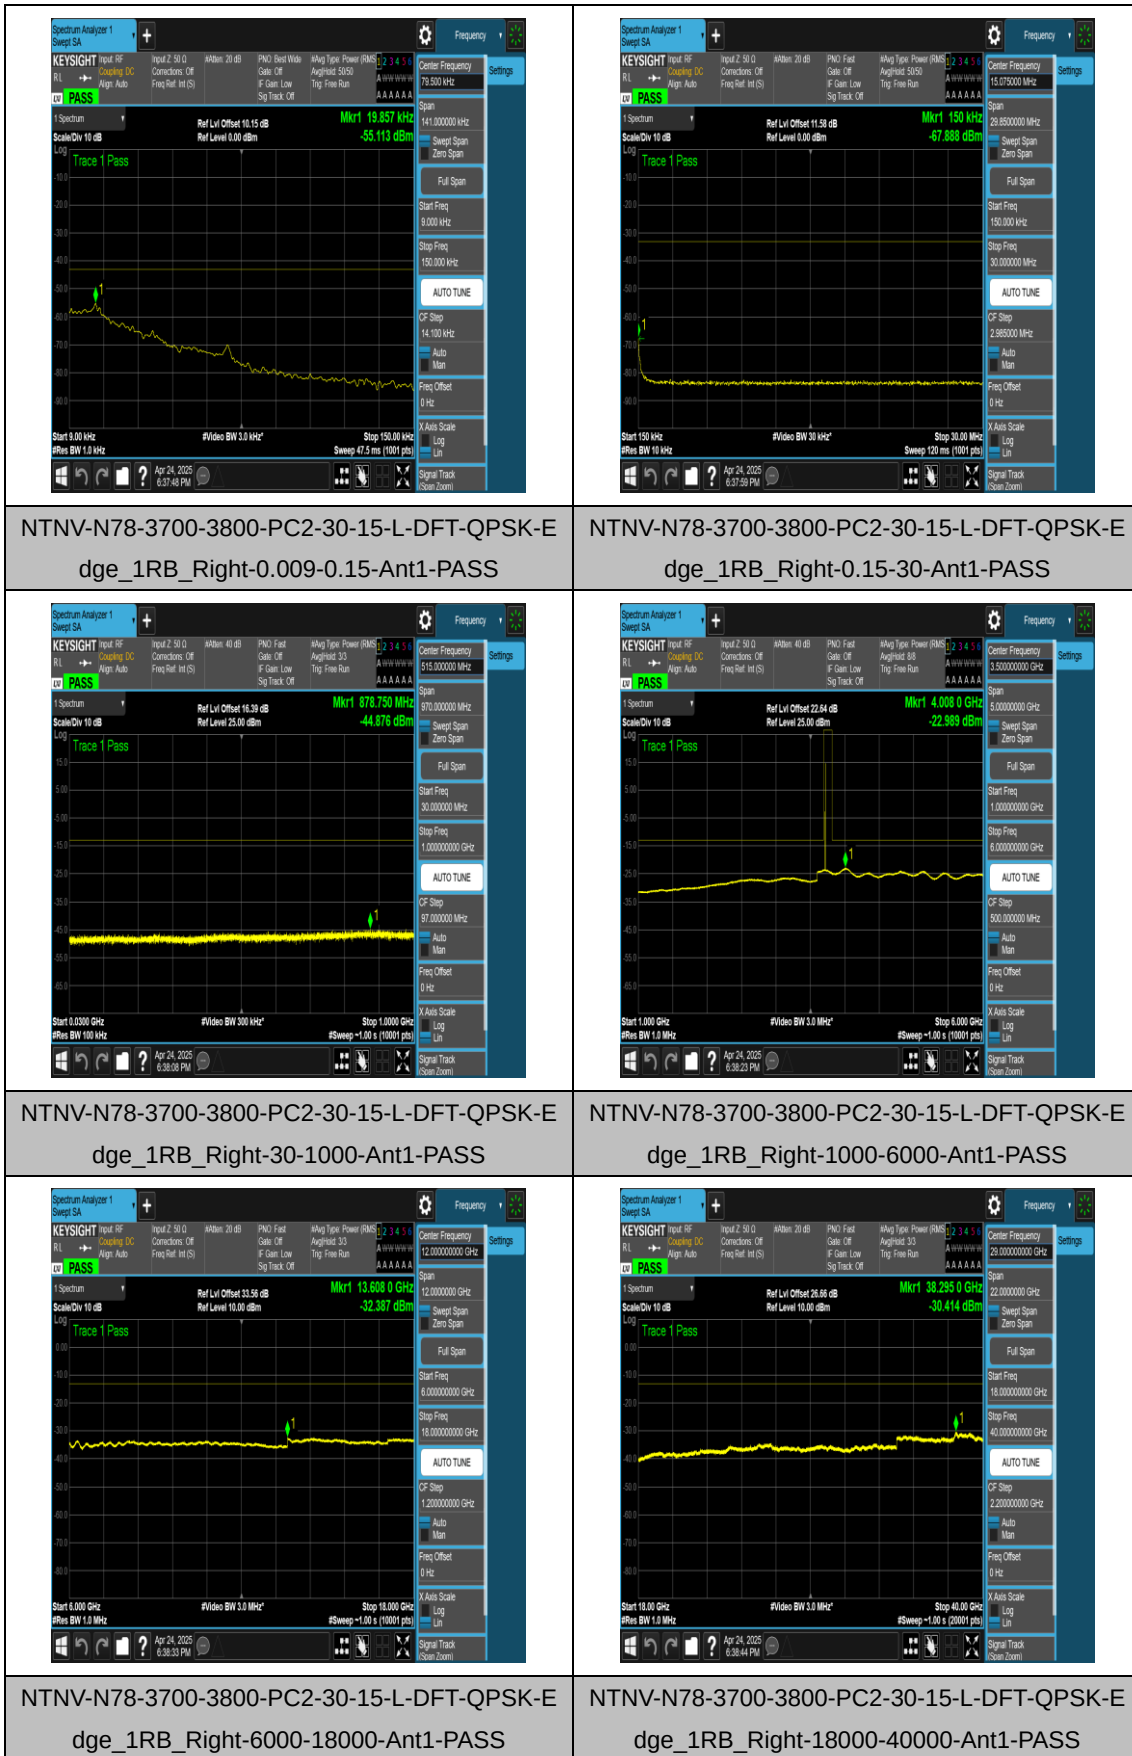

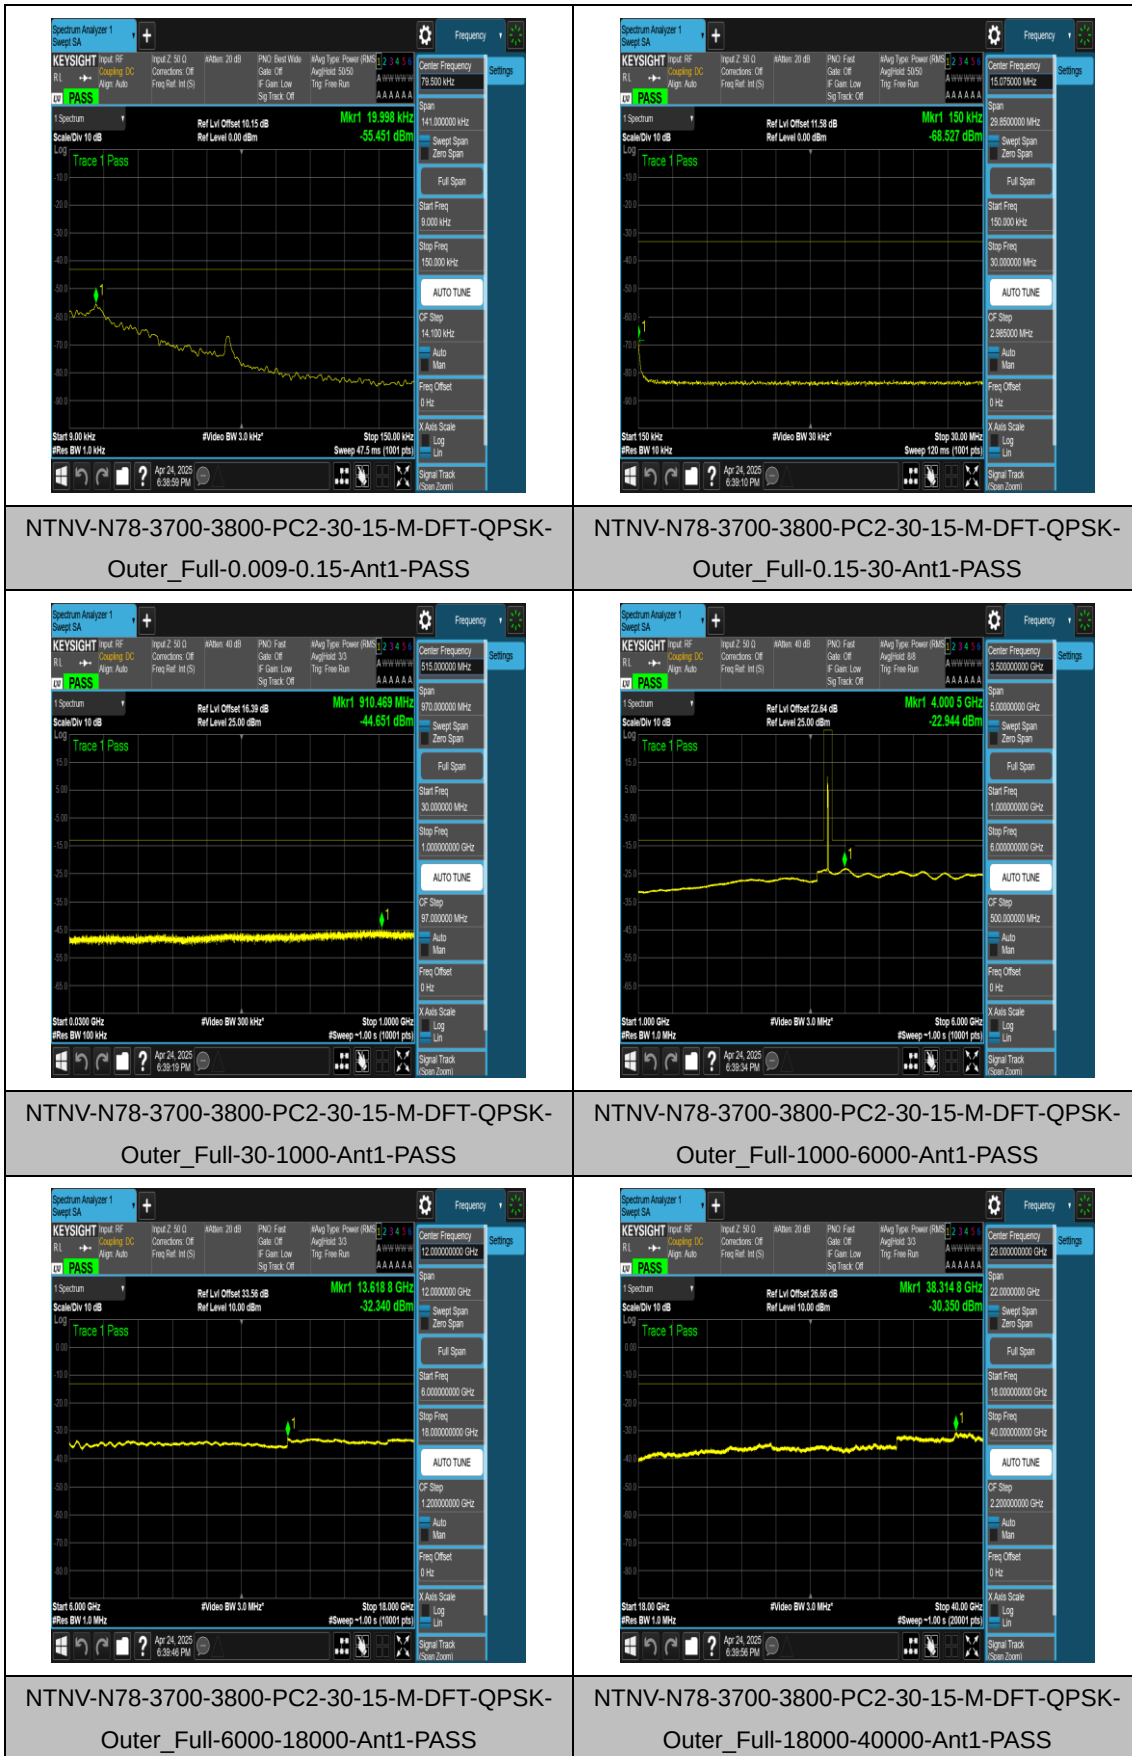

NTNV-N78-3700-3800-PC2-30-15-M-DFT-QPSK-
Outer_Full-0.009-0.15-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-15-M-DFT-QPSK-
Outer_Full-0.15-30-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-15-M-DFT-QPSK-
Outer_Full-30-1000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-15-M-DFT-QPSK-
Outer_Full-1000-6000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-15-M-DFT-QPSK-
Outer_Full-6000-18000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-15-M-DFT-QPSK-
Outer_Full-18000-40000-Ant1-PASS

